

VOR/DME GEE	APP CRS	Rwy Ldg TDZE	N/A
108.2	085°		N/A
Chan 19		Apt Elev	814

VOR-A


CANANDAIGUA (IUA)

DME or RADAR required.

When local altimeter setting not received, use Rochester altimeter setting and increase all MDAs 100 feet and Circling visibility all Cals ¼ SM, increase WIVRI Fix Circling minimums visibility Cat C ½ SM.

MISSED APPROACH: Climb to 2000 then climbing right turn to 3500 direct GEE VOR/DME and hold.

AWOS-3P	ROCHESTER APP CON	UNICOM
118.675	119.55 269.6	122.8 (CTAF) 0

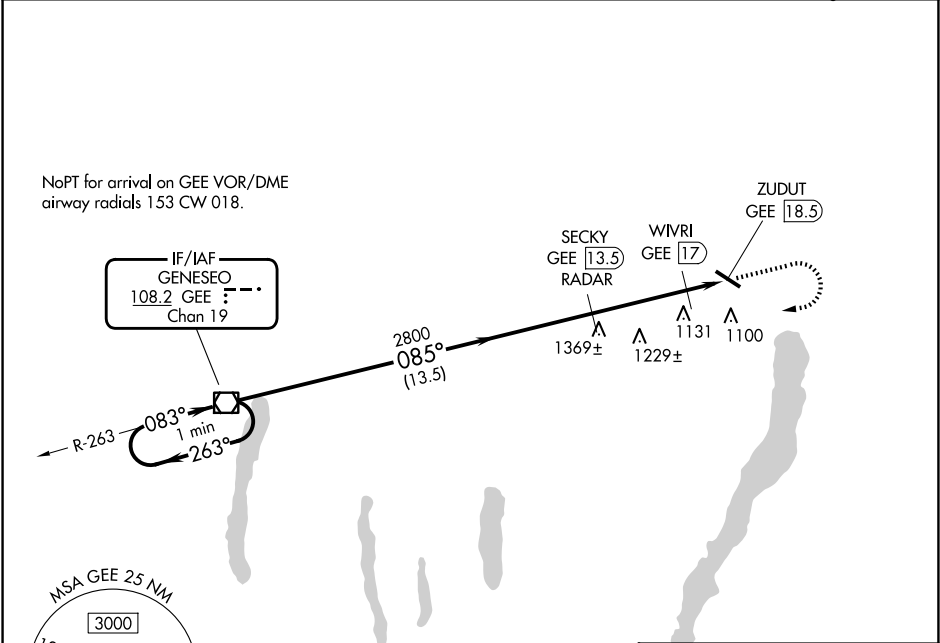

One Minute Holding Pattern

SECKY GEE [13.5] RADAR

WIVRI GEE [17]

ZUDUT GEE [18.5]

ELEV 814

CATEGORY	A	B	C	D
CIRCLING	1580-1	766 (800-1)	1580-2 ¼ 766 (800-2 ¼)	NA
WIVRI FIX MINIMUMS				
CIRCLING	1500-1	686 (700-1)	1540-2 726 (800-2)	NA

MIRL Rwy 13-31

REIL Rws 13 and 31

FAF to MAP 5 NM					
Knots	60	90	120	150	180
Min:Sec	5:00	3:20	2:30	2:00	1:40