


VOR/DME LIN	APP CRS	Rwy Idg	3401
114.8	012°	TDZE	1690
Chan 95		Apt Elev	1694

VOR/DME RWY 1
WESTOVER FLD AMADOR COUNTY (JAQ)

NA If local altimeter not received, use Sacramento Exec altimeter setting. Circling Rwy 19 NA at night.	MISSED APPROACH: Climbing left turn to 3000 via LIN R-012 to LIN VOR/DME.
---	---

AWOS-3 121.125	NORCAL APP CON 125.1 363.2	UNICOM 123.075 (CTAF) 0
-------------------	-------------------------------	----------------------------

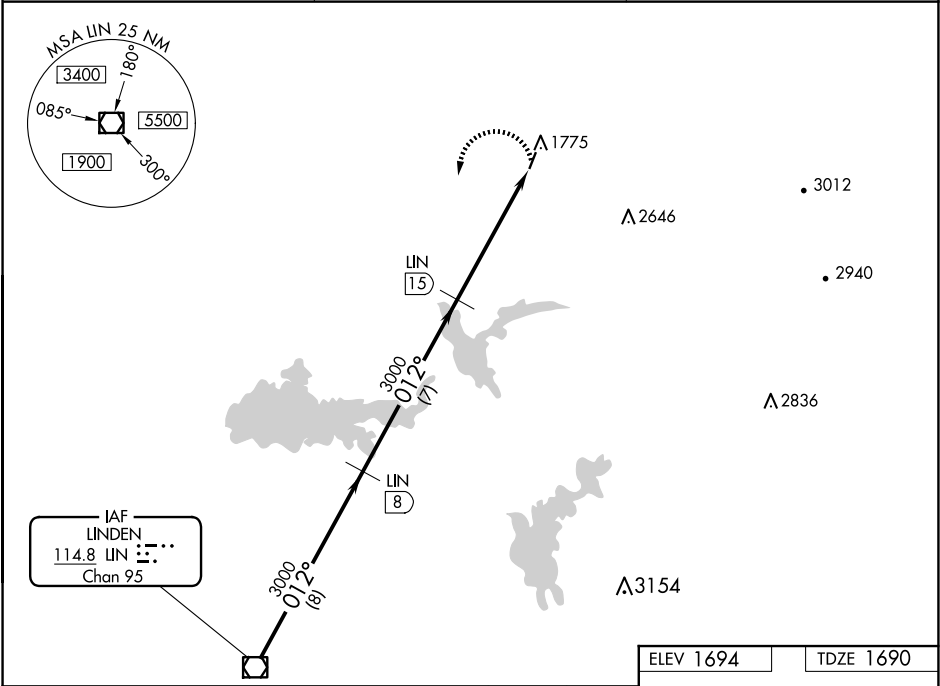

The diagram illustrates a flight procedure with the following details:

- Altitudes:** 3000, 012°, 3000, 3000, 3000, 20.4
- Distances:** 8 NM, 7 NM, 5.4 NM
- Procedure Turn NA**
- Category Minima Table:**

CATEGORY	A	B	C	D
S-1	2080-1 390 (400-1)	2080-1¼ 390 (400-1¼)	NA	
CIRCLING	2200-1 506 (600-1)	2200-1¼ 506 (600-1¼)	NA	

SACRAMENTO EXEC ALTIMETER SETTING MINIMUMS				
S-1	2380-1 690 (700-1)	2380-1¼ 690 (700-1¼)	NA	
CIRCLING	2520-1 826 (900-1)	2520-1¼ 826 (900-1¼)	NA	

