ILS or LOC RWY 14

SPRINGFIELD-BRANSON NTL (SGF)


LOC/DME I-GWA	APP CRS	Rwy Ldg	8000
109.7	139°	TDZE	1260
Chan 34		Apt Elev	1268

VDP NA when using HFJ altimeter setting. When local altimeter setting not received, use HFJ altimeter setting and increase S-ILS 14 DA to 1550 feet; increase all MDAs 100 feet and S-LOC 14 visibility Cat C/D/E to RVR 4000 and Circling visibility Cat C/D ½ SM. For inop ALS, increase S-ILS 14 Cat E visibility to RVR 4000, and increase S-LOC 14 Cat C/D/E visibility to 2 SM. *RVR 1800 authorized with use of FD or AP or HUD to DA (NA when using HFJ altimeter setting).


MALSR

MISSED APPROACH: Climb to 1800 then climbing left turn to 3000 direct SGF VORTAC and hold, continue climb in hold to 3000. (TACAN aircraft continue on SGF VORTAC R-024 to PLADD INT and hold northeast, right turn, 204° inbound).

ATIS	SPRINGFIELD APP CON	SPRINGFIELD TOWER	GND CON
135.125	124.95 290.5	119.9 257.8	121.9 251.15

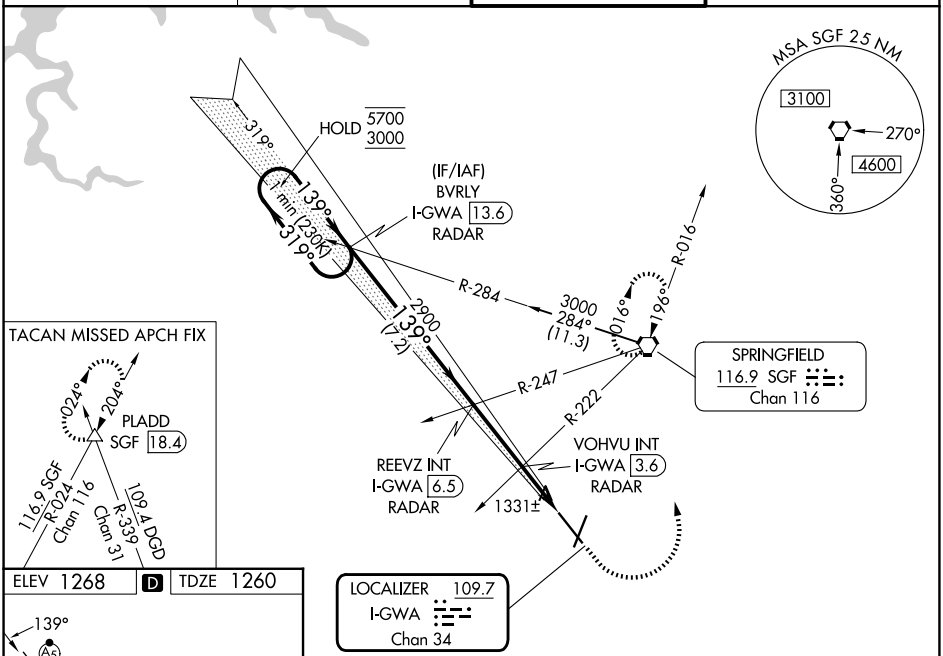


ELEV 1268 D TDZE 1260

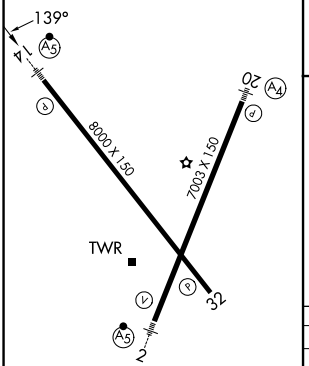

FAF to MAP 5 NM

Knots	60	90	120	150	180
Min:Sec	5:00	3:20	2:30	2:00	1:40

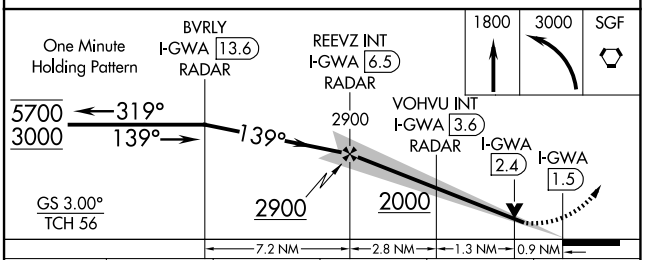

CATEGORY	A	B	C	D	E
S-ILS 14*	1460/24 200 (200-½)				
S-LOC 14	1600/24 340 (400-½)		1600/26 340 (400-½)		
CIRCLING	1760-1 492 (500-1)	1820-1 552 (600-1)	1820-1½ 552 (600-1½)	1920-2 652 (700-2)	2080-3 812 (900-3)

NC-3, 26 NOV 2026 to 24 DEC 2026
NC-3, 26 NOV 2026 to 24 DEC 2026