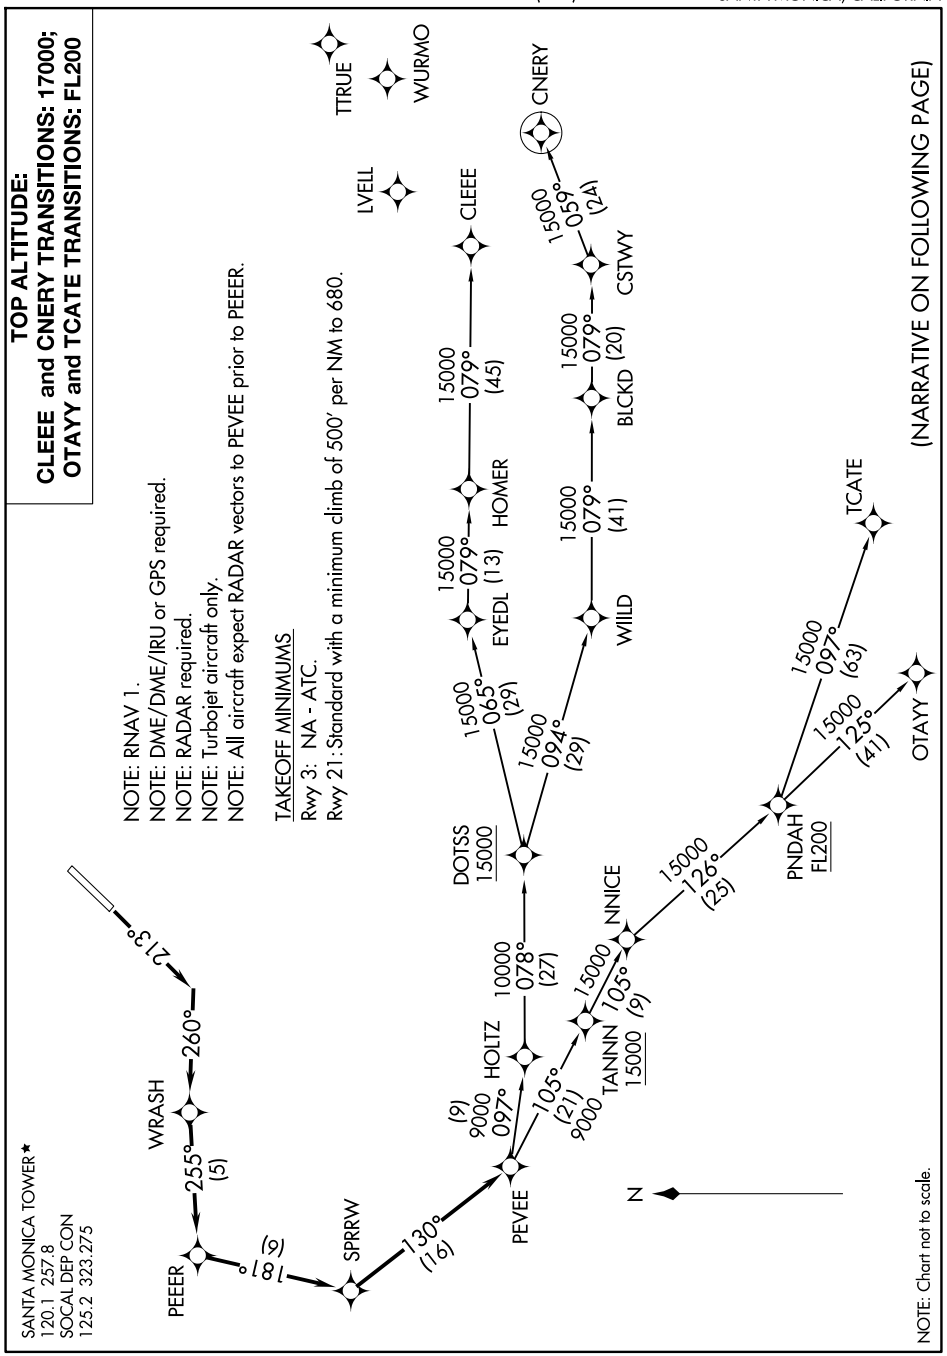
TOP ALTITUDE:
CLEEE and CNERY TRANSITIONS: 17000;
OTAYY and TCATE TRANSITIONS: FL200
NOTE: RNAV 1.
NOTE: DME/DME/IRU or GPS required.
NOTE: RADAR required.
NOTE: Turbojet aircraft only.
NOTE: All aircraft expect RADAR vectors to PEEER prior to PEEER.
TAKEOFF MINIMUMS
Rwy 3: NA - ATC.
Rwy 21: Standard with a minimum climb of 500' per NM to 680.
SANTA MONICA TOWER★
120.1 257.8
SOCAL DEP CON
125.2 323.275
PEEER
181° (6)
SPRRW
130° (16)
PEVEE
255° (5)
WRASH
260°
213°
9000 097° (9)
HOLTZ
10000 078° (27)
105° (21) 9000
TANNN 15000
15000 105° (9)
NNICE
DOTSS 15000
15000 065° (29)
15000 094° (29)
EYEDL
15000 079° (13)
HOMER
15000 079° (45)
CLEEE
WIILD
15000 079° (41)
BLCKD
15000 079° (20)
CSTWY
15000 059° (24)
CNERY
LVELL
TTRUE
WURMO
15000 126° (25)
PNDAH FL200
15000 097° (63)
TCATE
15000 125° (41)
OTAYY
N
NOTE: Chart not to scale.
(NARRATIVE ON FOLLOWING PAGE)