




U.S. Department
of Transportation
Federal Aviation
Administration

AIRPORT DESIGN

/ INCORPORATES CHANGES 1 THRU 17 /

AC: 150/5300-13
Date: 9/29/89

Advisory Circular

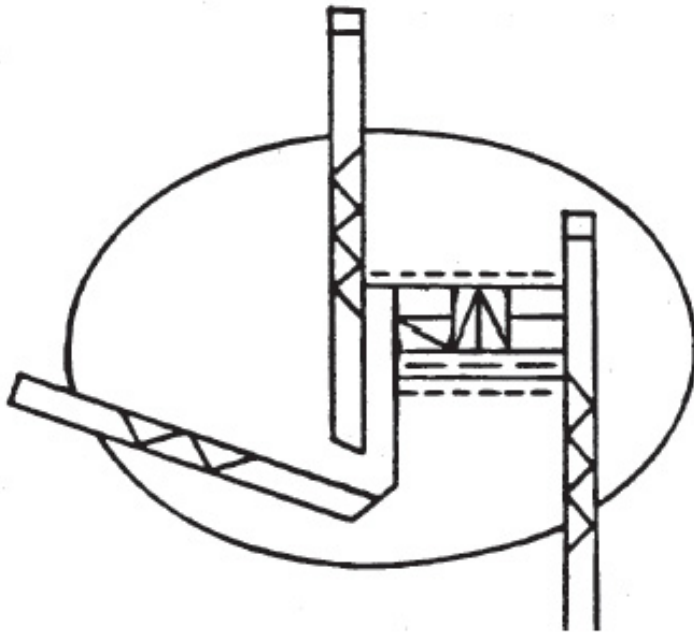



U.S. Department
of Transportation

Federal Aviation
Administration

Advisory Circular

Subject: AIRPORT DESIGN

Date: 9/29/89

AC No: AC 150/5300-13

Initiated by: AAS-110

Change:

1. **PURPOSE.** This advisory circular (AC) contains the Federal Aviation Administration's (FAA) standards and recommendations for airport design.

2. **CANCELLATION.** This (AC) cancels the following publications:

a. AC 150/5300-2D, Airport Design Standards--Site Requirements for Terminal Navigational Facilities, dated March 10, 1980.

b. AC 150/5300-4B, Utility Airports--Air Access to National Transportation, dated June 24, 1975.

c. AC 150/5300-12, Airport Design Standards--Transport Airports, dated February 28, 1983.

d. AC 150/5325-5C, Aircraft Data, dated June 29, 1987.

e. AC 150/5335-2, Airport Aprons, dated January 27, 1965.

3. **APPLICATION.** The Federal Aviation Administration (FAA) recommends the guidelines and standards in this Advisory Circular for use in the design of civil airports. In general, use of this AC is not mandatory. However, use of this AC is mandatory for all projects funded with federal grant monies through the Airport Improvement Program (AIP) and with revenue from the Passenger Facility Charges (PFC) Program. See Grant Assurance No. 34, "Policies, Standards, and Specifications," and PFC Assurance No. 9, "Standard and Specifications."

Leonard E. Mudd, Director
Office of Airport Safety and Standards

CONTENTS

Paragraph	Page
Chapter 1. REGULATORY REQUIREMENTS AND DEFINITION OF TERMS	
1. GENERAL	1
2. DEFINITIONS	1
3. RELATED/REFERENCED READING MATERIAL	3
4. AIRPORT REFERENCE CODE (ARC)	5
5. AIRPORT LAYOUT PLAN	5
6. MODIFICATION OF AIRPORT DESIGN STANDARDS TO MEET LOCAL CONDITIONS	5
7. NOTICE TO THE FAA OF AIRPORT DEVELOPMENT	5
8. NOTICE TO THE FAA OF PROPOSED CONSTRUCTION	6
9. FAA STUDIES	6
10. FEDERAL ASSISTANCE	6
11. ENVIRONMENTAL ASSESSMENTS	6
12. STATE ROLE	6
13. LOCAL ROLE	6
14. to 199. RESERVED	6
Chapter 2. AIRPORT GEOMETRY	
200. INTRODUCTION	9
201. PRINCIPLES OF APPLICATION	9
202. RUNWAY LOCATION AND ORIENTATION	9
203. ADDITIONAL RUNWAYS	10
204. TAXIWAY SYSTEM	10
205. AIRPORT APRONS	10
206. SEPARATION STANDARDS	10
207. PARALLEL RUNWAY SEPARATION--SIMULTANEOUS VFR OPERATIONS	11
208. PARALLEL RUNWAY SEPARATION--SIMULTANEOUS IFR OPERATIONS	11
209. RUNWAY TO PARALLEL TAXIWAY AND TAXILANE SEPARATION	12
210. BUILDING RESTRICTION LINE (BRL)	12
211. OBJECT CLEARING CRITERIA	12
212. RUNWAY PROTECTION ZONE (RPZ)	13
213. to 299. RESERVED	13
Chapter 3. RUNWAY DESIGN	
300. INTRODUCTION	21
301. RUNWAY LENGTH	21
302. RUNWAY WIDTH	21
303. RUNWAY SHOULDERS	21
304. RUNWAY BLAST PAD	21
305. RUNWAY SAFETY AREA (RSA)	21
306. OBSTACLE FREE ZONE (OFZ)	22
307. RUNWAY OBJECT FREE AREA	23
308. CLEARWAY STANDARDS	23
309. STOPWAY STANDARDS	23
310. RESCUE AND FIREFIGHTING ACCESS	24
311. to 399. RESERVED	24
Chapter 4. TAXIWAY AND TAXILANE DESIGN	
400. INTRODUCTION	33
401. DIMENSIONAL STANDARDS	33
402. TAXIWAY SHOULDERS	33
403. TAXIWAY SAFETY AREA (TSA)	33
404. TAXIWAY AND TAXILANE OBJECT FREE AREA (OFA)	33
405. FULL-LENGTH PARALLEL TAXIWAY	34
406. TAXIWAY INTERSECTIONS	34

407.	ENTRANCE TAXIWAYS	34
408.	BYPASS TAXIWAYS	35
409.	TAXIWAY AND RUNWAY INTERFACE	35
410.	HOLDING BAYS	35
411.	TURNAROUNDS	35
412.	DUAL PARALLEL TAXIWAYS	35
413.	TAXIWAY BETWEEN PARALLEL RUNWAYS	36
414.	EXIT TAXIWAYS	36
415.	APRON TAXIWAYS AND TAXILANES	36
416.	END-AROUND TAXIWAYS	36
417. to 499.	RESERVED	39

Chapter 5. SURFACE GRADIENT AND LINE OF SIGHT

500.	INTRODUCTION	49
501.	BACKGROUND	49
502.	SURFACE GRADIENT STANDARDS	49
503.	LINE OF SIGHT STANDARDS	56
504. to 599.	RESERVED	56

Chapter 6. SITE REQUIREMENTS FOR NAVAID AND ATC FACILITIES

600.	GENERAL	59
601.	MICROWAVE LANDING SYSTEM	59
602.	INSTRUMENT LANDING SYSTEM	61
603.	NONDIRECTIONAL BEACON	63
604.	VERY HIGH FREQUENCY OMNIRANGE	64
605.	APPROACH LIGHTING SYSTEMS	64
606.	OMNIDIRECTIONAL APPROACH LIGHTING SYSTEMS	65
607.	LEAD-IN LIGHTING SYSTEMS	65
608.	AIRPORT ROTATING BEACONS	65
609.	AIRPORT TRAFFIC CONTROL TOWERS	65
610.	AIRPORT SURVEILLANCE RADAR	66
611.	AIRPORT SURFACE DETECTION EQUIPMENT	66
612.	RUNWAY VISUAL RANGE FACILITIES	66
613.	AUTOMATIC WEATHER OBSERVATION STATIONS (AWOS)	66
614.	PHYSICAL SECURITY	67
615.	CABLE PROTECTION	67
616. to 699.	RESERVED	67

Chapter 7. RUNWAY AND TAXIWAY BRIDGES

700.	INTRODUCTION	69
701.	SITING PRECEPTS	69
702.	DIMENSIONS	69
703.	LOAD CONSIDERATIONS	69
704.	DECK DESIGN	69
705.	MARKING AND LIGHTING	69
706.	OTHER CONSIDERATIONS	69
707.	PASSENGER AND BAGGAGE TUNNELS	70
708. to 799.	RESERVED	70

Chapter 8. THE EFFECTS AND TREATMENT OF JET BLAST

800.	INTRODUCTION	77
801.	JET BLAST EFFECTS	77
802.	BLAST FENCES	77
803.	SHOULDERS AND BLAST PADS	78

Appendix 1. WIND ANALYSIS

1.	OBJECTIVE	87
2.	CROSSWINDS	87
3.	COVERAGE AND ORIENTATION OF RUNWAYS	87
4.	ASSEMBLING WIND DATA	87
5.	ANALYZING WIND DATA	88
6.	CONCLUSIONS	88
7.	ASSUMPTIONS	88
8.	COMPUTER WIND ANALYSIS	88

Appendix 2. RUNWAY END SITING REQUIREMENTS

1.	PURPOSE	100
2.	APPLICATION	100
3.	LIMITATIONS	100
4.	EVALUATION CONSIDERATIONS	100
5.	CLEARANCE REQUIREMENTS	101

Appendix 3. AIRPORT REFERENCE POINT

1.	DISCUSSION	109
2.	SAMPLE COMPUTATION	109
3.	ACCURACY	109

Appendix 4. COMPASS CALIBRATION PAD

1.	PURPOSE	111
2.	BACKGROUND	111
3.	APPLICATION	111
4.	DESIGN OF COMPASS CALIBRATION PAD	111
5.	LOCATION OF COMPASS CALIBRATION PAD	112
6.	CONSTRUCTION OF COMPASS CALIBRATION PAD	112
7.	VOR CHECKPOINT	113

Appendix 5. SMALL AIRPORT BUILDINGS, AIRPLANE PARKING, AND TIEDOWNS

1.	GENERAL	117
2.	TRANSIENT APRON	117
3.	APRON FOR BASED AIRPLANES	117
4.	TIEDOWNS	118
5.	OTHER CONSIDERATIONS	118
6.	HANGARS	118
7.	ADMINISTRATION BUILDING	118
8.	AIRPORT SURVEY	122
9.	BUILDING PLAN	122
10.	EXPANSION	122
11.	CIRCULATION	122
12.	WAITING ROOM	122
13.	MANAGER'S OFFICE	123
14.	EATING FACILITIES	123
15.	PUBLIC RESTROOMS	123
16.	ROADS AND AUTO PARKING	123

Appendix 6. METRIC CONVERSION AND TYPICAL AIRPORT LAYOUT PLAN

Appendix cancelled (pp. 125-130)

Appendix 7. AIRPORT LAYOUT PLAN COMPONENTS AND PREPARATION

Appendix cancelled (pp. 131-138)

Appendix 8. RUNWAY DESIGN RATIONALE

1.	SEPARATIONS	139
2.	OBSTACLE FREE ZONE (OFZ)	139
3.	RUNWAY SAFETY AREA	139
4.	RUNWAY OBJECT FREE AREA (ROFA)	139
5.	RUNWAY SHOULDERS AND BLAST PADS	140
6.	CLEARWAY	140
7.	STOPWAY	140
8.	RUNWAY PROTECTION ZONE (RPZ)	140

Appendix 9. TAXIWAY AND TAXILANE DESIGN RATIONALE

1.	INTRODUCTION	141
2.	BACKGROUND AND RATIONALE	141
3.	EXIT TAXIWAY LOCATION	142
4.	WINGTIP TRACE	146

Appendix 10. TAXIWAY FILLET DESIGN

1.	INTRODUCTION	149
2.	EXAMPLE NO. 1, JUDGMENTAL OVERSTEERING	150
3.	EXAMPLE NO. 2, MAINTAINING COCKPIT OVER CENTERLINE	150

Appendix 11. COMPUTER PROGRAM

Appendix cancelled (pp. 153-164)

Appendix 12. AIRPLANE DATA

1.	BACKGROUND	165
2.	EXPLANATORY INFORMATION	166

Appendix 13. AIRPLANES ARRANGED BY AIRPLANE MANUFACTURER AND AIRPORT REFERENCE CODE

Section 1.	Alphabetical Listing (U.S. customary units)	251
Section 2.	Alphabetical Listing (SI units)	257
Section 3.	Listing Small Airplanes by Airport Reference Code (U.S. customary units)	263
Section 4.	Listing Large Airplanes by Airport Reference Code (U.S. customary units)	264
Section 5.	Listing Small Airplanes by Airport Reference Code (SI units)	269
Section 6.	Listing Large Airplanes by Airport Reference Code (SI units)	270

Appendix 14. DECLARED DISTANCES

1.	APPLICATION	275
2.	BACKGROUND	275
3.	FAA APPROVAL FOR APPLYING DECLARED DISTANCES IN AIRPORT DESIGN	275
4.	RUNWAY SAFETY AREA (RSA) AND RUNWAY OBJECT FREE AREA (ROFA) LENGTHS	276
5.	RUNWAY PROTECTION ZONE (RPZ) LOCATION AND SIZE	276
6.	CLEARWAY LOCATION	276
7.	NOTIFICATION	276

Appendix 15. TRANSFER OF ELECTRONIC DATA

Appendix cancelled (pp. 283-290)

Appendix 16. NEW INSTRUMENT APPROACH PROCEDURES

1.	BACKGROUND	291
2.	INTRODUCTION	291
3.	ACTION	291
4.	DEFINITIONS	291

Appendix 17. MINIMUM DISTANCES BETWEEN CERTAIN AIRPORT FEATURES AND ANY ON-AIRPORT AGRICULTURE CROPS (1 page).

Appendix 18. ACRONYMS (1 page).

Appendix 19. INDEX (4 pages).

Table	Page
1-1. Increases in airport design standards associated with an upgrade in the first component (aircraft approach category) of the airport reference code	7
1-2. Increases in airport design standards to provide for lower approach visibility minimums	8
2-1. Runway separation standards for aircraft approach categories A & B	14
2-2. Runway separation standards for aircraft approach categories C & D	15
2-3. Taxiway and taxilane separation standards.....	16
2-4. Runway protection zone (RPZ) dimensions	19
3-1. Runway design standards for aircraft approach category A & B visual runways and runways with not lower than 3/4-statute mile (1 200 m) approach visibility minimums	25
3-2. Runway design standards for aircraft approach categories A & B runways with lower than 3/4-statute mile (1 200 m) approach visibility minimums	26
3-3. Runway design standards for aircraft approach categories C & D	26-1
4-1. Taxiway dimensional standards	38
4-2. Taxiway fillet dimensions.....	40
4-3. Wingtip clearance standards	40
4-4. Visual screen height calculation formula (same elevation as runway)	48-5
4-5. Visual screen height calculation formula (EAT below DER elevation) for Design Group III	48-6
4-6. Visual screen height calculation formula (EAT below DER elevation) for Design Group IV	48-7
4-7. Visual screen height calculation formula (EAT below DER elevation) for Design Groups V and VI.....	48-8
4-8. Visual screen vertical height calculation tables	48-9
4-9. Visual screen panel wind-loading deflection allowance	48-12
4-10. CIE chromaticity coordinate limits	48-12
4-11. Minimum reflection levels	48-13
A2-1. Approach/Departure Requirements Table.....	103
A9-1. Exit taxiway cumulative utilization percentages.....	142
A16-1A ILS and LPV approach requirements	292
A16-1B Approach procedure with vertical guidance	293
A16-1C Nonprecision approach requirements	294
A16-2. Survey requirements for instrument approach procedures.....	295
A17-1. Minimum Distances Between Certain Airport Features and Any On-Airport Agriculture Crops	296
Figure	Page
2-1. Typical airport layout.....	17
2-2. Parallel runway separation.....	18
2-3. Runway protection zone	20
3-1. Runway safety area	27
3-2. Obstacle free zone (OFZ) for visual runways and runways with not lower than 3/4 statute mile (1,200 m) Approach visibility minimums	28
3-3. Obstacle free zone (OFZ) for runways serving small airplanes exclusively with lower than 3/4-statute mile (1,200 m) approach visibility minimums	29
3-4. Obstacle free zone (OFZ) for runways serving large airplanes with lower than 3/4-statute mile (1,200 m) approach visibility minimums	30
3-5. Obstacle free zone (OFZ) for runways serving large airplanes with lower than 3/4-statute mile (1,200 m) approach visibility minimums and displaced threshold.....	31
3-6. Precision object free zone	32
3-7. Clearway	32-1
3-8. Stopway	32-2
4-1. Taxiway intersection details	40
4-2. Maintaining cockpit over centerline	42
4-3. Problematic taxiway geometry	43
4-5. Entrance taxiway.....	44
4-6. Bypass taxiway	44
4-7. Dual parallel taxiway entrance	45
4-8. Typical holding bay configurations	46

4-9.	Taxiway turnaround	46
4-10.	Crossover taxiway	47
4-11.	Right-angled exit taxiway	47
4-12.	Acute-angled exit taxiway	48
4-15.	Typical end-around taxiway layout	48-3
4-16.	End-around taxiway visual screen width calculations	48-4
4-17.	Visual screen width calculation formula	48-5
4-18.	Examples of mounting screen to vertical column	48-10
4-19.	Examples of panel layout for 13-foot-high screen	48-11
4-20.	Diagonal stripe orientation	48-12
4-21.	Examples of frangibility connections	48-14
5-1.	Longitudinal grade limitations for aircraft approach categories A & B	50
5-2.	Transverse grade limitations for aircraft approach categories A & B	51
5-3.	Longitudinal grade limitations for aircraft approach categories C & D	52
5-4.	Transverse grade limitations for aircraft approach categories C & D	53
5-5.	Runway safety area grade limitations beyond 200 feet (60 m) from the runway end	55
5-6.	Runway visibility zone	57
6-1.	AZ antenna siting	59
6-2.	Typical NAVAID placement	60
6-3.	AZ antenna critical area	61
6-4.	EL antenna siting	61
6-5.	EL antenna critical area	61
6-6.	ILS LOC siting and critical area	62
6-7.	GS siting and critical area	62
6-8.	Marker beacon site	63
6-9.	NDB site	63
6-10.	A TVOR installation	64
6-11.	TVOR Clearances	64
7-1.	Full width runway-taxiway bridge	71
7-2.	Cross-section full width runway-taxiway bridge	72
7-3.	Minimum width taxiway bridge with positive edge protection, O'Hare Airport, Chicago, IL	73
7-4.	Example structural deck and depressed roadway, O'Hare Airport, Chicago, IL	74
7-5.	Suggested shoulder marking of minimum width taxiway bridge	75
7-6.	Controlled use service road, Los Angeles International Airport, Los Angeles, CA	76
8-1.	Velocity distance curves, DC-8	79
8-2.	Velocity distance curves, B-727	80
8-3.	Velocity distance curves, B-747	81
8-4.	Velocity distance curves, DC-10	82
8-5.	Blast velocities of business jet airplanes	83
8-6.	Typical blast deflector fences, metal	84
8-7.	Typical blast deflector fences, concrete	85
A1-1.	Wind vector diagram	89
A1-2.	Typical environmental data service wind summary	90
A1-3.	Windrose blank showing direction and divisions	91
A1-4.	Completed windrose using figure A1-2 data	92
A1-5.	Windrose analysis	93
A1-6.	Windrose analysis--estimating area not included	94
A2-1.	Approach slopes	105
A2-2.	Offset approach course	106
A2-3.	Departure surface for Instrument Runways TERPS (40:1)	107
A2-4.	One-Engine Inoperative (OEI) Obstacle Identification Surface (62.5:1)	108
A3-1.	Sample layout	109

A3-2.	Sample computation - airport reference point.....	110
A4-1.	Marking layout and details of wheel block	114
A4-2.	Type I. compass calibration pad	115
A4-3.	Type II. compass calibration pad	116
A5-1.	Parking apron area	119
A5-2.	Tiedown layouts.....	120
A5-3.	T-hanger layout	121
A8-1.	Approximate distance airplanes undershoot and overrun the runway end.....	140
A9-1.	Wingtip clearance - parallel taxiways	143
A9-2.	Wingtip clearance from taxiway	144
A9-3.	Wingtip clearance from apron taxiway	144
A9-4.	Wingtip clearance from taxilane	145
A9-5.	Pavement edge clearance on tangent	146
A9-6.	McDonnell-Douglas MD-88 wingtip clearance trace for a 100-foot (30.5 m) radius centerline	147
A9-7.	McDonnell-Douglas MD-88 wingtip clearance trace for a 120-foot (36.5 m) radius offset centerline	147
A9-8.	Boeing 727-200 wingtip clearance trace for a 120-foot (36.5 m) radius offset centerline	148
A9-9.	Boeing 727-100 wingtip clearance trace for a 120-foot (36.5 m) radius offset centerline	148
A10-1.	Taxiway intersection details	151
A10-2.	Depiction of symbols	152
A12-1.	Single engine, high wing, tailwheel airplanes 8,000 lb. (3,628 Kg) or less	167
A12-2.	Single engine, high wing, tailwheel airplanes 8,000 lb. (3,628 Kg) or less (cont'd)	168
A12-3.	Single engine, high wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less	169
A12-4.	Single engine, low wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less	170
A12-5.	Single engine, low wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less (cont'd)	171
A12-6.	Twin engine, low or mid wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less	172
A12-7.	Twin engine, low or mid wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less (cont'd)	173
A12-8.	Twin engine, high or mid wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less	174
A12-9.	Aerospatiale Nord 262	175
A12-10.	Aerospatiale/Sud SE-210 Caravelle	177
A12-12.	Avions de Transport Regional ATR-42 & -72	178
A12-13.	Avions Marcel Dassault Mystere 20 (Fan Jet Falcon)	179
A12-14.	BAe 1-11	180
A12-15.	B.A.C./SNIAS Concorde	181
A12-16.	B.A.C./Vickers VC-10	182
A12-17.	B.A.C./Vickers Viscount.....	183
A12-18.	Beech Starship	184
A12-19.	Beechcraft Airliner.....	185
A12-20.	Beechcraft King Air	186
A12-21.	Beechcraft Model 18 and Conversions	187
A12-22.	Beechcraft Queen Air	188
A12-23.	Boeing B-52 Stratofortress	189
A12-24.	Boeing KC-97L.....	190
A12-25.	Boeing KC-135A	191
A12-26.	Boeing 707-720	192
A12-27.	Boeing 727	193
A12-28.	Boeing 737	194

A12-29. Boeing 747	195
A12-30. Boeing 757	196
A12-31. Boeing 767	197
A12-32. British Aerospace 146	198
A12-33. Canadiar CL-44	199
A12-34. Canadiar CL-66	200
A12-35. Cessna Citation	201
A12-36. Construcciones Aeronauticas CASA C-212 and 235	202
A12-37. Convair-liner and Turboprop Conversions	203
A12-38. De Havilland Canada C-7 Caribou	204
A12-39. De Havilland Canada DASH 7 & DASH 8	205
A12-40. Douglas C-124 Globemaster	206
A12-41. De Havilland Canada DHC-6 Twin Otter	207
A12-42. Dornier Gmb H	208
A12-43. Douglas DC-3	209
A12-44. Douglas DC-4/6/7	210
A12-45. Embraer EmB 110	211
A12-46. Embraer EmB 120	212
A12-47. Fairchild C-119K Flying Boxcar	213
A12-48. Fairchild C-123K Provider	214
A12-49. Fairchild F-27	215
A12-50. Fokker F-27	216
A12-51. Fokker F-28	217
A12-52. Gates Learjet	218
A12-53. General Dynamics/Convair 880/990	219
A12-54. Grumman Gulfstream I	220
A12-55. Grumman Gulfstream II	221
A12-56. Grumman G-64/G-III	222
A12-57. Grumman G-73	223
A12-58. Hamburger-Flugzeugbau HFB-320 Hansa	224
A12-59. Hawker Siddeley DH. 104 Dove	225
A12-60. Hawker Siddeley DH. 114 Heron	226
A12-61. Hawker Siddeley HS-125	227
A12-62. Hawker Siddeley HS-748	228
A12-63. Ilyushin IL-62	229
A12-64. Israel Aircraft Industries Westwind	230
A12-65. Lockheed Constellation and Super Constellation	231
A12-66. Lockheed C-5B Galaxy	232
A12-67. Lockheed C-141 Starlifter	233
A12-68. Lockheed L-188 Electra II	234
A12-69. Lockheed L-100 Hercules	235
A12-70. Lockheed L-1011 Tristar	236
A12-71. Lockheed L-1329 Jetstar	237
A12-72. Martin 404	238
A12-73. McDonnell-Douglas DC-8	239
A12-74. McDonnell-Douglas DC-9 and MD-80	240
A12-75. McDonnell-Douglas DC-10	241
A12-76. McDonnell-Douglas MD-11	242
A12-77. Mitsubishi MU-2	243
A12-78. Nihon/N.A.M.C. YS-11A	244
A12-79. Rockwell International NA-265 Sabreliner	245
A12-80. SAAB SF 340	246
A12-81. Short Brothers	247
A12-82. Shorts SC. 5/10 Belfast	248
A12-83. Swearingen Merlin	249
A12-84. Swearingen Metro	250
A14-1. Takeoff run available (TORA)	277
A14-2. Takeoff distance available (TODA)	278

A14-3. Accelerate-stop distance available (ASDA).....	279
A14-4. Landing distance available (LDA)	280

Chapter 1. REGULATORY REQUIREMENTS AND DEFINITION OF TERMS

1. GENERAL. Section 103 of the Federal Aviation Act of 1958 states in part, "In the exercise and performance of his power and duties under this Act, the Secretary of Transportation shall consider the following, among other things, as being in the public interest: (a) The regulation of air commerce in such manner as to best promote its development and safety and fulfill the requirements of defense; (b) The promotion, encouragement, and development of civil aeronautics"

This public charge, in effect, requires the development and maintenance of a national system of safe, delay-free, and cost-effective airports. The use of the standards and recommendations contained in this publication in the design of airports supports this public charge. These standards and recommendations, however, do not limit or regulate the operations of aircraft.

2. DEFINITIONS. As used in this publication, the following terms mean:

Aircraft Approach Category. A grouping of aircraft based on 1.3 times their stall speed in their landing configuration at the certificated maximum flap setting and maximum landing weight at standard atmospheric conditions. The categories are as follows:

Category A: Speed less than 91 knots.

Category B: Speed 91 knots or more but less than 121 knots.

Category C: Speed 121 knots or more but less than 141 knots.

Category D: Speed 141 knots or more but less than 166 knots.

Category E: Speed 166 knots or more.

Airplane Design Group (ADG). A grouping of airplanes based on wingspan or tail height. Where an airplane is in two categories, the most demanding category should be used. The groups are as follows:

Group I: Up to but not including 49 feet (15 m) wingspan or tail height up to but not including 20 feet.

Group II: 49 feet (15 m) up to but not including 79 feet (24 m) wingspan or tail height from 20 up to but not including 30 feet.

Group III: 79 feet (24 m) up to but not including 118 feet (36 m) wingspan or tail height from 30 up to but not including 45 feet.

Group IV: 118 feet (36 m) up to but not including 171 feet (52 m) wingspan or tail height from 45 up to but not including 60 feet.

Group V: 171 feet (52 m) up to but not including 214 feet (65 m) wingspan or tail height from 60 up to but not including 66 feet.

Group VI: 214 feet (65 m) up to but not including 262 feet (80 m) wingspan or tail height from 66 up to but not including 80 feet.

Table 1-1. Airplane Design Groups (ADG)

Group #	Tail Height (ft)	Wingspan (ft)
I	<20	<49
II	20 - <30	49 - <79
III	30 - <45	79 - <118
IV	45 - <60	118 - <171
V	60 - <66	171 - <214
VI	66 - <80	214 - <262

Airport Elevation. The highest point on an airport's usable runway expressed in feet above mean sea level (MSL).

Airport Layout Plan (ALP). The plan of an airport showing the layout of existing and proposed airport facilities.

Airport Reference Point (ARP). The latitude and longitude of the approximate center of the airport.

Blast Fence. A barrier used to divert or dissipate jet blast or propeller wash.

Building Restriction Line (BRL). A line which identifies suitable building area locations on airports.

Clear Zone. See Runway Protection Zone.

Clearway (CWY). A defined rectangular area beyond the end of a runway cleared or suitable for use in lieu of runway to satisfy takeoff distance requirements.

Compass Calibration Pad. An airport facility used for calibrating an aircraft compass.

Declared Distances. The distances the airport owner declares available for the airplane's takeoff run, takeoff distance, accelerate-stop distance, and landing distance requirements. The distances are:

Takeoff run available (TORA). The runway length declared available and suitable for the ground run of an airplane taking off;

Takeoff distance available (TODA). The TORA plus the length of any remaining runway or clearway (CWY) beyond the far end of the TORA;

NOTE: The full length of TODA may not be usable for all takeoffs because of obstacles in the departure area. The usable TODA length is aircraft performance dependent and, as such, must be determined by the aircraft operator before each takeoff and requires knowledge of the location of each controlling obstacle in the departure area.

Accelerate-stop distance available (ASDA). The runway plus stopway (SWY) length declared available and suitable for the acceleration and deceleration of an airplane aborting a takeoff; and

Landing distance available (LDA). The runway length declared available and suitable for a landing airplane.

Fixed By Function NAVAID. An air navigation aid (NAVAID) that must be positioned in a particular location in order to provide an essential benefit for civil aviation is fixed by function. Exceptions are:

a. Equipment shelters, junction boxes, transformers, and other appurtenances that support a fixed by function NAVAID *are not* fixed by function unless operational requirements require them to be located in close proximity to the NAVAID.

b. Some NAVAIDS, such as localizers, can provide beneficial performance even when they are not located at their optimal location. These NAVAIDS are not fixed by function.

Frangible NAVAID. A navigational aid (NAVAID) which retains its structural integrity and stiffness up to a designated maximum load, but on impact from a greater load, breaks, distorts, or yields in such a manner as to present the minimum hazard to aircraft. The term NAVAID includes electrical and visual air navigational aids, lights, signs, and associated supporting equipment.

Hazard to Air Navigation. An object which, as a result of an aeronautical study, the FAA determines will have a substantial adverse effect upon the safe and efficient use of navigable airspace by aircraft, operation of air navigation facilities, or existing or potential airport capacity.

Large Airplane. An airplane of more than 12,500 pounds (5 700 kg) maximum certificated takeoff weight.

Low Impact Resistant Supports (LIRS). Supports designed to resist operational and environmental static loads and fail when subjected to a shock load such as that from a colliding aircraft.

Object. Includes, but is not limited to above ground structures, NAVAIDS, people, equipment, vehicles, natural growth, terrain, and parked aircraft.

Object Free Area (OFA). An area on the ground centered on a runway, taxiway, or taxilane centerline provided to enhance the safety of aircraft operations by having the area free of objects, except for objects that need to be located in the OFA for air navigation or aircraft ground maneuvering purposes.

Obstacle Clearance Surface (OCS). An inclined obstacle evaluation surface associated with a glidepath. The separation between this surface and the glidepath angle at any given distance from GPI defines the MINIMUM required obstruction clearance at that point.

Obstacle Free Zone (OFZ). The OFZ is the airspace below 150 feet (45 m) above the established airport elevation and along the runway and extended runway centerline that is required to be clear of all objects, except for frangible visual NAVAIDS that need to be located in the OFZ because of their function, in order to provide clearance protection for aircraft landing or taking off from the runway, and for missed approaches. The OFZ is sub-divided as follows:

Runway OFZ. The airspace above a surface centered on the runway centerline.

Inner-approach OFZ. The airspace above a surface centered on the extended runway centerline. It applies to runways with an approach lighting system.

Inner-transitional OFZ. The airspace above the surfaces located on the outer edges of the runway OFZ and the inner-approach OFZ. It applies to runways with approach visibility minimums lower than 3/4-statute mile (1 200 m).

Obstruction to Air Navigation. An object of greater height than any of the heights or surfaces presented in Subpart C of Code of Federal Regulation (14 CFR), Part 77. (Obstructions to air navigation are presumed to be hazards to air navigation until an FAA study has determined otherwise.)

Precision Approach Category I (CAT I) Runway. A runway with an instrument approach procedure which provides for approaches to a decision height (DH) of not less than 200 feet (60 m) and visibility of not less than 1/2 mile (800 m) or Runway Visual Range (RVR) 2400 (RVR 1800 with operative touchdown zone and runway centerline lights).

Precision Approach Category II (CAT II) Runway. A runway with an instrument approach procedure which provides for approaches to a minima less than CAT I to as low as a decision height (DH) of not less than 100 feet (30 m) and RVR of not less than RVR 1200.

Precision Approach Category III (CAT III) Runway. A runway with an instrument approach procedure which provides for approaches to minima less than CAT II.

Runway (RW). A defined rectangular surface on an airport prepared or suitable for the landing or takeoff of airplanes.

Runway Blast Pad. A surface adjacent to the ends of runways provided to reduce the erosive effect of jet blast and propeller wash.

Runway Protection Zone (RPZ). An area off the runway end to enhance the protection of people and property on the ground.

Runway Safety Area (RSA). A defined surface surrounding the runway prepared or suitable for reducing the risk of damage to airplanes in the event of an undershoot, overshoot, or excursion from the runway.

Shoulder. An area adjacent to the edge of paved runways, taxiways, or aprons providing a transition between the pavement and the adjacent surface; support for aircraft running off the pavement; enhanced drainage; and blast protection.

Small Airplane. An airplane of 12,500 pounds (5 700 kg) or less maximum certificated takeoff weight.

Stopway (SWY). A defined rectangular surface beyond the end of a runway prepared or suitable for use in lieu of runway to support an airplane, without causing structural damage to the airplane, during an aborted takeoff.

Taxilane (TL). The portion of the aircraft parking area used for access between taxiways and aircraft parking positions.

Taxiway (TW). A defined path established for the taxiing of aircraft from one part of an airport to another.

Taxiway Safety Area (TSA). A defined surface alongside the taxiway prepared or suitable for reducing the risk of damage to an airplane unintentionally departing the taxiway.

Threshold (TH). The beginning of that portion of the runway available for landing. In some instances, the landing threshold may be displaced.

Displaced Threshold. A threshold that is located at a point on the runway other than the designated beginning of the runway.

Visual Runway. A runway without an existing or planned straight-in instrument approach procedure.

3. RELATED/REFERENCED READING MATERIAL. The following is a listing of documents referenced in other parts of this advisory circular. Advisory Circulars 00-2 and 00-44 may be obtained by writing to: The U.S. Department of Transportation; Utilization and Storage Section, M-443.2; Washington, D.C. 20590. The most current versions of the ACs listed below are available online at www.faa.gov.

NOTE: Some of the ACs in this paragraph have been cancelled but are still referenced in the main document. They will continue to be listed here and shown as cancelled until the next complete revision of the document.

- a. AC 00-2, Advisory Circular Checklist.
- b. AC 00-44, Status of Federal Aviation Regulations.
- c. AC 20-35, Tiedown Sense.
- d. AC 70/7460-1, Obstruction Marking and Lighting.
- e. AC 70/7460-2, Proposed Construction or Alteration of Objects that May Affect the Navigable Airspace. (Cancelled)
- f. AC 107-1, Aviation Security-Airports.
- g. AC 120-29, Criteria for Approving Category I and Category II Landing Minima for FAR Part 121 Operators.
- h. AC 150/5000-3, Address List for Regional Airports Divisions and Airports District/Field Offices. (Cancelled)
- i. AC 150/5060-5, Airport Capacity and Delay.
- j. AC 150/5070-3, Planning the Airport Industrial Park. (Cancelled)
- k. AC 150/5070-6, Airport Master Plans.
- l. AC 150/5190-1, Minimum Standards for Commercial Aeronautical Activities on Public Airports. (Cancelled by AC 150/5190-5)

m. AC 150/5190-4, A Model Zoning Ordinance to Limit Height of Objects Around Airports.

n. AC 150/5190-5, Exclusive Rights and Minimum Standards for Commercial Aeronautical Activities. (Cancelled by AC 150/5190-6 and AC 150/5190-7)

o. AC 150/5190-6, Exclusive Rights at Federally-Obligated Airports

p. AC 150/5190-7, Minimum Standards for Commercial Aeronautical Activities

q. AC 150/5200-33, Hazardous Wildlife Attractants On or Near Airports.

r. AC 150/5220-16, Automated Weather Observing Systems (AWOS) for Non-Federal Applications.

s. AC 150/5230-4, Aircraft Fuel Storage, Handling, and Dispensing on Airports.

t. AC 150/5320-5, Airport Drainage.

u. AC 150/5320-6, Airport Pavement Design and Evaluation.

v. AC 150/5320-14, Airport Landscaping for Noise Control Purposes.

w. AC 150/5325-4, Runway Length Requirements for Airport Design.

x. AC 150/5340-1, Standards for Airport Marking.

y. AC 150/5340-5, Segmented Circle Marker Systems.

z. AC 150/5340-14, Economy Approach Lighting Aids. (Cancelled by AC 150/5340-30)

aa. AC 150/5340-18, Standards for Airport Sign Systems.

bb. AC 150/5340-21, Airport Miscellaneous Lighting Visual Aids. (Cancelled by AC 150/5340-30)

cc. AC 150/5340-24, Runway and Taxiway Edge Lighting System. (Cancelled by AC 150/5340-30)

dd. AC 150/5340-28, Precision Approach Path Indicator (PAPI) Systems. (Cancelled by AC 150/5340-30)

ee. AC 150/5340-30, Design and Installation Details for Airport Visual Aids

ff. AC 150/5345-52, Generic Visual Slope Indicators (GVGI).

gg. AC 150/5360-13, Planning and Design Guidelines for Airport Terminal Facilities.

hh. AC 150/5370-10, Standards for Specifying Construction of Airports.

ii. AC 150/5390-2, Heliport Design.

jj. 14 CFR Part 23, Airworthiness Standards: Normal, Utility, Acrobatic, and Commuter Category Airplanes.

kk. 14 CFR Part 25, Airworthiness Standards: Transport Category Airplanes.

ll. 14 CFR Part 77, Safe, Efficient Use, and Preservation of the Navigable Airspace.

mm. 14 CFR Part 97, Standard Instrument Approach Procedures.

nn. 14 CFR Part 135, Operating Requirements: Commuter and On Demand Operations and Rules Governing Persons On Board Such Aircraft.

oo. 14 CFR Part 139, Certification of Airports.

pp. 14 CFR Part 151, Federal Aid to Airports.

qq. 14 CFR Part 152, Airport Aid Program.

rr. 14 CFR Part 153, Acquisition of U.S. Land for Public Airports. (Removed from Title 14)

ss. 14 CFR Part 154, Acquisition of Land for Public Airports Under the Airport and Airway Development Act of 1970. (Removed from Title 14)

tt. 14 CFR Part 157, Notice of Construction, Alteration, Activation, and Deactivation of Airports.

uu. Order 1050.1, Policies and Procedures for Considering Environmental Impacts.

vv. Order 5050.4, National Environmental Policy Act (NEPA) Implementing Instructions for Airport Actions.

ww. Order 5100.38, Airport Improvement Program (AIP) Handbook.

xx. Order 7400.2, Procedures for Handling Airspace Matters.

yy. Order 8200.1, United States Standard Flight Inspection Manual.

zz. Order 8260.3, United States Standard for Terminal Instrument Procedures (TERPS).

4. **AIRPORT REFERENCE CODE (ARC).** The ARC is a coding system used to relate airport design criteria to the operational and physical characteristics of the airplanes intended to operate at the airport.

a. **Coding System.** The airport reference code has two components relating to the airport design aircraft. The first component, depicted by a letter, is the aircraft approach category and relates to aircraft approach speed (operational characteristic). The second component, depicted by a Roman numeral, is the *airplane design group* and relates to airplane wingspan or tailheight (physical characteristics), whichever is the most restrictive. Generally, runways standards are related to aircraft approach speed, airplane wingspan, and designated or planned approach visibility minimums. Taxiway and taxilane standards are related to airplane design group.

b. **Airport Design.** Airport design first requires selecting the ARC(s), then the lowest designated or planned approach visibility minimums for each runway, and then applying the airport design criteria associated with the airport reference code and the designated or planned approach visibility minimums.

(1) An upgrade in the first component of the ARC may result in an increase in airport design standards. Table 1-1 depicts these increases.

(2) An upgrade in the second component of the ARC generally will result in a major increase in airport design standards.

(3) An airport upgrade to provide for lower approach visibility minimums may result in an increase in airport design standards. Table 1-2 depicts these increases.

(4) Operational minimums are based on current criteria, runways, airspace, and instrumentation. Unless this is taken into consideration in the development of the airport, the operational minimums may be other than proposed.

(5) For airports with two or more runways, it may be desirable to design all airport elements to meet the requirements of the most demanding ARC. However, it may be more practical to design some airport elements, e.g., a secondary runway and its associated taxiway, to standards associated with a lesser demanding ARC.

5. **AIRPORT LAYOUT PLAN.** An Airport Layout Plan (ALP) is a scaled drawing of existing and proposed land and facilities necessary for the operation and development of the airport. Any airport will benefit from a carefully developed plan that reflects current FAA design standards and planning criteria. For guidance on developing Airport Master Plans, refer to AC 150/5070-6, *Airport Master Plans*.

a. **FAA-Approved ALP.** All airport development carried out at Federally obligated airports must be done in accordance with an FAA-approved ALP. The FAA-approved ALP, to the extent practicable, should conform to the FAA airport design standards existing at the time of its

approval. Due to unique site, environmental, or other constraints, the FAA may approve an ALP not fully complying with design standards. Such approval requires an FAA study and finding that the proposed modification is safe for the specific site and conditions. When the FAA upgrades a standard, airport owners should, to the extent practicable, include the upgrade in the ALP before starting future development.

b. **Guidance.** AC 150/5070-6, *Airport Master Plans*, contains background information on the development of ALPs, as well as a detailed listing of the various components that constitute a well-appointed ALP.

c. **Electronic Plans.** The FAA recommends the development of electronic ALPs where practical.

6. **MODIFICATION OF AIRPORT DESIGN STANDARDS TO MEET LOCAL CONDITIONS.**

“Modification to standards” means any change to FAA design standards other than dimensional standards for runway safety areas. Unique local conditions may require modification to airport design standards for a specific airport. A modification to an airport design standard related to new construction, reconstruction, expansion, or upgrade on an airport which received Federal aid requires FAA approval. The request for modification should show that the modification will provide an acceptable level of safety, economy, durability, and workmanship. Appendixes 8 and 9 discuss the relationship between airplane physical characteristics and the design of airport elements. This rationale may be used to show that the modification will provide an acceptable level of safety for the specified conditions, including the type of aircraft.

7. **NOTICE TO THE FAA OF AIRPORT DEVELOPMENT.**

14 CFR Part 157, Notice of Construction, Activation, and Deactivation of Airports, requires persons proposing to construct, activate, or deactivate an airport to give notice of their intent to the FAA. The notice applies to proposed alterations to the takeoff and landing areas, traffic patterns, and airport use, e.g., a change from private-use to public-use.

a. **Notice Procedure.** 14 CFR Part 157 requires airport proponents to notify the appropriate FAA Airports Regional or District Office at least 30 days before construction, alteration, deactivation, or the date of the proposed change in use. In an emergency involving essential public service, health, or safety, or when delay would result in a hardship, a proponent may notify the FAA by telephone and submit Form 7480-1, Notice of Landing Area Proposal, within 5 days.

b. **The Notice.** The notice consists of a completed FAA Form 7480-1, a layout sketch, and a location map. The layout sketch should show the airport takeoff and landing area configuration in relation to buildings, trees, fences, power lines, and other similar significant features. The preferred type of location map is the 7.5 minute U.S. Geological Survey

Quadrangle Map showing the location of the airport site. Form 7480-1 lists FAA Airports Office addresses.

c. **FAA Action**. The FAA evaluates the airport proposal for its impact upon the: safe and efficient use of navigable airspace; operation of air navigation facilities; existing or potential airport capacity; and safety of persons and property on the ground. The FAA notifies proponents of the results of the FAA evaluation.

d. **Penalty for Failure to Provide Notice**. Persons who fail to give notice are subject to civil penalty.

8. **NOTICE TO THE FAA OF PROPOSED CONSTRUCTION**. 14 CFR Part 77, Safe, Efficient Use, and Preservation of the Navigable Airspace, requires persons proposing any construction or alteration described in 14 CFR Part 77 to give notice to the FAA of their intent. This includes any construction or alteration of structures more than 200 feet (61 m) in height above the ground level or at a height that penetrates defined imaginary surfaces located in the vicinity of a public-use airport.

a. **Airport Data Requirements**. Future airport development plans and feasibility studies on file with the FAA may influence the determinations resulting from 14 CFR Part 77 studies. To assure full consideration of future airport development in 14 CFR Part 77 studies, airport owners must have their plans on file with the FAA. The necessary plan data includes, as a minimum, planned runway end coordinates, elevation, and type of approach for any new runway or runway extension.

b. **Penalty for Failure to Provide Notice**. Persons who knowingly and willingly fail to give such notice are subject to criminal prosecution.

9. **FAA STUDIES**. The FAA studies existing and proposed objects and activities, on and in the vicinity of public-use airports. These objects and activities are not limited to obstructions to air navigation, as defined in 14 CFR Part 77. These studies focus on the efficient use of the airport and the safety of persons and property on the ground. As the result of these studies, the FAA may resist, oppose, or recommend against the presence of objects or activities in the vicinity of a public-use airport that conflict with an airport planning or design standard/recommendation. This policy is stated as a notice on page 32152 of Volume 54, No. 149, of the Federal Register, dated Friday, August 4, 1989. FAA studies conclude:

a. Whether an obstruction to air navigation is a hazard to air navigation;

b. Whether an object or activity on or in the vicinity of an airport is objectionable;

c. Whether the need to alter, remove, mark, or light an object exists;

d. Whether to approve an Airport Layout Plan;

e. Whether proposed construction, enlargement, or modification to an airport would have an adverse effect on the safe and efficient use of navigable airspace; or

f. Whether a change in an operational procedure is feasible.

10. **FEDERAL ASSISTANCE**. The FAA administers a grant program (per Order 5100.38, Airport Improvement Program (AIP) Handbook) which provides financial assistance for developing public-use airports. Persons interested in this program can obtain information from FAA Airports Regional or District Offices. Technical assistance in airport development is also available from these offices.

11. **ENVIRONMENTAL ASSESSMENTS**. Federal grant assistance in, or ALP approval of, new airport construction or major expansion normally requires an assessment of potential environmental impacts in accordance with FAA Order 5050.4, National Environmental Policy Act (NEPA) Implementing Instructions for Airport Actions.

12. **STATE ROLE**. Many State aeronautics commissions or similar departments require prior approval and, in some instances, a license for the establishment and operation of an airport. Some States administer a financial assistance program similar to the Federal program and technical advice. Proponents should contact their respective State aeronautics commissions or departments for information on licensing and assistance programs.

13. **LOCAL ROLE**. Most communities have zoning ordinances, building codes, and fire regulations which may affect airport development. Some have or are in the process of developing codes or ordinances regulating environmental issues such as noise and air quality. Others may have specific procedures for establishing an airport.

14. to 199. **RESERVED**

Table 1-1. Increases in airport design standards associated with an upgrade in the first component (aircraft approach category) of the airport reference code

ARC upgrade	Changes in airport design standards
A-I <u>s/</u> to B-I <u>s/</u>	No change in airport design standards.
B-I <u>s/</u> to C-I	Increase in crosswind component. Refer to paragraph 203.b. Increase in runway separation standards. Refer to tables 2-1 and 2-2. Increase in RPZ dimensions. Refer to table 2-4 and appendix 14, paragraph 5.b. Increase in OFZ dimensions. Refer to paragraph 306. Increase in runway design standards. Refer to tables 3-1, 3-2, and 3-3. Increase in surface gradient standards. Refer to paragraph 502. Increase in threshold siting standards. Refer to appendix 2, paragraph 5.
A-I to B-I	No change in airport design standards.
B-I / to C-I	Increase in crosswind component. Refer to paragraph 203.b. Increase in runway separation standards. Refer to tables 2-1 and 2-2. Increase in RPZ dimensions. Refer to table 2-4 and appendix 14, paragraph 5.b. Increase in runway design standards. Refer to tables 3-1, 3-2, and 3-3. Increase in surface gradient standards. Refer to paragraph 502.
A-II to B-II	No change in airport design standards.
B-II to C-II	Increase in crosswind component. Refer to paragraph 203.b. Increase in runway separation standards. Refer to tables 2-1 and 2-2. Increase in RPZ dimensions. Refer to table 2-4 and appendix 14, paragraph 5.b. Increase in runway design standards. Refer to tables 3-1, 3-2, and 3-3. Increase in surface gradient standards. Refer to paragraph 502.
A-III to B-III	No change in airport standards.
B-III to C-III	Increase in runway separation standards. Refer to tables 2-1 and 2-2. Increase in RPZ dimensions. Refer to table 2-4 and appendix 14, paragraph 5.b. Increase in runway design standards. Refer to tables 3-1, 3-2, and 3-3. Increase in surface gradient standards. Refer to paragraph 502.
A-IV to B-IV	No change in airport design standards.
B-IV to C-IV	Increase in RPZ dimensions. Refer to table 2-4 and appendix 14, paragraph 5.b. Increase in surface gradient standards. Refer to paragraph 502.

s/ These airport design standards pertain to facilities for small airplanes exclusively.

Table 1-2. Increases in airport design standards to provide for lower approach visibility minimums

Visibility minimums decrease *	Changes in airport design standards.
Visual to Not lower than 1-Mile (1 600 m)	No change in airport design standards.
Not lower than 1-Mile (1 600 m) to Not lower than 3/4-Mile (1 200 m)	Increase in RPZ dimensions. Refer to table 2-4. Increase in threshold siting standards. Refer to appendix 2, paragraph 5.
Not lower than 3/4-Mile (1 200 m) to Not lower than CAT I	For aircraft approach categories A & B runways: Increase in runway separation standards. Refer to table 2-1. Increase in RPZ dimensions. Refer to table 2-4. Increase in OFZ dimensions. Refer to paragraph 306. Increase in runway design standards. Refer to tables 3-1 and 3-2. Increase in threshold siting standards. Refer to appendix 2, paragraph 5.
	For aircraft approach categories C & D runways: Increase in runway separation standards for ADG I & II runways. Refer to table 2-2. Increase in RPZ dimensions. Refer to table 2-4. Increase in OFZ dimensions. Refer to paragraph 306. Increase in threshold siting standards. Refer to appendix 2, paragraph 5.
Not lower than CAT I to Lower than CAT I	Increase in OFZ dimensions for runways serving large airplanes. Refer to paragraph 306. Increase in threshold siting standards. Refer to appendix 2, paragraph 5.

* In addition to the changes in airport design standards as noted, providing for lower approach visibility minimums may result in an increase in the number of objects identified as obstructions to air navigation in accordance with 14 CFR Part 77. This may require object removal or marking and lighting. Refer to paragraph 211.a.(6).

Chapter 2. AIRPORT GEOMETRY

200. INTRODUCTION. This chapter presents the airport geometric design standards and recommendations to ensure the safety, economy, efficiency, and longevity of an airport.

201. PRINCIPLES OF APPLICATION.

a. Need to Plan. The significance of the interrelationship of the various airport features cannot be overemphasized. It is important that airport owners look to both the present and potential functions of the airport.

(1) Existing and planned airspace required for safe and efficient aircraft operations should be protected by acquisition of a combination of zoning, easements, property interests, and other means. AC 150/5190-4, A Model Zoning Ordinance to Limit Height of Objects Around Airports, presents guidance for controlling the height of objects around airports.

(2) All other existing and planned airport elements, including the following, should be on airport property:

(a) Object free areas;

(b) Runway protection zones;

(c) Areas under the 14 CFR Part 77 Subpart C airport imaginary surfaces out to where the surfaces obtain a height of at least 35 feet (10 m) above the primary surface; and

(d) Areas, other than those which can be adequately controlled by zoning, easements, or other means to mitigate potential incompatible land uses.

b. Airport Functions. Coordination with the FAA and users of the airport should assist in determining the airport's immediate and long range functions which will best satisfy the needs of the community and traveling public. This involves determining the following:

(1) The operating characteristics, sizes, and weights of the airplanes expected at the airport;

(2) The airport reference code (ARC) resulting from (1);

(3) The most demanding meteorological conditions in which airplanes will operate;

(4) The volume and mix of operations;

(5) The possible constraints on navigable airspace; and

(6) The environmental and compatible land-use considerations associated with topography, residential development, schools, churches, hospitals, sites of public assembly, and the like.

c. Airport Layout Plan. When developing the airport layout plan, application of the standards and recommendations in this publication to the long range functions of the airport will establish the future airport geometry. See AC 150/5070-6, Airport Master Plans, current edition, for information on the development of the airport layout plan.

202. RUNWAY LOCATION AND ORIENTATION. Runway location and orientation are paramount to airport safety, efficiency, economics, and environmental impact. The weight and degree of concern given to each of the following factors depend, in part, on: the airport reference code; the meteorological conditions; the surrounding environment; topography; and the volume of air traffic expected at the airport.

a. Wind. Appendix 1 provides information on wind data analysis for airport planning and design. Such an analysis considers the wind velocity and direction as related to the existing and forecasted operations during visual and instrument meteorological conditions. It may also consider wind by time of day.

b. Airspace Availability. Existing and planned instrument approach procedures, missed approach procedures, departure procedures, control zones, special use airspace, restricted airspace, and traffic patterns influence airport layouts and locations. Contact the FAA for assistance on airspace matters.

c. Environmental Factors. In developing runways to be compatible with the airport environs, conduct environmental studies which consider the impact of existing and proposed land use and noise on nearby residents, air and water quality, wildlife, and historical/archeological features.

d. Obstructions to Air Navigation. An obstruction survey should identify those objects which may affect airplane operations. Approaches free of obstructions are desirable and encouraged, but as a minimum, locate and orient runways to ensure that the

approach areas associated with the ultimate development of the airport are clear of hazards to air navigation.

e. Topography. Topography affects the amount of grading and drainage work required to construct a runway. In determining runway orientation, consider the costs of both the initial work and ultimate airport development. See chapter 5 and AC 150/5320-5 for further guidance.

f. Airport Traffic Control Tower Visibility. The location and orientation of runways and taxiways must be such that the existing (or future) airport traffic control tower (ATCT) has a clear line of sight to: all traffic patterns; the final approaches to all runways; all runway structural pavement; and, other operational surfaces controlled by ATC. A clear line of sight to taxiway centerlines is desirable. Operational surfaces not having a clear unobstructed line of sight from the ATCT are designated by ATC as uncontrolled or nonmovement areas through a local agreement with the airport owner. See chapter 6 for guidance on airport traffic control tower siting.

g. Wildlife Hazards. In orienting runways, consider the relative locations of bird sanctuaries, sanitary landfills, or other areas that may attract large numbers of birds or wildlife. Where bird hazards exist, develop and implement bird control procedures to minimize such hazards. See FAA/USDA manual *Wildlife Hazard Management at Airports*. This manual may be used to determine, on a case-by-case basis, what uses may be compatible with a particular airport environment with respect to wildlife management. Additional standards and guidance are available in AC 150/5200-33, Hazardous Wildlife Attractants on or Near Airports, and AC 150/5200-34, Construction or Establishment of Landfills near Public Airports. Guidance is also available through local FAA Airports Offices.

203. ADDITIONAL RUNWAYS. An additional runway may be necessary to accommodate operational demands, minimize adverse wind conditions, or overcome environmental impacts.

a. Operational Demands. An additional runway, or runways, is necessary when traffic volume exceeds the existing runway's operational capability. With rare exception, capacity justified runways are parallel to the primary runway. Refer to AC 150/5060-5 for additional discussion.

b. Wind Conditions. When a runway orientation provides less than 95 percent wind coverage for any aircraft forecasted to use the airport on a regular basis, a crosswind runway is recommended. The 95 percent wind coverage is computed on the basis of the crosswind not exceeding 10.5 knots for Airport Reference Codes A-I and

B-I, 13 knots for Airport Reference Codes A-II and B-II, 16 knots for Airport Reference Codes A-III, B-III, and C-I through D-III, and 20 knots for Airport Reference Codes A-IV through D-VI. See Appendix 1 for the methodology on computing wind coverage.

c. Environmental Impact. An additional runway may be needed to divert traffic from overflying an environmentally sensitive area.

204. TAXIWAY SYSTEM. As runway traffic increases, the capacity of the taxiway system may become the limiting operational factor. Taxiways link the independent airport elements and require careful planning for optimum airport utility. The taxiway system should provide for free movement to and from the runways, terminal/cargo, and parking areas. It is desirable to maintain a smooth flow with a minimum number of points requiring a change in the airplane's taxiing speed.

a. System Composition. Through-taxiways and intersections comprise the taxiway system. It includes entrance and exit taxiways; bypass, crossover or transverse taxiways; apron taxiways and taxilanes; and parallel and dual parallel taxiways. Chapter 4 discusses taxiway design.

b. Design Principles:

- (1) Provide each runway with a parallel taxiway or the capability therefore;
- (2) Build taxiways as direct as possible;
- (3) Provide bypass capability or multiple access to runway ends;
- (4) Minimize crossing runways;
- (5) Provide ample curve and fillet radii;
- (6) Provide airport traffic control tower line of sight; and
- (7) Avoid traffic bottlenecks.

205. AIRPORT APRONS. Chapter 5 contains gradient standards for airport aprons. The tables cited in paragraph 206 present separation criteria applicable to aprons. For other apron criteria, refer to AC 150/5360-13 and Appendix 5 herein.

206. SEPARATION STANDARDS. Tables 2-1, 2-2, and 2-3 and Figure 2-1 describe the separation standards applicable to all new airport projects. The separation distances may need to be increased to meet the runway obstacle free zone (OFZ) standards.

NOTE: Use of the Runway Obstacle Fee Zone (OFZ) to justify a modification to standards for the purpose of reducing runway to taxiway separation standards is not allowed.

207. PARALLEL RUNWAY SEPARATION -- SIMULTANEOUS VFR OPERATIONS.

a. **Standard.** For simultaneous landings and takeoffs using visual flight rules (VFR), the minimum separation between centerlines of parallel runways is 700 feet (214 m).

b. **Recommendations.** The minimum runway centerline separation distance recommended for Airplane Design Group V and VI runways is 1,200 feet (366 m). Air traffic control practices, such as holding airplanes between the runways, frequently justify greater separation distances. Runways with centerline spacings under 2,500 feet (762 m) are treated as a single runway by ATC when wake turbulence is a factor.

208. PARALLEL RUNWAY SEPARATION-- SIMULTANEOUS IFR OPERATIONS.

To attain instrument flight rule (IFR) capability for simultaneous (independent) landings and takeoff on parallel runways, the longitudinal (in-trail) separation required for single runway operations is replaced, in whole or in part, by providing lateral separation between aircraft operating to parallel runways. Subparagraphs a and b identify the minimum centerline separations for parallel runways with operations under instrument flight rules (IFR). Where practical, parallel runway centerline separation of at least 5,000 feet (1 525 m) is recommended. Placing the terminal area between the parallel runways minimizes taxi operations across active runways and increases operational efficiency of the airport. Terminal area space needs may dictate greater separations than required for simultaneous IFR operations.

a. **Simultaneous Approaches.** Precision instrument operations require electronic navigational aids and monitoring equipment, air traffic control, and approach procedures.

(1) **Dual simultaneous precision instrument approaches** are normally approved on parallel runway centerline separation of 4,300 feet (1 310 m). Further on a case-by-case basis, the FAA will consider proposals utilizing separations down to a minimum of 3,000 feet (915 m) where a 4,300 foot (1 310 m) separation is impractical. This reduction of separation requires special high update radar, monitoring equipment, etc..

(2) **Triple simultaneous precision instrument approaches** for airports below 1,000 feet (305 m) elevation normally require parallel runway centerline separation of 5,000 feet (1 525 m) between adjacent runways. Triple simultaneous precision instrument approaches for airport elevations at and above 1,000 feet (305 m) and reduction in separation are currently under study by the FAA. In the interim, the FAA, on a case-by-case basis, will consider proposals utilizing separations down to a minimum of 4,300 feet (1 310 m) where a 5,000-foot (1 525 m) separation is impractical or the airport elevation is at or above 1,000 feet (305 m). Reduction of separation may require special radar, monitoring equipment, etc.

(3) **Quadruple simultaneous precision instrument approaches** are currently under study by the FAA. In the interim, the FAA, on a case-by-case basis, will consider proposals utilizing separations down to a minimum of 5,000 feet (1 525 m). Quadruples may require special radar, monitoring equipment, etc..

b. **Simultaneous Departures or Approaches and Departures.** Simultaneous departures do not always require radar air traffic control facilities. The following parallel runway centerline separations apply:

(1) Simultaneous Departures.

(a) Simultaneous nonradar departures require a parallel runway centerline separation of at least 3,500 feet (1 067 m).

(b) Simultaneous radar departures require a parallel runway centerline separation of at least 2,500 feet (762 in).

(2) **Simultaneous Approach and Departure.** Simultaneous radar-controlled approaches and departures require the following parallel runway centerline separations:

(a) When the thresholds are not staggered, at least 2,500 feet (762 m).

(b) When the thresholds are staggered and the approach is to the near threshold, the 2,500-foot (762 m) separation can be reduced by 100 feet (30 m) for each 500 feet (150 m) of threshold stagger to a minimum separation of 1,000 feet (305 m). For Airplane Design Groups V and VI runways, a separation of at least 1,200 feet (366 m) is recommended. See figure 2-2 for a description of "near" and "far" thresholds.

(c) When the thresholds are staggered and the approach is to the far threshold, the minimum 2,500-foot (762 m) separation requires an increase of 100 feet (30 m) for every 500 feet (152 m) of threshold stagger.

209. **RUNWAY TO PARALLEL TAXIWAY AND TAXILANE SEPARATION.**

a. **Standards.** Tables 2-1 and 2-2 present the runway centerline to parallel taxiway/taxilane centerline separation standard. This distance is such to satisfy the requirement that no part of an aircraft (tail tip, wing tip) on taxiway/taxilane centerline is within the runway safety area or penetrates the obstacle free zone (OFZ).

b. **Recommendations.** To have room for the acute-angled exit taxiway, provide a runway centerline to parallel taxiway centerline of at least 400 feet (120 m) for Airplane Design Groups I and II, 500 feet (150 m) for Airplane Design Group III, and 600 feet (180 m) for Airplane Design Groups IV, V, and VI.

210. **BUILDING RESTRICTION LINE (BRL).**

A BRL should be placed on an airport layout plan for identifying suitable building area locations on airports. The BRL should encompass the runway protection zones, the runway object free area, the runway visibility zone (see paragraph 503), NAVAID critical areas, areas required for terminal instrument procedures, and airport traffic control tower clear line of sight.

211. **OBJECT CLEARING CRITERIA.** Safe and efficient operations at an airport require that certain areas on and near the airport be clear of objects or restricted to objects with a certain function, composition, and/or height. The object clearing criteria subdivides the 14 CFR Part 77, Subpart C, airspace and the object free area (OFA) ground area by type of objects tolerated within each subdivision. Aircraft are controlled by the aircraft operating rules and not by this criteria.

a. **Standards.** Object clearance requirements are as follows:

(1) **Object Free Area (OFA).** Object free areas require clearing of objects as specified in paragraph 307, Runway Object Free Area, and paragraph 404, Taxiway and Taxilane Object Free Area (OFA).

(2) **Runway and Taxiway Safety Areas.**

Runway and taxiway safety areas require clearing of objects, except for objects that need to be located in the runway or taxiway safety area because of their function. Objects higher than 3 inches (7.6 cm) above grade should be constructed on low impact resistant supports (frangible mounted structures) of the lowest practical height with the frangible point no higher than 3 inches (7.6 cm) above grade. Other objects, such as manholes, should be constructed at grade. In no case should their height exceed 3 inches (7.6 cm) above grade. Underground fuel storage facilities should not be located within runway and taxiway safety areas (see AC 150/5230-4), Aircraft Fuel Storage, Handling, and Dispensing on Airports). Tables 3-1, 3-2, 3-3, and 4-1 specify runway and taxiway safety area standard dimensions.

(3) **Obstacle Free Zone (OFZ).** Obstacle Free Zones require clearing of object penetrations, except for frangible visual NAVAIDs that need to be located in the OFZ because of their function. Paragraph 306 specifies OFZ standard dimensions.

(4) **Threshold.** The threshold obstacle clearance surfaces, defined in Appendix 2, paragraph 5, require clearing of object penetrations.

(5) **NAVAIDs.** Certain areas require clearing for the establishment and operation of NAVAIDs. These NAVAID critical areas are depicted in chapter 6.

(6) **14 CFR Part 77 Safe, Efficient Use and Preservation of the Navigable Airspace.** Obstructions to air navigation must be removed unless an FAA aeronautical study, based on proposed operations, determined otherwise. To determine otherwise, the FAA must find no substantial adverse effect as defined in Order 7400.2, Procedures for Handling Airspace Matters, Chapter 7, Evaluating Aeronautical Effect, Section 1, General. The FAA, normally, limits aeronautical studies of existing objects to obstructions to air navigation which are not included in the criteria cited in paragraphs 211a(1) through (5).

(7) **Runway Protection Zone (RPZ).** The RPZ requires clearing of incompatible objects and activities as specified in paragraphs 212a(1)(a) and 212a(2).

(8) **General.** Other objects which require clearing are those which generally can have an adverse effect on the airport. These include objects in the inner part of the approach area (coinciding with the RPZ) such as fuel handling and storage facilities, smoke and dust generating activities, misleading lights, and those which may create glare or attract wildlife.

b. Recommendations. Other objects that are desirable to clear, if practicable, are objects that do not have a substantial adverse effect on the airport but, if removed, will enhance operations. These include objects in the controlled activity area and obstructions to air navigation that are not covered in paragraph 211.a, especially those penetrating an approach surface. On a paved runway, the approach surface starts 200 feet (61 m) beyond the area usable for takeoff or landing, whichever is more demanding. On an unpaved runway, the approach surface starts at the end of the area usable for takeoff or landing.

212. RUNWAY PROTECTION ZONE (RPZ). The RPZ's function is to enhance the protection of people and property on the ground. This is achieved through airport owner control over RPZs. Such control includes clearing RPZ areas (and maintaining them clear) of incompatible objects and activities. Control is preferably exercised through the acquisition of sufficient property interest in the RPZ.

a. Standards.

(1) RPZ Configuration/Location. The RPZ is trapezoidal in shape and centered about the extended runway centerline. The central portion and controlled activity area are the two components of the RPZ (see Figure 2-3). The RPZ dimension for a particular runway end is a function of the type of aircraft and approach visibility minimum associated with that runway end. Table 2-4 provides standard dimensions for RPZs. Other than with a special application of declared distances, the RPZ begins 200 feet (60 m) beyond the end of the area usable for takeoff or landing. With a special application of declared distances, see Appendix 14, separate approach and departure RPZs are required for each runway end.

(a) The Central Portion of the RPZ. The central portion of the RPZ extends from the beginning to the end of the RPZ, centered on the runway centerline. Its width is equal to the width of the runway OFA (see Figure 2-3). Paragraph 307 contains the dimensional standards for the OFA.

(b) The Controlled Activity Area. The controlled activity area is the portion of the RPZ to the sides of the central portion of the RPZ.

(2) Land Use. In addition to the criteria specified in paragraph 211, the following land use criteria apply within the RPZ:

(a) While it is desirable to clear all objects from the RPZ, some uses are permitted, provided they do not attract wildlife (see paragraph 202.g., Wildlife Hazards, and Appendix 17 or dimensional standards), are outside of the Runway OFA, and do not interfere with navigational aids. Automobile parking facilities, although discouraged,

may be permitted, provided the parking facilities and any associated appurtenances, in addition to meeting all of the preceding conditions, are located outside of the central portion of the RPZ. Fuel storage facilities may not be located in the RPZ.

(b) Land uses prohibited from the RPZ are residences and places of public assembly. (Churches, schools, hospitals, office buildings, shopping centers, and other uses with similar concentrations of persons typify places of public assembly.) Fuel storage facilities may not be located in the RPZ.

b. Recommendations. Where it is determined to be impracticable for the airport owner to acquire and plan the land uses within the entire RPZ, the RPZ land use standards have recommendation status for that portion of the RPZ not controlled by the airport owner.

c. FAA Studies of Objects and Activities in the Vicinity of Airports. The FAA policy is to protect the public investment in the national airport system. To implement this policy, the FAA studies existing and proposed objects and activities, both off and on public-use airports, with respect to their effect upon the safe and efficient use of the airports and safety of persons and property on the ground. These objects need not be obstructions to air navigation, as defined in 14 CFR Part 77. As the result of a study, the FAA may issue an advisory recommendation in opposition to the presence of any off-airport object or activity in the vicinity of a public-use airport that conflicts with an airport planning or design standard or recommendation.

213. RUNWAY HOLDING POSITION (HOLDLINE). At airports with operating airport traffic control towers, runway holding positions (holdlines) identify the location on a taxiway where a pilot is to stop when he/she does not have clearance to proceed onto the runway. At airports without operating control towers, these holdlines identify the location where a pilot should assure there is adequate separation with other aircraft before proceeding onto the runway. The holdline standards, which assume a perpendicular distance from a runway centerline to an intersecting taxiway centerline (See paragraph 409) are in Tables 2-1 and 2-2. However, these distance standards may need to be longer and placed in such a way to take into account the largest aircraft (tail, body, or wing tip) expected to use the runway from penetrating the Obstacle Free Zone. These distances do not guarantee sufficient clearance behind a holding aircraft to permit the passing of another aircraft on a parallel taxiway. No part of an aircraft (wing-tip, fuselage, etc.) shall extend beyond the holdline.

214. to 299. RESERVED

Table 2-1. Runway Separation Standards for aircraft approach categories A & B

ITEM	DIM 1/	AIRPLANE DESIGN GROUP				
		I 2/	I	II	III	IV
Visual runways and runways with not lower than ¾-statue mile (1200m) approach visibility minimums						
Runway Centerline to:						
Parallel Runway Centerline	H	Refer to paragraphs 207 and 208				
Holdline		125ft 7/ 38m	200ft 60m	200ft 60m	200ft 5/ 60m	250ft 75m
Taxiway/Taxilane/ Centerline 3/ 8/	D	150ft 45m	225ft 67.5m	240ft 72m	300ft 90m	400ft 120m
Aircraft Parking Area	G	125ft 37.5m	200ft 60m	250ft 75m	400ft 120m	500ft 150m
Helicopter Touchdown Pad		Refer to Advisory Circular 150/5390-2				
Runways with lower than ¾ -statue mile (1200m) approach visibility minimums 4/						
Runway Centerline to:						
Parallel Runway Centerline	H	Refer to paragraphs 207 and 208				
Holdline		175ft 7/ 53m	250ft 75m	250ft 75m	250ft 5/ 75m	250ft 6/ 75m
Taxiway/Taxilane/ Centerline 3/ 8/	D	200ft 60m	250ft 75m	300ft 90m	350ft 105m	400ft 120m
Aircraft Parking Area	G	400ft 120m	400ft 120m	400ft 120m	400ft 120m	500ft 150m
Helicopter Touchdown Pad		Refer to Advisory Circular 150/5390-2				

- 1/ Letters correspond to the dimensions on Figure 2-1.
- 2/ These dimensional standards pertain to facilities for small airplanes exclusively.
- 3/ The taxiway/taxilane centerline separation standards are for sea level. At higher elevations, an increase to these separation distances may be required to keep taxiing and holding airplanes clear of the OFZ (refer to paragraph 206).
- 4/ For approaches with visibility less than $\frac{1}{2}$ -statue miles, runway centerline to taxiway/taxilane centerline separation increases to 400 feet (120m).
- 5/ This distance is increased 1 foot for each 100 feet above 5,100 feet above sea level.
- 6/ This distance is increased 1 foot for each 100 feet above sea level.
- 7/ The holdline dimension standards pertains to facilities for small airplanes exclusively, including airplane design groups I & II.
- 8/ Existing taxiway/taxilane distance may be acceptable to support the existing runway service level (i.e. CAT I, II, III) when approved by the FAA Office of Airport Safety and Standards, Airport Engineering Division (AAS-100).

NOTE: Use of the Obstacle Free Zone (OFZ) to justify a modification to standards for the purpose of reducing runway to taxiway separation standards is not allowed.

Table 2-2. Runway Separation Standards for aircraft approach categories C & D

ITEM	DIM 1/	AIRPLANE DESIGN GROUP					
		I	II	III	IV	V	VI
Visual runways and runways with not lower than ¾-statue mile (1200m) approach visibility minimums							
Runway Centerline to:							
Parallel Runway Centerline	H	Refer to paragraphs 207 and 208					
Holdline 7/		250ft 75m	250ft 75m	250ft 75m	250ft 75m	250ft 6/ 75m	280ft 6/ 85m
Taxiway/Taxilane/ Centerline 2/ 8/	D	300ft 90m	300ft 90m	400ft 120m	400ft 120m	3/ 3/	500ft 150m
Aircraft Parking Area	G	400ft 120m	400ft 120m	500ft 150m	500ft 150m	500ft 150m	500ft 150m
Helicopter Touchdown Pad		Refer to Advisory Circular 150/5390-2					
Runways with lower than ¾-statue mile (1200m) approach visibility minimums							
Runway Centerline to:							
Parallel Runway Centerline	H	Refer to paragraphs 207 and 208					
Holdline 7/		250ft 75m	250ft 75m	250ft 75m	250ft 6/ 75m	280ft 6/ 85m	280ft 6/ 85m
Taxiway/Taxilane/ Centerline 2/ 8/	D	400ft 120m	400ft 120m	400ft 120m	400ft 120m	3/ 4/ 3/ 4/	5/ 5/
Aircraft Parking Area	G	500ft 150m	500ft 150m	500ft 150m	500ft 150m	500ft 150m	500ft 150m
Helicopter Touchdown Pad		Refer to Advisory Circular 150/5390-2					

- 1/ Letters correspond to the dimensions on Figure 2-1.
- 2/ The taxiway/taxilane centerline separation standards are for sea level. At higher elevations, an increase to these separation distances may be required to keep taxiing and holding airplanes clear of the OFZ (refer to paragraph 206).
- 3/ For Airplane Design Group V, the standard runway centerline to parallel taxiway centerline separation distance is 400ft (120m) for airports at or below an elevation of 1,345feet (410m); 450feet (135m) for airports between elevations for 1,345 feet (410m) and 6,560 feet (2,000m); and 500 feet (150m) for airports above an elevation of 6,560 feet (2,000m).
- 4/ For approaches with visibility less than $\frac{1}{2}$ -statue mile, the separation distance increases to 500 feet (150m) plus required OFZ elevation adjustment.
- 5/ For approaches with visibility down to $\frac{1}{2}$ -statue mile, the separation distance increases to 500 feet (150m) plus elevation adjustment. For approaches with visibility less than $\frac{1}{2}$ -statue mile, the separation distance increases to 550 feet (168m) plus required OFZ elevation adjustment.
- 6/ For aircraft approach category C, the distance is increased 1 foot for each 100 feet above sea level.
- 7/ For all airplane design groups for aircraft approach category D (DI to DVI), this distance is increased 1 foot for each 100 feet above sea level.
- 8/ Existing taxiway/taxilane distance may be acceptable to support the existing runway service level (i.e. CAT I, II, III) when approved by the FAA Office of Airport Safety and Standards, Airport Engineering Division (AAS-100).

NOTE: Use of the Obstacle Free Zone (OFZ) to justify a modification to standards for the purpose of reducing runway to taxiway separation standards is not allowed.

Table 2--3. Taxiway and taxilane separation standards

ITEM	DIM 1/	AIRPLANE DESIGN GROUP					
		I	II	III	IV	V	VI
<i>Taxiway Centerline to:</i> Parallel Taxiway/ Taxilane Centerline	J	69 ft 21 m	105 ft 32 m	152 ft 46.5 m	215 ft 65.5 m	267 ft 81 m	324 ft 99 m
Fixed or Movable Object <u>2/ and 3/</u>	K	44.5 ft 13.5 m	65.5 ft 20 m	93 ft 28.5 m	129.5 ft 39.5 m	160 ft 48.5 m	193 ft 59 m
<i>Taxilane Centerline to:</i> Parallel Taxilane Centerline		64 ft 19.5 m	97 ft 29.5 m	140 ft 42.5 m	198 ft 60 m	245 ft 74.5 m	298 ft 91 m
Fixed or Movable Object <u>2/ and 3/</u>		39.5 ft 12 m	57.5 ft 17.5 m	81 ft 24.5 m	112.5 ft 34 m	138 ft 42 m	167 ft 51 m

1/ Letters correspond to the dimensions on Figure 2-1.

2/ This value also applies to the edge of service and maintenance roads.

3/ Consideration of the engine exhaust wake impacted from turning aircraft should be given to objects located near runway/taxiway/taxilane intersections.

Use of the following equations does not require additional internal FAA coordination between Airports (ARP) organization and other FAA lines of business. The values obtained from the following equations may be used to show that a modification of standards will provide an acceptable level of safety for a single wingspan (WS). Refer to paragraph 6 and FAA Order 5300.1, Modifications to Agency Airport Design, Construction and Equipment Standards, for guidance on modification of standard requirements.

Taxiway centerline to parallel taxiway/taxilane centerline: $1.2 \times WS + 10 \text{ feet (3m)}$

Taxiway centerline to fixed or movable object: $(0.7 \times WS) + 10 \text{ feet (3m)}$

Taxilane centerline to parallel taxilane centerline: $(1.1 \times WS) + 10 \text{ feet (3m)}$

Taxilane centerline to fixed or movable object: $(0.6 \times WS) + 10 \text{ feet (3m)}$

The values obtained from the following equations may be used to show that a modification of standards will provide an acceptable level of safety for centerline to centerline separation of dual parallel taxiways/taxilanes that use two different wingspans from the same or different ADGs. Refer to paragraph 6 and FAA Order 5300.1, Modifications to Agency Airport Design, Construction and Equipment Standards, for guidance on modification of standard requirements.

Dual parallel taxiway applications: $1.2 \times [(WS_1 + WS_2)/2] + 10 \text{ feet (3m)}$

Dual parallel taxilane application: $1.1 \times [(WS_1 + WS_2)/2] + 10 \text{ feet (3m)}$

Mixed parallel taxiway and taxilane application: $[(1.2 \times WS_1 + 1.1 \times WS_2)/2] + 10 \text{ feet (3m)}$

Example:

Can an existing standard ADG III parallel taxiway centerline separation of 152 feet accept an ADG IV airplane if it is speed restricted (taxilane)? Given: $WS_1 = 118 \text{ feet}$ (full ADG III WS) and $WS_2 = 124.8 \text{ feet}$ (Boeing 757, ADG IV).

Apply $[(1.2 \times WS_1 + 1.1 \times WS_2)/2] + 10 \text{ feet} = [(1.2 (118) + 1.1 (124.8))/2] + 10 \text{ feet} = 149.4 \text{ feet}$.

ANSWER: Yes. Result (149.4') is less than existing 152' CL to CL separation.

WS = wingspan of the taxiway/taxilane design aircraft

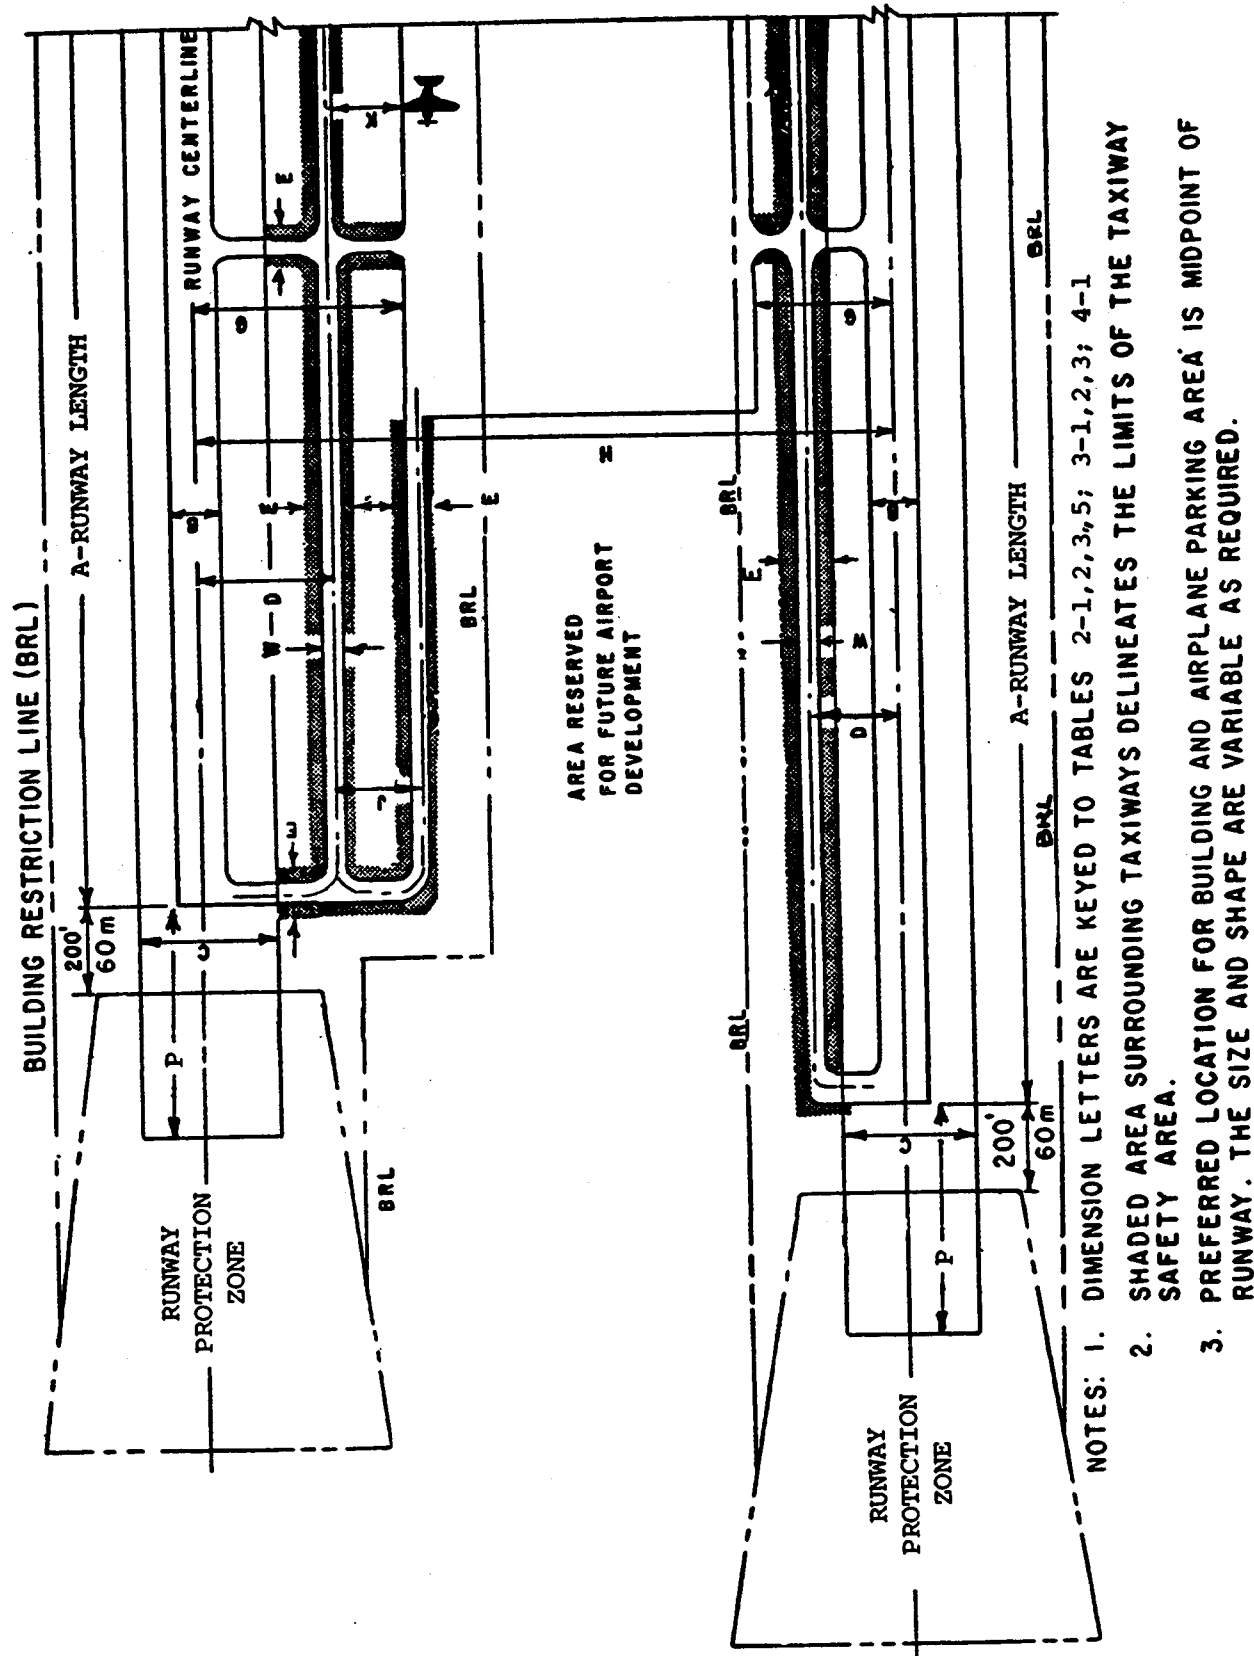


Figure 2-1. Typical airport layout

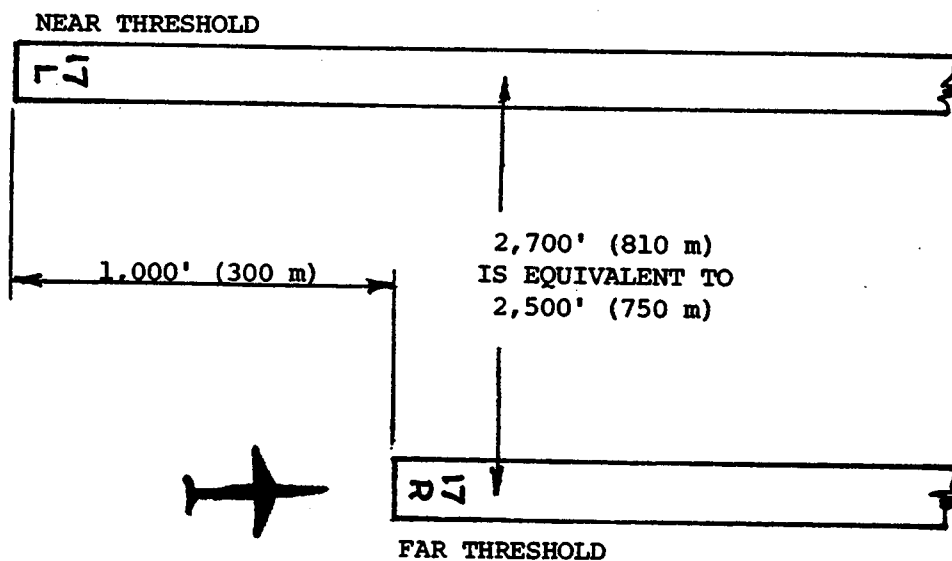
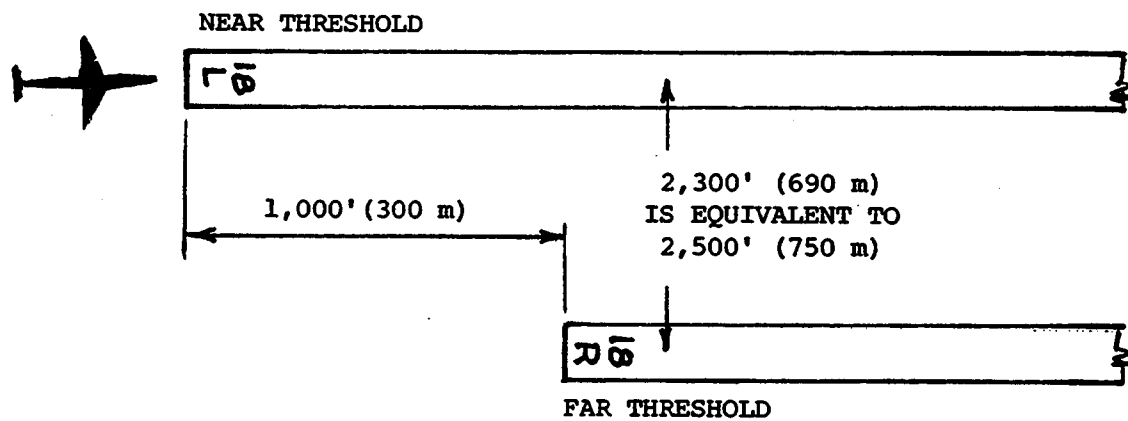


Figure 2-2. Parallel runway separation

Table 2-4. Runway protection zone (RPZ) dimensions

Approach Visibility Minimums <u>1/</u>	Facilities Expected To Serve	Dimensions			
		Length L Feet (meters)	Inner Width W ₁ feet (meters)	Outer Width W ₂ feet (meters)	RPZ acres
Visual And Not lower than 1-Mile (1 600 m)	Small Aircraft Exclusively	1,000 (300)	250 (75)	450 (135)	8.035
	Aircraft Approach Categories A & B	1,000 (300)	500 (150)	700 (210)	13.770
	Aircraft Approach Categories C & D	1,700 (510)	500 (150)	1,010 (303)	29.465
Not lower than ³ / ₄ -Mile (1 200 m)	All Aircraft	1,700 (510)	1,000 (300)	1,510 (453)	48.978
Lower than ³ / ₄ -Mile (1 200 m)	All Aircraft	2,500 (750)	1,000 (300)	1,750 (525)	78.914

1/ The RPZ dimensional standards are for the runway end with the specified approach visibility minimums. The departure RPZ dimensional standards are equal to or less than the approach RPZ dimensional standards. When a RPZ begins other than 200 feet (60 m) beyond the runway end, separate approach and departure RPZs should be provided. Refer to Appendix 14 for approach and departure RPZs.

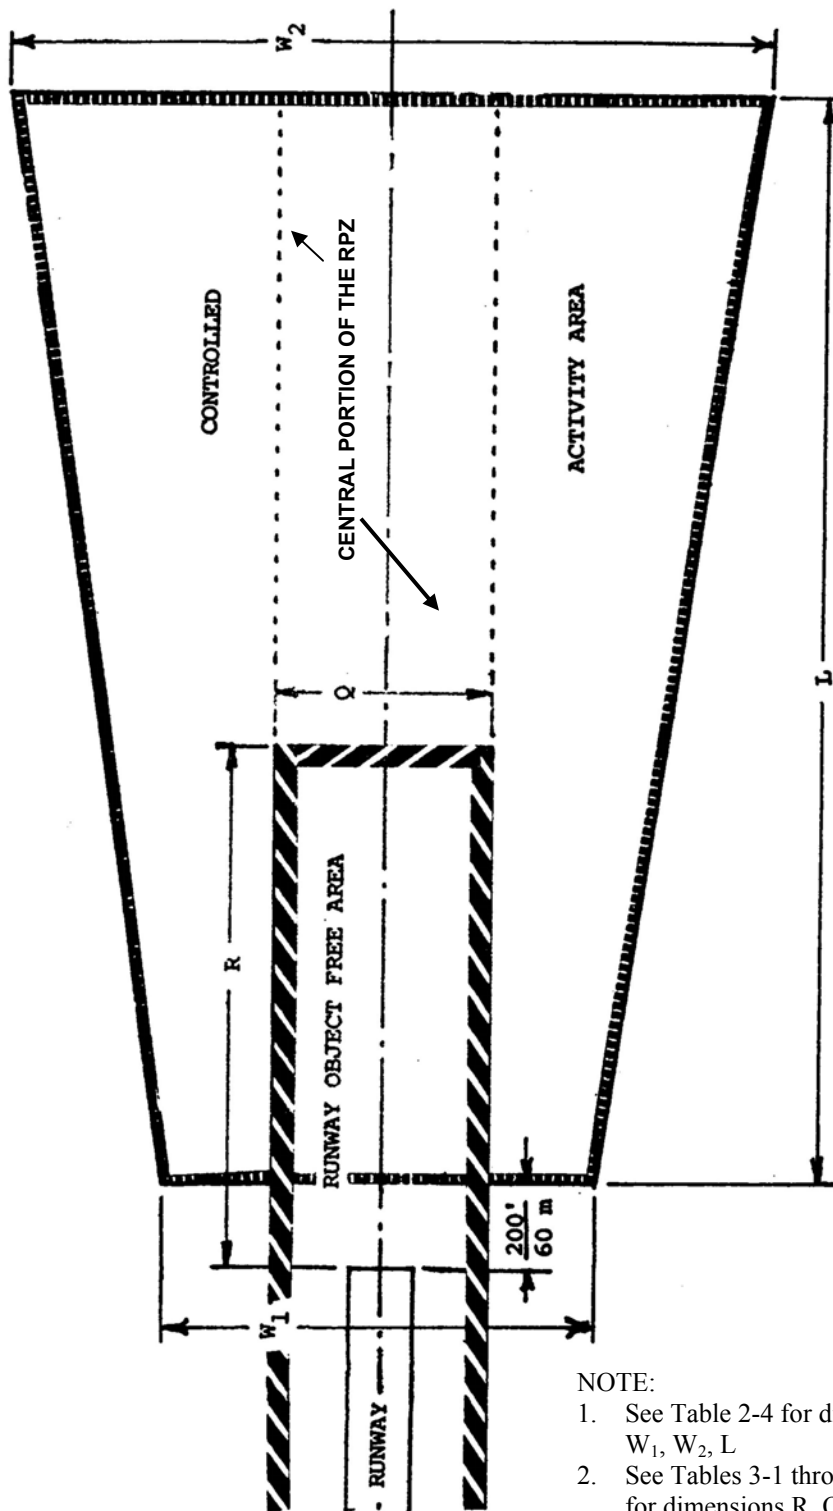


Figure 2-3. Runway protection zone

Chapter 3. RUNWAY DESIGN

300. **INTRODUCTION.** This chapter presents standards for runways and runway associated elements such as shoulders, blast pads, runway safety areas, obstacle free zones (OFZ), object free areas (OFA), clearways, and stopways. Tables 3-1, 3-2, and 3-3 present the standard widths and lengths for runway and runway-associated elements. Also included are design standards and recommendations for rescue and firefighting access roads. At new airports, the RSA and ROFA lengths and the RPZ location standards are tied to runway ends. At existing constrained airports, these criteria may, on a case-by-case basis, be applied with respect to declared distances ends. See appendix 14.

301. **RUNWAY LENGTH.** AC 150/5325-4 and airplane flight manuals provide guidance on runway lengths for airport design, including declared distance lengths.

302. **RUNWAY WIDTH.** Tables 3-1, 3-2, and 3-3 present runway width standards that consider operations conducted during reduced visibility.

303. **RUNWAY SHOULDERS.** Runway shoulders provide resistance to blast erosion and accommodate the passage of maintenance and emergency equipment and the occasional passage of an airplane veering from the runway. Tables 3-1, 3-2, and 3-3 present runway shoulder width standards. A natural surface, e.g., turf, normally reduces the possibility of soil erosion and engine ingestion of foreign objects. Soil with turf not suitable for this purpose requires a stabilized or low cost paved surface. Refer to chapter 8 for further discussion. Figure 3-1 depicts runway shoulders.

304. **RUNWAY BLAST PAD.** Runway blast pads provide blast erosion protection beyond runway ends. Tables 3-1, 3-2, and 3-3 contain the standard length and width for blast pads for takeoff operations requiring blast erosion control. Refer to chapter 8 for further discussion. Figure 3-1 depicts runway blast pads.

305. **RUNWAY SAFETY AREA (RSA).** The runway safety area is centered on the runway centerline. Tables 3-1, 3-2, and 3-3 present runway safety area dimensional standards. Figure 3-1 depicts the runway safety area. Appendix 8 discusses the runway safety area's evolution.

a. **Design Standards.** The runway safety area shall be:

(1) cleared and graded and have no potentially hazardous ruts, humps, depressions, or other surface variations;

(2) drained by grading or storm sewers to prevent water accumulation;

(3) capable, under dry conditions, of supporting snow removal equipment, aircraft rescue and firefighting equipment, and the occasional passage of aircraft without causing structural damage to the aircraft; and

(4) free of objects, except for objects that need to be located in the runway safety area because of their function. Objects higher than 3 inches (7.6 cm) above grade should be constructed, to the extent practicable, on low impact resistant supports (frangible mounted structures) of the lowest practical height with the frangible point no higher than 3 inches (7.6 cm) above grade. Other objects, such as manholes, should be constructed at grade. In no case should their height exceed 3 inches (7.6 cm) above grade.

b. **Construction Standards.** Compaction of runway safety areas shall be to FAA specification P-152 found in AC 150/5370-10.

c. **Sub-standard RSAs.** RSA standards cannot be modified or waived like other airport design standards. The dimensional standards remain in effect regardless of the presence of natural or man-made objects or surface conditions that might create a hazard to aircraft that leave the runway surface. Facilities, including NAVAIDs, that would not normally be permitted in an RSA should not be installed inside the standard RSA dimensions even when the RSA does not meet standards in other respects. A continuous evaluation of all practicable alternatives for improving each sub-standard RSA is required until it meets all standards for grade, compaction, and object frangibility. FAA Order 5200.8, Runway Safety Area Program, explains the process for conducting this evaluation. Each FAA regional Airports division manager has a written determination of the best practicable alternative(s) for improving each RSA. Therefore, runway and RSA improvement projects must comply with the determination of the FAA regional Airports division manager.

d. Threshold Displacement. Incremental improvements that involve the displacement of a landing threshold need to be carefully planned so that they do not incur unnecessary costs or create situations that could compromise operational safety.

(1) Runway thresholds that are displaced temporarily pending the planned relocation of objects (such as Localizer antennas) should consider the extra costs associated with re-arranging the runway lights, approach lights and navigational aids.

(2) The displacement of a threshold that does not also include relocation of the lead-in taxiway can create an undesirable and confusing operating environment for the pilot. (See paragraph 204.)

e. Allowance for Navigational Aids. The RSA is intended to enhance the margin of safety for landing or departing aircraft. Accordingly, the design of an RSA must account for navigational aids that might impact the effectiveness of the RSA:

(1) RSA grades sometimes require approach lights to be mounted on massive towers that could create a hazard for aircraft. Therefore, consider any practicable RSA construction to a less demanding grade than the standard grade to avoid the need for massive structures.

(2) Instrument landing system (ILS) facilities (glide slopes and localizers) are not usually required to be located inside the RSA. However, they do require a graded area around the antenna. (See chapter 6 for more information on the siting of ILS facilities.) RSA construction that ends abruptly in a precipitous drop-off can result in design proposals where the facility is located inside the RSA. Therefore, consider any practicable RSA construction beyond the standard dimensions that could accommodate ILS facilities if and when they are installed.

306. OBSTACLE FREE ZONE (OFZ). The OFZ clearing standard precludes taxiing and parked airplanes and object penetrations, except for frangible visual NAVAIDs that need to be located in the OFZ because of their function. The runway OFZ and, when applicable, the precision OFZ, the inner-approach OFZ, and the inner-transitional OFZ comprise the obstacle free zone (OFZ). Figures 3-2, 3-3, 3-4, 3-5, and 3-6 show the OFZ.

a. Runway OFZ (ROFZ). The runway OFZ is a defined volume of airspace centered above the runway centerline. The runway OFZ is the airspace above a surface whose elevation at any point is the same as the elevation of the nearest point on the runway centerline. The runway OFZ extends 200 feet (60 m) beyond each end of the runway. Its width is as follows:

(1) For runways serving small airplanes exclusively:

(a) 300 feet (90 m) for runways with lower than 3/4-statute mile (1 200 m) approach visibility minimums.

(b) 250 feet (75 m) for other runways serving small airplanes with approach speeds of 50 knots or more.

(c) 120 feet (36 m) for other runways serving small airplanes with approach speeds of less than 50 knots.

(2) For runways serving large airplanes, 400 feet (120 m).

b. Inner-approach OFZ. The inner-approach OFZ is a defined volume of airspace centered on the approach area. It applies only to runways with an approach lighting system. The inner-approach OFZ begins 200 feet (60 m) from the runway threshold at the same elevation as the runway threshold and extends 200 feet (60 m) beyond the last light unit in the approach lighting system. Its width is the same as the runway OFZ and rises at a slope of 50 (horizontal) to 1 (vertical) from its beginning.

c. Inner-transitional OFZ. The inner-transitional OFZ is a defined volume of airspace along the sides of the runway OFZ and inner-approach OFZ. It applies only to runways with lower than 3/4-statute mile (1 200 m) approach visibility minimums.

(1) For runways serving small airplanes exclusively, the inner-transitional OFZ slopes 3 (horizontal) to 1 (vertical) out from the edges of the runway OFZ and inner-approach OFZ to a height of 150 feet (45 m) above the established airport elevation.

(2) For runways serving large airplanes, separate inner-transitional OFZ criteria apply for Category (CAT) I and CAT II/III runways.

(a) For CAT I runways, the inner-transitional OFZ begins at the edges of the runway OFZ and inner-approach OFZ, then rises vertically for a height "H", and then slopes 6 (horizontal) to 1 (vertical) out to a height of 150 feet (45 m) above the established airport elevation.

1) In U.S. customary units,

$$H_{\text{feet}} = 61 - 0.094(S_{\text{feet}}) - 0.003(E_{\text{feet}}).$$

2) In SI units,

$$H_{\text{meters}} = 18.4 - 0.094(S_{\text{meters}}) - 0.003(E_{\text{meters}}).$$

3) S is equal to the most demanding wingspan of the airplanes using the runway and E is equal to the runway threshold elevation above sea level.

(b) For CAT II/III runways, the inner-transitional OFZ begins at the edges of the runway OFZ and inner-approach OFZ, then rises vertically for a height "H", then slopes 5 (horizontal) to 1 (vertical) out to a

distance "Y" from runway centerline, and then slopes 6 (horizontal) to 1 (vertical) out to a height of 150 feet (45 m) above the established airport elevation.

- 1) In U.S. customary units,

$H_{\text{feet}} = 53 - 0.13(S_{\text{feet}}) - 0.0022(E_{\text{feet}})$ and distance

$Y_{\text{feet}} = 440 + 1.08(S_{\text{feet}}) - 0.024(E_{\text{feet}})$.

- 2) In SI units,

$H_{\text{meters}} = 16 - 0.13(S_{\text{meters}}) - 0.0022(E_{\text{meters}})$ and distance

$Y_{\text{meters}} = 132 + 1.08(S_{\text{meters}}) - 0.024(E_{\text{meters}})$.

3) S is equal to the most demanding wingspan of the airplanes using the runway and E is equal to the runway threshold elevation above sea level. Beyond the distance "Y" from runway centerline the inner-transitional CAT II/III OFZ surface is identical to that for the CAT I OFZ.

d. Precision OFZ. The Precision Obstacle Free Zone (POFZ) is defined as a volume of airspace above an area beginning at the runway threshold, at the threshold elevation, and centered on the extended runway centerline, 200 feet (60m) long by 800 feet (240m) wide. See figure 3-6.

The surface is in effect only when all of the following operational conditions are met:

- (1) Vertically guided approach
- (2) Reported ceiling below 250 feet and/or visibility less than $\frac{3}{4}$ statute mile (or RVR below 4000 feet)
- (3) An aircraft on final approach within two (2) miles of the runway threshold.

When the POFZ is in effect, a wing of an aircraft holding on a taxiway waiting for runway clearance may penetrate the POFZ; however neither the fuselage nor the tail may infringe on the POFZ.

The POFZ is applicable at all runway ends including displaced thresholds.

Note: POFZ takes effect no later than January 1, 2007 for all runway ends at which it applies.

307. OBJECT FREE AREA. The runway object free area (OFA) is centered on the runway centerline. The runway OFA clearing standard requires clearing the OFA of above ground objects protruding above the runway safety area edge elevation. Except where precluded by other clearing standards, it is acceptable to place objects that need to be located in the OFA for air navigation or aircraft ground maneuvering purposes and to taxi and hold aircraft in the OFA. Objects non-essential for air navigation or aircraft ground maneuvering purposes are not to be placed in the OFA. This includes parked airplanes

and agricultural operations. Tables 3-1, 3-2, and 3-3 specify the standard dimensions of the runway OFA. Extension of the OFA beyond the standard length to the maximum extent feasible is encouraged. See figure 2-3.

308. CLEARWAY STANDARDS. The clearway (See figure 3-7) is a clearly defined area connected to and extending beyond the runway end available for completion of the takeoff operation of turbine-powered airplanes. A clearway increases the allowable airplane operating takeoff weight without increasing runway length.

a. Dimensions. The clearway must be at least 500 feet (150 m) wide centered on the runway centerline. The practical limit for clearway length is 1,000 feet (300 m).

b. Clearway Plane Slope. The clearway plane slopes upward with a slope not greater than 1.25 percent.

c. Clearing. Except for threshold lights no higher than 26 inches (66 cm) and located off the runway sides, no object or terrain may protrude through the clearway plane. The area over which the clearway lies need not be suitable for stopping aircraft in the event of an aborted takeoff.

d. Control. An airport owner interested in providing a clearway should be aware of the requirement that the clearway be under its control, although not necessarily by direct ownership. The purpose of such control is to ensure that no fixed or movable object penetrates the clearway plane during a takeoff operation.

e. Notification. When a clearway is provided, the clearway length and the declared distances, as specified in appendix 14, paragraph 7, shall be provided in the Airport/Facility Directory (and in the Aeronautical Information Publication (AIP), for international airports) for each operational direction.

309. STOPWAY STANDARDS. A stopway is an area beyond the takeoff runway, centered on the extended runway centerline, and designated by the airport owner for use in decelerating an airplane during an aborted takeoff. It must be at least as wide as the runway and able to support an airplane during an aborted takeoff without causing structural damage to the airplane. Their limited use and high construction cost, when compared to a full-strength runway that is usable in both directions, makes their construction less cost effective. See figure 3-8. When a stopway is provided, the stopway length and the declared distances, as specified in appendix 14, paragraph 7, shall be provided in the Airport/Facility Directory (and in the Aeronautical Information Publication for international airports) for each operational direction.

310. RESCUE AND FIREFIGHTING ACCESS

Rescue and firefighting access roads are normally needed to provide unimpeded two-way access for rescue and firefighting equipment to potential accident areas. Connecting these access roads, to the extent practical, with the operational surfaces and other roads will facilitate aircraft rescue and firefighting operations.

a. Recommendation. It is recommended that the entire runway safety area (RSA) and runway protection zone (RPZ) be accessible to rescue and firefighting vehicles so that no part of the RSA or RPZ is more than 330 feet (100 m) from either an all weather road or a paved operational surface. Where an airport is adjacent to a body of water, it is recommended that boat launch ramps with appropriate access roads be provided.

b. All Weather Capability. Rescue and firefighting access roads are all weather roads designed to

support rescue and firefighting equipment traveling at normal response speeds. Establish the widths of the access roads on a case-by-case basis considering the type(s) of rescue and firefighting equipment available and planned at the airport. The first 300 feet (90 m) adjacent to a paved operational surface should be paved. Where an access road crosses a safety area, the safety area standards for smoothness and grading control. For other design and construction features, use local highway specifications.

c. Road Usage. Rescue and firefighting access roads are special purpose roads that supplement but do not duplicate or replace sections of a multi-purpose road system. Restricting their use to rescue and firefighting access equipment precludes their being a hazard to air navigation.

311. to 399. RESERVED.

Table 3-1. Runway design standards for aircraft approach category A & B visual runways and runways with not lower than 3/4-statute mile (1,200 m) approach visibility minimums

(Refer also to Appendix 16 for the establishment of new approaches)

ITEM	DIM <u>1/</u>	AIRPLANE DESIGN GROUP				
		<u>I 2/</u>	<u>I</u>	<u>II</u>	<u>III</u>	<u>IV</u>
Runway Length	A	- Refer to paragraph 301 -				
Runway Width	B	60 ft	60 ft	75 ft	100 ft	150 ft
		18 m	18 m	23 m	30 m	45 m
Runway Shoulder Width		10 ft	10 ft	10 ft	20 ft	25 ft
		3 m	3 m	3 m	6 m	7.5 m
Runway Blast Pad Width		80 ft	80 ft	95 ft	140 ft	200 ft
		24 m	24 m	29 m	42 m	60 m
Runway Blast Pad Length		60 ft	100 ft	150 ft	200 ft	200 ft
		18 m	30 m	45 m	60 m	60 m
Runway Safety Area Width	C	120 ft	120 ft	150 ft	300 ft	500 ft
		36 m	36 m	45 m	90 m	150 m
Runway Safety Area Length Prior to Landing Threshold <u>3/</u> , <u>4/</u>		240 ft	240 ft	300 ft	600 ft	600 ft
		72 m	72 m	90 m	180 m	180 m
Runway Safety Area Length Beyond RW End <u>3/</u> , <u>4/</u>	P	240 ft	240 ft	300 ft	600 ft	1,000 ft
		72 m	72 m	90 m	180 m	300 m
Obstacle Free Zone Width and Length		- Refer to paragraph 306 -				
Runway Object Free Area Width	Q	250 ft	400 ft	500 ft	800 ft	800 ft
		75 m	120 m	150 m	240 m	240 m
Runway Object Free Area Length Beyond RW End <u>5/</u>	R	240 ft	240 ft	300 ft	600 ft	1,000 ft
		72 m	72 m	90 m	180 m	300 m

1/ Letters correspond to the dimensions on figures 2-1 and 2-3. Use this table only when both ends of the runway provide not lower than 3/4-statute mile approach visibility minimums.

2/ These dimensional standards pertain to facilities for small airplanes exclusively.

3/ The runway safety area (RSA) length begins at each runway end when a stopway is not provided. When a stopway is provided, the length begins at the stopway end.

4/ The standard RSA length beyond the runway end may be reduced to the standard RSA length prior to landing threshold if a standard Engineered Materials Arresting System (EMAS) is provided. To qualify for this reduction, the EMAS installation must provide the ability to stop the critical aircraft exiting the end of the runway at 70 knots, and the runway must provide either instrument or visual vertical guidance for approaches in the opposite direction. See AC 150/5220-22.

5/ The runway object free area length beyond the end of the runway never exceeds the standard RSA length beyond the runway end as provided by note 4 above.

Table 3-2. Runway design standards for aircraft approach category A & B runways with lower than 3/4-statute mile (1,200 m) approach visibility minimums

(Refer also to Appendix 16 for the establishment of new approaches)

ITEM	DIM <u>1/</u>	AIRPLANE DESIGN GROUP				
		<u>I 2/</u>	<u>I</u>	<u>II</u>	<u>III</u>	<u>IV</u>
Runway Length	A	- Refer to paragraph 301 -				
Runway Width	B	75 ft	100 ft	100 ft	100 ft	150 ft
		23 m	30 m	30 m	30 m	45 m
Runway Shoulder Width		10 ft	10 ft	10 ft	20 ft	25 ft
		3 m	3 m	3 m	6 m	7.5 m
Runway Blast Pad Width		95 ft	120 ft	120 ft	140 ft	200 ft
		29 m	36 m	36 m	42 m	60 m
Runway Blast Pad Length		60 ft	100 ft	150 ft	200 ft	200 ft
		18 m	30 m	45 m	60 m	60 m
Runway Safety Area Width	C	300 ft	300 ft	300 ft	400 ft	500 ft
		90 m	90 m	90 m	120 m	150 m
Runway Safety Area Length Prior to Landing Threshold <u>3/</u> , <u>4/</u>		600 ft	600 ft	600 ft	600 ft	600 ft
		180 m	180 m	180 m	180 m	180 m
Runway Safety Area Length Beyond RW End <u>3/</u>	P	600 ft	600 ft	600 ft	800 ft	1,000 ft
		180 m	180 m	180 m	240 m	300 m
Obstacle Free Zone Width and Length		- Refer to paragraph 306 -				
Runway Object Free Area Width	Q	800 ft	800 ft	800 ft	800 ft	800 ft
		240 m	240 m	240 m	240 m	240 m
Runway Object Free Area Length Beyond RW End <u>5/</u>	R	600 ft	600 ft	600 ft	800 ft	1,000 ft
		180 m	180 m	180 m	240 m	300 m

1/ Letters correspond to the dimensions on figures 2-1 and 2-3. Use this table for both ends of the runway even when one end does not have lower than 3/4-statute mile visibility minimums.

2/ These dimensional standards pertain to facilities for small airplanes exclusively.

3/ The runway safety area (RSA) length begins at each runway end when a stopway is not provided. When a stopway is provided, the length begins at the stopway end.

4/ The standard RSA length beyond the runway end may be reduced to the standard RSA length prior to landing threshold if a standard Engineered Materials Arresting System (EMAS) is provided. To qualify for this reduction, the EMAS installation must provide the ability to stop the critical aircraft exiting the end of the runway at 70 knots, and the runway must provide either instrument or visual vertical guidance for approaches in the opposite direction. See AC 150/5220-22.

5/ The runway object free area length beyond the end of the runway never exceeds the standard RSA length beyond the runway end as provided by note 4 above.

Table 3-3. Runway design standards for aircraft approach categories C & D

(Refer also to Appendix 16 for the establishment of new approaches)

ITEM	DIM <u>1/</u>	AIRPLANE DESIGN GROUP					
		I	II	III	IV	V	VI
Runway Length	A	- Refer to paragraph 301 -					
Runway Width	B	100 ft	100 ft	100 ft <u>2/</u>	150 ft	150 ft	200 ft
		30 m	30 m	30 m <u>2/</u>	45 m	45 m	60 m
Runway Shoulder Width <u>3/</u>		10 ft	10 ft	20 ft <u>2/</u>	25 ft	35 ft	40 ft
		3 m	3 m	6 m <u>2/</u>	7.5 m	10.5 m	12 m
Runway Blast Pad Width		120 ft	120 ft	140 ft <u>2/</u>	200 ft	220 ft	280 ft
		36 m	36 m	42 m <u>2/</u>	60 m	66 m	84 m
Runway Blast Pad Length		100 ft	150 ft	200 ft	200 ft	400 ft	400 ft
		30 m	45 m	60 m	60 m	120 m	120 m
Runway Safety Area Width <u>4/</u>	C	500 ft	500 ft	500 ft	500 ft	500 ft	500 ft
		150 m	150 m	150 m	150 m	150 m	150 m
Runway Safety Area Length Prior to Landing Threshold <u>5/</u> , <u>6/</u>		600 ft	600 ft	600 ft	600 ft	600 ft	600 ft
		180 m	180 m	180 m	180 m	180 m	180 m
Runway Safety Area Length Beyond RW End <u>5/</u> , <u>6/</u>	P	1,000 ft	1,000 ft	1,000 ft	1,000 ft	1,000 ft	1,000 ft
		300 m	300 m	300 m	300 m	300 m	300 m
Obstacle Free Zone Width and Length		- Refer to paragraph 306 -					
Runway Object Free Area Width	Q	800 ft	800 ft	800 ft	800 ft	800 ft	800 ft
		240 m	240 m	240 m	240 m	240 m	240 m
Runway Object Free Area Length Beyond RW End <u>7/</u>	R	1,000 ft	1,000 ft	1,000 ft	1,000 ft	1,000 ft	1,000 ft
		300 m	300 m	300 m	300 m	300 m	300 m

1/ Letters correspond to the dimensions on figures 2-1 and 2-3.2/ For Airplane Design Group III serving airplanes with maximum certificated takeoff weight greater than 150,000 pounds (68,100 kg), the standard runway width is 150 feet (45 m), the shoulder width is 25 feet (7.5 m), and the runway blast pad width is 200 feet (60 m).3/ Design Groups V and VI normally require stabilized or paved shoulder surfaces.4/ For Airport Reference Code C-I and C-II, a runway safety area width of 400 feet (120 m) is permissible.5/ The runway safety area (RSA) length begins at each runway end when a stopway is not provided. When a stopway is provided, the length begins at the stopway end.6/ The standard RSA length beyond the runway end may be reduced to the standard RSA length prior to landing threshold if a standard Engineered Materials Arresting System (EMAS) is provided. To qualify for this reduction, the EMAS installation must provide the ability to stop the critical aircraft exiting the end of the runway at 70 knots, and the runway must provide either instrument or visual vertical guidance for approaches in the opposite direction. See AC 150/5220-22.7/ The runway object free area length beyond the end of the runway never exceeds the standard RSA length beyond the runway end as provided by note 6 above.

This page intentionally left blank

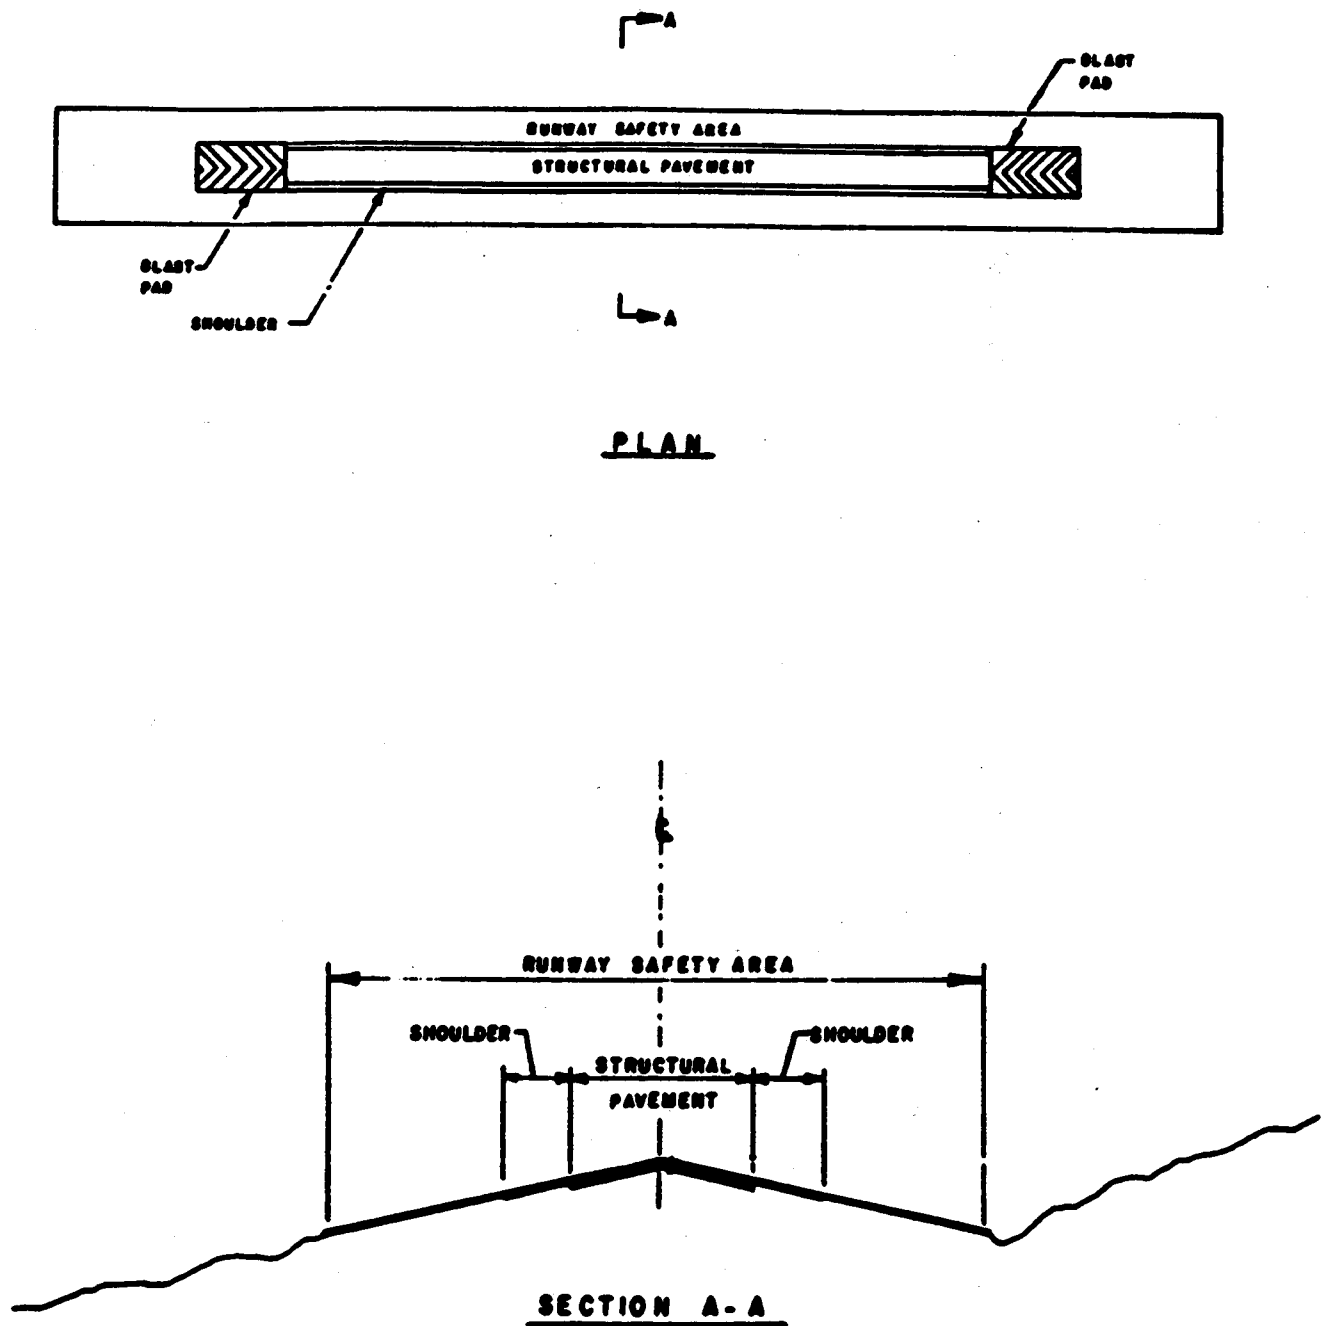


Figure 3-1. Runway safety area

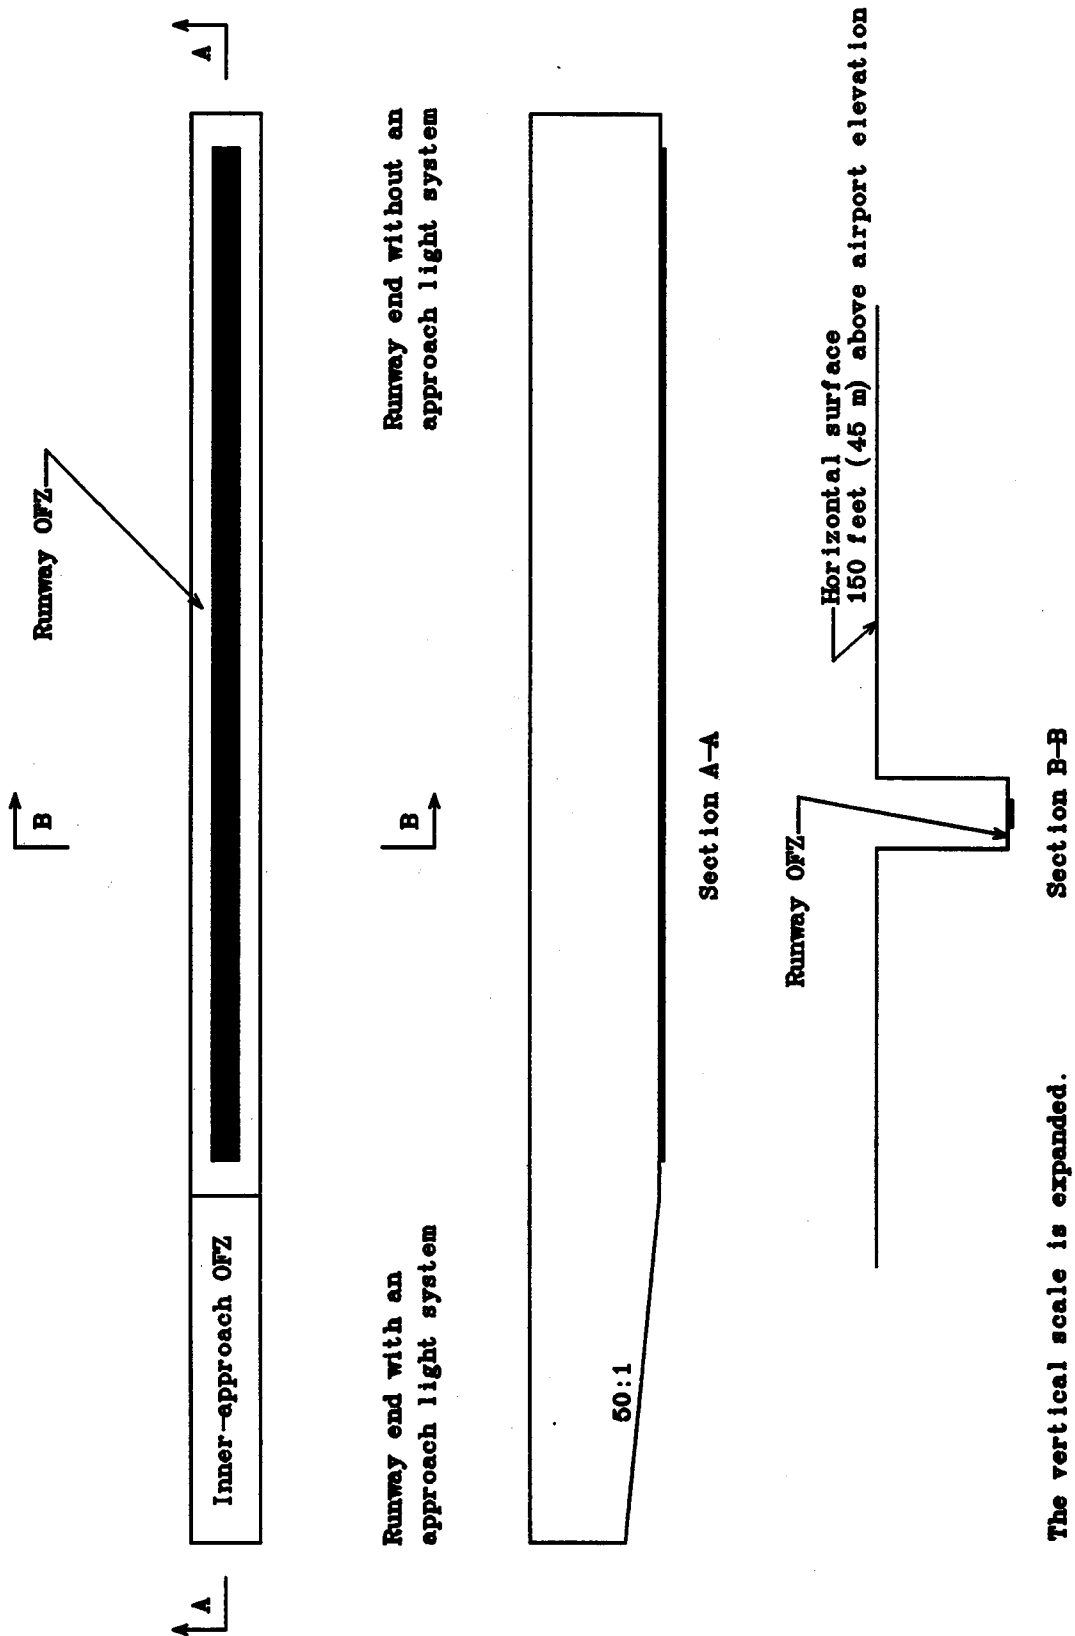


Figure 3-2. Obstacle free zone (OFZ) for visual runways and runways with not lower than 3/4-statute mile (1 200 m) approach visibility minimums

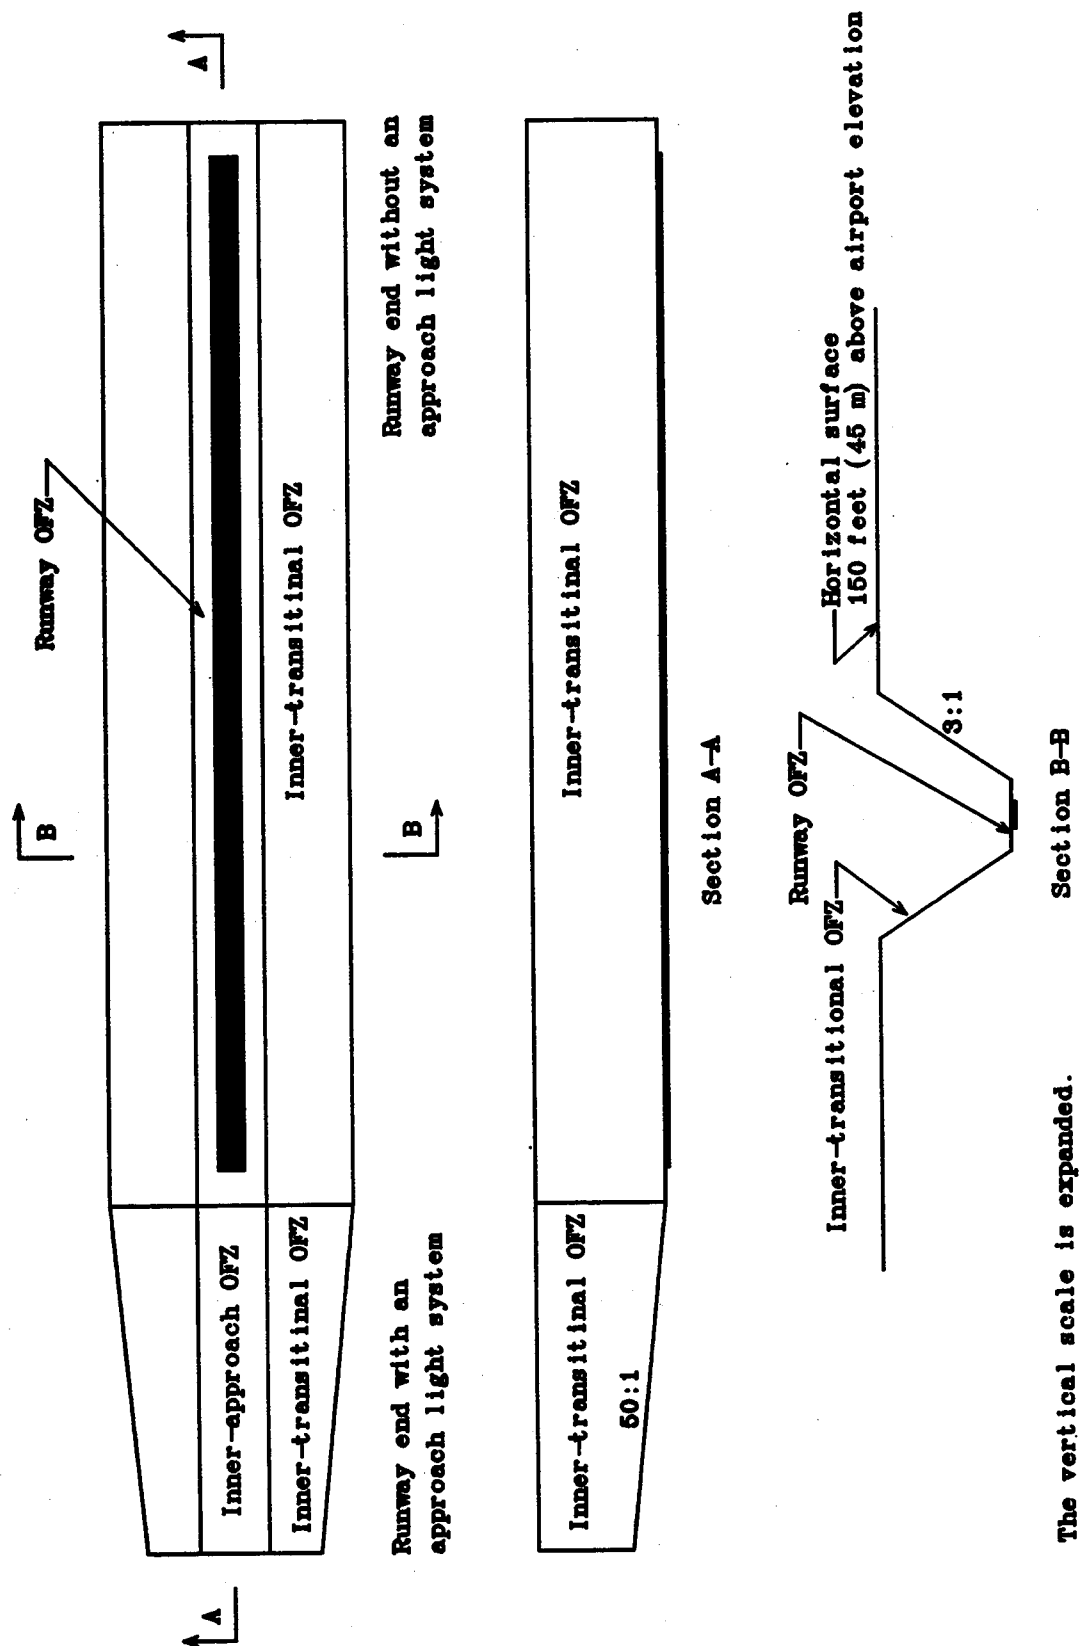


Figure 3-3. Obstacle free zone (OFZ) for runways serving small airplanes exclusively with lower than 3/4-statute mile (1 200 m) approach visibility minimums

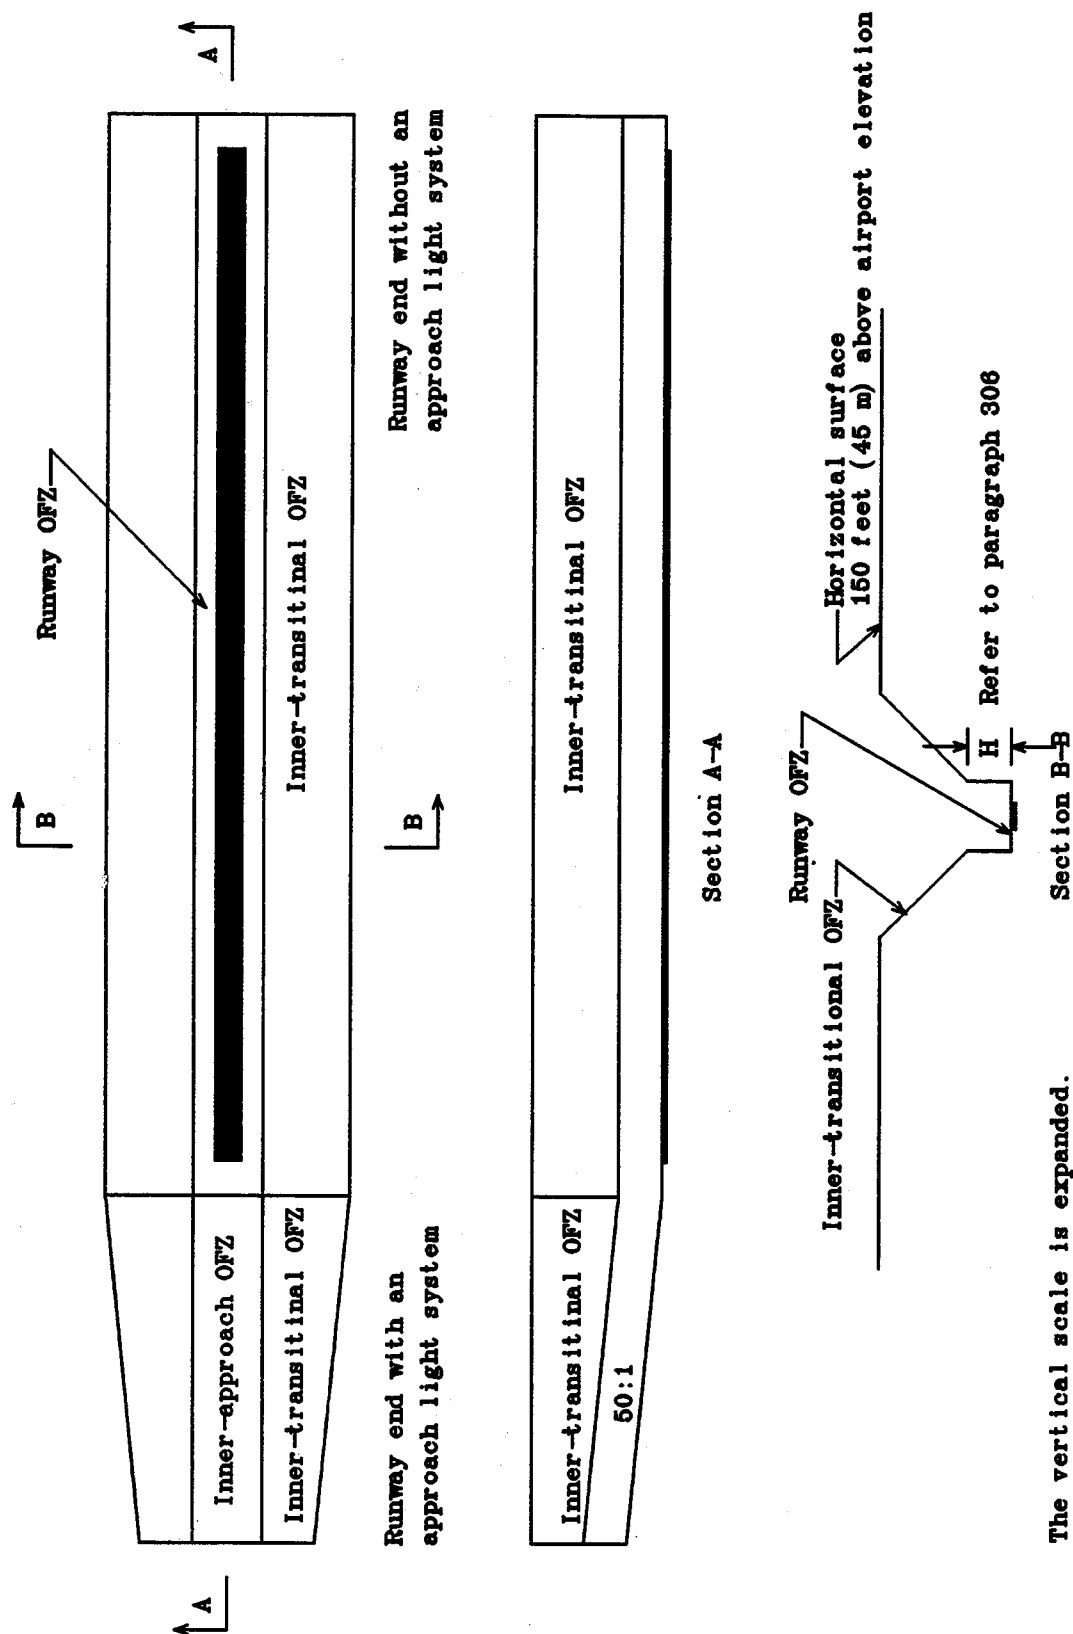


Figure 3-4. Obstacle free zone (OFZ) for runways serving large airplanes with lower than 3/4-statute mile (1 200 m) approach visibility minimums

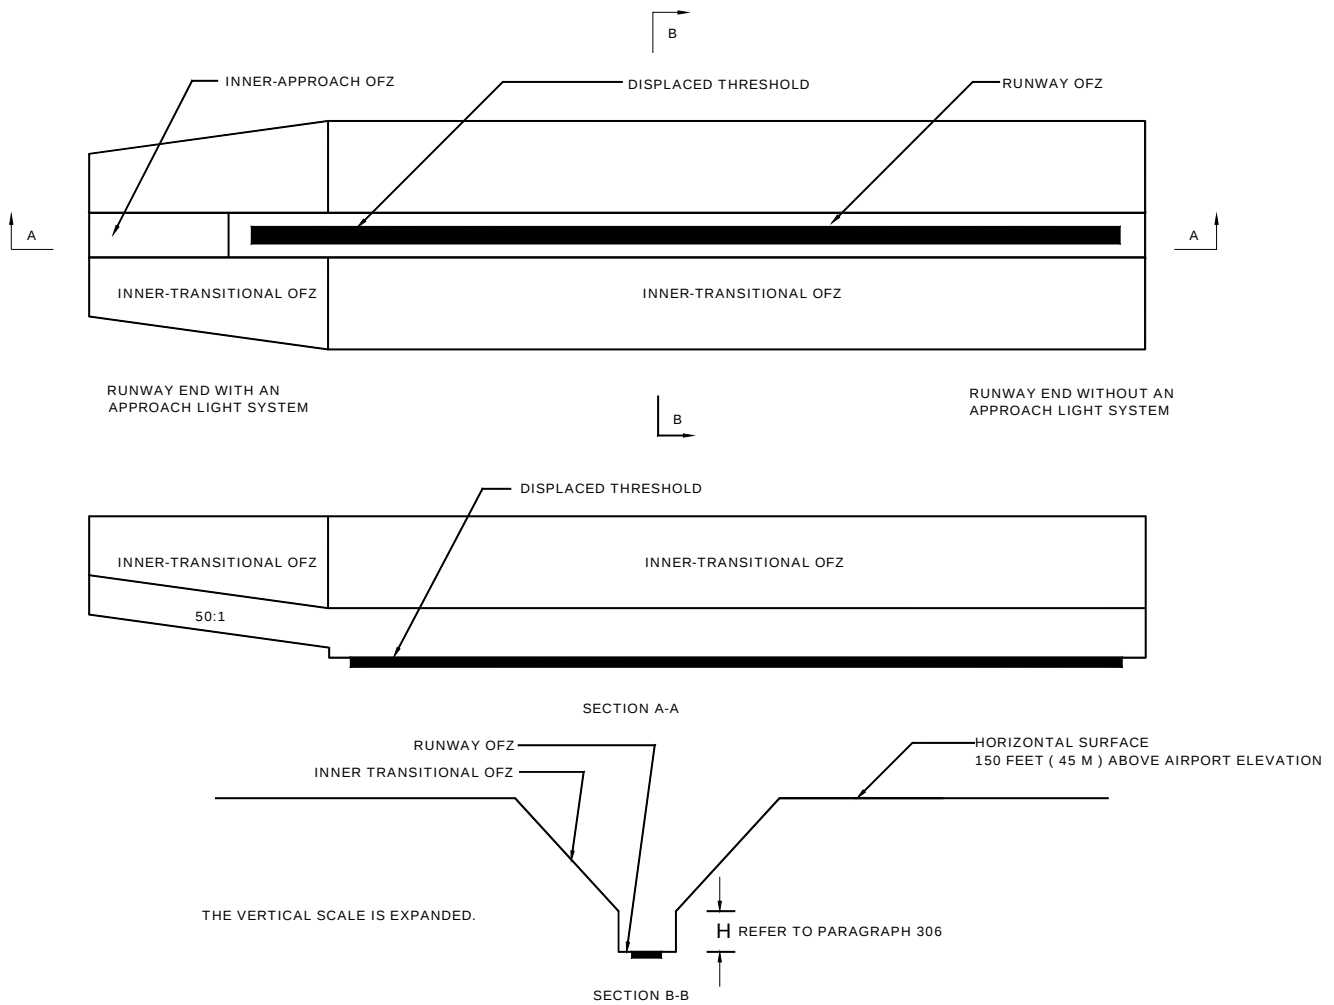


FIGURE 3-5. OBSTACLE FREE ZONE (OFZ) FOR RUNWAYS SERVING LARGE AIRPLANES WITH LOWER THAN 3/4-STATUTE MILE (1 200 M) APPROACH VISIBILITY MINMUMS AND DISPLACED THRESHOLD

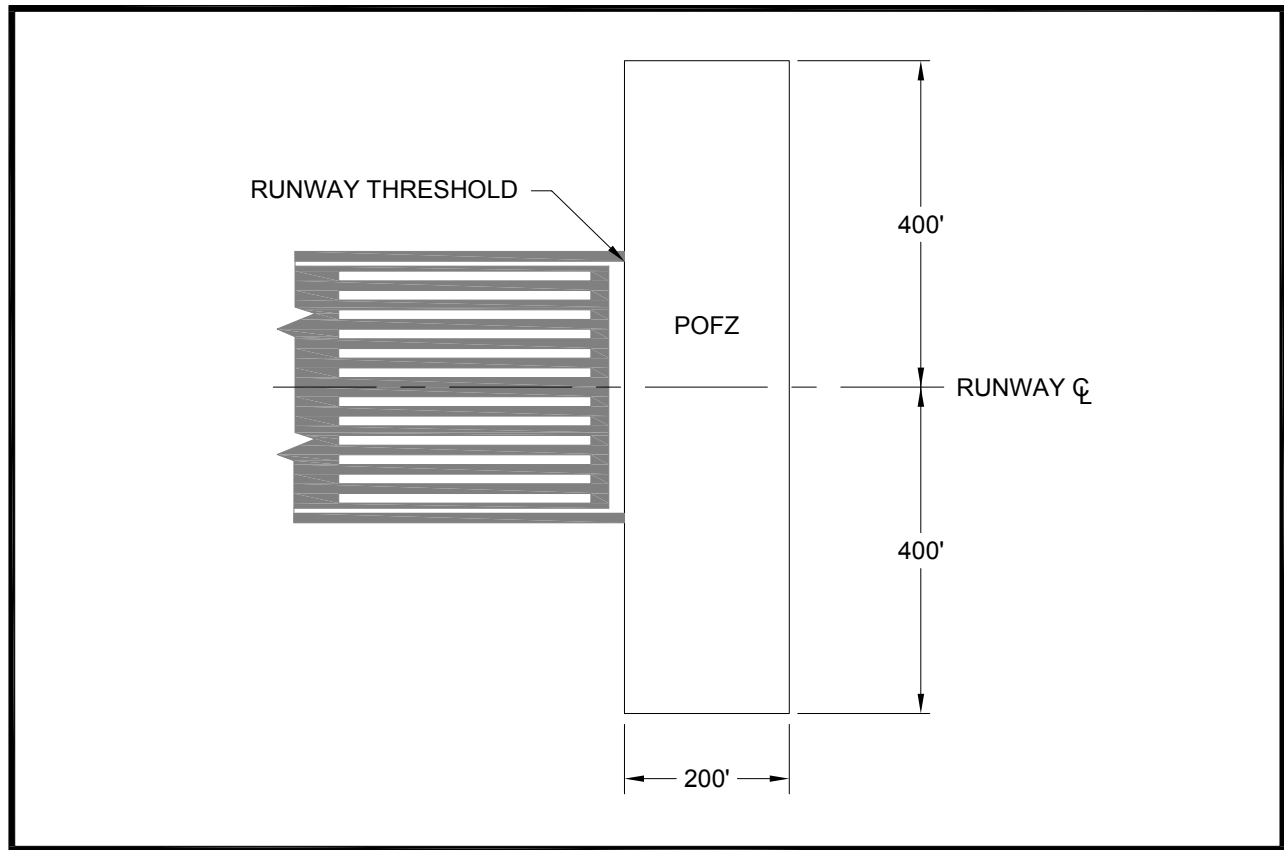


Figure 3-6. Precision Obstacle Free Zone

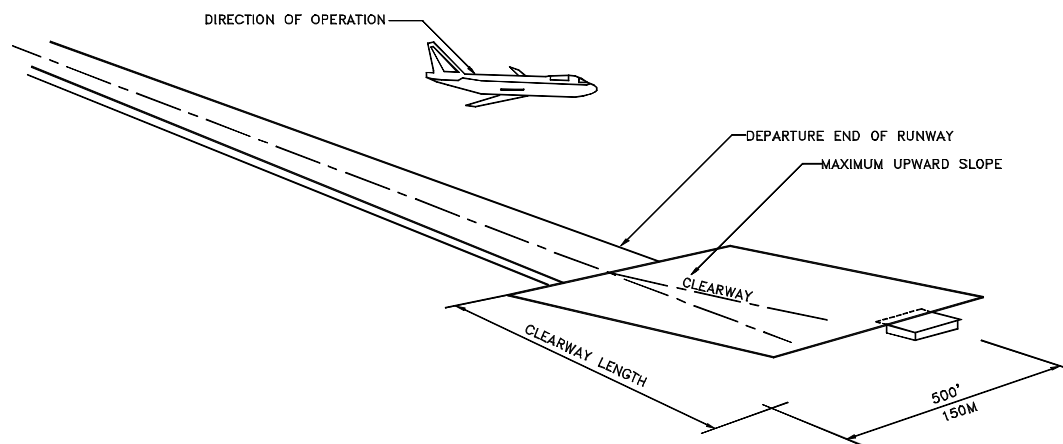


Figure 3-7. Clearway

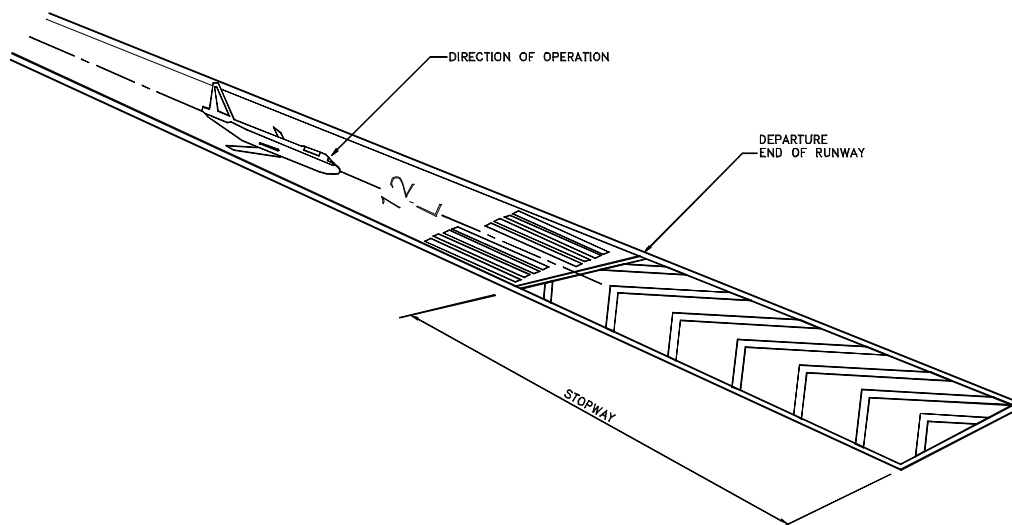


Figure 3-8. Stopway

Chapter 4. TAXIWAY AND TAXILANE DESIGN

400. INTRODUCTION. This chapter presents the principles and design standards for taxiways, taxilanes, and associated airport elements. The airfield design process focuses on safety first, then efficiency and capacity. A taxiway's geometry and operational use play a crucial role in enhancing airfield safety and efficiency. The "3-Node" design principle and the Taxiway/Runway Interface principle is being introduced in this chapter under paragraph 406, Taxiway Intersections, and 409, Taxiway and Runway Interface. Paragraph 407, Entrance Taxiways, paragraph 408, Bypass Taxiways, and the two design principles discussed in this chapter will provide the designer with strategies that focus on mitigating airfield confusion, runway incursion and wrong runway takeoffs and landings. The airport planner and designer must ensure that operational requirements are taken into consideration in the taxiway layout to avoid situations such as the use of a runway as a taxiway. Additional information may be found in Engineering Brief (EB) number 75, "Incorporation of Runway Incursion Prevention into Taxiway and Apron Design." This EB can be downloaded at the FAA Airports web site: www.faa.gov/airports.

401. DIMENSIONAL STANDARDS. Tables 4-1, 4-2 and 4-3 present the dimensional and clearance standards for taxiway, taxilanes, and associated elements. Appendix 9 discusses the relationship between airplane physical characteristics and the design of taxiway and taxilane elements. The rationale presented there is useable, on a case-by-case basis, to adapt separation standards to meet unusual local conditions or to accommodate a specific airplane within an airplane design group.

402. TAXIWAY SHOULDERS. All taxiways that will accommodate Airplane Design Group III and higher aircraft must provide stabilized or paved shoulders to reduce the possibility of blast erosion and engine ingestion problems associated with jet engines that overhang the edge of the taxiway pavement. Taxiway shoulder width standards are presented in table 4-1. Soil with turf is not suitable for ADG III and higher, and requires a stabilized or low-cost paved surface. Chapter 8 contains additional information on this subject.

403. TAXIWAY SAFETY AREA (TSA). All taxiways and taxilanes must have a taxiway safety area that is centered on the taxiway centerline. Table 4-1 presents taxiway safety area dimensional standards based on the airplane design group (ADG). The same dimensional standards shall be applied to taxilanes.

a. Design Standards. The taxiway safety area shall be:

- (1) cleared and graded and have no potentially

hazardous ruts, bumps, depressions, or other surface variations;

- (2) drained by grading or storm sewers to prevent water accumulation;

- (3) capable, under dry conditions, of supporting snow removal equipment, aircraft rescue and firefighting equipment, and the occasional passage of aircraft without causing structural damage to the aircraft, and

- (4) free of objects, except for objects that need to be located in the taxiway safety area because of their function. Objects higher than 3 inches (7.6 cm) above grade should be constructed on low impact resistant supports (frangible mounted structures) of the lowest practical height with the frangible point no higher than 3 inches (7.6 cm) above grade. Other objects, such as manholes, should be constructed at grade. In no case should their height exceed 3 inches (7.6 cm) above grade.

b. Construction Standards. Compaction of taxiway safety areas shall be to FAA specification P-152 found in AC 150/5370-10.

404. TAXIWAY AND TAXILANE OBJECT FREE AREA (OFA). All taxiways and taxilanes must have an OFA centered on the taxiway and taxilane centerlines as shown in figures A9-2, A9-3, and A9-4. Table 4-1 presents the dimensional standards for the taxiway and taxilane OFAs. Note that the widths of the taxiway and taxilane OFA differ within each individual airplane design group.

a. The taxiway and taxilane OFA clearing standards prohibit service vehicle roads, parked airplanes, and above ground objects, except for objects that need to be located in the OFA for air navigation or aircraft ground maneuvering purposes. Vehicles may operate within the OFA provided they give right of way to oncoming aircraft by either maintaining a safe distance ahead or behind the aircraft or by exiting the OFA to let the aircraft pass. Provide vehicular exiting areas along the outside of the OFA where required.

b. OFA clearance shall be provided at intersections and turns where curved taxiway or taxilane centerline pavement markings, reflectors, or lighting are provided. The OFA clearance shall be configured to provide the standard wingtip clearance for the using aircraft. Appendix 9 provides guidance for finding the wingtip trace and Table 4-3 specifies the standard wingtip clearances.

c. Offset taxilane pavement markings may be used at existing facilities where it is impracticable to upgrade the facility to existing standards or as a temporary measure to

assure adequate wingtip clearance until upgraded facilities meeting design standards are completed. The offset taxilane pavement markings should be located on an arc concentric with the curved centerline. The radius of the offset arc should be approximately $(R^2 + d^2)^{0.5}$ where R is the radius of the taxilane turn and d is a representative distance from the center of the cockpit to the center of the main undercarriage of the larger wingspan aircraft. Increasing the offset radius increases the clearance inside of the curve while decreasing the clearance outside of the curve. Both clearances for each of the larger wingspan aircraft need to be examined. Where offset taxilane pavement markings are provided, centerline lighting or reflectors are required.

405. FULL-LENGTH PARALLEL TAXIWAY. A basic airport consists of a runway with a full-length parallel taxiway, an apron, and connecting transverse taxiways between the runway, the parallel taxiway and the apron.

a. Separation Distance. Tables 2-1 and 2-2 show the standard separation distances between parallel taxiways and runways.

b. Centerline Profile. The centerline profile of a parallel taxiway should prevent excessive longitudinal grades on crossover or transverse taxiways. Chapter 5 provides the standards for taxiway longitudinal grades.

406. TAXIWAY INTERSECTIONS. All new taxiway intersections and existing intersections designated as “hot spots” are to be constructed in accordance with the “3-Node” design principle, as shown in Figure 4-1(a). To the maximum extent practicable, all existing taxiway intersections (not designated as “hot spots”) should also be reconfigured in accordance with the “3-Node” design principle during the next capital project opportunity at that location. The “3-Node” design principle is defined as a taxiway intersection with (at most) three directions to proceed beyond the intersection. Adopting this design principle will allow pilots to continue through the intersection, turn left or turn right. The 3-Node design precludes pilots from making multiple right and left turns. This design reduces confusion, minimizes runway incursions, and results in greater compliance with standard signage (AC 150/5340-18, Standards for Airport Sign Systems), markings (AC 150/5340-1, Standards for Airport Markings), and airfield lighting criteria (AC 150/5340-30).

A direct safety benefit of the 3-Node principle is the potential to eliminate a majority of airfield “Hot Spots” (HS). Hot Spots are problematic geometries on the airfield designated by the airport operator as taxiway intersections that are confusing to pilots. Some of these HS are associated with runway incursion incidents. Many HS are taxiway intersections that do not comply with the 3-Node principle. Figure 4-3 shows examples of taxiway geometry that are not recommended for construction.

a. Cockpit over Centerline. The taxiway centerline(s) at taxiway intersections should be designed to cockpit-over-centerline, to the maximum extent practicable. Taxiway intersections designed to accommodate cockpit over centerline steering, as compared to judgmental oversteering, enable more rapid movement of traffic with minimal risk of aircraft excursions from pavement surface.

b. Judgmental Oversteering. Taxiway intersections should not be designed to accommodate judgmental oversteering. Judgmental oversteering is not a design parameter. It is an operational maneuver which requires complex maneuvering, increases the risk of aircraft excursions from the pavement surface, and slows the flow of traffic.

c. Taxiway Intersections. Taxiways utilizing the 3-Node principle are recommended and should only intersect at multiples of 30, 45, or 90 degrees from the travelling taxiway. See figure 4-1(a). Right-angle taxiways are preferable because they provide a pilot approaching an intersection the best visual perspective to observe aircraft in both the left and right directions. They also provide the optimum orientation for viewing taxiway signage and surface markings associated with other intersecting taxiways. It is recommended to avoid geometry which require excessive pavement fillets and taxiway width since they force airfield signage farther from the taxiway centerline; thereby potentially contributing to pilot disorientation.

d. Design. Figure 4-1 shows the most common designs of taxiway-taxiway intersections and tables 4-1, 4-2 and 4-3 present the associated dimensional standards. The designs also apply to taxiway-apron intersections. Do not construct a wide throat taxiway leading directly from an apron to a taxiway that is parallel to a runway. Wide throat entrances contribute to lack of situational awareness by pilots and have contributed to runway incursion incidents. Pilots have the tendency to confuse wide expanse of pavement as part of an apron. Figure 4-3(b) illustrates the wide-throat taxiway from an apron.

e. Applicable Limitations. The criteria depicted in figure 4-1 apply only to taxiway-taxiway intersections and taxiway-apron intersections and not to runway-taxiway intersections. Discussion and details on runway-taxiway intersections and accompanying figures are in subsequent paragraphs.

407. ENTRANCE TAXIWAYS.

a. Dual Use. An entrance taxiway shall be located at both runway ends, thereby also serving as the final exit taxiway on a bidirectional runway. See figures 4-5 and 4-6.

b. Radius. The centerline radius of curvature should be as large as possible to accommodate higher speeds. The radius is dependent on the separation distance between the runway and parallel taxiway.

c. Design. An entrance taxiway shall conform to the standard width for each ADG as specified in Table 4-1. The taxiway width includes the taxiway edge safety margin which is the minimum acceptable distance between the outside of the airplane’s main gear wheels and the pavement edge. All new entrance taxiways and existing entrance taxiways designated as “hot spots” must be perpendicular to the runway centerline. To the maximum extent possible, all existing entrance taxiways (not designated as “hot spots”) should also be reconfigured to be perpendicular to the runway centerline. Entrance taxiways should not be constructed beyond the runway end. The design length of a perpendicular taxiway entrance leading

to a runway should permit the longest fuselage in the ADG to fully line-up perpendicular to the runway. The entrance design shown in figure 4-5, with a centerline radius of 200 feet (60 m), will allow entrance speeds of 20 mph (30 km per hour), the minimum design speed for the taxiway system. Larger radii will permit higher entrance speeds.

d. Mitigation of runway incursions. Avoid the construction of wide expanses of pavement at entrance taxiways since this design has encountered runway incursions. Airports with existing wide expanses of pavement should paint the excess pavement green or use aviation grade artificial turf to make the entrance taxiway more distinctive (figure 4-6). Each distinct entrance taxiway shall have its own taxiway designator, marking and elevated signage. To minimize the landing on a parallel taxiway, the outer edge of the taxiway (outer common curve) should be curved as shown in figure 4-5 and 4-6. This curvature provides a visual cue to help pilots avoid landing on a taxiway parallel to a runway. For additional standards and guidance, refer to AC 150/5340-1, Standards for Airport Markings, AC 150/5340-18, Standards for Airport Sign Systems, and AC 150/5370-15, Airside Application for Artificial Turf for additional guidance.

408. BYPASS TAXIWAYS. Air traffic personnel at busy airports encounter occasional bottlenecks when moving airplanes ready for departure to the desired takeoff runway. Bottlenecks result when a preceding airplane is not ready for takeoff and blocks the access entrance taxiway. To alleviate capacity constraints, construct bypass taxiways to provide flexibility in runway use by permitting ground maneuvering of steady streams of departing airplanes. An analysis of existing and projected traffic will indicate if a bypass taxiway will enhance traffic flow.

a. Location. Bypass taxiway locations are normally at or near the runway end. They must be parallel to the main entrance taxiway serving the runway end, as shown in figure 4-6, or used in combination with the dual parallel taxiways, as depicted in figure 4-7.

b. Design. Bypass taxiways shall conform to the standard width in table 4-1 for each specific ADG. The bypass taxiway width includes the standard taxiway edge safety margin. The separation and clearance standards for bypass taxiways are the same as for parallel taxiways as specified in table 2-3. The standard design is to not pave the area(s) between the entrance taxiway and bypass taxiway(s) to preserve each taxiways visual cues.

c. Mitigation of runway incursions. The centerlines of all new bypass taxiways and existing bypass taxiways designated as “hot spots” are to be perpendicular to the runway centerline. To the maximum extent practicable, all existing bypass taxiways (not designated as “hot spots”) should also be reconfigured in accordance with this standard during the next capital project opportunity at that location. Airports with existing paved areas between bypass taxiways and entrance taxiways shall have islands between them as shown in figure 4-6. To the maximum extent practicable, existing pavement between bypass and entrance taxiways should be painted green or covered with artificial green turf. Each bypass taxiway shall have its own taxiway designator, markings, and elevated signage.

409. TAXIWAY AND RUNWAY INTERFACE. All entrance and crossing taxiways should intersect at a right-angle with the runway. Intersecting angles less than 45 degrees are not recommended except for a standard 30 degree high-speed exit from a runway. Figure 4-3(d), (e), (f) and (g) illustrate several examples of problematic runway/taxiway interfaces not recommended for construction which have contributed to runway incursions and wrong runway takeoffs. Configurations such as: Y-shaped taxiway crossings, taxiways crisscrossing a high-speed exit, aligned taxiways between two closely spaced runway ends, and a taxiway serving V-shaped runways (runways with the same start point) shall not be designed. Airport operators should remove such confusing geometry to the greatest extent possible. Taxiway strategies to reduce the number of active runway crossings and their locations should be considered, e.g. crossings in the first and the last third of the runway are recommended. Avoid taxiways that provide direct access from the apron to the runway.

410. HOLDING BAYS. Providing holding bays instead of bypass taxiways also enhances capacity. Holding bays provide a standing space for airplanes awaiting final air traffic control (ATC) clearance and to permit those airplanes already cleared by ATC to move to their runway takeoff position. By virtue of their size, they enhance maneuverability for holding airplanes while also permitting bypass operations. A holding bay may be considered when runway operations reach a level of 30 takeoffs per hour.

a. Location. Although the most advantageous position for a holding bay is adjacent to the parallel taxiway serving the runway end, it may be satisfactory in other locations. Precaution: Place holding bays to keep airplanes out of the Obstacle Free Zone (OFZ) (runway, inner-transitional and inner-approach OFZ), Precisions Obstacle Fee Zone (POFZ) (figure 3-6), Runway Protection Zone (RPZ), and the runway safety area, as well as avoiding interference with instrument landing system operations. The location of the holding bay should not result in increasing the taxiway width at entrance taxiways.

b. Design. Figure 4-8 shows some typical holding bay configurations.

411. TURNAROUNDS. At low activity airports, a turnaround can serve as a combination holding bay and bypass taxiway when it is not economically feasible to provide a parallel taxiway. The turnaround needs to extend far enough away from the runway centerline so airplanes will be able to remain behind the hold line. Figure 4-9 shows a taxiway turnaround.

412. DUAL PARALLEL TAXIWAYS. To accommodate high-density traffic or eliminate the use of an operationally closed runway as a temporary taxiway, airport operators and planners should design multiple accesses to runways by constructing dual parallel taxiways. For example, to facilitate ATCT handling when using directional flow releases, e.g., south departure, west departure, etc., airplanes may be selectively queued on dual (or even triple) parallel taxiways. The outer most dual parallel taxiway need not extend the full length of runway.

Crossover taxiways between dual parallel taxiways increase flexibility. See figure 4-10.

413. TAXIWAY BETWEEN PARALLEL RUNWAYS. A taxiway located between two parallel runways requires a centerline separation from each runway to meet the standard separation distance specified in Tables 2-1, 2-2 and 2-3.

414. EXIT TAXIWAYS. Design and locate exit taxiways to meet the operational requirements of the airport.

a. **Efficiency.** Appendix 9 provides guidance on exit taxiway location utilization. AC 150/5060-5 provides guidance on the effect of exit taxiway location on runway capacity. Exit taxiways should permit free flow to the parallel taxiway or at least to a point where air traffic control considers the airplane clear of the runway safety area. Avoid high speed exits that lead directly onto another runway.

b. **Type.** A decision to provide a right-angled exit taxiway or a standard 30-degree acute-angled exit taxiway rests upon an analysis of the existing and contemplated traffic. The purpose of a 30-degree acute-angled exit taxiway, commonly referred to as a “high speed exit,” is to enhance airport capacity. However, when the design peak hour traffic is less than 30 operations (landings and takeoffs) per hour, a properly located right-angled exit taxiway will achieve an efficient flow of traffic.

c. **Separation.** The type of exit taxiway influences runway and taxiway separation. The standard runway-taxiway separations specified in tables 2-1 and 2-2 are satisfactory for right-angled exit taxiways. A separation distance of at least 600 feet (180 m) is necessary for an efficient 30-degree acute-angled exit taxiway, which includes a reverse curve for “double-back” operations. The runway-taxiway separations specified in tables 2-1 and 2-2 are adequate for acute-angled exits where the taxiway traffic flow is in the direction of landing.

d. **Configuration.** Figure 4-11 illustrates the configuration for a right-angled exit taxiway. Figure 4-12 illustrates the standard acute-angled exit taxiway with a 1,400-foot (420 m) entrance spiral.

415. APRON TAXIWAYS AND TAXILANES. Requirements often exist to provide through-taxi routes across an apron and to provide access to gate positions or other terminal areas.

a. **Apron Taxiways.** Apron taxiways may be located either inside or outside the movement area. Apron taxiways require the same separations as other taxiways. When the apron taxiway is along the edge of the apron, locate its centerline inward from the apron edge at a distance equal to one-half of the width of the taxiway structural pavement. A shoulder is necessary along the outer edge in addition to the taxiway safety area and the separations specified in tables 2-1, 2-2, 2-3, and 4-1.

b. **Taxilanes.** Taxilanes are predominately located outside the movement area. Taxilanes provide access from taxiways (usually an apron taxiway) to airplane parking positions and other terminal areas. When the taxilane is along the edge of the apron, locate its centerline inward from the apron edge at a distance equal to one-half of the width of the taxiway structural pavement and satisfy other apron edge taxiway criteria, i.e., a shoulder, safety area, and the separations specified in tables 2-1, 2-2, 2-3, and 4-1.

c. **Visibility.** Airport traffic control tower personnel require a clear line of sight to all apron taxiways under air traffic control (ATC). Although ATC is not generally responsible for controlling taxilane traffic, a clear line of sight to taxilanes is recommended.

416. END-AROUND TAXIWAYS. In an effort to increase operational capacity, airports have added dual and sometimes triple parallel runways, which can cause delays when outboard runway traffic has to cross active inboard runways to make its way to the terminal. To improve efficiency and provide a safe means of movement around the departure end of a runway, it might be feasible to construct a taxiway that allows aircraft to transition around the ends of the runway. This type of taxiway is called an End-Around Taxiway (EAT). Due to the safety critical nature of these operations, it is necessary for planners to work closely with the FAA prior to considering the use of an EAT. EATs should be done only to enhance safety and capacity. Before EAT projects are proposed and feasibility studies and/or design started, they must be pre-approved by the FAA Office of Airport Safety and Standards, Airport Engineering Division (AAS-100). Submission for project approval is through the local Airports District Office for coordination with the approval authority (AAS-100). See figure 4-15.

a. **Design Considerations.** End-around taxiways must remain outside of the standard runway safety area (RSA), which extends 1,000 feet along the centerline extended of the departure end of the runway (DER). In addition, the EAT must be entirely outside of the ILS critical area. An airspace study for each site should be performed to verify the tail height of the critical design group aircraft operating on the EAT does not penetrate any FAA Order 8260.3 TERPS surface and meets the requirements of 14 CFR 121.189 for the net takeoff flight path to clear all obstacles either by a height of at least 35 feet vertically, or by at least 200 feet horizontally within the airport boundaries.

b. **Visual Screen.** The placement and configuration of EATs must take into account additional restrictions to prevent interfering with navigational aids, approaches and departures from the runway(s) with which they are associated. In order to avoid potential issues where pilots departing from a runway with an EAT might mistake an aircraft taxiing on the EAT for one actually crossing near

the departure end of the runway, a visual screen type device may be required, depending on the elevation changes at a specific location. Through a partial or complete masking effect, the visual screen will enable pilots to better discern when an aircraft is crossing the active runway versus operating on the EAT. The intent is to eliminate any false perceptions of runway incursions, which could lead to unnecessary aborted takeoffs, and alert pilots to actual incursion situations. A visual screen is required for any new EAT unless the elevation of the EAT centerline at a point in line with the extended runway centerline, is at least 29 feet below the elevation at the DER, so the terrain creates a natural masking of the aircraft on the EAT. Research has shown that "masking" is accomplished at a height where a critical design group aircraft's wing-mounted engine nacelle would be blocked from view, as discerned from the V-1 point during take-off. DO not locate the visual screen structure within any runway safety area, taxiway obstacle free area, critical ILS area, or should it penetrate the inner approach OFZ, the approach light plane or TERPS surfaces.

(1) **Screen Sizing.** The size of the EAT visual screen is dependent on the runway geometry, the size of the critical design group aircraft operating at that particular airport (on both the departing and EAT and the elevation relationship between the EAT and the departing runway.

(a) **Horizontal Geometry.** The width of the screen should be designed to be perceived to originate and end at the taxiway/runway hold line(s) at the DER from a position on the runway equivalent to V1 (take-off decision speed under maximum conditions) for the critical design group aircraft. In order to calculate the screen width, the distance to where the screen will be located beyond the runway end must first be determined. From the runway centerline location of VI for the design aircraft, lines are drawn through the runway hold line position closest to the DER (normally derived from the Aircraft Holding Position Location in table 2-1 and 2-2) and extended until they intersect with a line perpendicular to the runway at the screen location. See figure 4-16. Use the formula in figure 4-17 to calculate the width of the visual screen.

(b) **Vertical Geometry.** The vertical height of the screen must be designed so the top of the screen will mask that portion of an aircraft that extends up to where the top of a wing-mounted engine nacelle would be of a critical design group aircraft taxiing on the EAT as viewed from the cockpit of the same design group aircraft at the typical VI point on the departure runway. In a situation where the EAT and the DER elevation are the same, the lower edge of the visual panels should be at the same vertical height as the centerline of the DER. The visual panels of the screen should extend from that point up to the heights shown in table 4-4, depending on the design group aircraft. For the

higher design groups, it is permissible to have the lower limit of the visual screen up to two (2) feet above the DER elevation as shown in table 4-4. Variations in terrain at the site where the screen is to be constructed will need to be considered, and may result in the screen being a sizeable distance off the ground. In the event the EAT and DER are at different elevations, either higher or lower, the overall screen height will have to be adjusted to ensure the same masking capability. Tables 4-5, 4-6, and 4-7 provide guidance on determining the height of the visual screen for the respective design groups if the elevation of the EAT is below the elevation of the DER. If the EAT is lower than 29 feet in elevation as compared to the centerline of the DER, a screen is not required. Table 4-8 provides guidance on determining the height of the visual screen for design groups 3 through 6 if the elevation of the EAT is above the elevation of the DER. It may be feasible to grade the site of the visual screen to allow for an additional 2-foot separation between the visual screen panels and the ground for mowing access.

(2) **Screen Construction.** The visual screen must be constructed to perform as designed and be durable resistant to weather, frangible, and resistant to excessive wind speeds. The visual screen comprises foundations, frame connection hardware and front panels.

(a) **Foundations.** The foundation of the screen structure should be sufficient to hold the visual screen in position. The base of the foundation should have a sufficient mow strip around it to provide a safety buffer between mowing equipment and the screen structure.

(b) **Frame.** The frame structure of the screen should be constructed so it is durable, able to withstand wind loading, and frangible in construction. Figure 4-18 illustrates three methods for constructing the frame structure, depending on the overall height of the structure. The visual screen structure should be constructed to allow the front panels of the screen to be angled upward 12 ($\pm 1^\circ$) degrees from the vertical plane. All connections within the frame structure, the panels, and tile foundations should be designed to break away from the structure in the event an aircraft impacts them.

(c) **Front Panel.** The front panel of the visual screen should be designed so it is conspicuous from the runway side of the screen. The front panel should be constructed of aluminum honeycomb material as described in the next paragraph. The replaceable front panels should be 12 feet long and 4 feet high and attached to the frame structure so as to allow easy replacement if necessary. See figure 4-19.

(i) **Aluminum Honeycomb Performance Criteria.** The screen panels should be constructed of aluminum honeycomb material as described in this section. The front panel of the screen should be constructed of 4-foot-tall panels with the remaining difference added as required. For example, three 4-foot-high panels plus one 1-foot-tall panel would be used to

create a 13-foot-tall screen. These panels should be undersized by 0.50 inches to allow for thermal and deflection movements. The front and back panel faces should be specified to meet the required deflection allowance and should be a minimum 0.04 inches thick. The honeycomb material should be of sufficient thickness to meet the required deflection allowance, but should not be more than 3 inches thick. The internal aluminum honeycomb diameter should be of sufficient strength to meet the required deflection allowance, but should not be more than 0.75 inches in diameter. The panel edge closures should be of aluminum tube that is 1 inch times the thickness of the honeycomb and sealed. The deflection allowance for the screen is 0.50 inches maximum at the center of the panel when supported by four points at the corner of the panel. The panel faces should have a clear anodized finish on both front and back. The wind-loading deflection should be as specified in table 4-9.

(ii) **Pattern.** The front panel of the screen should visually depict a continuous, alternating red and white diagonal striping of 12-foot-wide stripes set at a 45-degree angle $\pm$ five (5) degrees, sloped either all to the left or all to the right. To provide maximum contrast, the slope of the diagonal striping on the screen should be opposite the slope of aircraft tails operating in the predominant flow on the EAT, as shown in figure 4-20.

(iii) **Color.** The front panel of the screen should be reflective red and white. The colors of the retroreflective sheeting used to create the visual screen must conform to Chromaticity Coordinate Limits shown in table 4-10, when measured in accordance with Federal Specification FP-85, Section 718.01 (a), or ASTM D 4956.

(iv) **Reflectivity.** The **surface** of the front panel should be reflective on the runway side of the screen. Measurements should be made in accordance with ASTM E810, Standard Test Method for Coefficient of Retroreflective Sheeting. The sheeting must maintain at least 90 percent of its values, as shown in table 4-11, with water falling on the surface, when measured in accordance with the standard rainfall test of FP-85, Section 718.02(a) and Section 7.10.0 of AASHTO M 268.

(v) **Adhesion.** The screen surface material must have a pressure-sensitive adhesive, which conforms to adhesive requirements of FP-85 (Class 1) and ASTM D 4956 (Class 1). The pressure-sensitive adhesive is recommended for application by hand or with a mechanical squeeze roller applicator. This type adhesive lends itself to large-scale rapid production of signs. Applications should be made with sheeting and substrate at temperatures above 65° F (18° C).

(3) **Environmental Performance.** The front panel of the screen surface material and all its required components must be designed for continuous outdoor use under the following conditions:

(a) **Temperature.** Screen surface material must withstand the following ambient temperature ranges: -4 degrees to +131 degrees F (-20 degrees to +55 degrees C).

(b) **Wind Loading.** The screen must be able to sustain exposure to wind velocities of at least 90 mph or the appropriate velocity rating anticipated for the specific airport location, whichever is greater.

(c) **Rain.** The screen surface material must withstand exposure to wind-driven rain.

(d) **Sunlight.** The screen surface material must withstand exposure to direct sunlight.

(e) **Lighting.** If required, the top edge of the visual screen should be illuminated with steady burning, L-810 FAA-approved obstruction lighting, as provided in the current version of AC 150/5345-43, and positioned as specified in paragraph 58(b) of the current version of AC 70/7460-1.

(4) **Provision for Alternate Spacing of Visual Screen.** If access is needed through the area where the visual screen is constructed, various sections of the screen may be staggered up to 50 feet from each other, as measured from the runway end, so an emergency vehicle can safely navigate between the staggered sections of screen. The sections of screen must be overlapped so the screen appears to be unbroken when viewed from the runway, at the V1 takeoff position.

(5) **Frangibility.** The screen structure including all of its components should be of the lowest mass possible to meet the design requirements so as to minimize damage should the structure be impacted. The foundations at ground level should be designed so they will shear on impact. The vertical supports should be designed so they will give way and the front panels should be designed so they will release from the screen structure if impacted. The vertical support posts should be tethered at the base so they will not tumble when struck. Figure 4-21 provides information on how this level of frangibility can be achieved.

(6) **Navigational Aid Consideration.** The following considerations should be given when determining the siting and orientation of the visual screen. The visual screen may have adverse affects on navigational aids if it is not sited properly. The uniqueness and complexity of the airport siting environment requires that all installations be addressed on a case-by-case basis, so mitigations can be developed to ensure the installation of the visual screen does not significantly affect navigational aid performance.

(a) **Approach Light Plane.** No part of the visual screen may penetrate the approach light plane.

(b) **Radar Interference.** Research has shown that a visual screen erected on an airport equipped with Airport Surface Detection Equipment (ASDE) may

reflect signals that are adverse to the ASDE operation. To avoid this, the visual screen should be tilted back/away (on the side facing the ASDE) 12 degrees ($\pm 1^\circ$). This will minimize or eliminate false radar targets generated by reflections off the screen surface. Examples of this tilting are shown in figure 4-18.

(c) **Instrument Landing System (ILS)**

Interference. Research has shown that the presence of visual screens on a runway instrumented with an ILS system (localizer and glide slope) will generally not affect

or interfere with the operation of the system. An analysis must be performed for glide slopes, especially null reference glide slopes, prior to the installation of the screens. The uniqueness and complexity of the airport siting environment requires that all installations be addressed on a case-by-case basis, so mitigations can be developed to ensure the installation of the visual screen does not significantly impact the performance of the ILS.

417. to 499. RESERVED.

Table 4-1. Taxiway dimensional standards

ITEM	DIM ^{1/}	AIRPLANE DESIGN GROUP (ADG)					
		I	II	III	IV	V	VI
Taxiway Width	W	25 ft 7.5 m	35 ft 10.5 m	50 ft ^{2/} 15 m ^{2/}	75 ft 23 m	75 ft 23 m	82 ft 25 m
Taxiway Edge Safety Margin ^{3/}		5 ft 1.5 m	7.5 ft 2.25 m	10 ft ^{4/} 3 m ^{4/}	15 ft 4.5 m	15 ft 4.5 m	15 ft 4.5 m
Taxiway Pavement Fillet Configuration		- Refer to Table 4-2 -					
Taxiway Shoulder Width	E	10 ft 3 m	10 ft 3 m	20 ft 6 m	25 ft 7.5 m	35 ft ^{5/} 10.5 m ^{5/}	40 ft ^{5/} 12 m ^{5/}
Taxiway/Taxilane Safety Area Width		49 ft 15 m	79 ft 24 m	118 ft 36 m	171 ft 52 m	214 ft 65 m	262 ft 80 m
Taxiway Object Free Area Width		89 ft 27 m	131 ft 40 m	186 ft 57 m	259 ft 79 m	320 ft 97 m	386 ft 118 m
Taxilane Object Free Area Width		79 ft 24 m	115 ft 35 m	162 ft 49 m	225 ft 68 m	276 ft 84 m	334 ft 102 m

^{1/} Letters correspond to the dimensions on figures 2-1 and 4-1.

^{2/} For airplanes in Airplane Design Group III with a wheelbase equal to or greater than 60 feet (18 m), the standard taxiway width is 60 feet (18 m).

^{3/} The taxiway edge safety margin is the minimum acceptable distance between the outside of the airplane wheels and the pavement edge.

^{4/} For airplanes in Airplane Design Group III with a wheelbase equal to or greater than 60 feet (18 m), the taxiway edge safety margin is 15 feet (4.5 m).

^{5/} Airplanes in Airplane Design Groups V and VI normally require stabilized or paved taxiway shoulder surfaces. Consideration should be given to objects near runway/taxiway/taxilane intersections, which can be impacted by exhaust wake from a turning aircraft.

The values obtained from the following equations may be used to show that a modification of standards will provide an acceptable level of safety. Refer to paragraph 6 for guidance on modification of standards requirements.

Taxiway safety area width equals the airplane wingspan;

Taxiway OFA width equals 1.4 times airplane wingspan plus 20 feet (6 m); and

Taxilane OFA width equals 1.2 times airplane wingspan plus 20 feet (6 m).

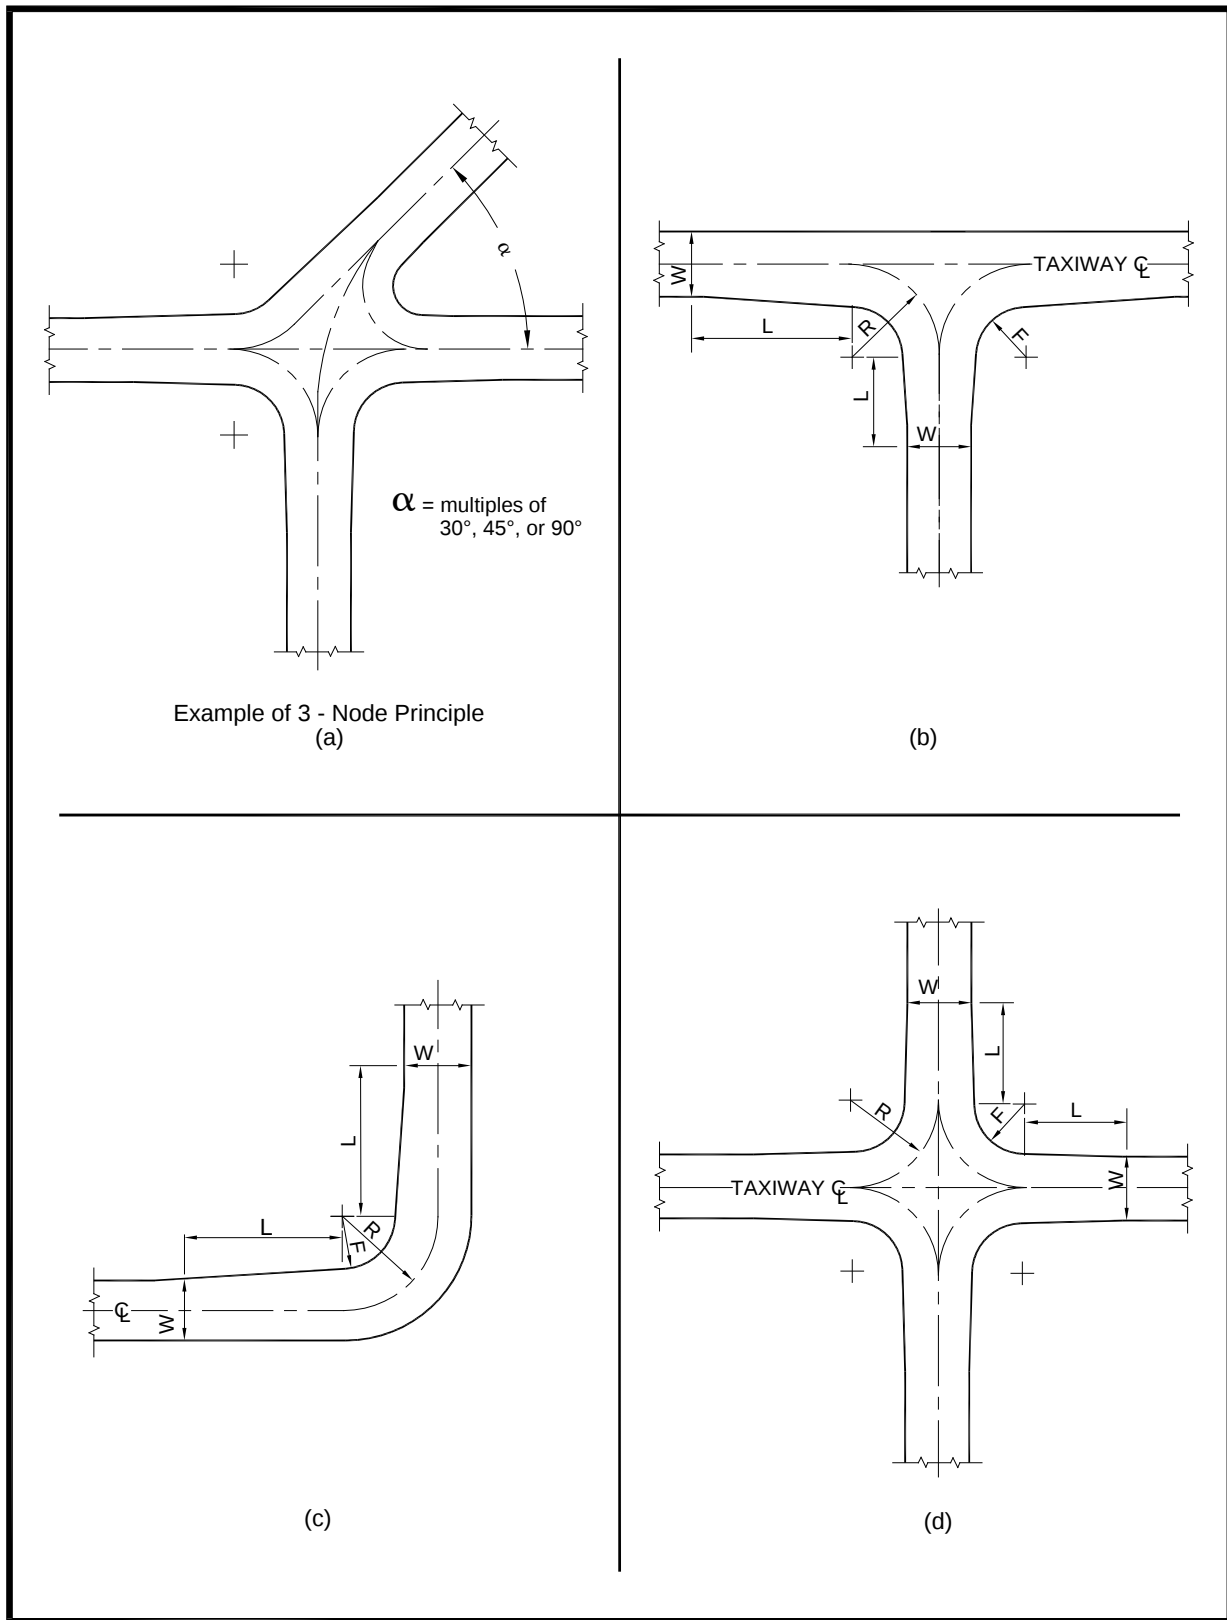


Figure 4-1. Taxiway to taxiway intersection details

Table 4-2. Taxiway fillet dimensions

ITEM	DIM ^{1/}	AIRPLANE DESIGN GROUP (ADG)					
		I	II	III ^{2/}	IV	V	VI
Radius of Taxiway Turn ^{3/}	R	75 ft	75 ft	100 ft	150 ft	150 ft	170 ft
		22.5 m	22.5 m	30 m	30 m	45 m	52 m
Length of Lead-in to Fillet	L	50 ft	50 ft	150 ft	250 ft	250 ft	250 ft
		15 m	15 m	45 m	75 m	75 m	75 m
Fillet Radius for Tracking Centerline ^{4/ 5/}	F	60 ft	55 ft	55 ft	85 ft	85 ft	85 ft
		18 m	16.5 m	16.5 m	25.5 m	25.5 m	25.5 m

^{1/} Letters correspond to the dimensions on figure 4-1.

^{2/} Airplanes in Airplane Design Group III with a wheelbase equal to or greater than 60 feet (18 m) should use a fillet radius of 50 feet (15 m).

^{3/} Dimensions for taxiway fillet designs relate to the radius of taxiway turn specified. Figure 4-2 shows a range of wheelbase and undercarriage width combinations that provide the standard taxiway edge safety margin for each ADG. Custom-designed pavement fillet are necessary when the specified “R” or the undercarriage (also undercarriage to cockpit) dimensions fall outside of the standard taxiway edge safety margin of figure 4-2. The equations in appendix 10 offer this ability.

^{4/} Figure 4-1 (c) displays a pavement fillet with taxiway widening on one side.

^{5/} Figure 4-1(d) displays pavement fillets with symmetrical taxiway widening.

Table 4-3. Wingtip clearance standards

ITEM	DIM	AIRPLANE DESIGN GROUP (ADG)					
		I	II	III	IV	V	VI
Taxiway Wingtip Clearance		20 ft	26 ft	34 ft	44 ft	53 ft	62 ft
		6 m	8 m	10.5 m	13.5 m	16 m	19 m
Taxilane Wingtip Clearance		15 ft	18 ft	22 ft	27 ft	31 ft	36 ft
		4.5 m	5.5 m	6.5m	8 m	9.5 m	11 m

The values obtained from the following equations may be used to show that a modification of standards will provide an acceptable level of safety. Refer to paragraph 6 for guidance on modification of standards requirements.

Taxiway wingtip clearance equals 0.2 times airplane wingspan plus 10 feet (3 m) and

Taxilane wingtip clearance equals 0.1 times airplane wingspan plus 10 feet (3 m).

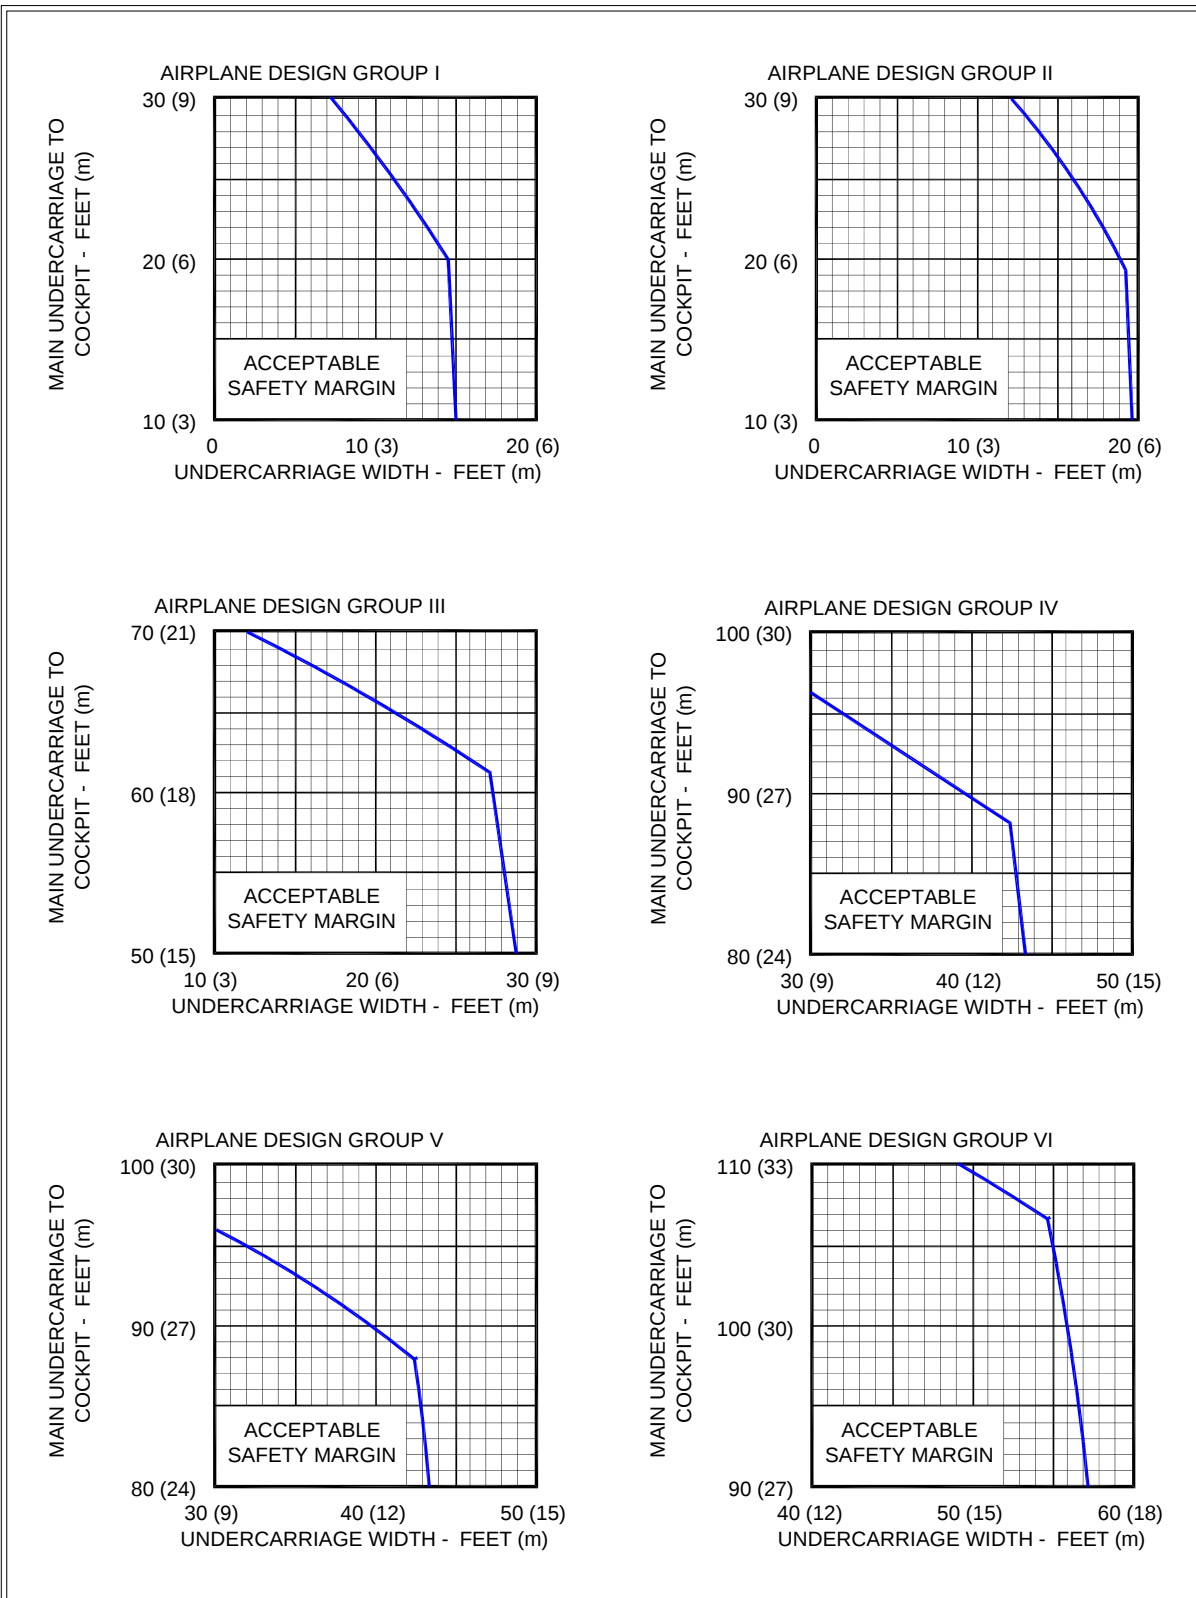


Figure 4-2. Maintaining cockpit over centerline



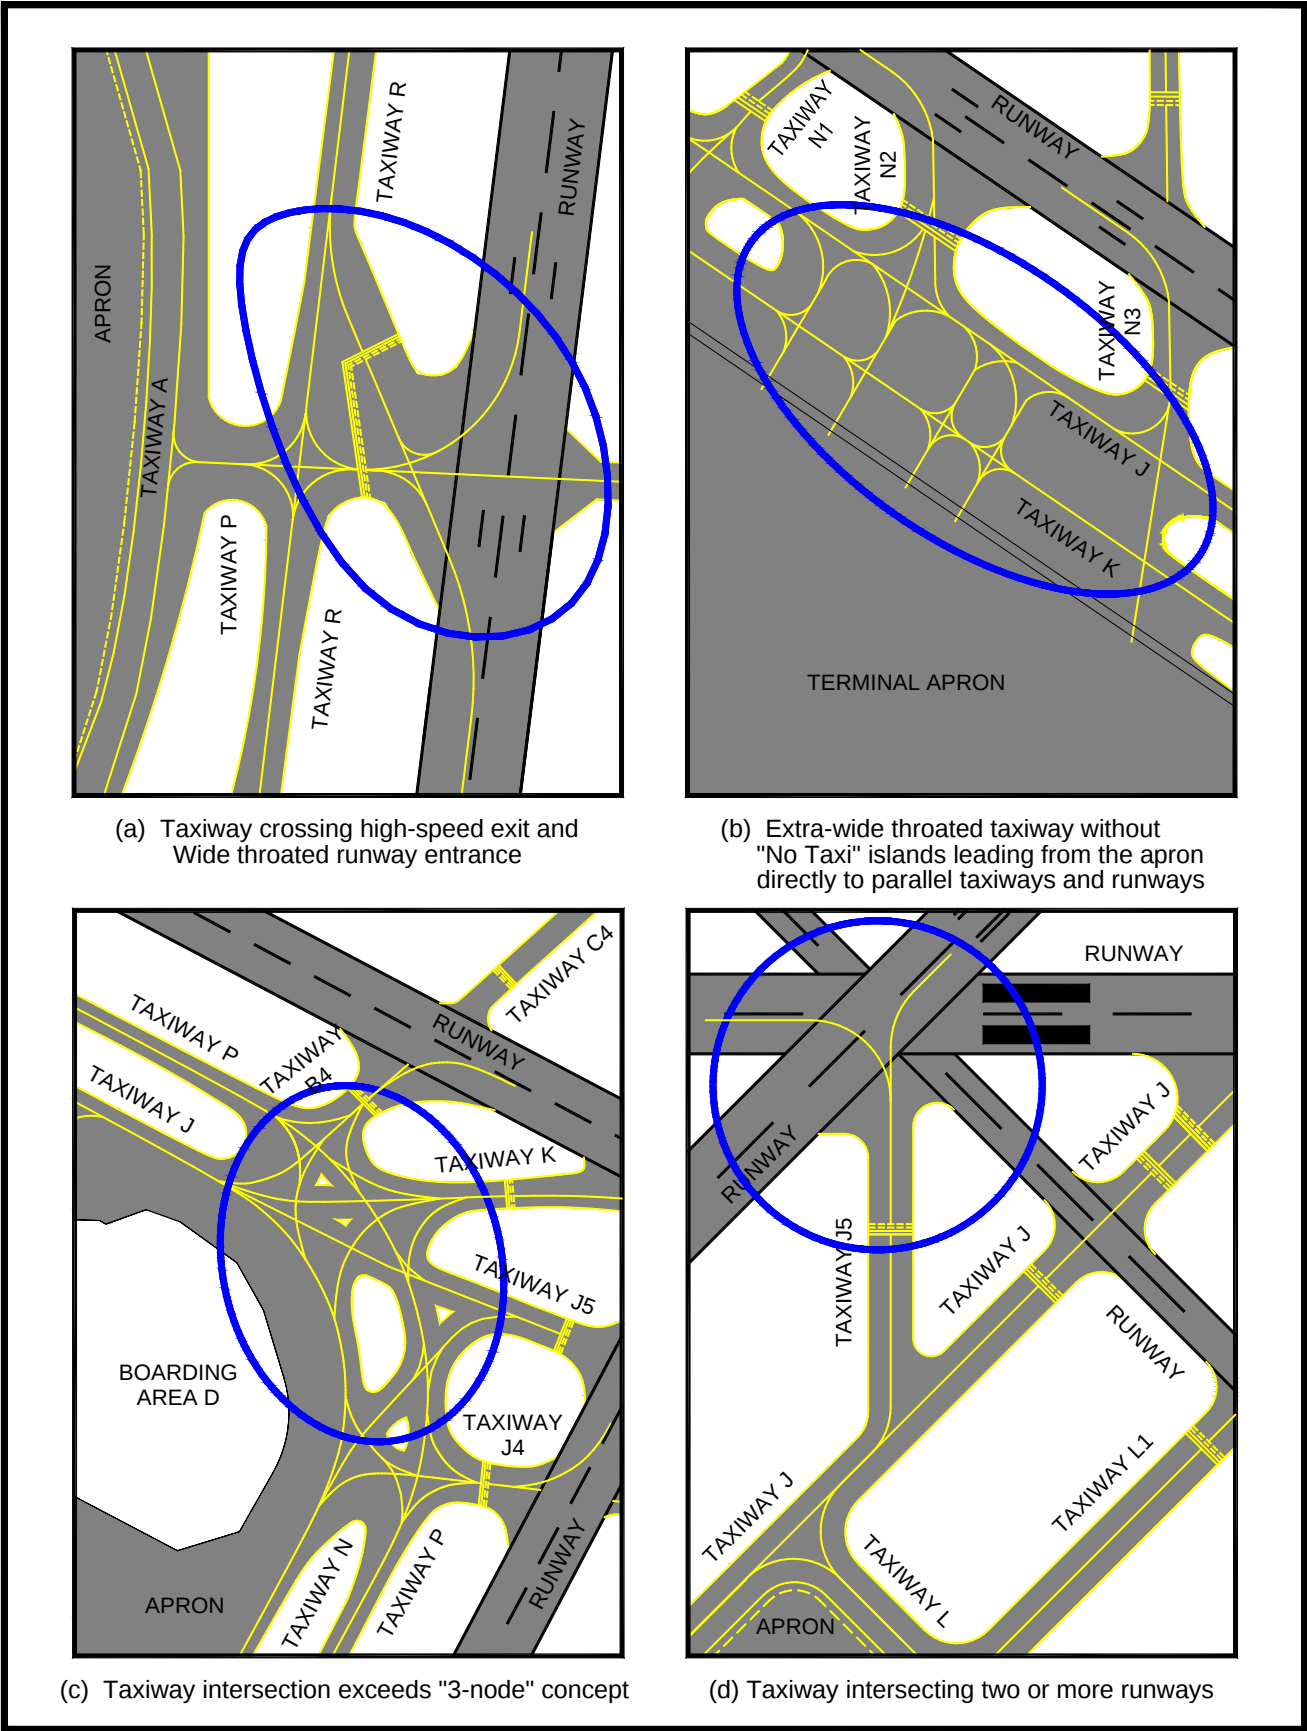



Figure 4-3. Problematic taxiway geometry that is not recommended for construction

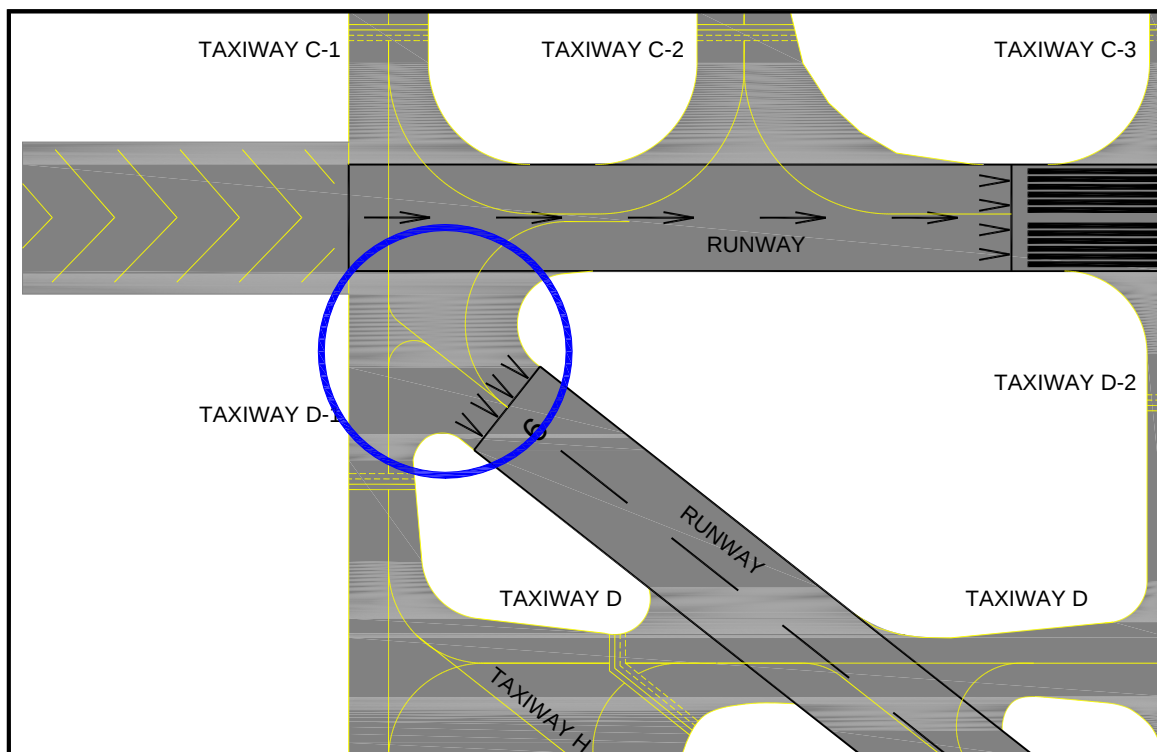

(e) Aligned taxiway between two closely spaced runway ends

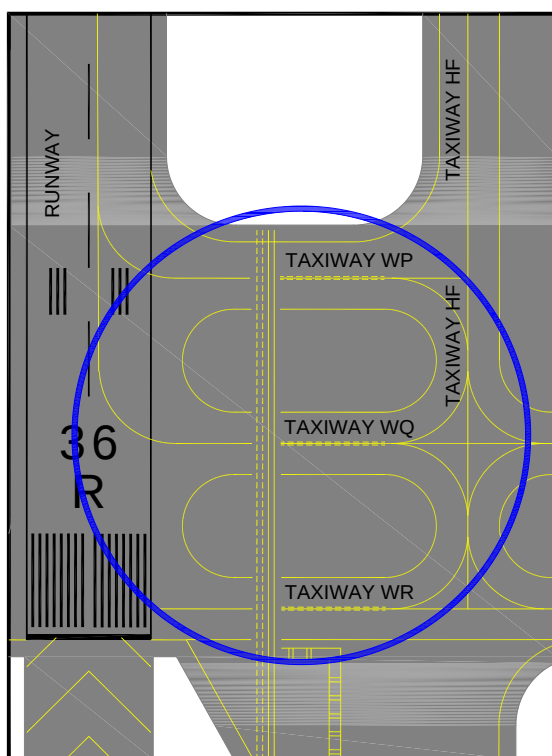

(f) Two or more taxiway entrances lacking "No Taxi" islands

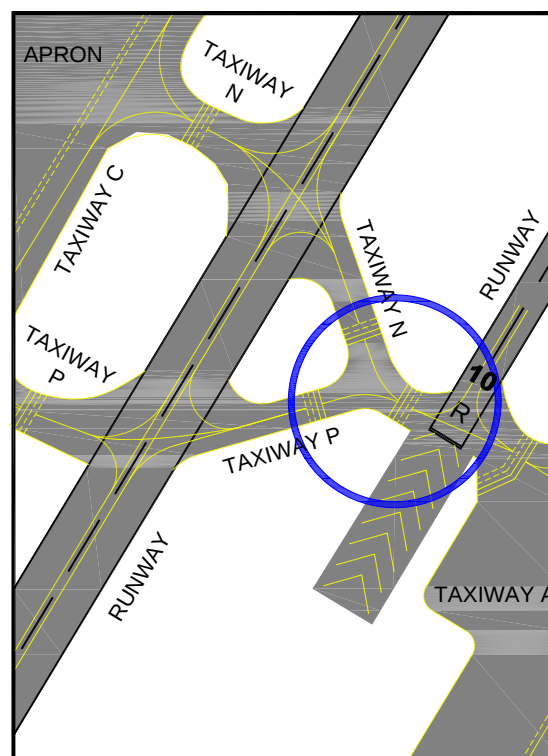

(g) "Y" Shaped taxiway crossing a runway

Figure 4-3 (continued). Problematic taxiway geometry that is not recommended for construction

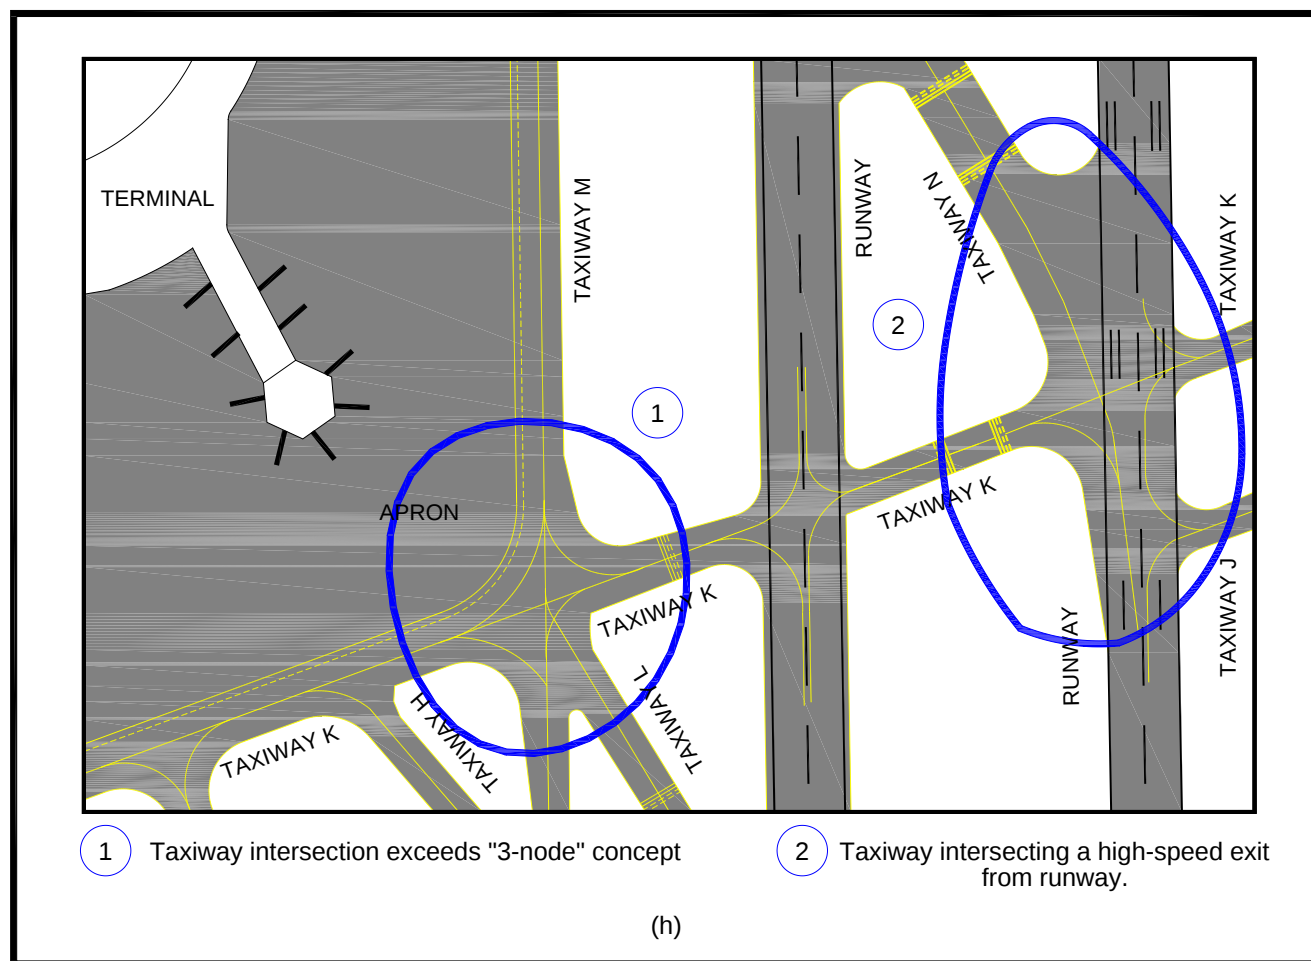


Figure 4-3 (continued). Problematic taxiway geometry that is not recommended for construction

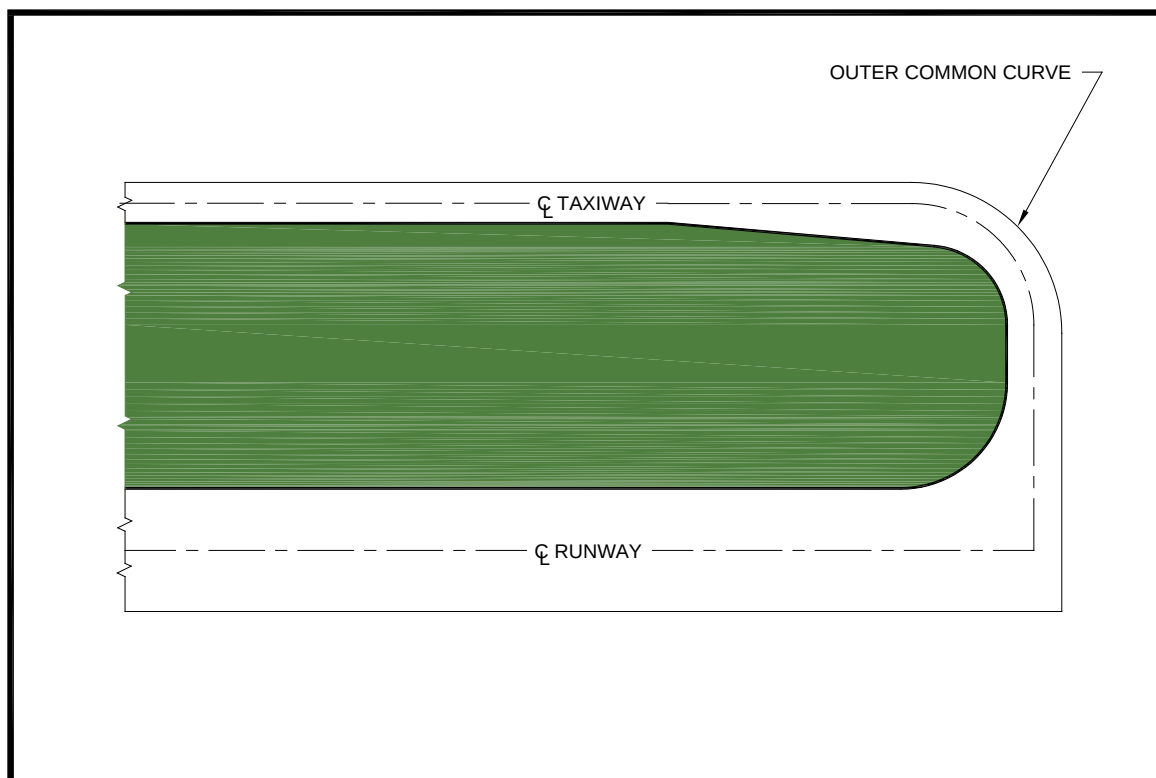


Figure 4-5. Entrance taxiway

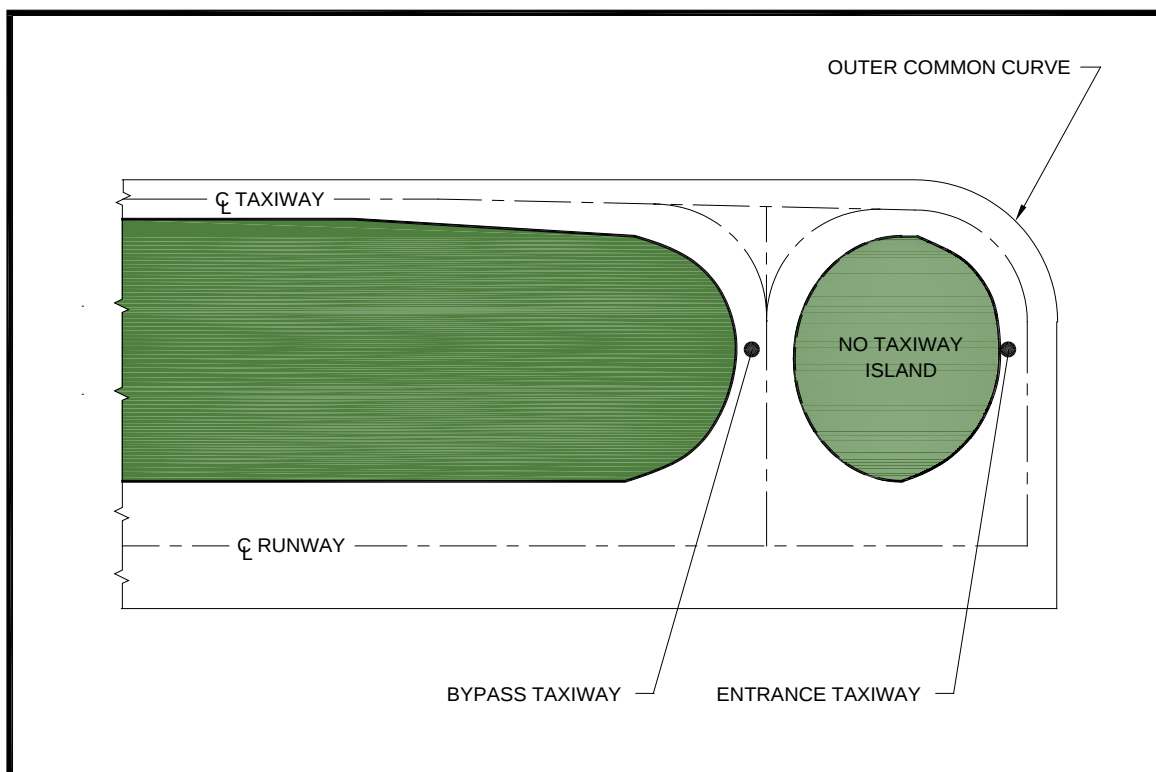


Figure 4-6. Bypass taxiway & Entrance Taxiway

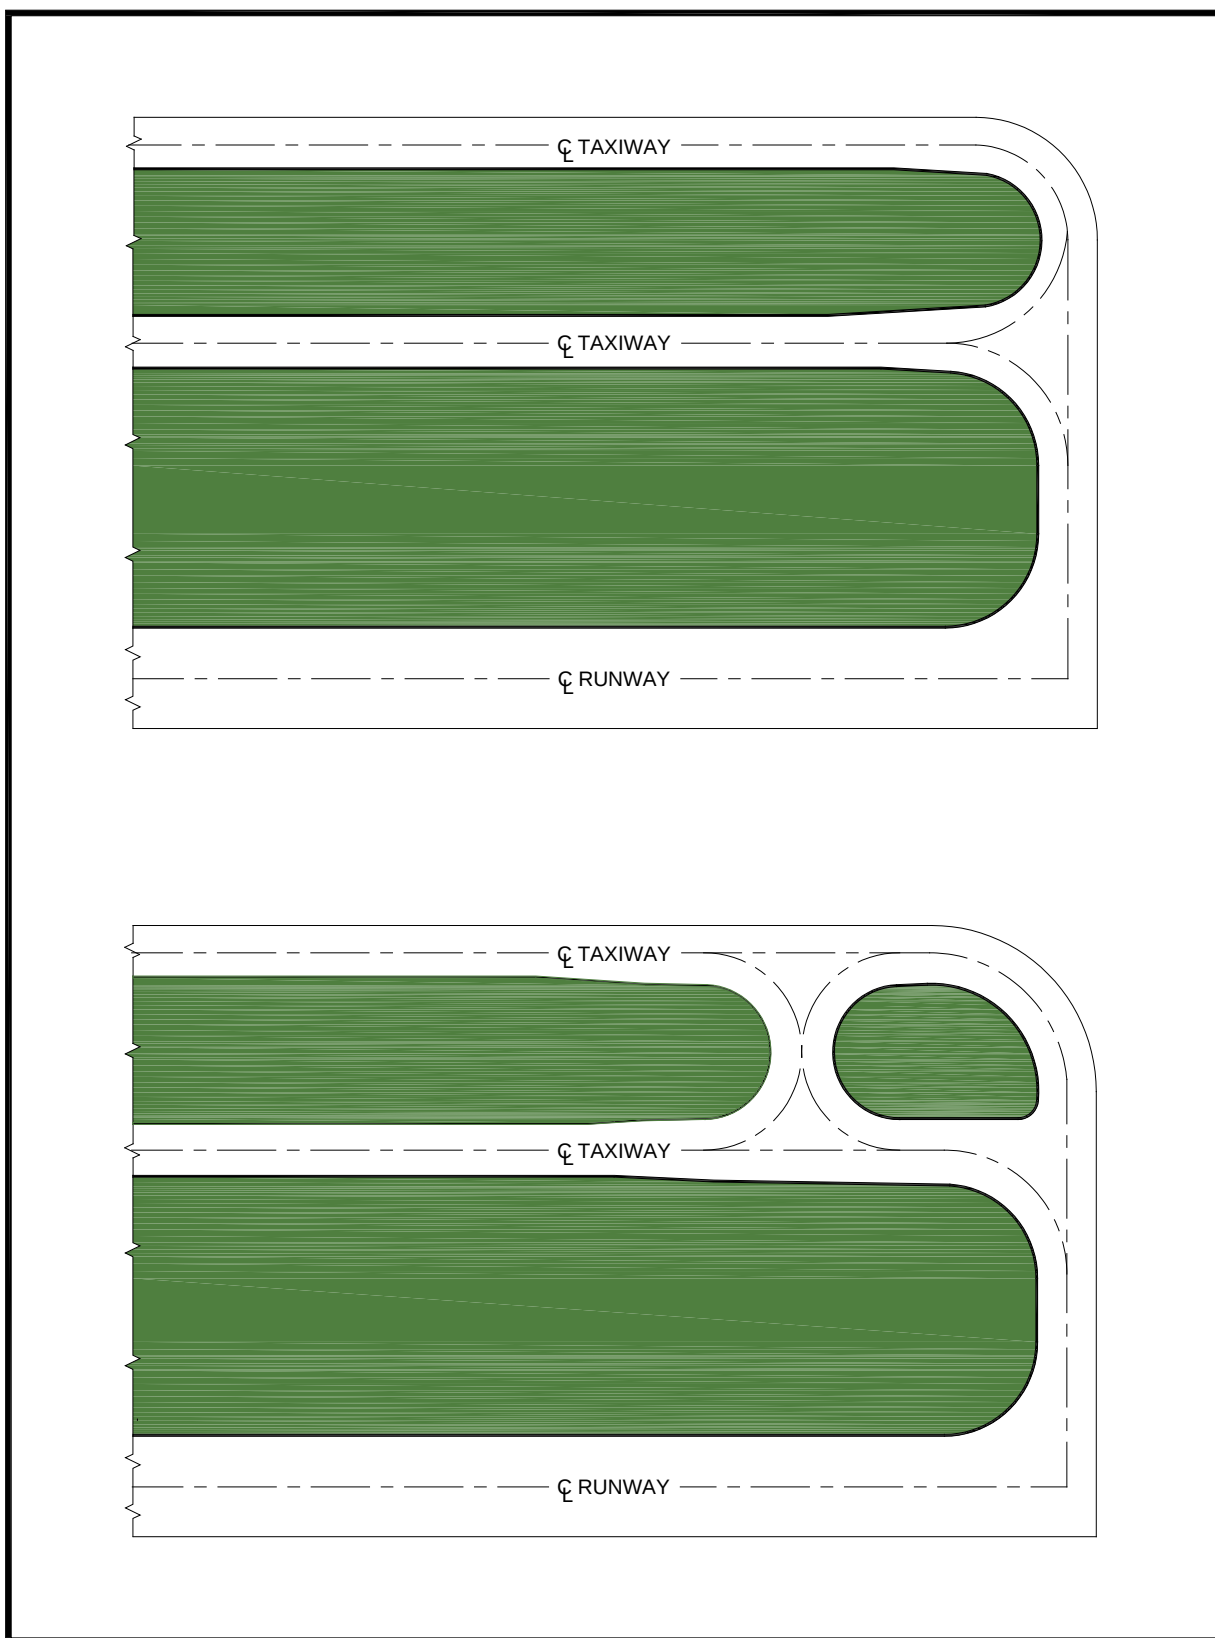


Figure 4-7. Dual parallel taxiway entrance

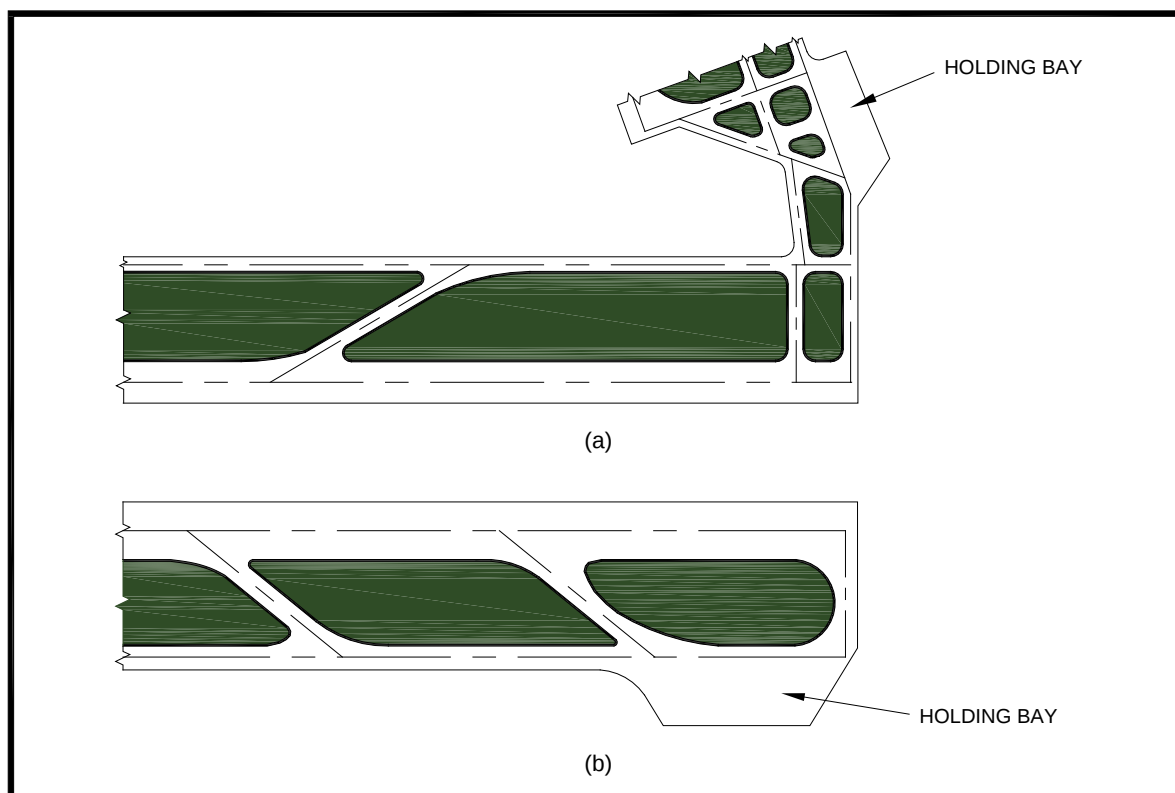


Figure 4-8. Two Typical Holding Bay Configurations

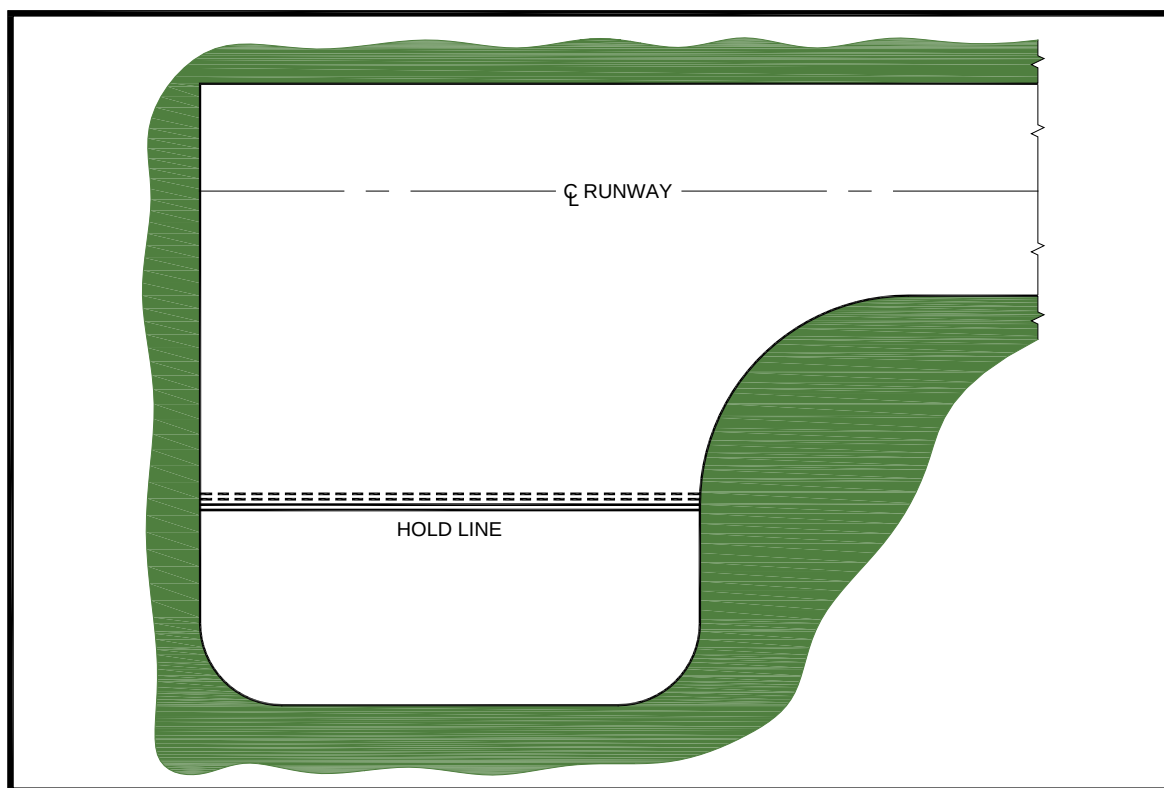


Figure 4-9. Taxiway Turnaround

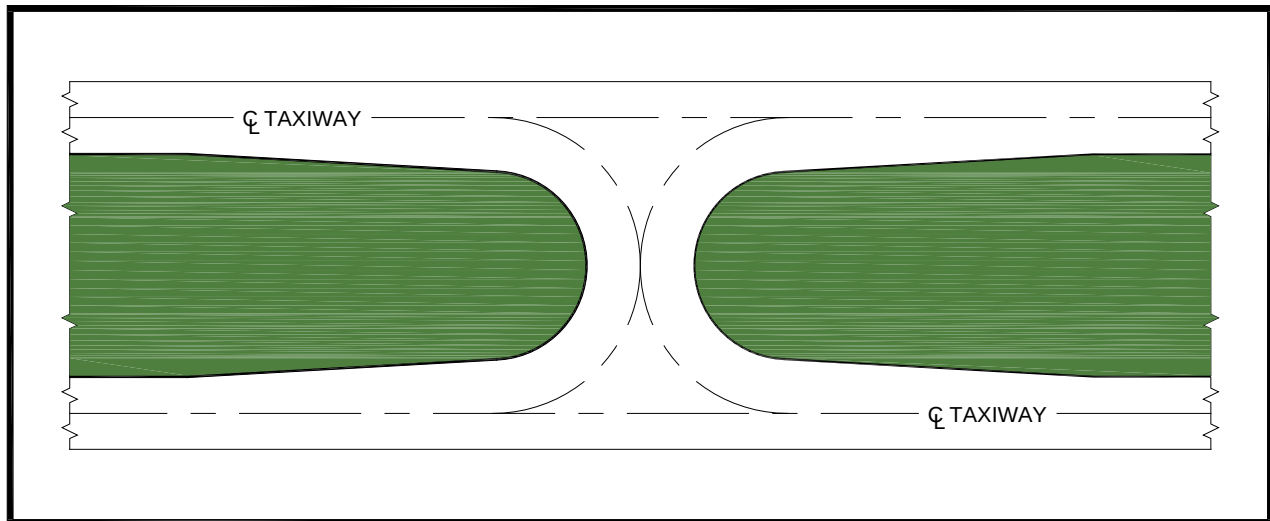


Figure 4-10. Crossover Taxiway

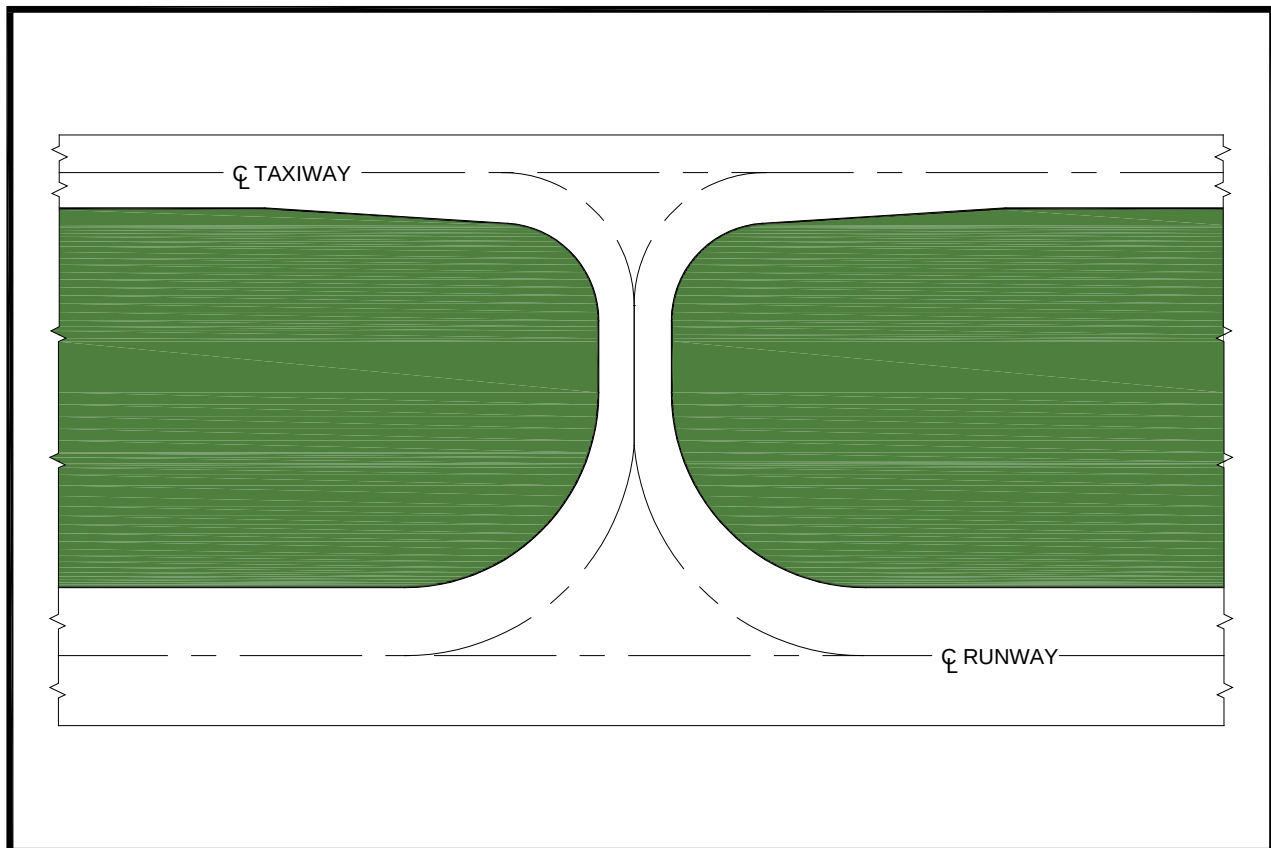
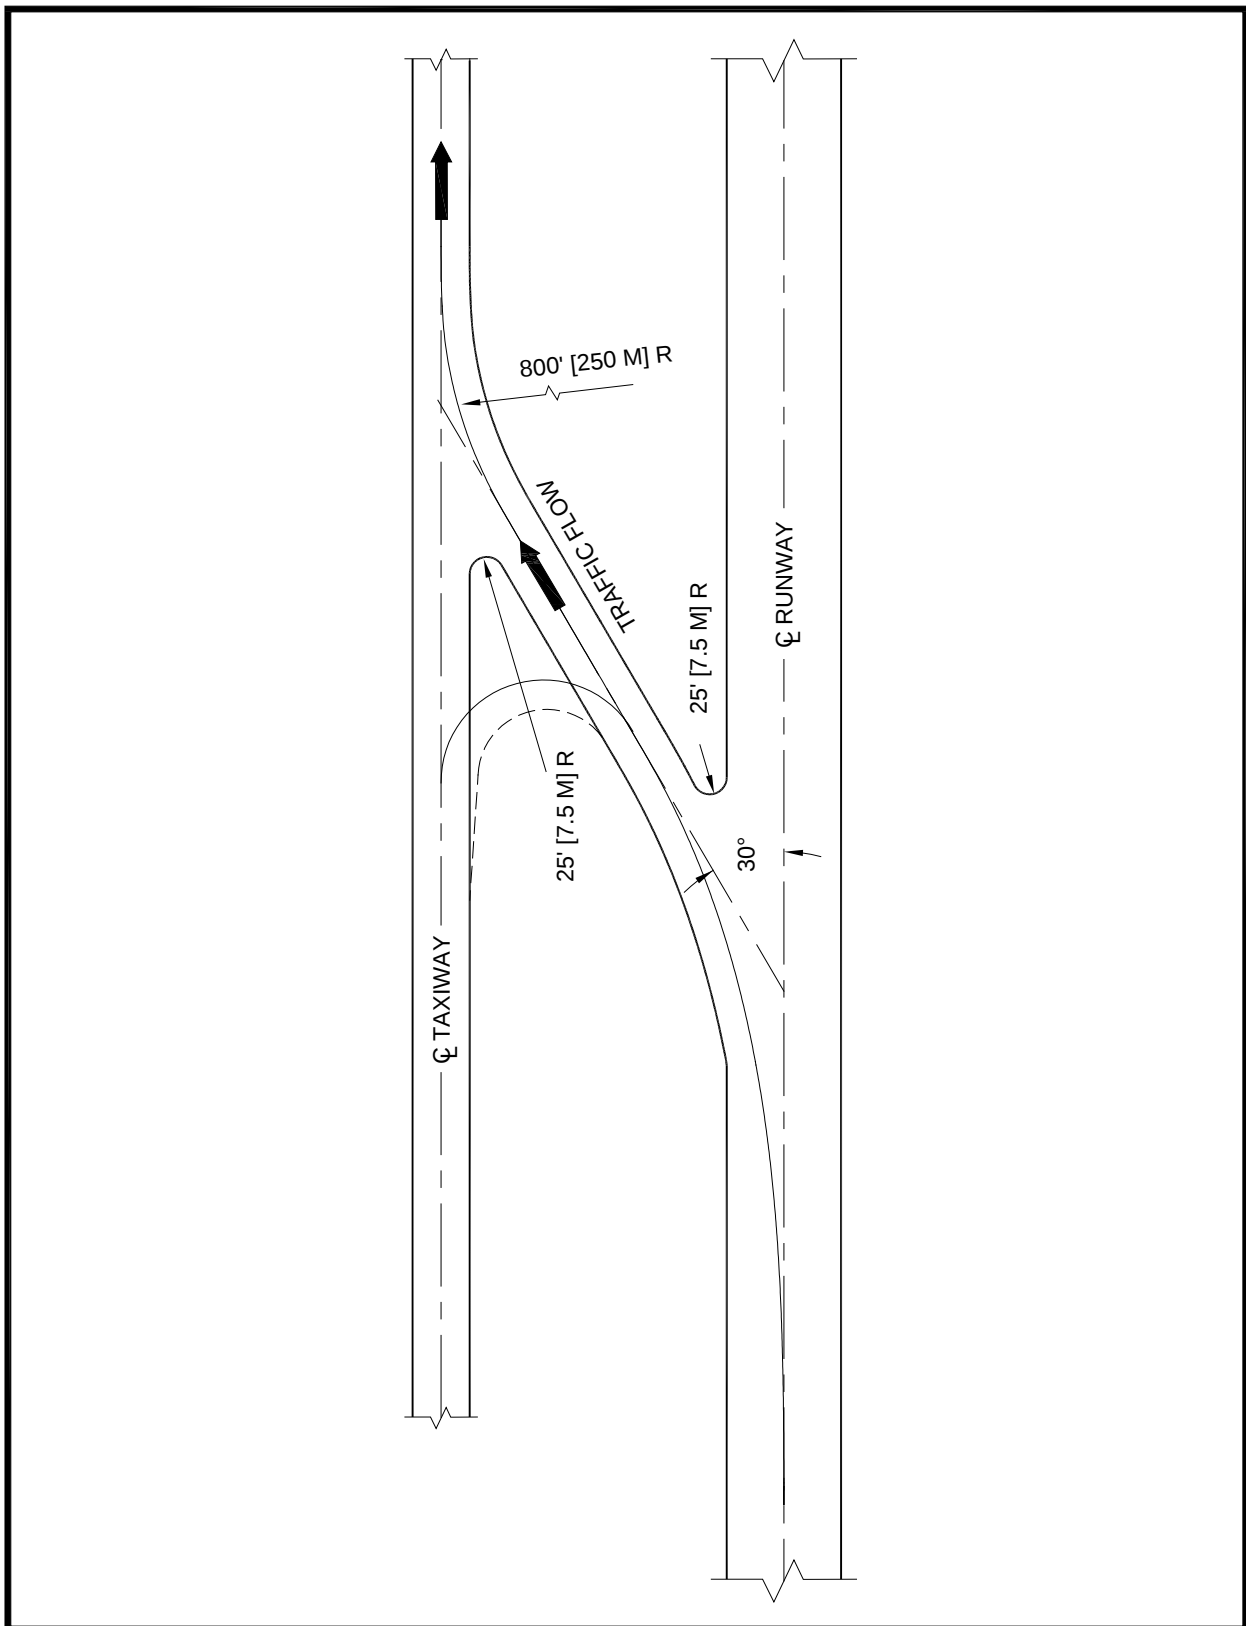


Figure 4-11. Right-angled Exit Taxiway

**Figure 4-12. Acute-angled Exit Taxiway**

Intentionally left blank

Intentionally left blank

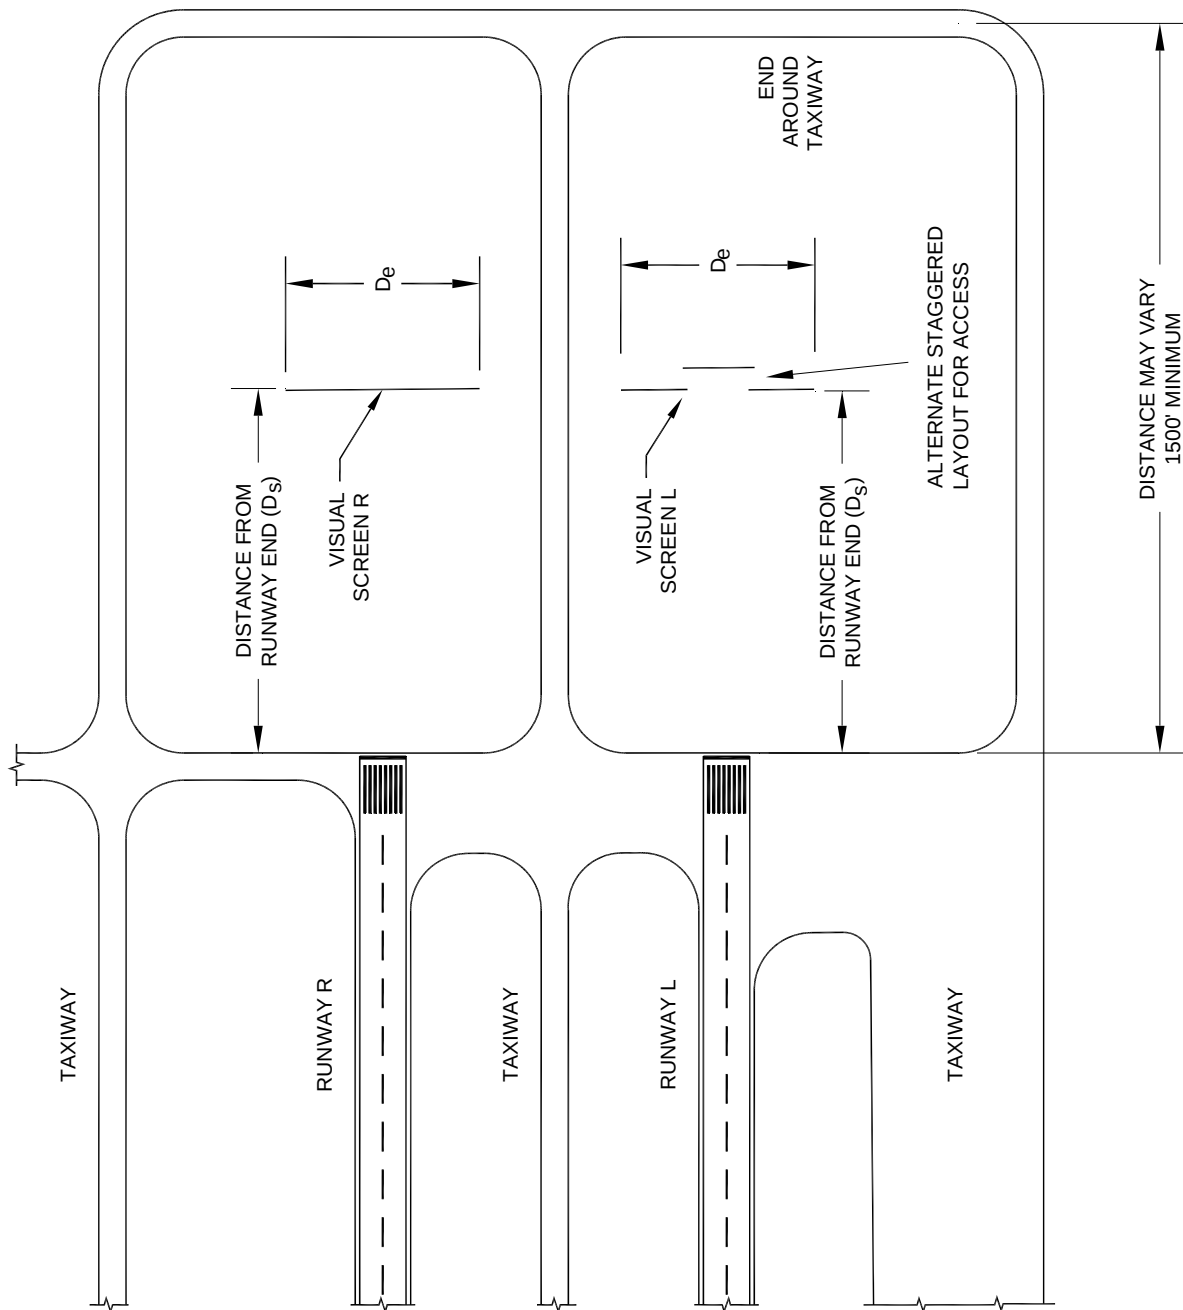


Figure 4-15. Typical end-around taxiway layout

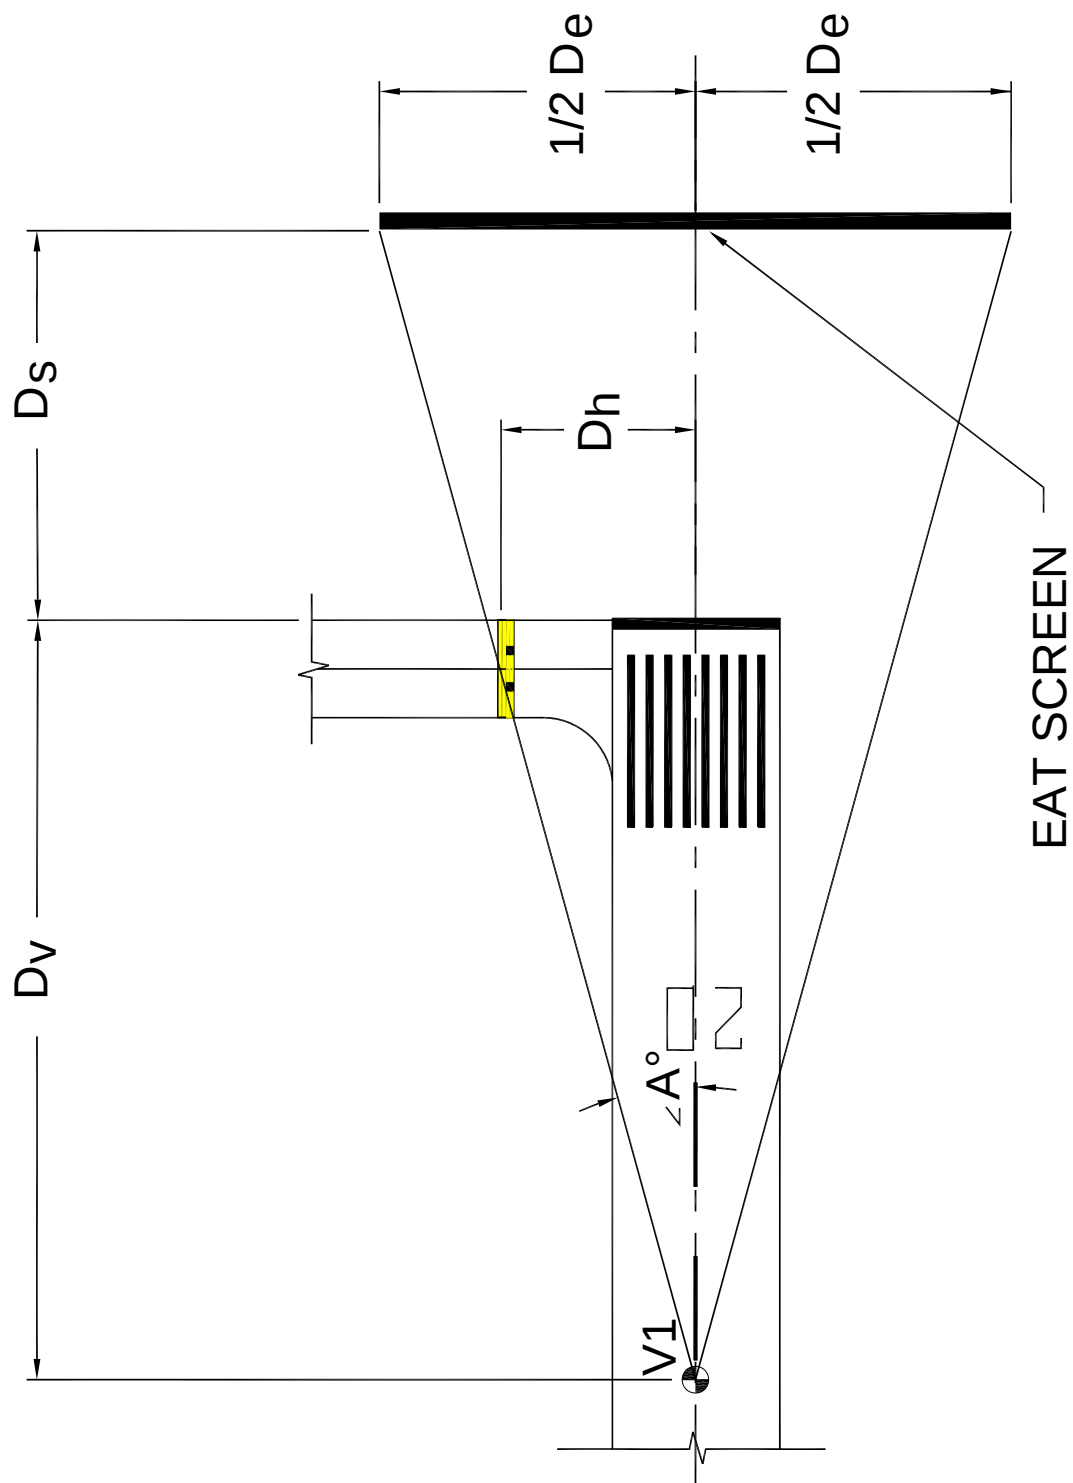


Figure 4-16. End-around taxiway visual screen width calculations

$$\angle A = \arctan \frac{D_h}{D_v}$$

$$(\tan \angle A (D_v + D_s)) = \frac{1}{2} D_e$$

Where: D_v = Distance from Average V1 location (defined in Federal Aviation Regulation 1.2 as takeoff decision speed) for Design Group aircraft to Departure Runway End.

D_s = Distance from Departure Runway End to the EAT Visual Screen Location

D_h = Distance from the Departure Runway End Centerline to the Centerline of Taxiway at Hold Position Marking

D_e = Total Width of EAT Visual Screen

Figure 4-17. Visual screen width calculation formula

Table 4-4. Visual screen height calculation formula (same elevation as runway)

EAT Visual Screen Height Calculation – EAT and Runway at Same Elevation

Design Group	Typical Design Group Engine Nacelle Height	Required Screen Surface Height	Required Height of Top Edge of Screen (Above Runway Centerline Elevation)
III	9 ft	10 ft	10 ft
IV	12 ft	13 ft	13 ft
V	18 ft	16 ft	18 ft
VI	18 ft	16 ft	18 ft

Table 4-5. Visual screen height calculation formula (EAT below DER elevation) for Design Group III

**Design Group III Aircraft
EAT Visual Screen Height Calculation –
EAT At or Below DER Elevation**

Elevation Difference (ft)	Required Screen Surface Height (ft)	Required Height of Top Edge of Screen (+ DER Centerline Elevation) (ft)
0	10	10
1	10	10
2	10	10
3	10	10
4	10	10
5	10	10
6	10	10
7	10	10
8	10	10
9	10	10
10	10	10
11	9	9
12	9	9
13	9	9
14	9	9
15	9	9
16	9	9
17	9	9
18	9	9
19	9	9
20	8	8
21	8	8
22	8	8
23	8	8
24	8	8
25	8	8
26	8	8
27	8	8
28	8	8
29+	0	0

Table 4-6. Visual screen height calculation formula (EAT below DER elevation) for Design Group IV

Design Group IV Aircraft EAT Visual Screen Height Calculation – EAT At or Below DER Elevation		
Elevation Difference (ft)	Required Screen Surface Height (ft)	Required Height of Top Edge of Screen (+/- DER Centerline Elevation) (ft)
0	13	13
1	13	13
2	13	13
3	13	13
4	13	13
5	13	13
6	13	13
7	13	13
8	13	13
9	13	13
10	13	13
11	13	13
12	13	13
13	13	13
14	12	12
15	12	12
16	12	12
17	11	11
18	11	11
19	11	11
20	10	10
21	10	10
22	10	10
23	9	9
24	9	9
25	9	9
26	8	8
27	8	8
28	8	8
29+	0	0


Table 4-7. Visual screen height calculation formula (EAT below DER elevation) for Design Groups V and VI

**Design Group V and VI Aircraft
EAT Visual Screen Height Calculation –
EAT At or Below DER Elevation**

Elevation Difference (ft)	Required Screen Surface Height (ft)	Required Height of Top Edge of Screen (+/- DER Centerline Elevation) (ft)
0	13	18
1	13	18
2	13	18
3	13	18
4	13	18
5	13	17
6	13	16
7	13	15
8	13	14
9	13	13
10	13	13
11	13	13
12	13	13
13	13	13
14	12	12
15	12	12
16	12	12
17	11	11
18	11	11
19	11	11
20	10	10
21	10	10
22	10	10
23	9	9
24	9	9
25	9	9
26	8	8
27	8	8
28	8	8
29+	0	0

Table 4-8. Visual screen vertical height calculation tables**Design Group III -VI Aircraft EAT Visual Screen Height Calculation – EAT Above DER Elevation**

Design Group	Required Height of Top Edge of Screen (Above Runway Centerline Elevation) (ft)	Add Elevation Difference – EAT above DER	Calculate: NEW Required Height of Top Edge of Screen (Above DER Centerline Elevation) (ft)
III	10	+ Elevation Difference	= New Required Height of Top Edge of Screen
IV	13		
V	18		
VI	18		

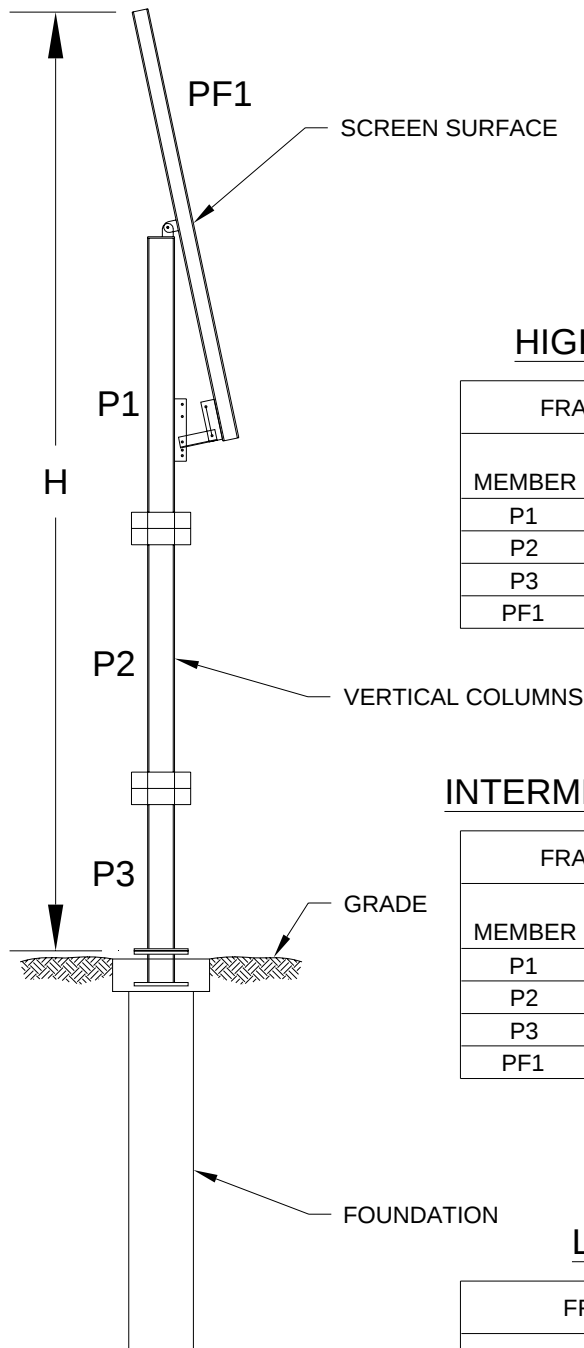

HIGH FRAME ELEV: $26' < H \leq 32'$

FRAMING SCHEDULE - VISUAL SCREEN $26' < H \leq 32'$			
MEMBER	WIND SPEED (MPH)		
	90	130	150
P1	HSS 8x6x5/16	HSS 8x8x1/2	HSS 12x8x3/8
P2	HSS 10x6x1/2	HSS 12x8x9/16	HSS 16x8x1/2
P3	HSS 12x6x1/2	HSS 16x8x1/2	HSS 20x8x1/2
PF1	HSS 6x4x3/16	HSS 6x4x5/16	HSS 6x4x5/16

INTERMEDIATE FRAME ELEV: $18' < H \leq 26'$

FRAMING SCHEDULE - VISUAL SCREEN $18' < H \leq 26'$			
MEMBER	WIND SPEED (MPH)		
	90	130	150
P1	HSS 8x6x5/16	HSS 8x8x1/2	HSS 12x8x3/8
P2	HSS 10x6x1/2	HSS 12x8x9/16	HSS 16x8x1/2
P3			
PF1	HSS 6x4x3/16	HSS 6x4x5/16	HSS 6x4x5/16

LOW FRAME ELEV: $H \leq 18'$

FRAMING SCHEDULE - VISUAL SCREEN $H \leq 18'$			
MEMBER	WIND SPEED (MPH)		
	90	130	150
P1	HSS 8x6x5/16	HSS 8x8x1/2	HSS 12x8x3/8
P2			
P3			
PF1	HSS 6x4x3/16	HSS 6x4x5/16	HSS 6x4x5/16

Figure 4-18. Examples of mounting screen to vertical column

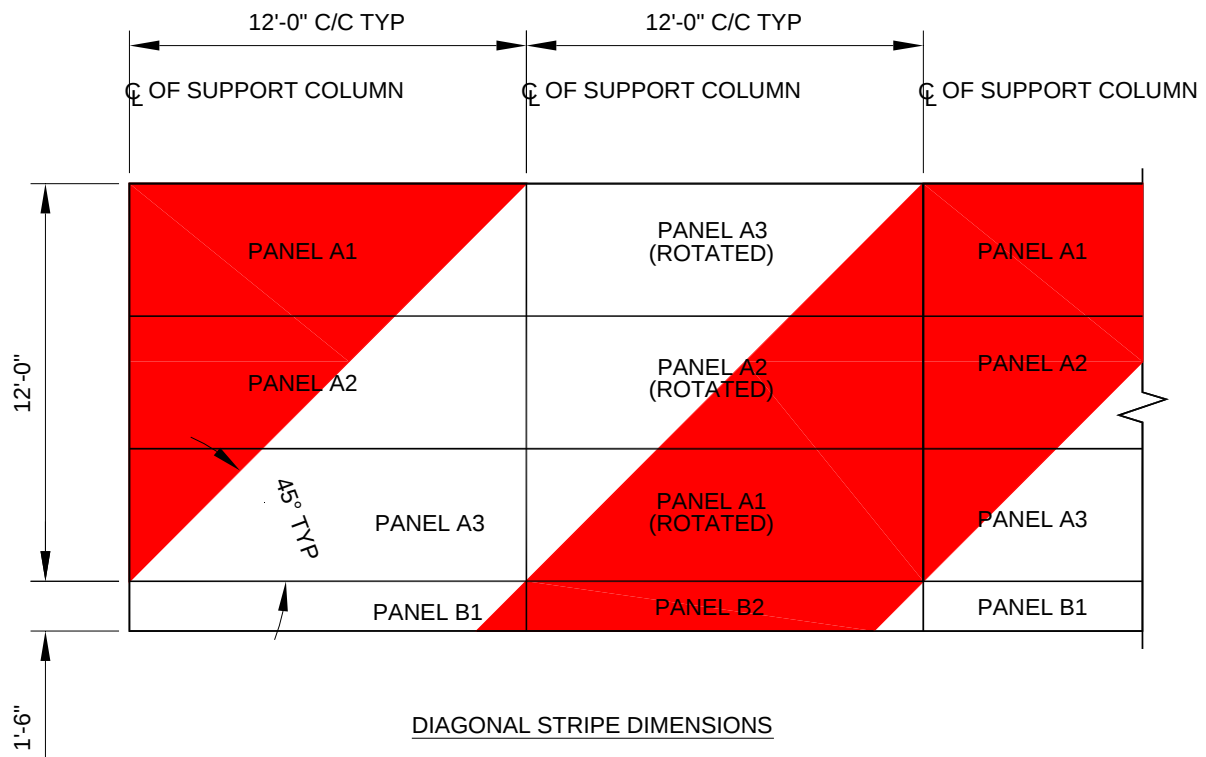
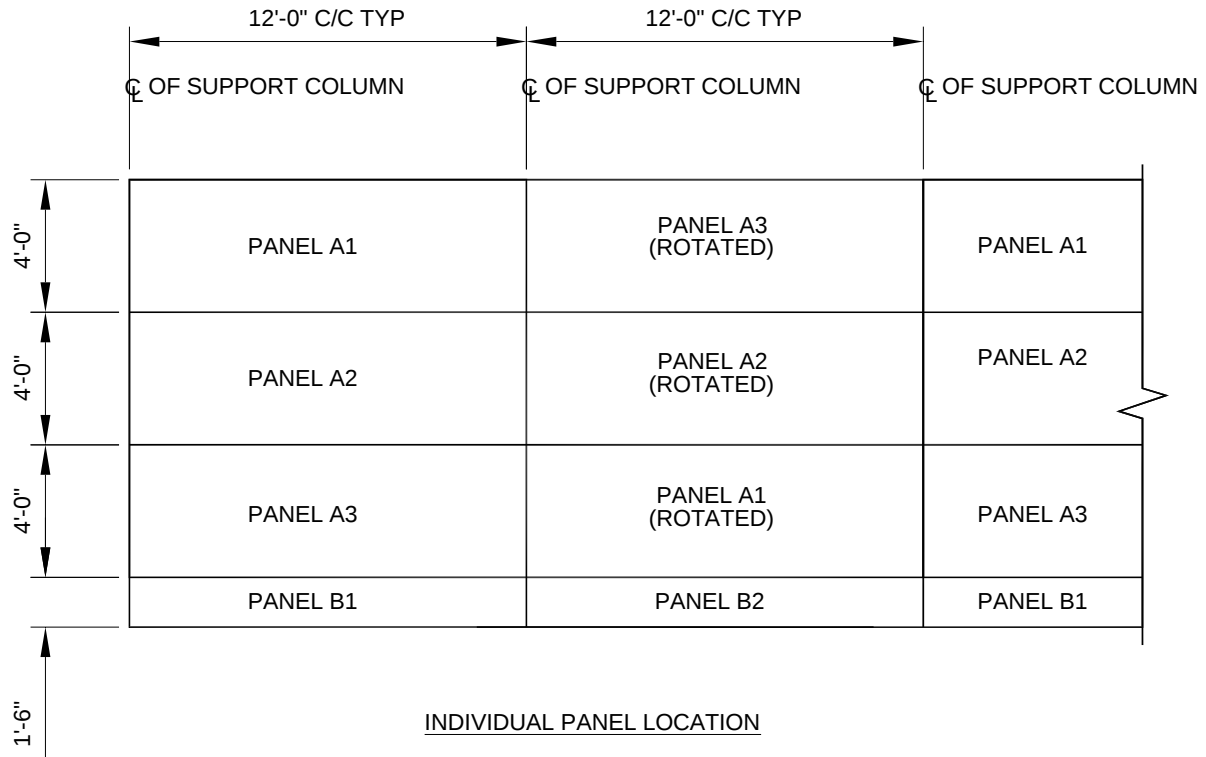


Figure 4-19. Examples of panel layout for 13-foot-high screen

Table 4-9. Visual screen panel wind-loading deflection allowance

WIND SPEED (3 SEC GUST)	DEFLECTION	STRENGTH
90 MPH	.074 PSI	.17 PSI
130 MPH	.074 PSI	.35 PSI
150 MPH	.074 PSI	.47 PSI

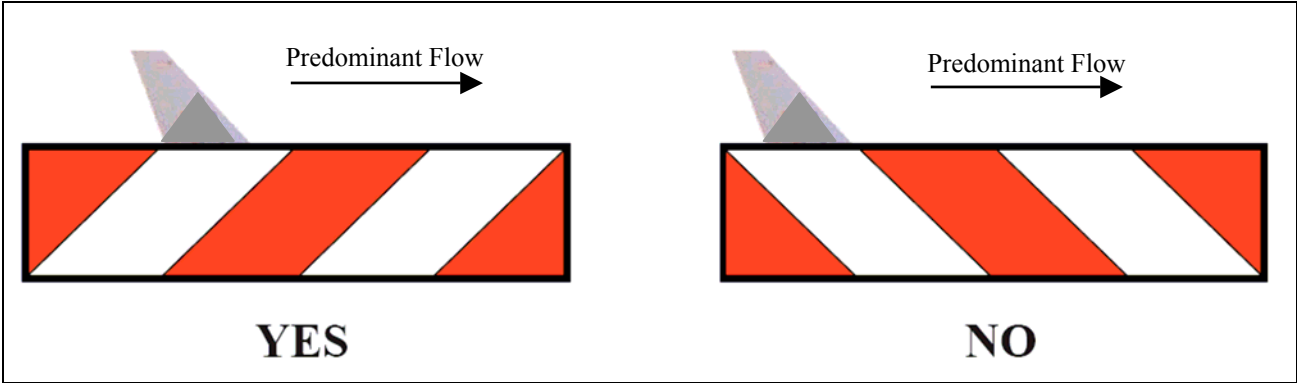


Figure 4-20. Diagonal stripe orientation

Table 4-10. CIE chromaticity coordinate limits

Color	<u>x</u>	<u>y</u>	<u>X</u>	<u>Y</u>	<u>x</u>	<u>y</u>	<u>x</u>	<u>y</u>	Min	Max	Munsell Paper
White	.303	.287	.368	.353	.340	.380	.274	.316	35.0		6.3GY 6.77/0.8
Red	.613	.297	.708	.292	.636	.364	.558	.352	8.0	12.0	8.2R 3.78/14.0

Table 4-11. Minimum reflection levels

Minimum Coefficient of Retroreflection Candelas/Foot Candle/Square Foot/Candelas/Lux/Square Meter			
Observation Angle <u>1</u>/ (degrees)	Entrance Angle <u>2</u>/ (degrees)	White	Red
0.2	-4	70	14.5
0.2	+30	30	6.0
0.5	-4	30	7.5
0.5	+30	15	3.0

(Reflectivity must conform to Federal Specification FP-85 Table 718-1 and ASTM D 4956.)

1/ Observation (Divergence) Angle—The angle between the illumination axis and the observation axis.

2/ Entrance (Incidence) Angle—The angle from the illumination axis to the retroreflector axis. The retroreflector axis is an axis perpendicular to the retroreflective surface.

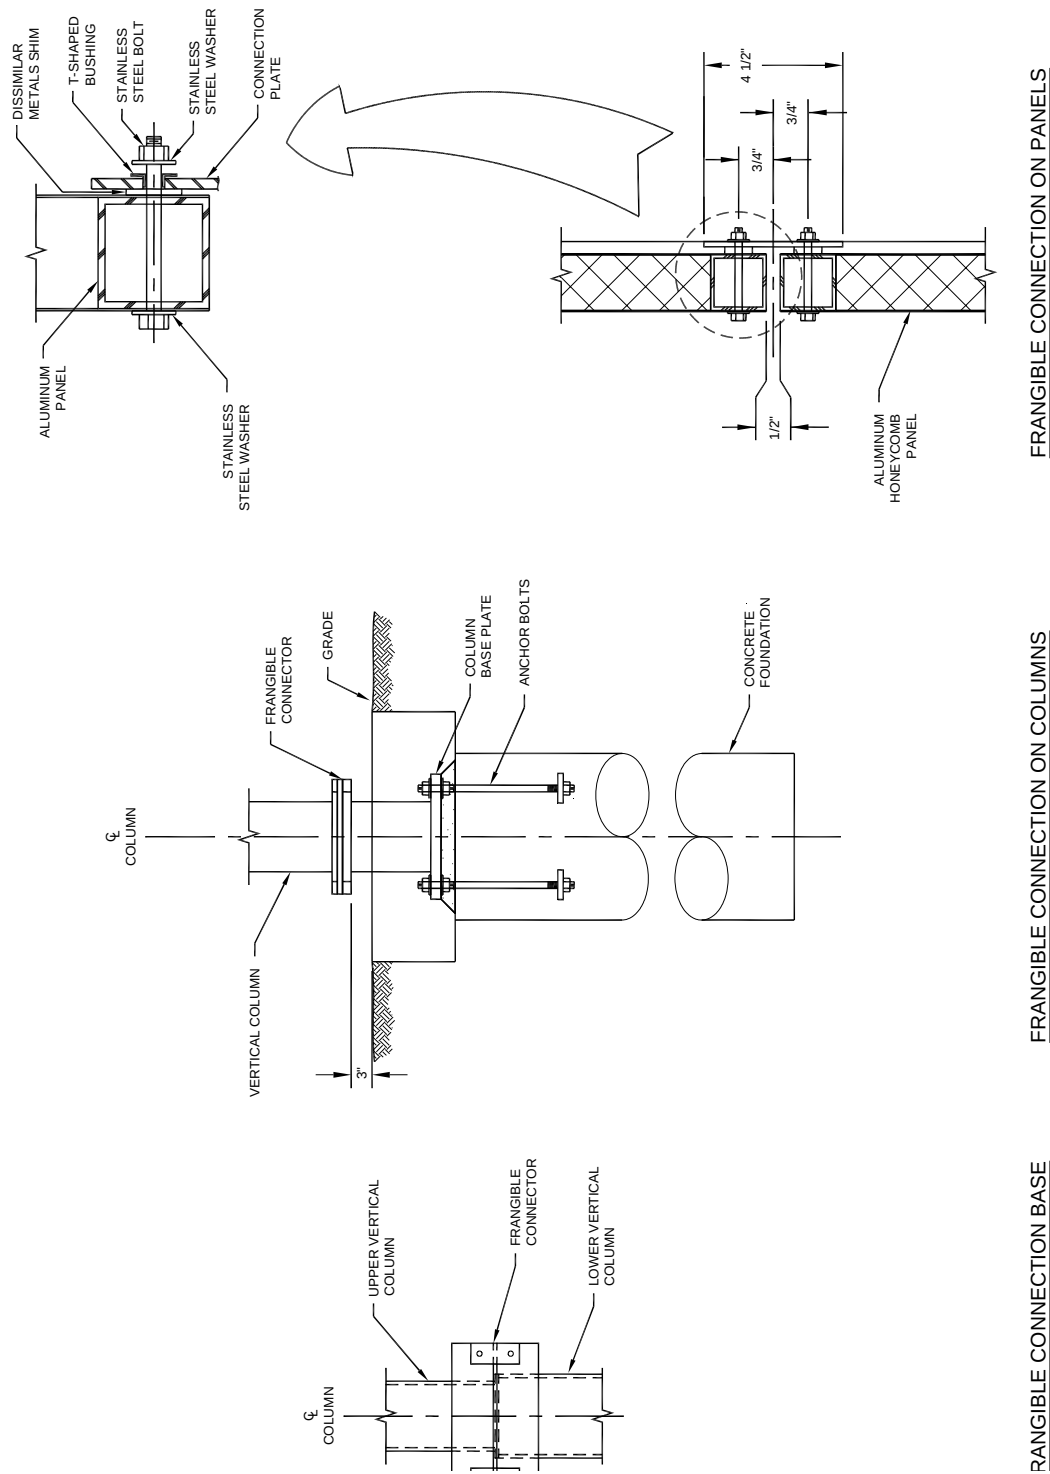


Figure 4-21. Examples of frangibility connections

Chapter 5. SURFACE GRADIENT AND LINE OF SIGHT

500. INTRODUCTION. This chapter presents gradient and line of sight standards. The standards apply to the design of airport surfaces required for the landing, takeoff, and ground movement of airplanes.

501. BACKGROUND. Surface gradients should allow design flexibility without adversely affecting operational safety. Line of sight standards impose additional restraints on surface gradients. It is important that the pilot and air traffic controller see the runway and taxiway surfaces to assure that the runways and taxiways are clear of aircraft, vehicles, wildlife, and other hazardous objects.

502. SURFACE GRADIENT STANDARDS.

a. Runway and Stopway.

(1) Aircraft Approach Categories A and B. The longitudinal and transverse gradient standards for runways and stopways are as follows and as illustrated in figures 5-1 and 5-2.

(a) The maximum longitudinal grade is ± 2 percent. It is desirable to keep longitudinal grades to a minimum.

(b) The maximum allowable grade change is ± 2 percent. Use longitudinal grade changes only when absolutely necessary.

(c) Vertical curves for longitudinal grade changes are parabolic. The length of the vertical curve is a minimum of 300 feet (90 m) for each 1 percent of change. No vertical curve is necessary when the grade change is less than 0.4 percent.

(d) The minimum allowable distance between the points of intersection of vertical curves is 250 feet (75 m) multiplied by the sum of the grade changes (in percent) associated with the two vertical curves.

(e) Figure 5-2 presents maximum and minimum transverse grades for runways and stopways. In all cases, keep transverse grades to a minimum, consistent with local drainage requirements.

(f) Provide a smooth transition between the intersecting pavement surfaces as well as adequate drainage of the intersection. Give precedence to the grades for the dominant runway

(e.g., higher speed, higher traffic volume, etc.) in a runway-runway situation and for the runway in a runway-taxiway situation.

(2) Aircraft Approach Categories C and D. The longitudinal and transverse gradient standards for runways and stopways are as follows and as illustrated in figures 5-3 and 5-4.

(a) The maximum longitudinal grade is ± 1.5 percent; however, longitudinal grades may not exceed ± 0.8 percent in the first and last quarter of the runway length. It is desirable to keep longitudinal grades to a minimum.


(b) The maximum allowable grade change is ± 1.5 percent. Use longitudinal grade changes only when absolutely necessary.

(c) Vertical curves for longitudinal grade changes are parabolic. The length of the vertical curve is a minimum of 1,000 feet (300 m) for each 1 percent of change.

(d) The minimum allowable distance between the points of intersection of vertical curves is 1,000 feet (300 m) multiplied by the sum of the grade changes (in percent) associated with the two vertical curves.

(e) Figure 5-4 presents maximum and minimum transverse grades for runways and stopways. In all cases, keep transverse grades to a minimum, consistent with local drainage requirements.

(f) Provide a smooth transition between intersecting pavement surfaces as well as adequate drainage of the intersection. Give precedence to the grades for the dominant runway (e.g., higher speed, higher traffic volume, etc.) in a runway-runway situation and for the runway in a runway-taxiway situation.

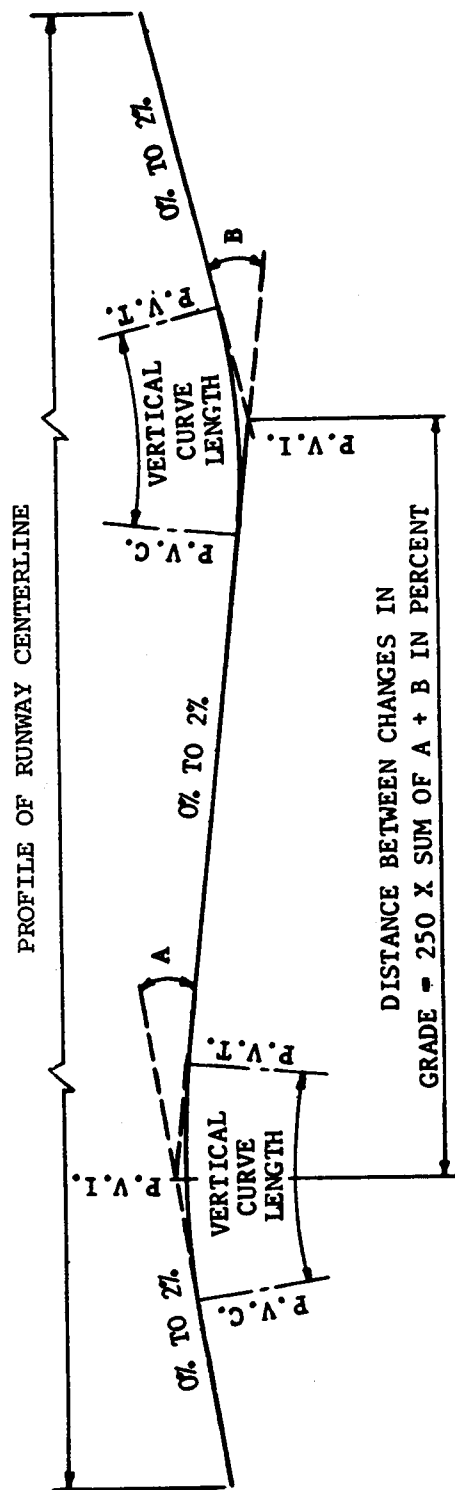

VERTICAL CURVES

LENGTH OF VERTICAL CURVES WILL NOT BE LESS THAN 300' FOR EACH 1% GRADE CHANGE, EXCEPT THAT NO VERTICAL CURVE WILL BE REQUIRED WHEN GRADE CHANGE IS LESS THAN 0.4%.

GRADE CHANGE

MAXIMUM GRADE CHANGE SUCH AS (A) OR (B) SHOULD NOT EXCEED 2%.

Figure 5-1. Longitudinal grade limitations for aircraft approach categories A & B


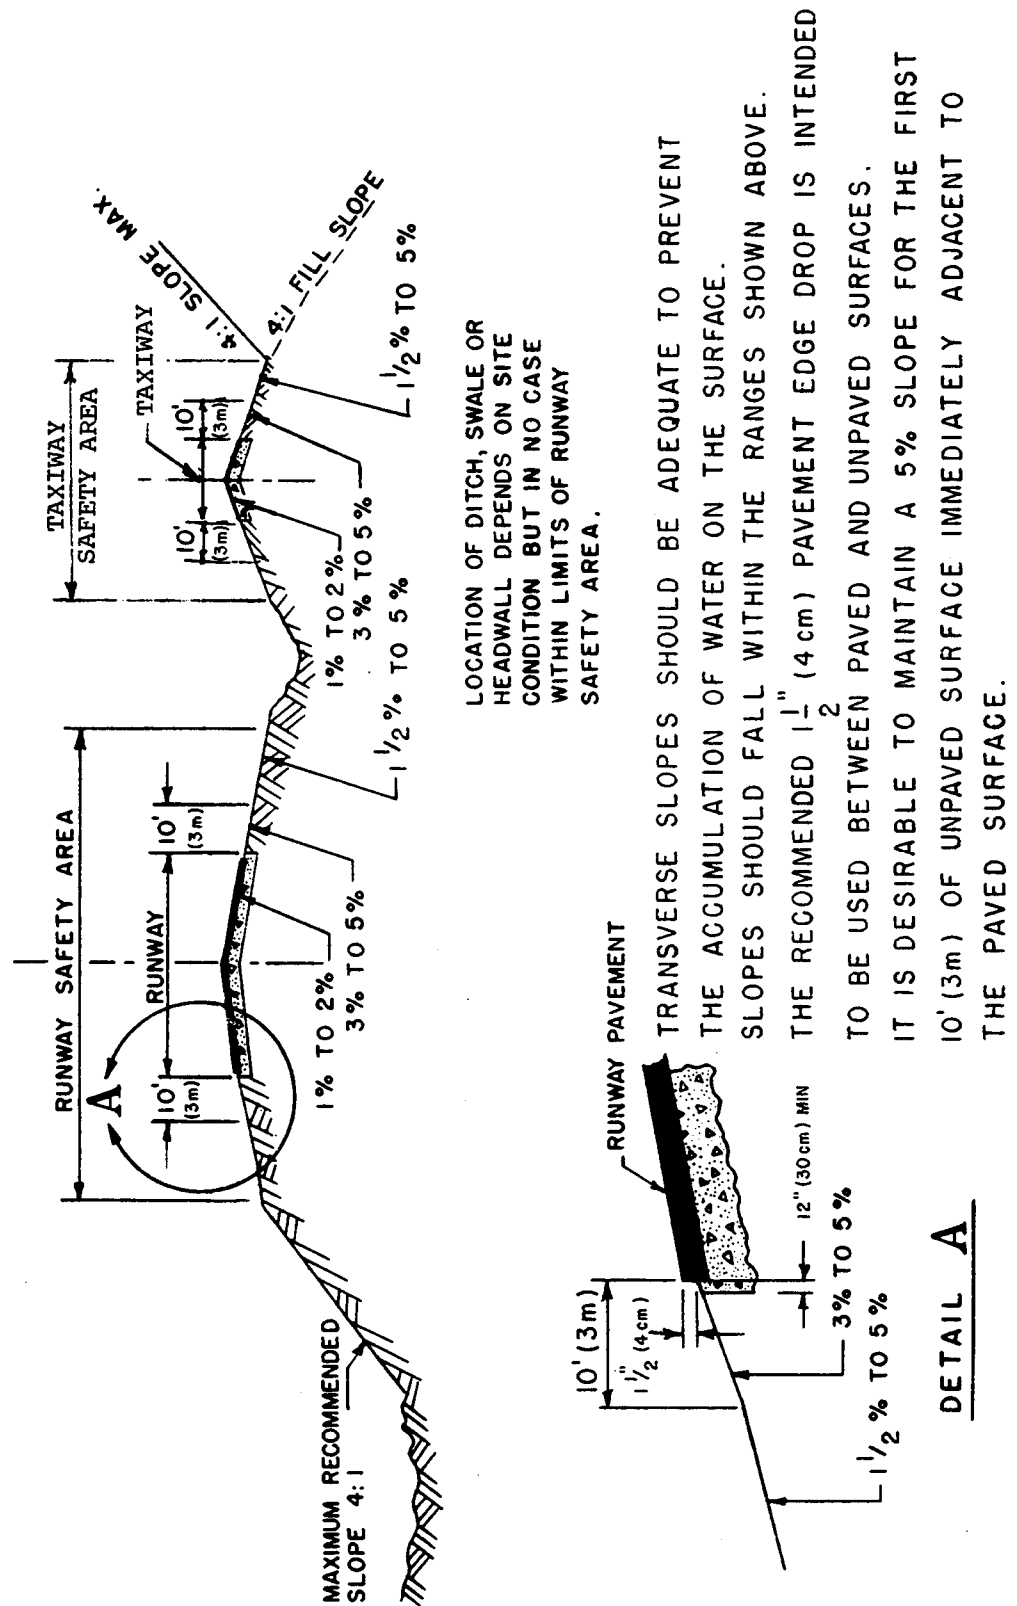



Figure 5-2. Transverse grade limitations for aircraft approach categories A & B

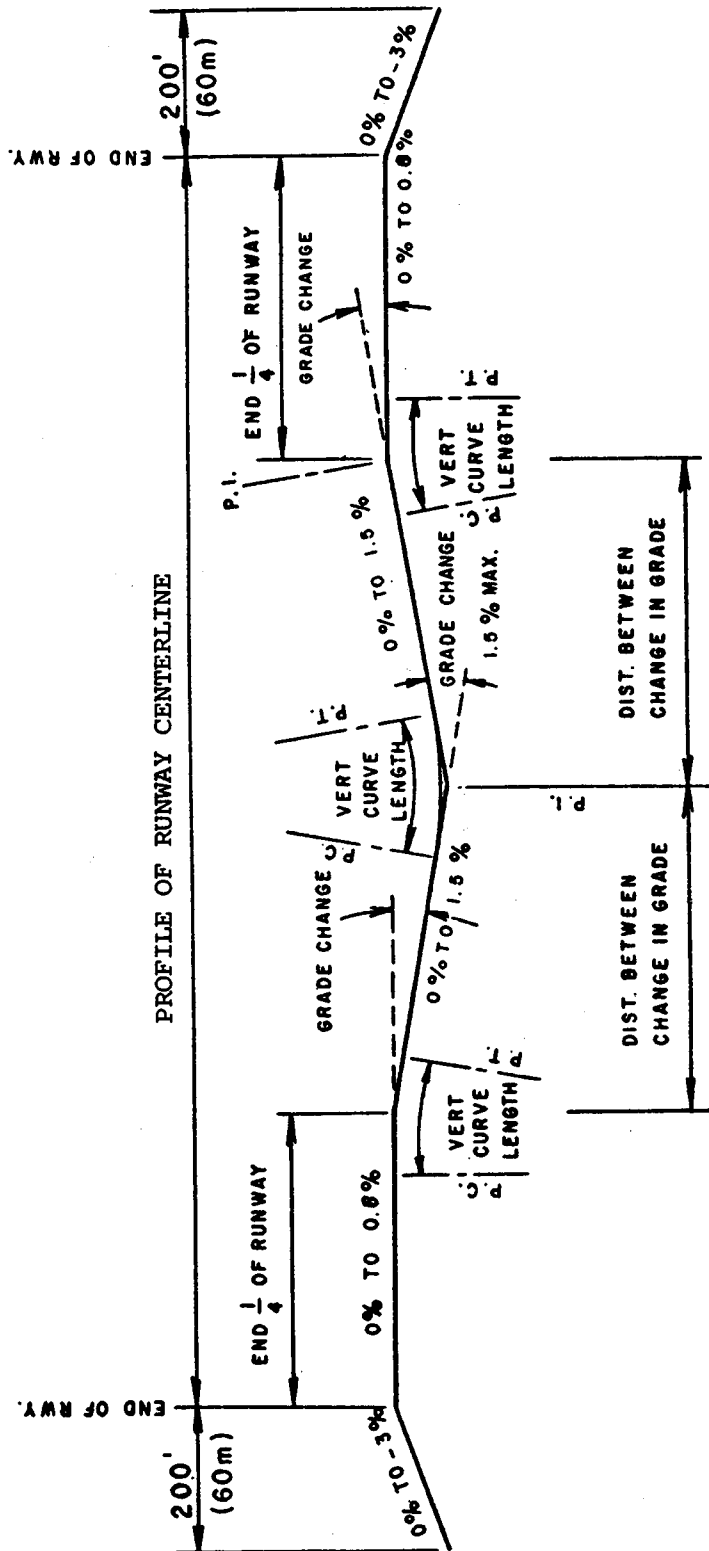

MINIMUM DISTANCE BETWEEN CHANGE IN GRADE = 1000' (300m) x SUM OF GRADE CHANGES (IN PERCENT).

MINIMUM LENGTH OF VERTICAL CURVES = 1000' (300m) x GRADE CHANGE (IN PERCENT)

Figure 5-3. Longitudinal grade limitations for aircraft approach categories C & D

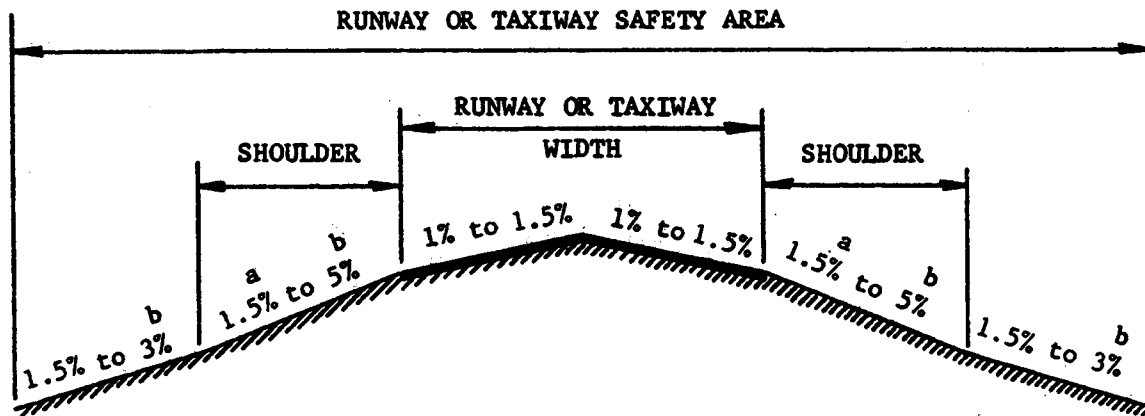

- a. 3% MINIMUM REQUIRED FOR TURF
- b. A slope of 5% is recommended for a 10-foot (3 m) width adjacent to the pavement edges to promote drainage.

GENERAL NOTES:

1. A 1.5 inch (3.8 cm) drop from paved to unpaved surfaces is recommended.
2. Drainage ditches may not be located within the safety area.

Figure 5-4. Transverse grade limitations for aircraft approach categories C & D

b. **Runway Safety Area.** The longitudinal and transverse gradient standards for runway safety areas are as follows and are illustrated in figures 5-1 through 5-5.

(1) Longitudinal grades, longitudinal grade changes, vertical curves, and distance between changes in grades for that part of the runway safety area between the runway ends are the same as the comparable standards for the runway and stopway. Exceptions are allowed when necessary because of taxiways or other runways within the area. In such cases, modify the longitudinal grades of the runway safety area by the use of smooth curves. For the first 200 feet (60 m) of the runway safety area beyond the runway ends, the longitudinal grade is between 0 and 3 percent, with any slope being downward from the ends. For the remainder of the safety area (figure 5-5), the maximum longitudinal grade is such that no part of the runway safety area penetrates the approach surface or clearway plane. The maximum allowable negative grade is 5 percent. Limitations on longitudinal grade changes are plus or minus 2 percent per 100 feet (30 m). Use parabolic vertical curves where practical.

(2) Figure 5-2 and 5-4 show the maximum and minimum transverse grades for paved shoulders and for the runway safety area along the runway up to 200 feet (60 m) beyond the runway end. In all cases, keep transverse grades to a minimum, consistent with local drainage requirements. Figure 5-5 illustrates the criteria for the transverse grade beginning 200 feet (60 m) beyond the runway end.

(3) Elevation of the concrete bases for NAVAIDs located in the runway safety area should not be higher than a maximum of 3 inches (7.6 cm) above the finished grade. Other grading requirements for NAVAIDs located in the runway safety area are, in most cases, more stringent than those stated above. See chapter 6.

c. **Runway Blast Pad.** For blast pads, follow the same longitudinal and transverse grades as the respective grades of the associated safety area.

d. **Taxiways and Taxiway Safety Areas.** Figures 5-2 and 5-4 illustrate the transverse gradient standards. The longitudinal and transverse gradient standards for taxiways and taxiway safety areas are as follows:

(1) The maximum longitudinal grade is 2 percent for Aircraft Approach Categories A and B and 1.5 percent for Aircraft Approach Categories C and D. Minimum longitudinal grades are desirable.

(2) Avoid changes in longitudinal grades unless no other reasonable alternative is available. The maximum longitudinal grade change is 3 percent.

(3) When longitudinal grade changes are necessary, the vertical curves are parabolic. The minimum length of the vertical curve is 100 feet (30 m) for each 1 percent of change.

(4) The minimum distance between points of intersection of vertical curves is 100 feet (30 m) multiplied by the sum of the grade changes (in percent) associated with the two vertical curves.

(5) At any point on a taxiway centerline, the allowable difference in elevation between the taxiway and the corresponding point on the associated parallel runway, taxiway, or apron edge is 1.5 percent of the shortest distance between the points. For the purposes of this item, a parallel taxiway is any taxiway functioning as a parallel taxiway whether it is exactly parallel or not. This will allow the subsequent placement of a stub taxiway at any point to satisfy capacity requirements.

(6) Figures 5-2 and 5-4 show the maximum and minimum transverse grades for taxiways and taxiway safety areas. In all cases, the transverse grades should be at a minimum, consistent with local drainage requirements.

(7) Elevation of the concrete bases for NAVAIDs located in the taxiway safety area should not be higher than a maximum of 3 inches (7.6 cm) above the finished grade. Other grading requirements for NAVAIDs located in the taxiway safety area are, in most cases, more stringent than those stated above. See chapter 6.

e. **Aprons.** To ease aircraft towing and taxiing, apron grades should be at a minimum, consistent with local drainage requirements. The maximum allowable grade in any direction is 2 percent for Aircraft Approach Categories A and B and 1 percent for Aircraft Approach Categories C and D. Where possible, design apron grades to direct drainage away from the any building, especially in fueling areas.

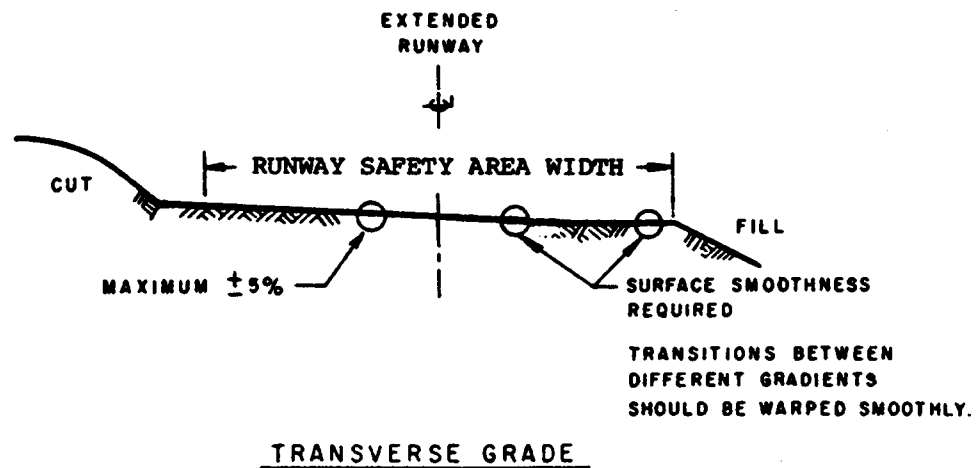
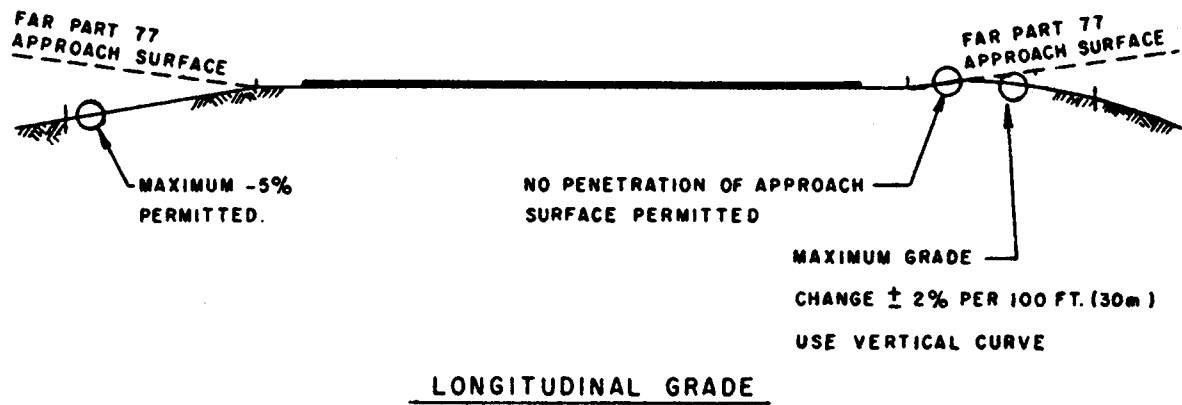


Figure 5-5. Runway safety area grade limitations beyond 200 feet (60 m) from the runway end

503. LINE OF SIGHT STANDARDS. The following standards provide the minimum line of sight:

a. Along Individual Runways. An acceptable runway profile permits any two points five feet (1.5 m) above the runway centerline to be mutually visible for the entire runway length. However, if the runway has a full length parallel taxiway, the runway profile may be such that an unobstructed line of sight will exist from any point five feet (1.5 m) above the runway centerline to any other point five feet (1.5 m) above the runway centerline for one-half the runway length.

b. Between Intersecting Runways. A clear line of site between the ends of intersecting runways is recommended. Terrain needs to be graded and permanent objects need to be designed or sited so that there will be an unobstructed line of sight from any point five feet (1.5 m) above one runway centerline to any point five feet (1.5 m) above an intersecting centerline, within the runway visibility zone. The runway visibility zone is an area formed by imaginary lines connecting the two runways' visibility points, as shown in figure 5-6. Determine the location of each runway's visibility point as follows:

(1) If the distance from the intersection of two runway centerlines to a runway end is 750 feet (250 m) or less, the visibility point is on the centerline of the runway end.

(2) If the distance from the intersection of two runway centerlines to a runway end is greater than 750 feet (250 m) but less than 1,500 feet (500 m), the visibility point is on the centerline, 750 feet (250 m) from the intersection of the runway centerlines.

(3) If the distance from the intersection of two runway centerlines to a runway end is equal to or greater than 1,500 feet (500 m), the visibility point is on the centerline equidistant from the runway end and the intersection of the centerlines.

c. Taxiways. There are no line of sight requirements for taxiways. However, the sight distance along a runway from an intersecting taxiway needs to be sufficient to allow a taxiing aircraft to enter safely or cross the runway.

504. to 599. RESERVED.

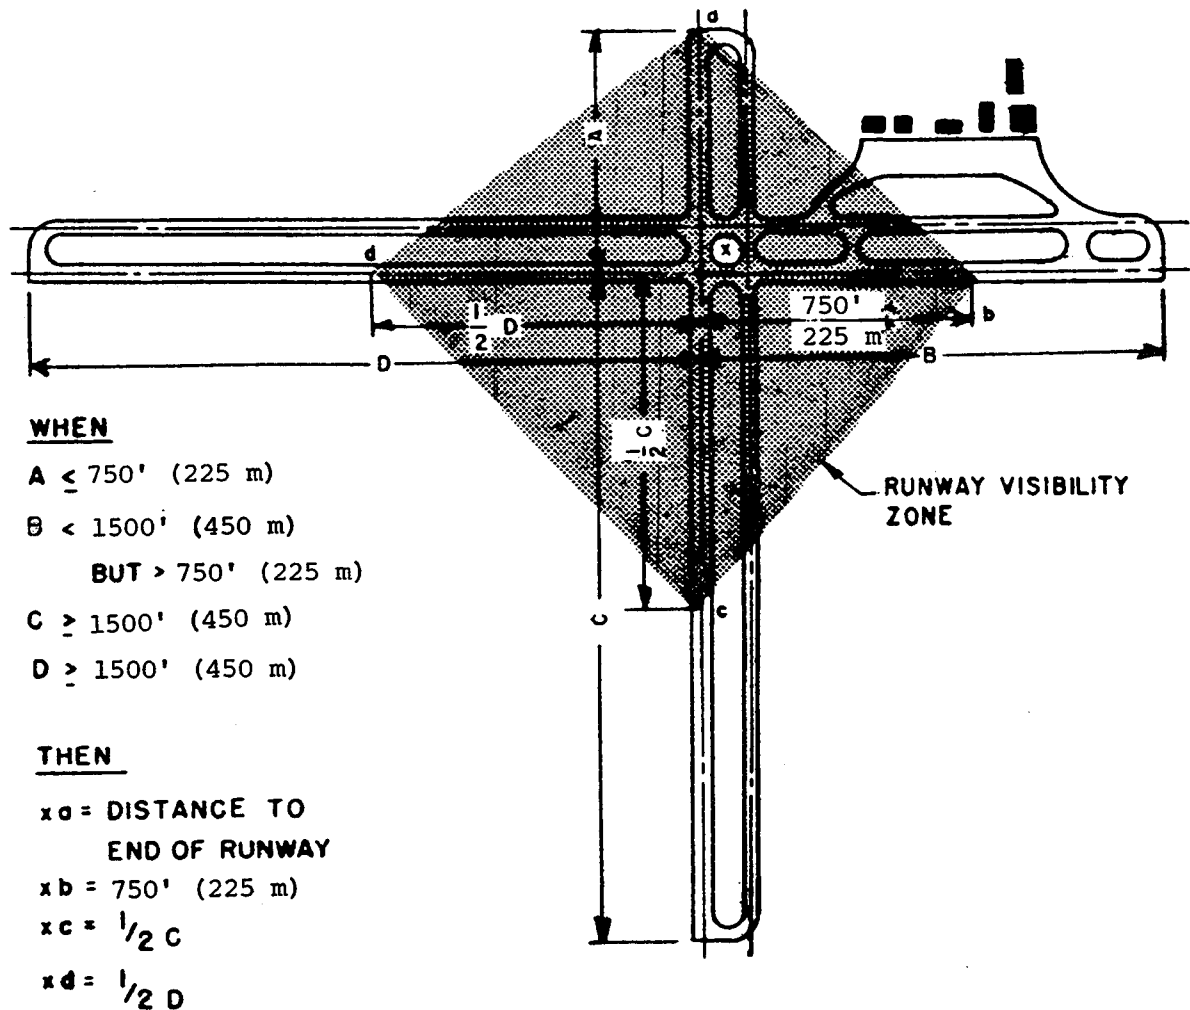


Figure 5-6. Runway visibility zone

Chapter 6. SITE REQUIREMENTS FOR NAVAID AND ATC FACILITIES

600. GENERAL. This chapter presents siting and clearing requirements for the navigational aids (NAVAID) and air traffic control (ATC) facilities which influence airport planning. The information is not readily available in other FAA Advisory Circulars. It is provided to minimize conflicts between NAVAIDs and ATC facilities and other airport developments. Figure 6-2 depicts the usual location of these NAVAIDs and ATC facilities on a typical airport.

CAUTION: The guidance herein is not in sufficient detail to be used to design or install a NAVAID or ATC facility.

a. Limitations. Siting and clearing criteria is representative of the ideal situation. It is advisable to contact the appropriate FAA regional office before planning any NAVAID or ATC facility.

b. Federal NAVAID and ATC Programs. Information on eligibility for FAA-installed NAVAIDs and ATC facilities or other FAA assistance programs can be obtained from an FAA regional office. FAA policy governing NAVAID and ATC facility relocations is found in AC 6030.1, FAA Policy on Facility Relocations Occasioned by Airport Improvements or Changes.

c. Non-Federal NAVAIDs. FAA policy concerning the establishment of instrument procedures using non-Federal NAVAIDs is found in FAR Part 171, Non-Federal Navigation Facilities.

d. Jet Blast/Exhaust. NAVAIDs, monitoring devices, and equipment shelters should be located at least 300 feet (90 m) behind the source of jet blast to minimize the accumulation of exhaust deposits on antennas.

601. MICROWAVE LANDING SYSTEM. The microwave landing system (MLS) provides the pilot of a properly equipped aircraft with electronic guidance to control the aircraft's alignment and descent until the runway environment is in sight. MLS is also used to define a missed approach course or a departure course. Figure 6-2 illustrates MLS component locations.

a. General. MLS operates on the direct signal from the transmitting antenna on the ground to the receiving antenna on the aircraft.

(1) MLS is not particularly susceptible to signal interference as a result of buildings, trees, power lines, metal fences, and other large objects. However, when these objects are in the coverage area, they may cause multipath (signal reflection) or shadowing (signal blockage) problems.

(2) MLS antenna systems do not use the ground to form the desired signal. Grading for MLS installations is usually limited to that needed for the antenna and monitors, a service road, and a vehicle parking area.

b. Azimuth Antenna. Alignment guidance is provided by the azimuth (AZ) antenna. The signal coverage area extends 40 degrees either side of the intended course (runway centerline).

(1) The AZ antenna is located on the extended runway centerline at a distance of 1,000 to 1,500 feet (300 to 450 m) beyond the stop end of the runway. AZ antennas are 8 feet (2.4 m) in height and are mounted on low impact resistant supports. AZ antennas should not violate any airport design or approach surface. Figure 6-1 illustrates AZ antenna siting.

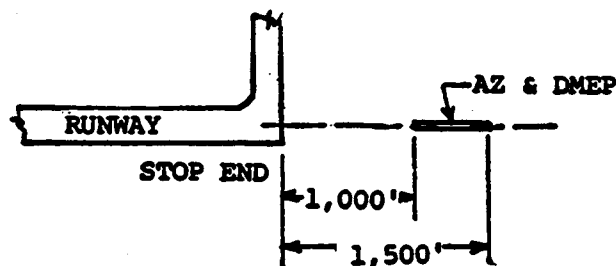


Figure 6-1. AZ antenna siting

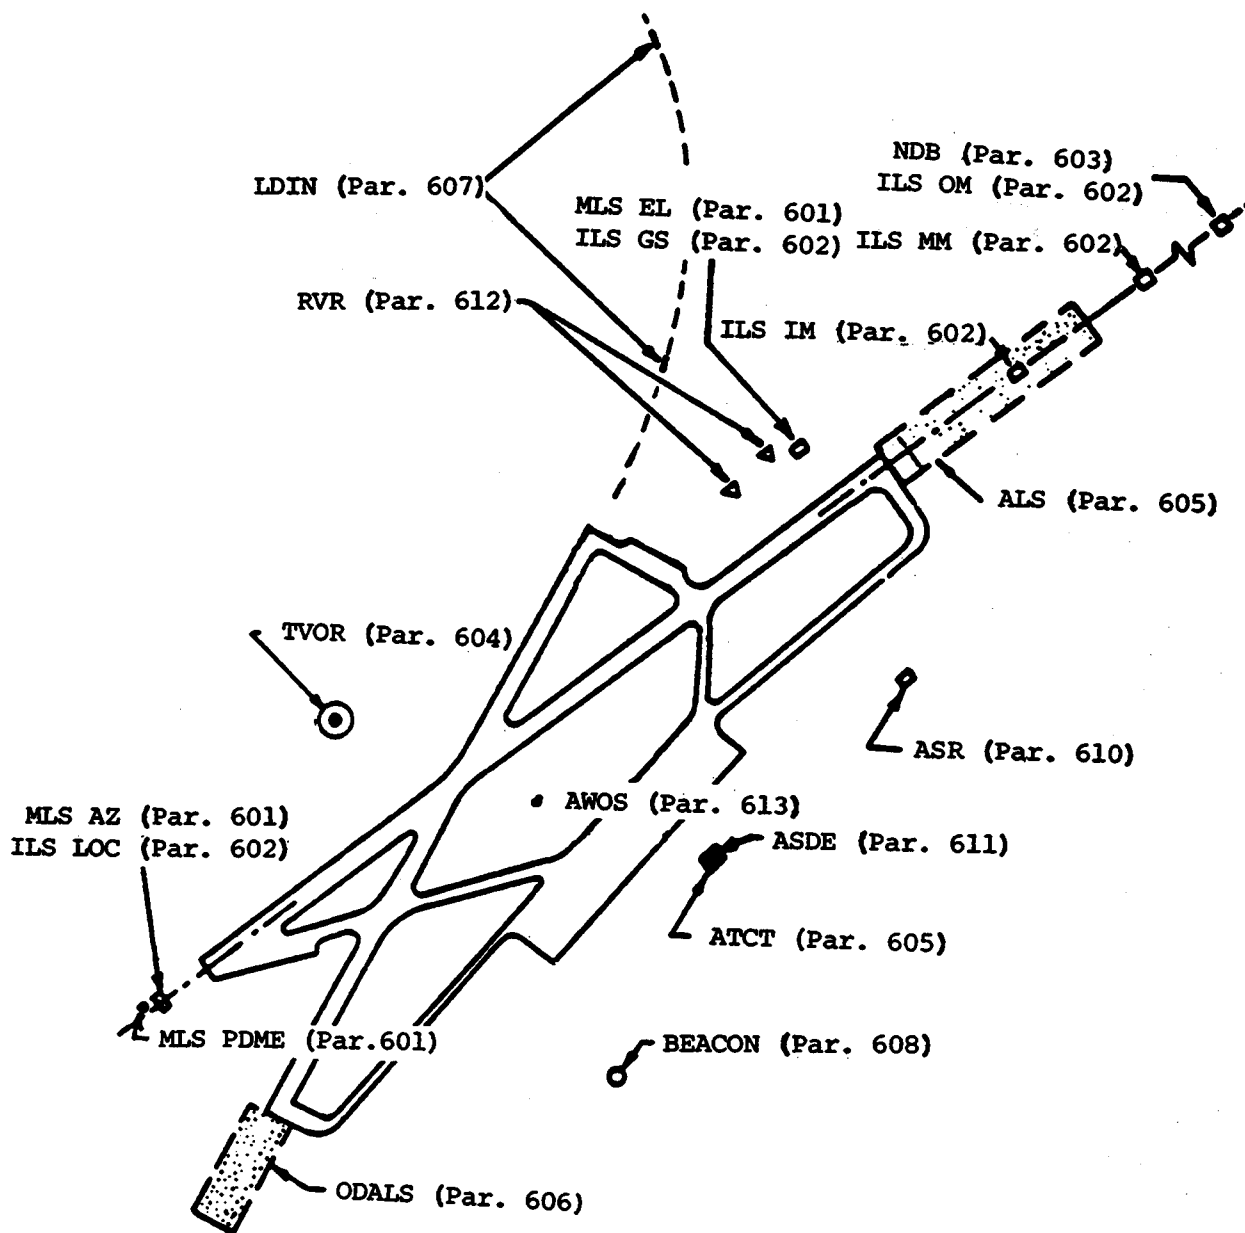


Figure 6-2. Typical NAVAID placement

(2) AZ antennas require the area between the antenna and the stop end of the runway be cleared of objects that could reflect or block the signal. Figure 6-3 illustrates this area.

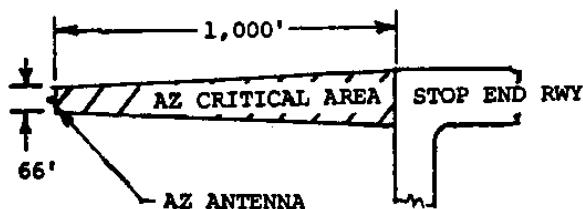


Figure 6-3. AZ antenna critical area

a. **Elevation Antenna.** Descent guidance is provided by the elevation (EL) antenna. The signal area extends from the horizon to 30 degrees above the horizon. The EL antenna height depends upon the beam width but would not exceed 18.6 feet (5.7 m).

(1) The EL antenna site is at least 400 feet (120 m) from the runway centerline and 800 to 1,000 feet (240 to 300 m) from the runway threshold and should provide a threshold crossing height of 50 feet (15 m). Figure 6-4 illustrates EL antenna siting.

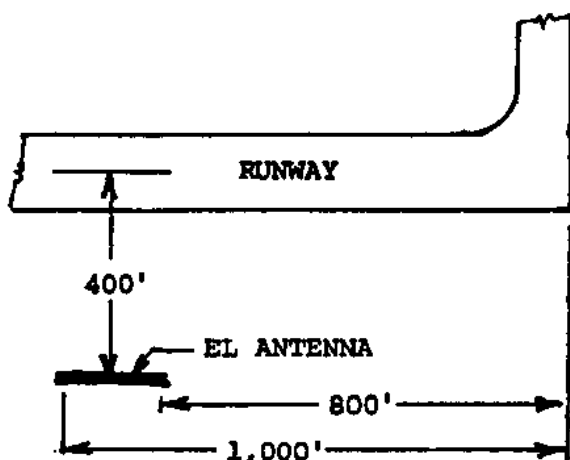


Figure 6-4. EL antenna siting

(2) EL antenna critical areas begin at the runway near edge and extend to 33 feet (10 m) outboard of the antenna site. They are 1,000 feet (300 m) in length, measured from the antenna toward the approaching aircraft. These areas should be clear of objects that could reflect or block the signal. Figure 6-5 illustrates this area.

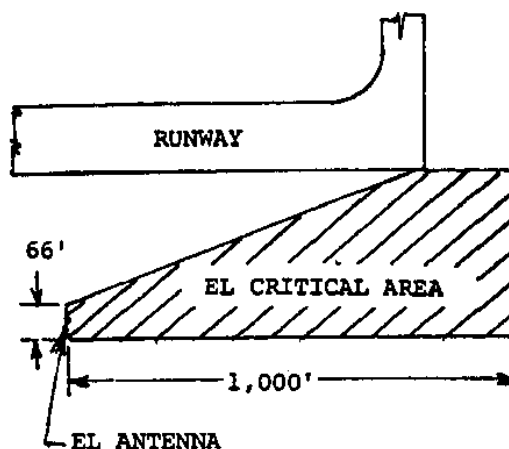


Figure 6-5. EL antenna critical area

b. **Distance Measuring Equipment.** Range information is provided by distance measuring equipment (DME). DME antennas are 22 feet (6.7 m) in height and normally are collocated with the AZ antenna. To preclude penetration of an approach surface, the collocated AZ/DME antennas should be placed 1,300 feet (390 m) from the runway end.

602. INSTRUMENT LANDING SYSTEM. The instrument landing system (ILS) provides pilots with electronic guidance for aircraft alignment, descent gradient, and position until visual contact confirms the runway alignment and location. Figure 6-2 illustrated ILS component locations.

a. **General.** The ILS uses a line-of-sight signal from the localizer antenna and marker beacons and a reflected signal from the ground plane in front of the glide slope antenna.


(1) ILS antenna systems are susceptible to signal interference sources such as power lines, fences, metal buildings, etc.

(2) Since ILS uses the ground in front of the glide slope antenna to develop the signal, this area should be graded to remove surface irregularities.

(3) ILS equipment shelters are located near but are not a physical part of the antenna installation.

b. **Localizer Antenna.** The localizer (LOC) signal is used to establish and maintain the aircraft's horizontal position until visual contact confirms the runway alignment and location.

(1) The LOC antenna is usually sited on the extended runway centerline outside the runway safety area between 1,000 to 2,000 feet (300 to 600 m) beyond the stop end of the runway. Where it is not practicable to locate the antenna beyond the end of the RSA, consult with the FAA Terminal Procedures Specialist (TERPS) and consider offsetting the localizer to the side to keep it clear of the RSA and to minimize the potential hazard to aircraft (See paragraph 305). The localizer critical area is illustrated in Figure 6-6.

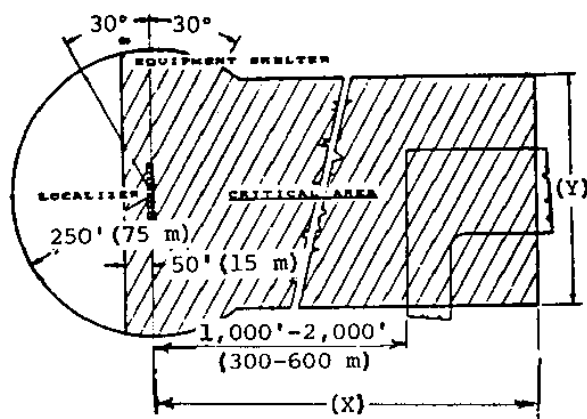

NOTE: The X and Y dimensions vary depending on the system used.

X varies from 2,000 feet (600 m) to 7,000 feet (2100 m).

Y varies from 400 feet (120 m) to 600 feet (180 m).

Figure 6-6. ILS LOC siting and critical area

(2) The critical area depicted in figure 6-6 surrounding the LOC antenna and extending toward and overlying the stop end of the runway should be clear of objects.


(3) The critical area should be smoothly graded. A constant +1 percent to -1.5 percent longitudinal grade is recommended. Transverse grades

should range from +1.0 percent to -3.0 percent, with smooth transitions between grade changes. Antenna supports shall be frangible and foundations should be flush with the ground.

(4) The LOC equipment shelter is placed at least 250 feet (75 m) to either side of the antenna array and within 30 degrees of the extended longitudinal axis of the antenna array.

c. **Glide Slope Antenna.** The glide slope (GS) signal is used to establish and maintain the aircraft's descent rate until visual contact confirms the runway alignment and location. A GS differentiates precision from nonprecision approaches.

(1) The GS antenna may be located on either side of the runway. The most reliable operation is obtained when the GS is located on the side of the runway offering the least possibility of signal reflections from buildings, power lines, vehicles, aircraft, etc. The glide slope critical area is illustrated in Figure 6-7.

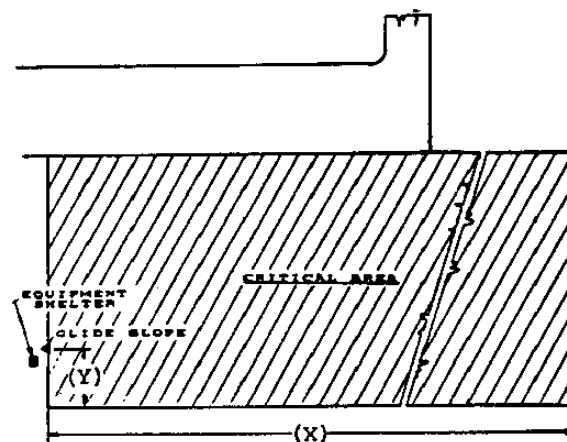

NOTE: The X and Y dimensions vary depending on the system used.

X varies from 800 feet (240 m) to 3,200 feet (960 m).

Y varies from 100 feet (30 m) to 200 feet (60 m).

Figure 6-7. GS siting and critical area

(2) Signal quality is dependent upon the type of antenna used and the extent of reasonably level ground immediately in front of the antenna.

(3) The GS equipment shelter is located 10 feet (3 m) behind the antenna and a minimum of 400 feet (120 m) from the runway centerline.

a. Marker Beacons. Marker beacons radiate cone or fan shaped signals vertically to activate aural and visual indicators in the cockpit marking specific points in the ILS approach.

(1) Marker beacons are located on the extended runway centerline at key points in the approach as noted below. Figure 6-2 illustrates the placement of marker beacons for an ILS. Figure 6-8 illustrates typical marker beacon installation.

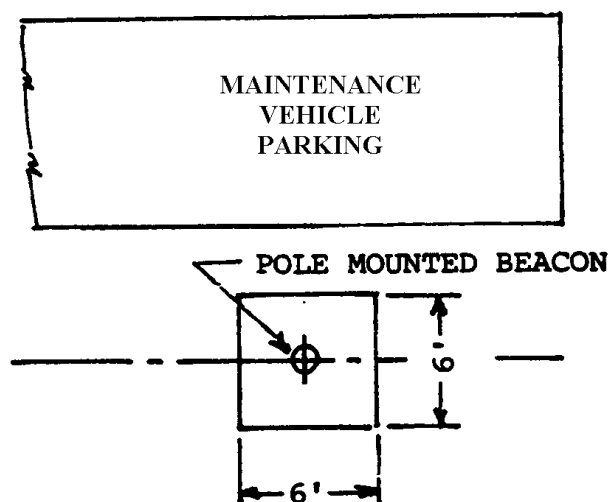


Figure 6-8. Marker beacon site

(a) The outer marker (OM) beacon is located 4 to 7 nautical miles (7.4 to 13 km) from the ILS runway threshold to mark the point at which glide slope altitude is verified or at which descent without glide slope is initiated.

(b) A middle marker (MM) beacon is located 2,000 to 6,000 feet (600 to 1 800 m) from the ILS runway threshold. It marks (approximately) the decision point of a CAT I ILS approach.

(c) An inner marker (IM) beacon may be located to mark the decision point of a CAT II or CAT III ILS approach. Inner marker beacons are not used for CAT I ILS's.

(d) A "back course" marker beacon (comparable to an outer marker beacon) may be located to the rear of a bidirectional localizer facility to permit development of a nonprecision approach.

(2) Off airport marker beacons are located in a fenced 6-foot by 6-foot (2 m by 2 m) tract situated on the extended runway centerline. Interference sources such as metal buildings, power lines, trees, etc., shall be avoided within 100 feet (30 m) of the antenna. A vehicle access and parking area is required at the site.

(3) Marker beacon sites should be smooth, level, and well drained.

603. NONDIRECTIONAL BEACON. The non-directional beacon (NDB) radiates a signal which provides directional guidance to and from the transmitting antenna. An NDB is normally mounted on a 35 foot (11 m) pole. Figure 6-9 illustrates an NDB antenna.

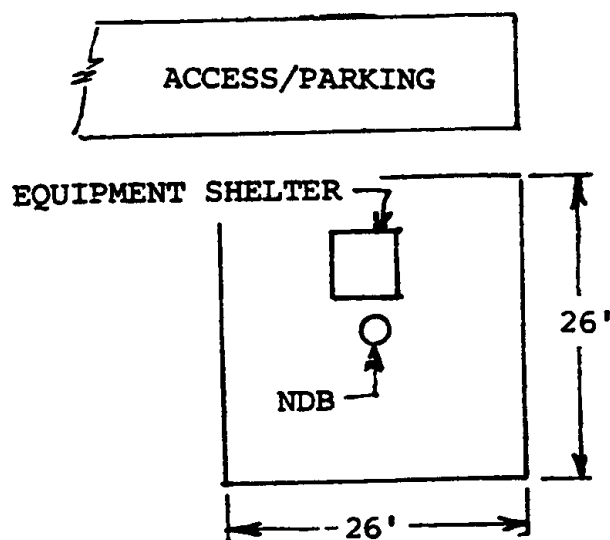


Figure 6-9. NDB site

a. Location. A NDB may be located on or adjacent to the airport. Metal buildings, power lines, or metal fences should be kept 100 feet (30 m) from a NDB antenna.

b. Grading. The NDB site should be smooth, level, and well drained.

c. Equipment Shelter. Electronic equipment is housed in a small collocated shelter.

604. VERY HIGH FREQUENCY OMNIRANGE.

The standard very high frequency omnirange (VOR) located on an airport is known as a TVOR. TVORs radiate azimuth information for nonprecision instrument approach procedures. Figure 6-10 illustrates a typical TVOR installation.

a. Location. If the airport has intersecting runways, TVORs should be located adjacent to the intersection to provide approach guidance to both. TVORs should be located at least 500 feet (150 m) from the centerline of any runway and 250 feet (75 m) from the centerline of any taxiway.

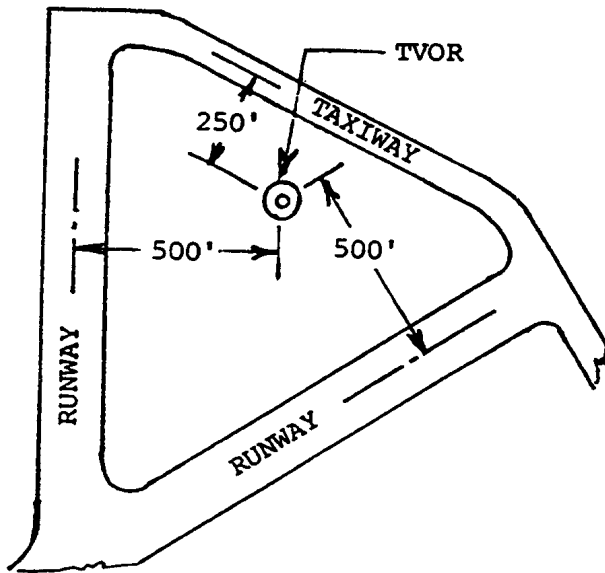


Figure 6-10. A TVOR installation

b. Clearances. TVOR signals are susceptible to distortion caused by reflections. Structures should be at least 1,000 feet (300 m) from the antenna. Metal structures beyond 1,000 feet (300 m) should not penetrate a 1.2 degree angle measured from the antenna base. Nonmetal structures beyond 1,000 feet (300 m) should not penetrate a 2.5 degree angle measured from the antenna base. Metal fences should be at least 500 feet (150 m) from the antenna and overhead power and telephone lines at least 1,200 feet (360 m) from the antenna. While trees should be at least 1,000 feet (300 m) from the antenna, a single tree may be tolerated if it is at least 500 feet (150 m) from the antenna. Beyond a 1,000 feet trees should not penetrate a 2.0 degree angle measured from the antenna.

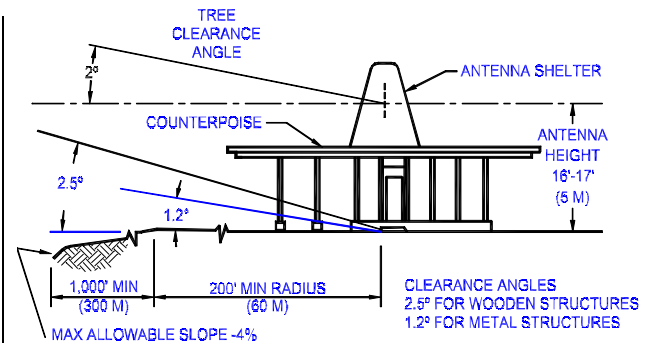


Figure 6-11, TVOR Clearances

c. Grading. TVOR sites should be level within 1000 feet (300 m) of the antenna. However, a downward slope of as much as 4 percent is permitted between 200 feet (60 m) and 1,000 feet (300 m) of the antenna. Surfaces should be cleared and smooth with no major irregularities.

d. Equipment Shelter. All necessary electronic equipment is located within the structure.

605. APPROACH LIGHTING SYSTEMS. All approach lighting systems (ALS) are configurations of lights positioned symmetrically along the extended runway centerline. They begin at the runway threshold and extend towards the approach. An ALS augments the electronic navigational aids. Guidance on ALS systems is found in AC 150/5340-14.

a. ALS Configurations. The FAA recognizes four ALS configurations to meet visual requirements for precision and nonprecision approaches.

(1) An ALSF-2 is a 2,400 foot (720 m) high intensity ALS with sequenced flashing lights. It is required for CAT II and CAT III precision approaches.

(2) A MALSR is a 2,400 foot (720 m) medium intensity ALS with runway alignment indicator lights (RAILs). It is an economy ALS system approved for CAT I precision approaches. The MALS portion of the system is 1,400 feet (420 m) in length. The RAIL portion extends outward an additional 1,000 feet (300 m).

(3) A MALS is a 1,400 foot (420 m) medium intensity ALS. It enhances nonprecision instrument and night visual approaches.

(4) A MALSF is a medium intensity ALS identical to the MALS above except that sequenced flashing lights are added to the outer three light bars. The sequenced flashing lights improve pilot recognition of the ALS when there are distracting lights in the airport vicinity.

b. Land Requirements. An ALS requires a site centered on the extended runway centerline. It is 400 feet (120 m) wide. It starts at the threshold and extends 200 feet (60 m) beyond the outermost light of the ALS.

c. Clearance Requirements. A clear line of sight is required between approaching aircraft and all lights in an ALS.

606. OMNIDIRECTIONAL APPROACH LIGHTING SYSTEMS. An omnidirectional approach lighting system (ODALS) may be installed on a runway with a nonprecision approach or on a runway that is difficult to identify due to an excessive number of lights in the area.

a. ODALS Configuration. ODALS consists of seven capacitor discharge lights. Five of the seven lights are sequence flashing omnidirectional lights. These five are located on the extended runway centerline, beginning 300 feet (90 m) from the runway threshold and spaced at 300-foot (90 m) intervals. The remaining two lights are located on either side of the runway threshold.

b. Land Requirements. ODALS require a site centered on the extended runway centerline. It is 400 feet (120 m) wide. It starts at the threshold and extends 1,700 feet (510 m).

c. Clearance Requirements. A clear line of sight is required between approaching aircraft and all lights in an ODALS.

607. LEAD-IN LIGHTING SYSTEMS. Lead-in lights (LDIN) consist of at least three flashing lights installed at or near ground level to define the desired course to an ALS or to a runway threshold.

a. LDIN Configuration. Each LDIN installation is unique. An LDIN is designed to overcome problems associated with hazardous terrain, obstructions, noise sensitive areas, etc. LDIN systems may be curved, straight, or a combination thereof. The lights are placed on the desired approach path, beginning at a point within visual range of the final approach. Generally the lights are spaced at 3,000-foot (900 m) intervals.

b. Land Requirements. Sufficient land or property interest to permit installation and operation of the lights, together with the right to keep the lights visible to approaching aircraft, is required.

c. Clearance Requirements. A clear line of sight is required between approaching aircraft and the next light ahead of the aircraft.

608. AIRPORT ROTATING BEACONS. Airport rotating beacons indicate the location of an airport by

projecting beams of light spaced 180 degrees apart. Alternating white/green flashes identify a lighted civil airport; white/white flashes an unlighted civil airport.

a. Location. The beacon shall be located to preclude interference with pilot or controller vision. Beacons should be within 5,000 feet (1 500 m) of a runway.

b. Land Requirements. Most beacons are located on airport property. When located off the airport, sufficient land or property interest to permit installation and operation of the beacon, together with the right to keep the beacon visible to approaching aircraft, is required.

c. Clearance Requirements. A beacon should be mounted high enough above the surface so that the beam sweep, aimed 2 degrees or more above the horizon, is not blocked by any natural or manmade object.

609. AIRPORT TRAFFIC CONTROL TOWERS. From airport traffic control towers (ATCTs), ATC personnel control flight operations within the airport's designated airspace and the operation of aircraft and vehicles on the movement area. A site should be reserved for an ATCT after consulting with the appropriate FAA regional office.

a. Land Requirements. A typical ATCT site will range from 1 to 4 acres (0.4 to 1.6 hectares). Additional land may be needed for combined flight service stations/towers.

b. Clearance Requirements. ATCT sites must meet these requirements:

(1) There must be maximum visibility of the airport's traffic patterns.

(2) There must be a clear, unobstructed, and direct line of sight to the approaches, to all runways or landing areas, and to all runway and taxiway surfaces.

(3) Most ATCTs penetrate an 14 CFR Part 77 surface. A tower penetrating an 14 CFR Part 77 surface is an obstruction to air navigation. As such, it is presumed to be a hazard to air navigation until an FAA study determines otherwise.

(4) The ATCT must not derogate the signal generated by any existing or planned electronic NAVAID or an ATC facility.

(5) The proposed site must be large enough to accommodate current and future building needs, including employee parking spaces.

610. AIRPORT SURVEILLANCE RADAR. Airport surveillance radars (ASR) are used to control air traffic. ASR antennas scan through 360 degrees to present the controller with the location of all aircraft within 60 nautical miles of the airport. The site for the ASR antenna is flexible, subject to the following guidelines:

a. Location. The ASR antenna should be located as close to the ATCT control room as practical. ASR-4, -5, -6, and -7 antennas should be within 12,000 feet (3 600 m) of the control room. ASR-8 antennas should be within 20,000 feet (6 000 m) of the control room. ASR-9 antennas may be located over 20,000 feet (6 000 m) from the control room.

b. Clearances. Antennas should be located at least 1,500 feet (450 m) from any building or object that might cause signal reflections and at least one-half mile (.8 km) from other electronic equipment. ASR antennas may be elevated to obtain line-of-sight clearance. Typical ASRs heights range from 25 to 85 feet (7.5 to 25.5 m) above ground.

611. AIRPORT SURFACE DETECTION EQUIPMENT. Airport surface detection equipment (ASDE) compensates for the loss of line of sight to surface traffic during periods of reduced visibility. ASDE should be sited to provide line-of-sight coverage of the entire aircraft movement area. While the ideal location for the ASDE antenna is on the ATCT cab roof, the antenna may be placed on a freestanding tower up to 100 feet (30 m) tall located within 6,000 feet (1 800 m) of the ATCT cab.

612. RUNWAY VISUAL RANGE FACILITIES. Runway visual range facilities provided a measurement of horizontal visibility, i.e., how far ahead the pilot of an aircraft should be able to see high intensity runway edge lights or contrasting objects. RVR installations consist of a projector and a receiver. Existing systems will be replaced by single-point systems in the 1990-1998 time frame.

a. Number. The number of RVRs required depends upon the runway approach category and physical length.

(1) CAT I runways require only a touchdown RVR.

(2) CAT II runways with authorized visibility minimums down to 1,600 RVR require only a touchdown RVR. Minimums below 1,600 RVR require touchdown and rollout RVRs. CAT II runways more than 8,000 feet (2 400 m) in length require touchdown, roll-out, and midpoint RVRs.

(3) CAT III runways with visibility minimums below 1,200 RVR require touchdown, midpoint, and rollout RVRs.

b. Longitudinal Location.

(1) Touchdown RVRs are located 750 to 1,000 feet (225 to 300 m) from the runway threshold, normally behind the MLS elevation antenna or ILS glide slope antenna.

(2) Rollout RVRs are located 750 to 1,000 feet (225 to 300 m) from the rollout end of the runway.

(3) Mid-point RVRs are located within 250 feet (75 m) of the runway's center longitudinally.

c. Lateral Location. RVR installations are located adjacent to the instrument runway.

(1) Single-point visibility sensor installations are located at least 400 feet (120 m) from the runway centerline and 150 feet (45 m) from a taxiway centerline.

(2) Transmissometer projectors are located at least 400 feet (120 m) from the runway centerline and 150 feet (45 m) from a taxiway centerline. Receivers are located between 250 feet (75 m) and 1,000 feet (300 m) from the runway centerline. The light beam between the projector and receiver should be at an angle of 5 to 14.5 degrees to the runway centerline. The light beam may be parallel to the runway centerlines when installations are between parallel runways.

613. AUTOMATIC WEATHER OBSERVATION STATIONS (AWOS). Automatic recording instruments have been developed for measuring cloud height, visibility, wind speed and direction, temperature, dewpoint, etc.. The U.S. Department of Commerce's National Oceanic and Atmospheric Administration publication "Federal Standard for Siting Meteorological Sensors at Airports" addresses siting of sensors. AC 150/5220-16, Automated Weather Observing Systems (AWOS) for Non-Federal Applications provides additional guidance.

614. PHYSICAL SECURITY. Airport facilities require protection from acts of vandalism. To provide a measure of protection, unauthorized persons must be precluded from having access to NAVAIDs and ATC facilities. Perimeter fencing should be installed to preclude inadvertent entry of people or animals onto the airport. In addition to airport perimeter fencing, the following security measures are recommended:

a. **Off-Airport Facilities.** Navigational and ATC facilities located off an airport, and in a location that is accessible to animals or the public, shall have a security perimeter fence installed at the time of construction.

b. **On-Airport Facilities.** Navigational and ATC facilities located on the airport have at least the protection of the operational areas. Any protection device, e.g., a guard rail or security fence, which penetrates an FAR Part 77 surface is an obstruction to air navigation. As such, it is presumed to be a hazard to air navigation until an FAA study determines otherwise.

615. CABLE PROTECTION. Most NAVAID and ATC facilities discussed in this chapter are served by buried power and control cables. FAA cables are typically buried approximately 24 inches (.6 m) below ground. They should be installed in conduit or duct beneath runways and taxiways, and in duct and manhole systems under aprons and paved parking areas. Information regarding the location of FAA cables and ducts may be obtained from the Manager of the Airways Facilities Maintenance Office serving the NAVAID or ATC facility. Questions relative to protecting or relocating cables can be obtained from the FAA Regional Airways Facilities Division Office.

616. to 699. RESERVED

Chapter 7. RUNWAY AND TAXIWAY BRIDGES

700. INTRODUCTION. Efforts to extend a runway are in many cases complicated by an existing or proposed street, highway, or railroad which is important to the community. When the closing or rerouting of an existing surface transportation mode is not practical, consider bridging the runway/taxiway over the impediment. This chapter presents guidance for this consideration.

701. SITING PRECEPTS. Minimize the extent of the required structure(s) by selection of:

a. **Route.** Achievement of the least number of required runway or taxiway bridges is possible through routing or rerouting of surface modes.

b. **Alignment.** A single bridge structure should handle all surface modes, including utilities, through proper routing or alignment.

c. **Locations.** Locations of bridges should be on straight portions of taxiways and away from taxiway intersections or angled taxiway exits. Such airport features as drainage systems, utility service lines, runway and taxiway lighting circuits, ILSs, and approach lighting systems (ALS), may also affect bridge location and design.

702. DIMENSIONS.

a. **Length.** Bridge length is parallel with the runway or taxiway centerline.

b. **Width.** Bridge width is perpendicular to the runway or taxiway centerline. The recommended bridge width (full strength structure) is the width of the runway or taxiway plus safety areas. It is recommended that bridges for a runway and parallel taxiway be continuous full-width, full-strength structures as illustrated in figures 7-1 and 7-2. In unusual situations, site conditions may limit taxiway bridges to a width of the taxiway plus shoulders. A minimum width taxiway bridge requires: positive edge protection; underwing engine clearance; adequate blast protection for vehicles or personnel crossing under the bridge; sufficient width for maneuvering rescue and firefighting equipment; and sufficient width to accommodate aircraft evacuation slides. Figure 7-3 illustrates a minimum width taxiway bridge.

c. **Height.** Bridge height is the vertical clearance provided over the crossed surface.

d. **Clearance.** Except for positive edge restraints on minimum width taxiway bridges, no structural members should project above the runway or taxiway surface.

703. LOAD CONSIDERATIONS. Runway and taxiway bridges must support both static and dynamic loads imposed by the heaviest airplane expected to use the structures. Airport authorities should evaluate the potential need to accommodate heavier airplanes and construct any runway or taxiway bridge accordingly. Overdesign is preferable to the cost and operational penalties of replacing or strengthening an underdesigned structure at a later date. Airplanes weighing up to 873,000 pounds (395 985 kg) are in use today. Airplanes weighing 1,000,000 pounds (453 600 kg) or more may exist by the turn of the century.

704. DECK DESIGN. Bridges should be designed to incorporate a layer of select earth between the bridge deck and the runway or taxiway pavement. The earth acts as an insulator to reduce the probability of ice forming on the bridge before the adjacent pavement freezes. Where bridge height is limited, the bridge's structural deck may be the runway or taxiway surface.

705. MARKING AND LIGHTING. The following marking and lighting is in addition to the standard marking and lighting specified in advisory circulars of the 150/5340 series. Figure 7-5 illustrates shoulder marking for minimum width taxiways.

a. Three equally-spaced L-810 obstruction lights on each side of the bridge.

b. Chevrons spaced 25 feet (7.5 m) apart on runway and taxiway shoulders.

c. Taxiway centerline lights or centerline reflectors.

d. Taxiway edge lights or edge reflectors.

e. Taxiway edge markings.

706. OTHER CONSIDERATIONS. The preceding paragraphs cover design requirements applicable to all runway and taxiway bridges. The following identify additional design features which may be necessary as part of a specific runway or taxiway bridge project.

a. Curbs. On minimum width taxiway bridges and where icing conditions may exist, a curb designed to hold the largest expected aircraft should be added to prevent aircraft from being blown from the bridges. Figure 7-3 shows a double-curb installation.

b. Security Fences. Security fences should be provided adjacent to the bridge-tunnel to prevent inadvertent entry of persons, vehicles, or animals into operational areas. AC 107-1 furnishes additional guidance on the subject.

c. Pavement Heating. Where freezing is a problem, in-pavement heating may be desirable on bridges which do not have sufficient earth cover to provide insulation. Accordingly, the drainage system needs to be capable of accepting melted runoff without refreezing or flooding the bridged surface.

d. Service Roads. Airport maintenance and service equipment may use a runway or taxiway bridge if its presence does not interfere with airplane operations. There should be a separate bridge if there is more than occasional use by these vehicles. Figure 7-6 illustrates a multi-use bridge over a public roadway.

e. Blast Protection. Minimum width taxiway bridges require special features to protect the surface from jet blast. One alternative is nonload-bearing decks beyond the limits of the load-bearing shoulders.

f. Approach Aprons. Aprons, similar to those used in highway construction, are recommended to minimize the effects of differential settlement between the bridge proper and its approaches.

g. Tunnel Ventilation. The need for mechanical ventilation will depend upon its length. When mechanical ventilation is necessary, all aboveground components need to be located so that they are not a hazard to aeronautical operations.

h. Tunnel Lighting. The need for artificial lighting of the tunnel depends on its length. Emergency lighting and lane-control signals may also be necessary. The American Association of State Highway Officials publication "Informational Guide for Roadway Lighting" contains a section on lighting tunnels and underpasses. Copies of this publication are available through state highway offices. Light poles shall not penetrate an FAR Part 77 surface unless an FAA aeronautical study determines they will not be hazards. Light from the fixtures shall not cause

glare or distract pilots or control tower personnel. Figure 7-4 illustrate roadway lighting applications.


i. Drainage. Tunnels which pass under a runway or taxiway, may require automatic, self-priming pumps.

707. PASSENGER AND BAGGAGE TUNNELS. Passenger and baggage tunnels connect main and satellite terminals. In essence, they are merely smaller versions of runway and taxiway bridges and have similar design considerations. Tunnels house walkways, baggage conveyers, subway-type people-mover systems, or a combination of these.

708. to 799. RESERVED.



Figure 7-1. Full width runway-taxiway bridge

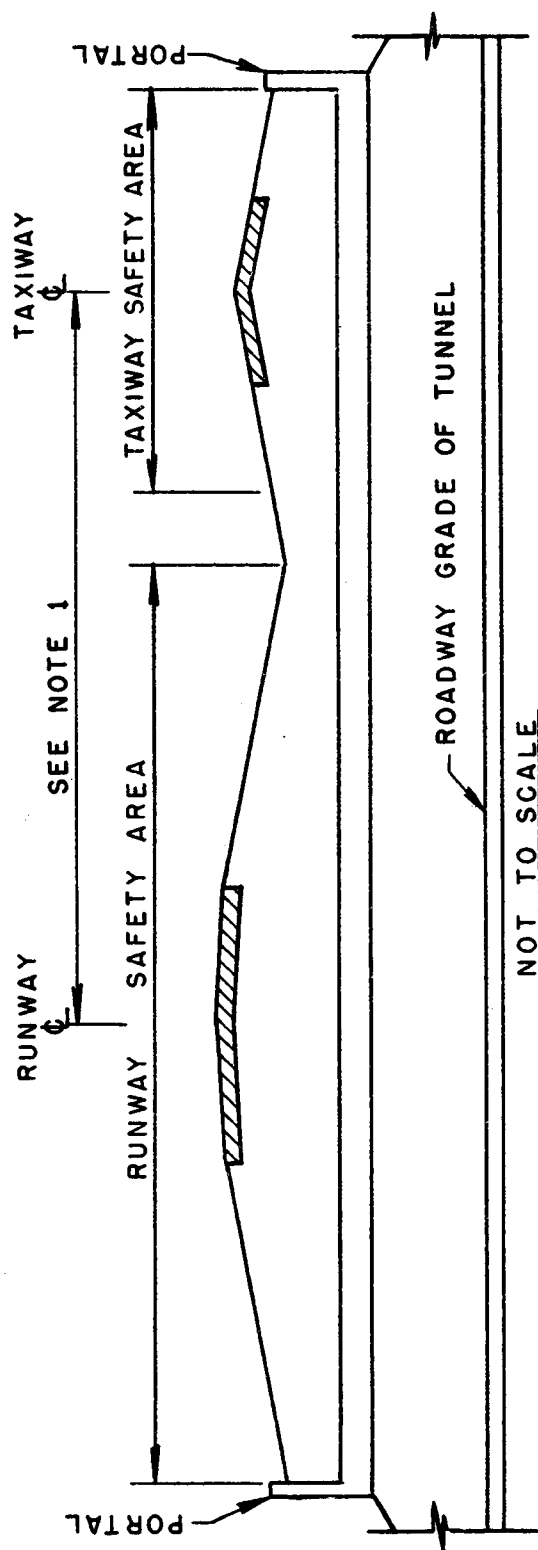

NOTES:

1. WIDTH OF TAXIWAY SAFETY AREA AND RUNWAY / TAXIWAY SEPARATION DISTANCE VARY DEPENDING ON AIRPLANE / TAXIWAY DESIGN GROUP.
2. ROADWAY TUNNEL NORMALLY HAS SLIGHT LONGITUDINAL GRADIENT AND SOME TYPE OF RETAINING WALL AT PORTALS
3. UNIFORM TUNNEL CROSS SECTION IS NORMALLY USED; AND A CONTINUOUS STRUCTURE WITHOUT OPEN SECTION IN INFIELD AREA IS PREFERRED AND RECOMMENDED WHEREVER FEASIBLE

Figure 7-2. Cross-section full width runway-taxiway bridge

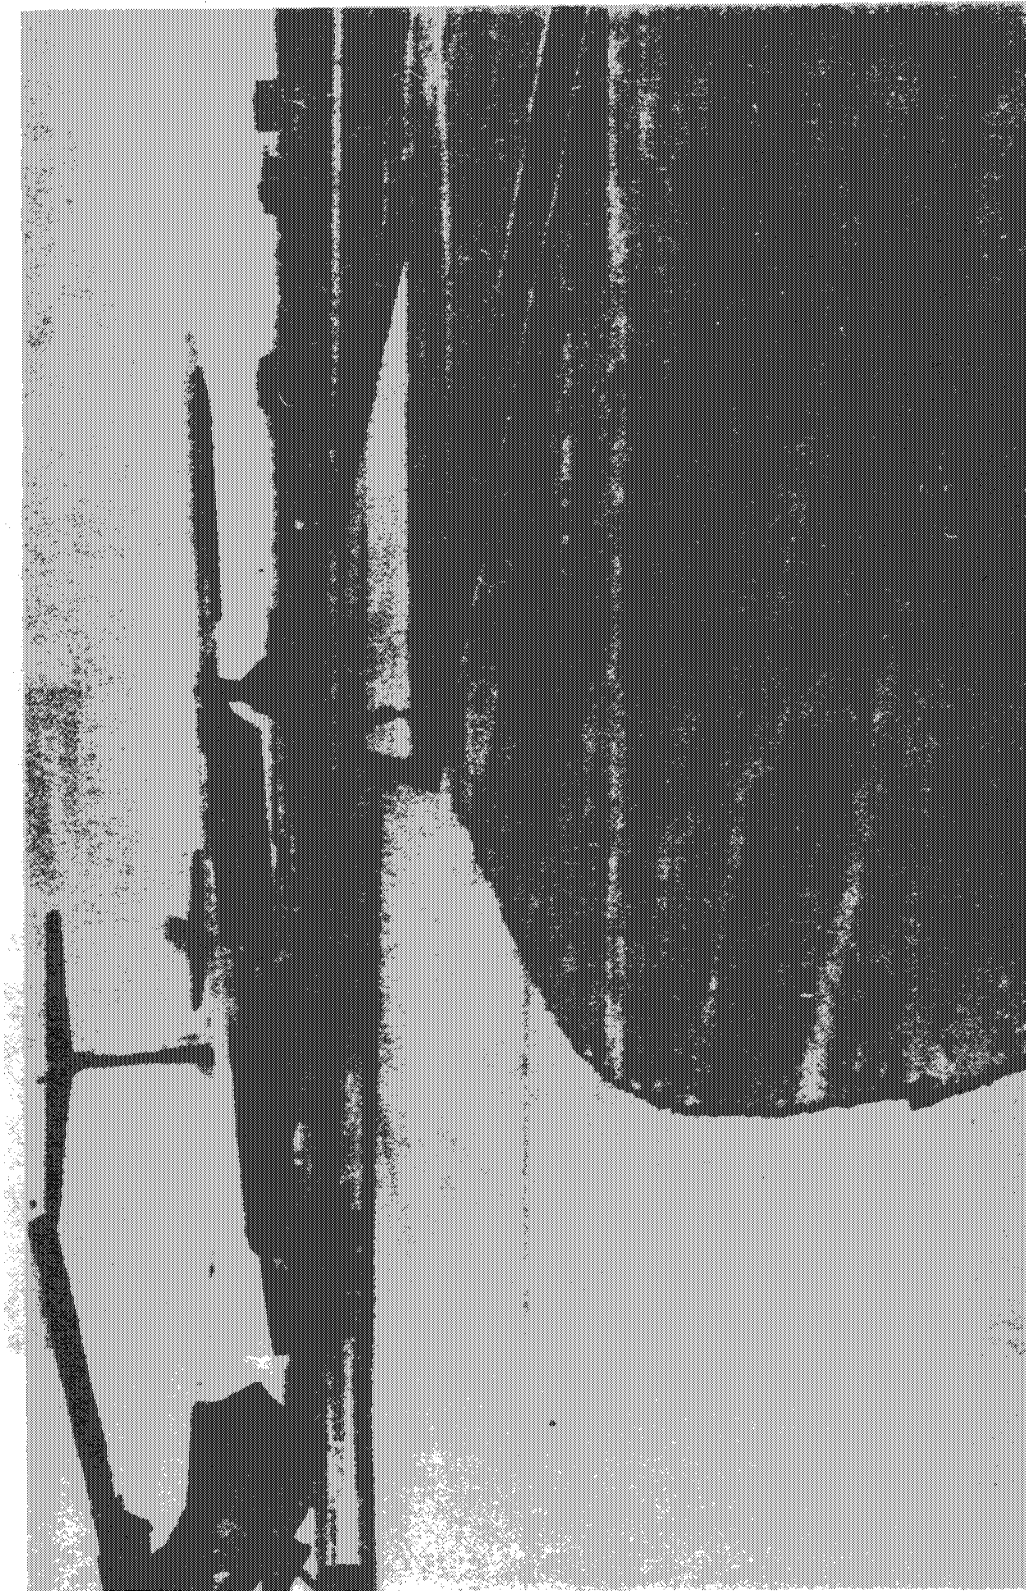


Figure 7-3. Minimum width taxiway bridge with positive edge protection, O'Hare Airport, Chicago, IL

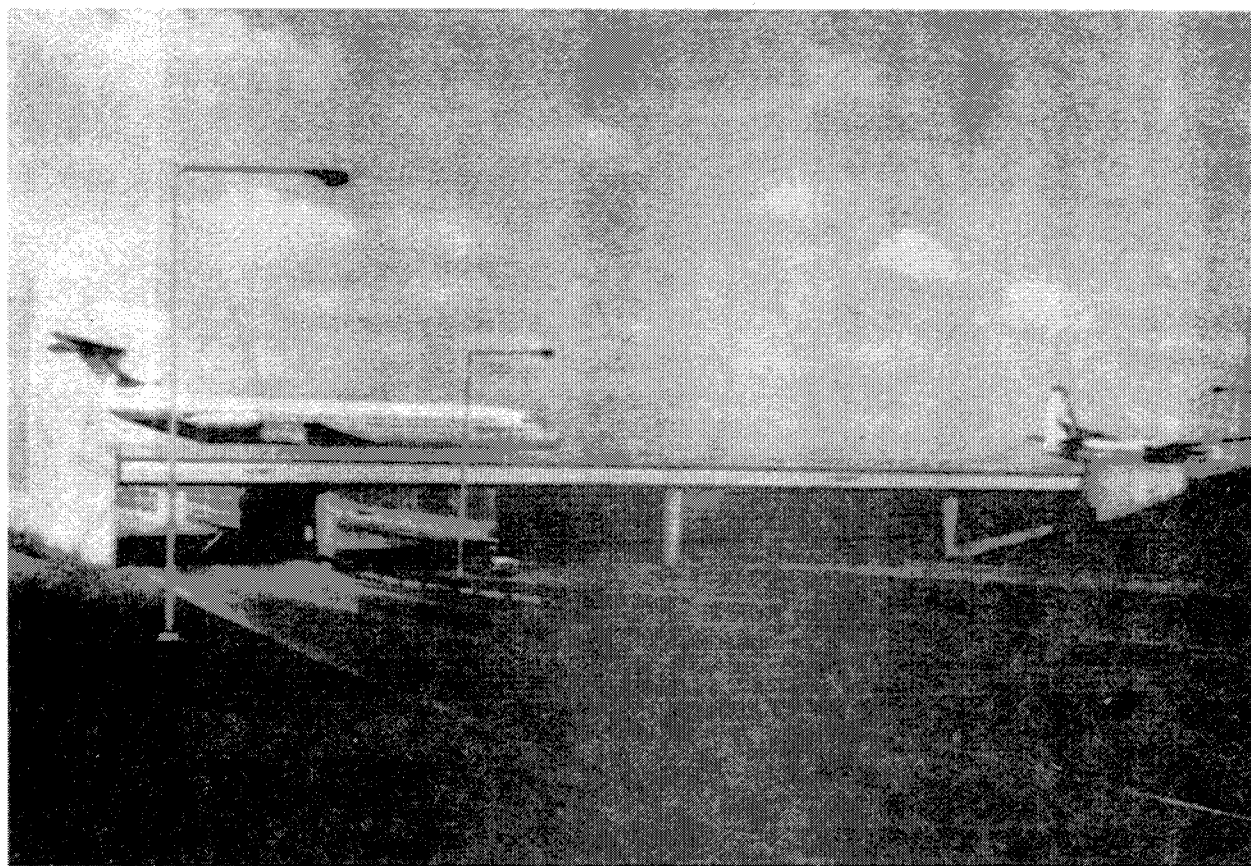


Figure 7-4. Example structural deck and depressed roadway, O'Hare Airport, Chicago, IL

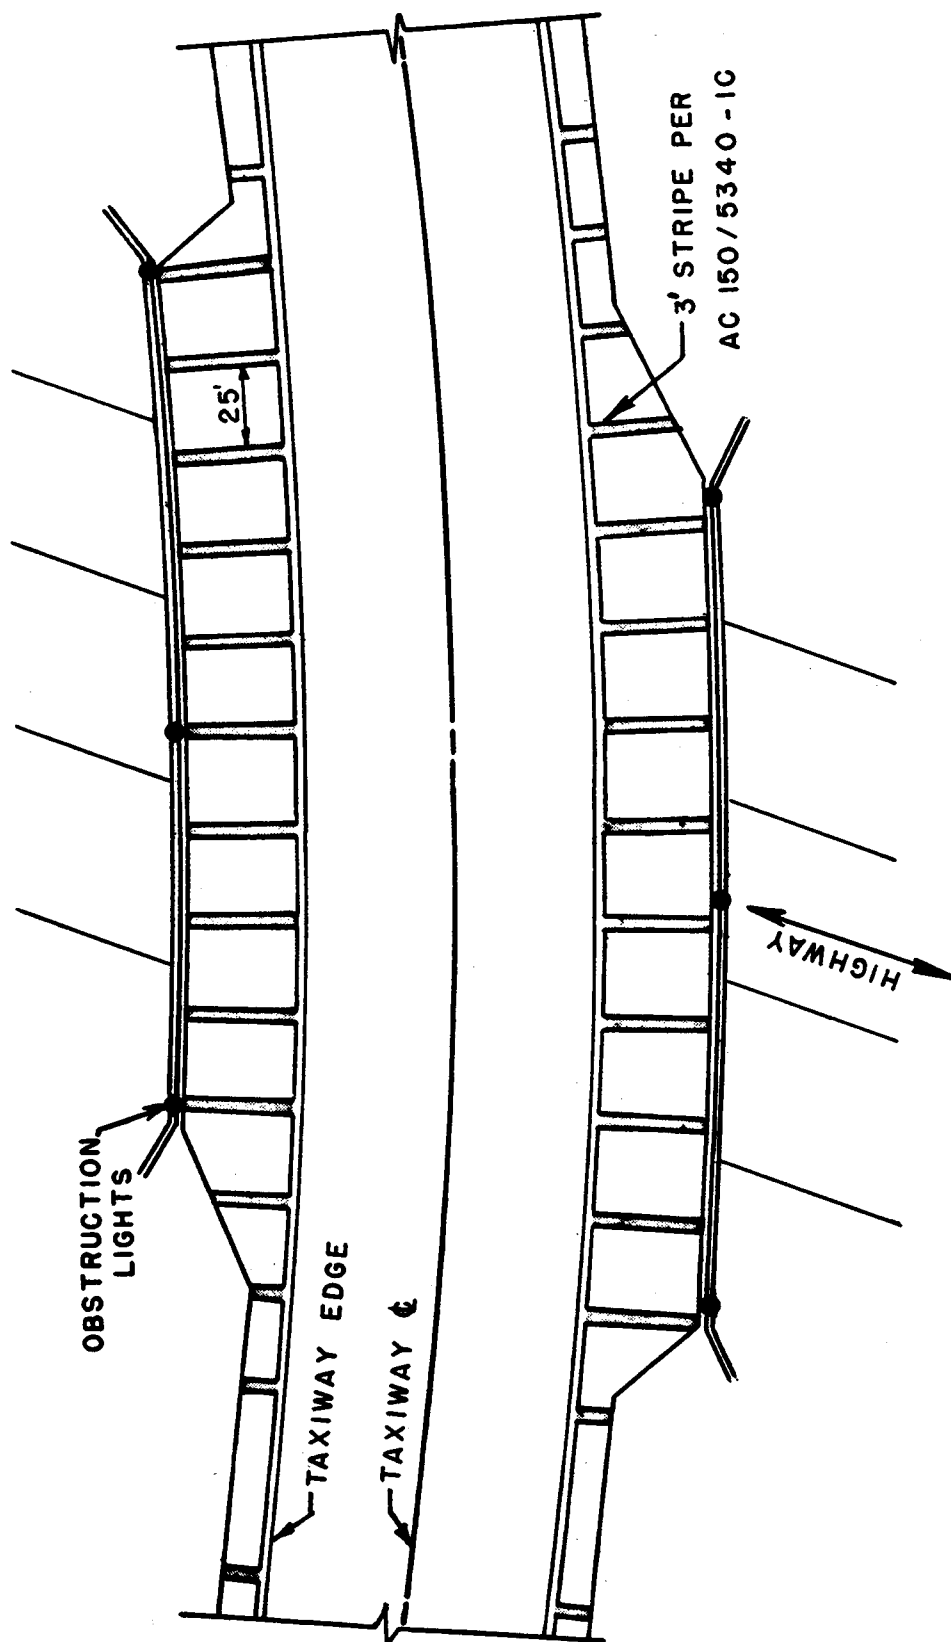


Figure 7-5. Suggested shoulder marking of minimum width taxiway bridge

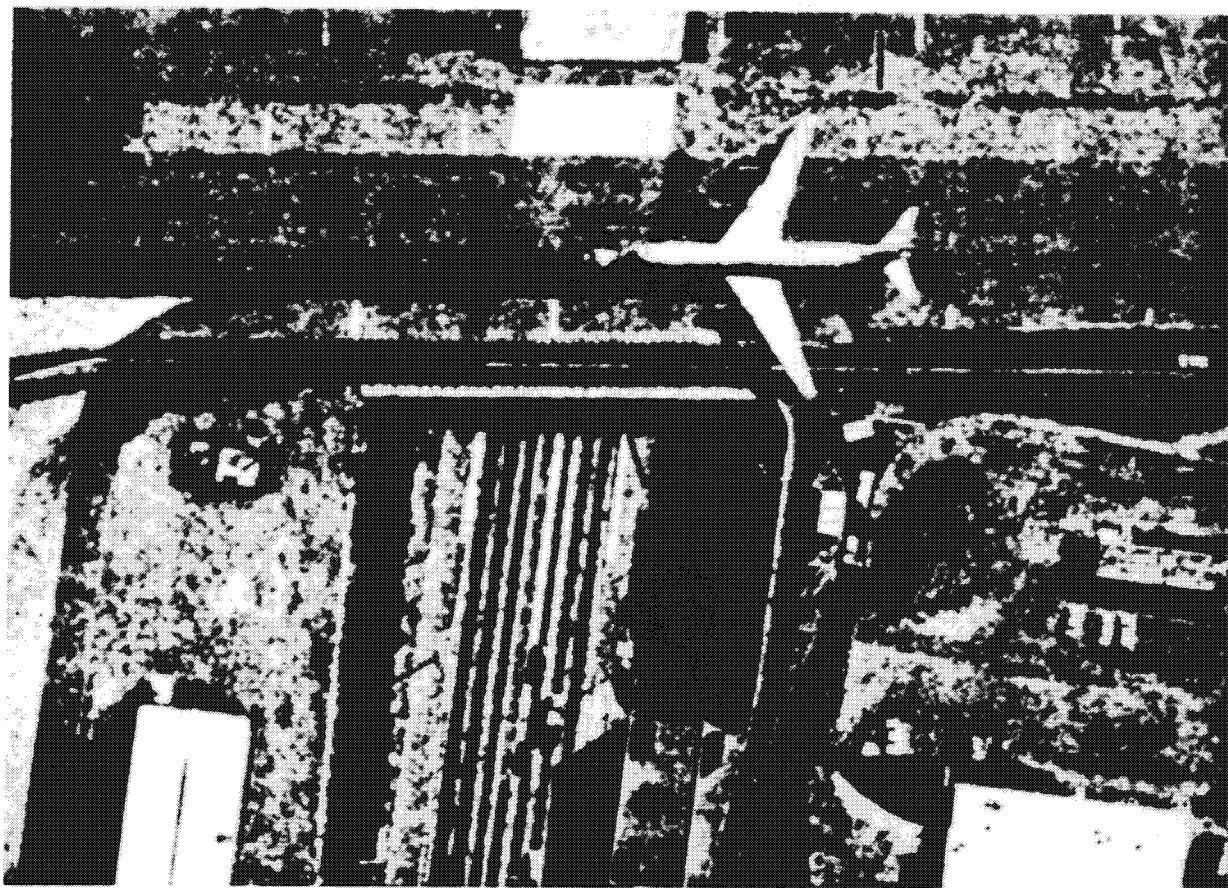


Figure 7-6. Controlled use service road, Los Angeles International Airport, Los Angeles, CA

Chapter 8. THE EFFECTS AND TREATMENT OF JET BLAST

800. INTRODUCTION. The forces of jet exhaust (jet blast) far exceed the forces of propwash from the most powerful propeller airplane. These high velocities are capable of causing bodily injury to personnel and damage to airport equipment or facilities. This chapter suggests means to minimize the effects of jet blast.

801. JET BLAST EFFECTS. Jet blast affects all operational areas of the airport. In terminal, maintenance, and cargo areas, personnel safety is the overriding consideration. Blast velocities greater than 30 m.p.h. (48 km/hr) can cause loose objects on the pavement to become missiles capable of causing injury to personnel who may be at a considerable distance behind the airplane. In other operational areas, sudden gusts averaging more than 20 m.p.h. (31 km/hr) are hazardous, and when striking moving vehicles or airplanes, are more dangerous than continuous velocities of the same magnitude. Velocities of this magnitude can occur over 2,000 feet (600 m) to the rear of certain airplanes when their engines are operating at takeoff thrust.

a. Jet Blast Pressures. Jet exhaust velocities are irregular and turbulent. The vibrations they induce over small areas should be considerations in designing a building or structure subjected to jet blast. Over areas of 10 to 15 square feet (3 to 5 m²), the velocities may be assumed to be periodic with peaks occurring 2 to 6 times per second. These peaks are not continuous laterally or vertically. The following equation computes the pressure produced on a surface perpendicular to the exhaust stream:

$$P = 0.00256 V^2, \text{ where:}$$

P = pressure in pounds per square foot; and
V = velocity in miles per hour.

$$P = 0.04733 V^2, \text{ where:}$$

P = pressure in pascals; and
V = velocity in kilometers per hour.

b. Blast Velocity Distances. The drag and uplift forces produced by jet engines are capable of moving large boulders. A jet engine operating at maximum thrust is capable of lifting a 2-foot (0.6 m) boulder 35 feet (10 m) behind the airplane completely off the ground. Fortunately, these forces which cause severe erosion decrease rapidly with distance so that beyond 1,200 feet (365 m) behind a jet airplane only sand and cohesionless soils are affected. Figures 8-1

through 8-5 illustrate the velocity versus distance plots for representative airplanes. The velocities shown represent maximum values, particularly for breakaway from a parked position. For site specific conditions, include manufacturers' jet blast data for the most demanding airplane in the analysis. The distances shown are measured from the rear of the airplane and the velocities are for takeoff, breakaway, and idle thrust power settings. Similar data for other airplanes, including lateral and vertical velocity contours, as well as site specific blast loads on structures, may be obtained from the engine manufacturers.

c. Heat Effects. High temperatures are also associated with jet exhaust; but the affected area is smaller than the area subject to hazardous jet blast velocities. Contours showing the level of heat at varying distances from jet engines are obtainable from airplane manufacturers.

802. BLAST FENCES. Properly designed blast fences can substantially reduce or eliminate the damaging effects of jet blast, as well as the related fumes and noise which accompany jet engine operation. Fences are permissible near apron areas to protect personnel, equipment, or facilities from the jet blast of airplanes moving into or out of parking positions. In addition, blast fences may be necessary near runway ends, run-up pads, etc., to shield off-airport, as well as, airport pedestrian or vehicular traffic.

a. Location. Generally, the closer the fence is to the source of blast, the better it performs, provided that the centerline of the exhaust stream falls below the top of the fence. To the extent practicable, blast fences should be located outside of the runway object free area.

b. Design. Figures 8-6 and 8-7 illustrate several types of blast fence design which are readily available from various manufacturers. Blast fences located inside the runway object free area should be as frangible as practicable.

c. Other Types of Blast Protection. Although blast fences are the most effective means of blast protection, other methods may achieve satisfactory results. Any surface, whether natural or manmade, located between the jet engine and the area to be protected will afford some measure of blast protection.

803. SHOULDERS AND BLAST PADS. Unprotected soils adjacent to runways and taxiways are susceptible to erosion. A dense, well-rooted turf cover can prevent erosion and support the occasional passage of aircraft, maintenance equipment, or emergency equipment under dry conditions. Paved shoulders are recommended for runways, taxiways, and aprons which will accommodate Group III and higher aircraft. Turf, aggregate-turf, soil cement, lime or bituminous stabilized soil are recommended adjacent to paved surfaces provided for Group I and II aircraft.

a. Shoulder and Blast Pad Dimensions. Paved shoulders should run the full length of the runway(s) and taxiway(s). Blast pads at runway ends should extend across the full width of the runway plus the shoulders. Table 3-1, 3-2, and 3-3 specify the standard blast pad dimensions and runway shoulder widths. Table 4-1 specifies the standard taxiway shoulder widths. Increases to these standard dimensions are permissible for unusual local conditions.

b. Pavement Strength. Shoulder and blast pad pavement needs to support the occasional passage of the most demanding airplane as well as the heaviest existing or future emergency or maintenance vehicle for the design life of the full strength pavement. These pavements may be constructed of bituminous or Portland Cement concrete materials. Specifications for materials and constructions standards for these pavements should be based on state highway requirements.

(1) For Airplane Design Groups III and IV, the minimum bituminous concrete surface thickness, constructed on an aggregate base, is 2 inches (51 mm) for shoulders and 3 inches (76 mm) for blast pads. These thicknesses should be increased by 1 inch (25 mm) for Airplane Design Groups V and VI. Aggregate base and subbase thicknesses should be determined using state highway design standards.

(2) The thickness of shoulders and blast pads constructed of Portland Cement concrete should be based on state highway standards. The minimum thickness of these pavements, as recommended in AC 150/5320-6, is 5 inches (127 mm).

(3) Shoulders and blast pads may have stabilized subbase and base. The stabilized subbase and base thicknesses should be determined using the equivalency factors in AC 150/5320-6 for converting aggregate subbase and base to stabilized subbase and base.

c. Drainage. Surface drainage should be maintained or improved in the shoulder and blast pad areas. Where a paved shoulder or blast pad abuts the runway, the joint should be flush, however, the shoulder may retain a 5 percent transverse slope. A 1.5 inch (3.8 cm) step is the standard at the edge of paved shoulders and blast pads to enhance drainage and to prevent fine graded debris from accumulating on the pavement. Base and subbase courses shall be of sufficient depth to maintain the drainage properties of granular base or subbase courses under the runway, taxiway, or apron pavement. An alternative is to provide a subdrain system with sufficient manholes to permit observation and flushing of the system.

d. Marking and Lighting. AC 150/5340-1 provides guidance for marking shoulders and blast pads. New construction should provide for edge lights to be base mounted and for the installation of any cable under the shoulder or blast pad pavement to be in conduit. When adding shoulders or blast pads to existing runways or taxiways, the existing runway or taxiway edge lighting circuitry, if not suitable, should be updated/modified prior to shoulder or blast pad paving.

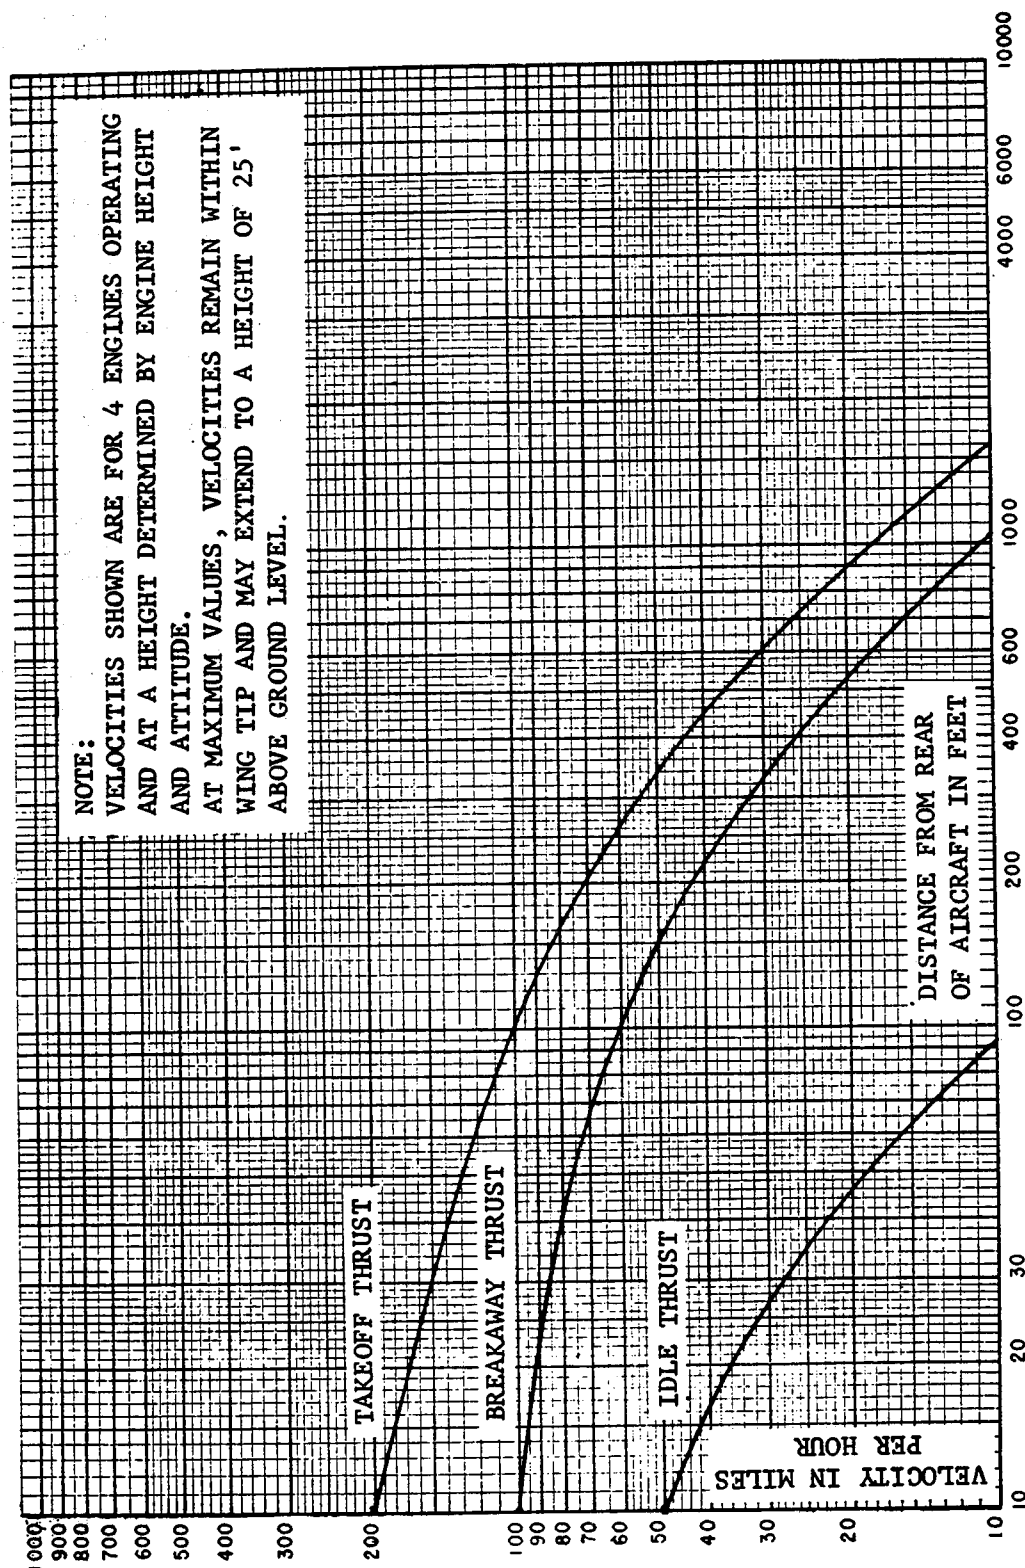


Figure 8-1. Velocity distance curves, DC-8

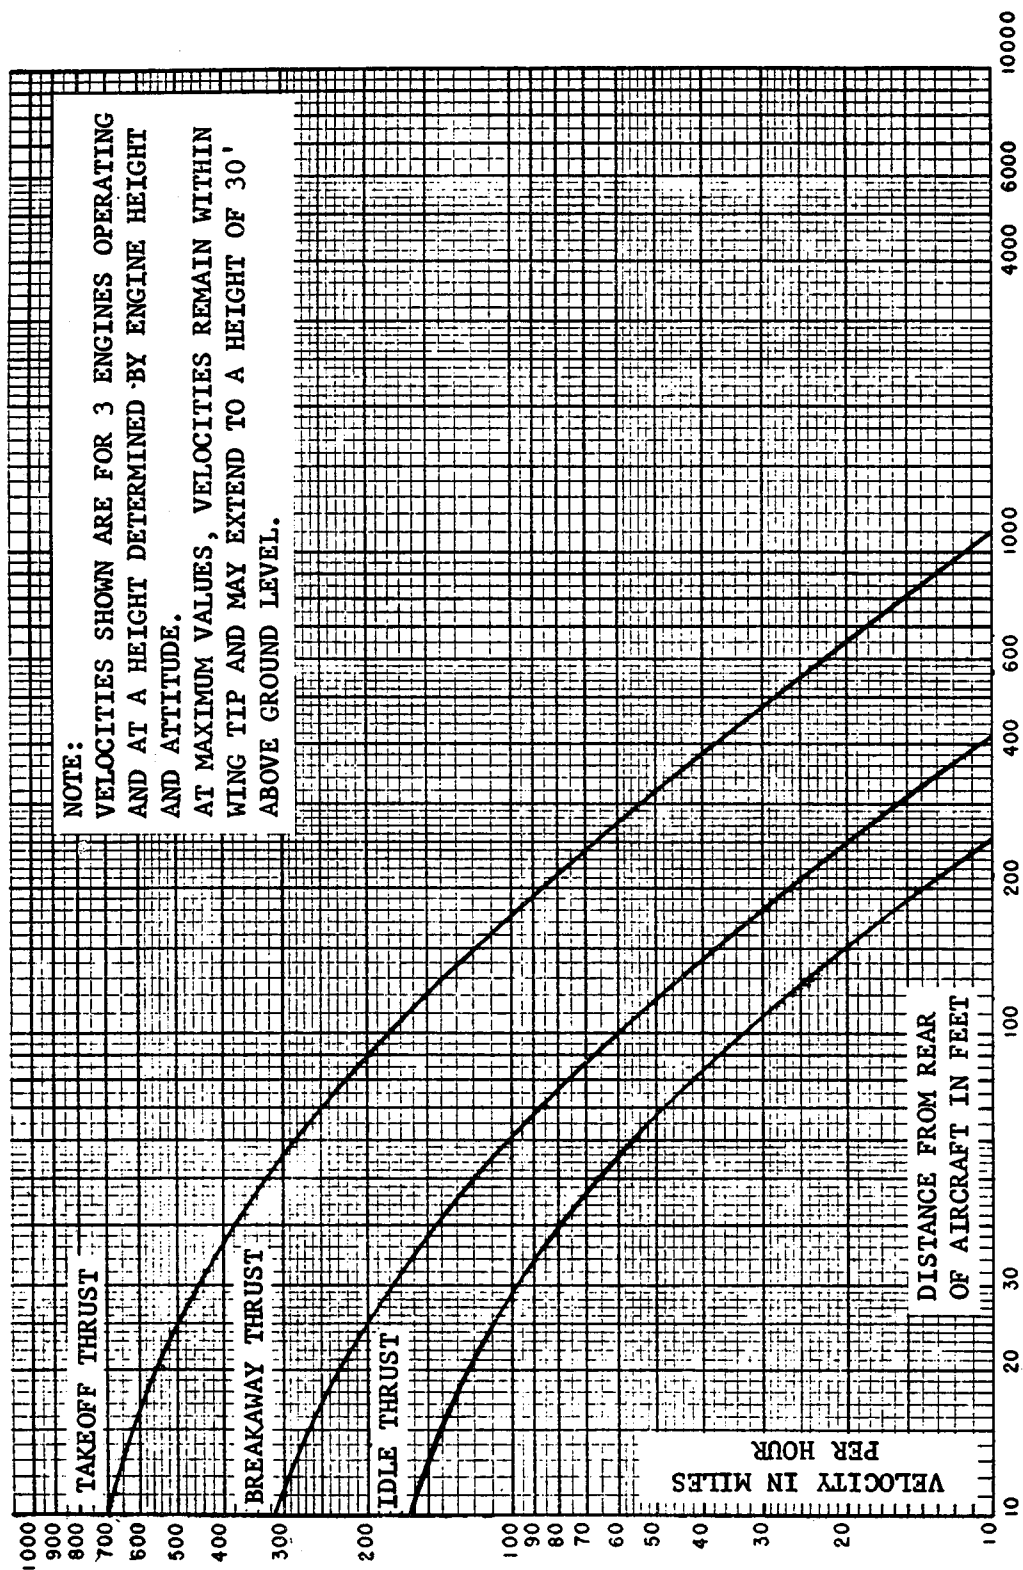


Figure 8-2. Velocity distance curves, B-727

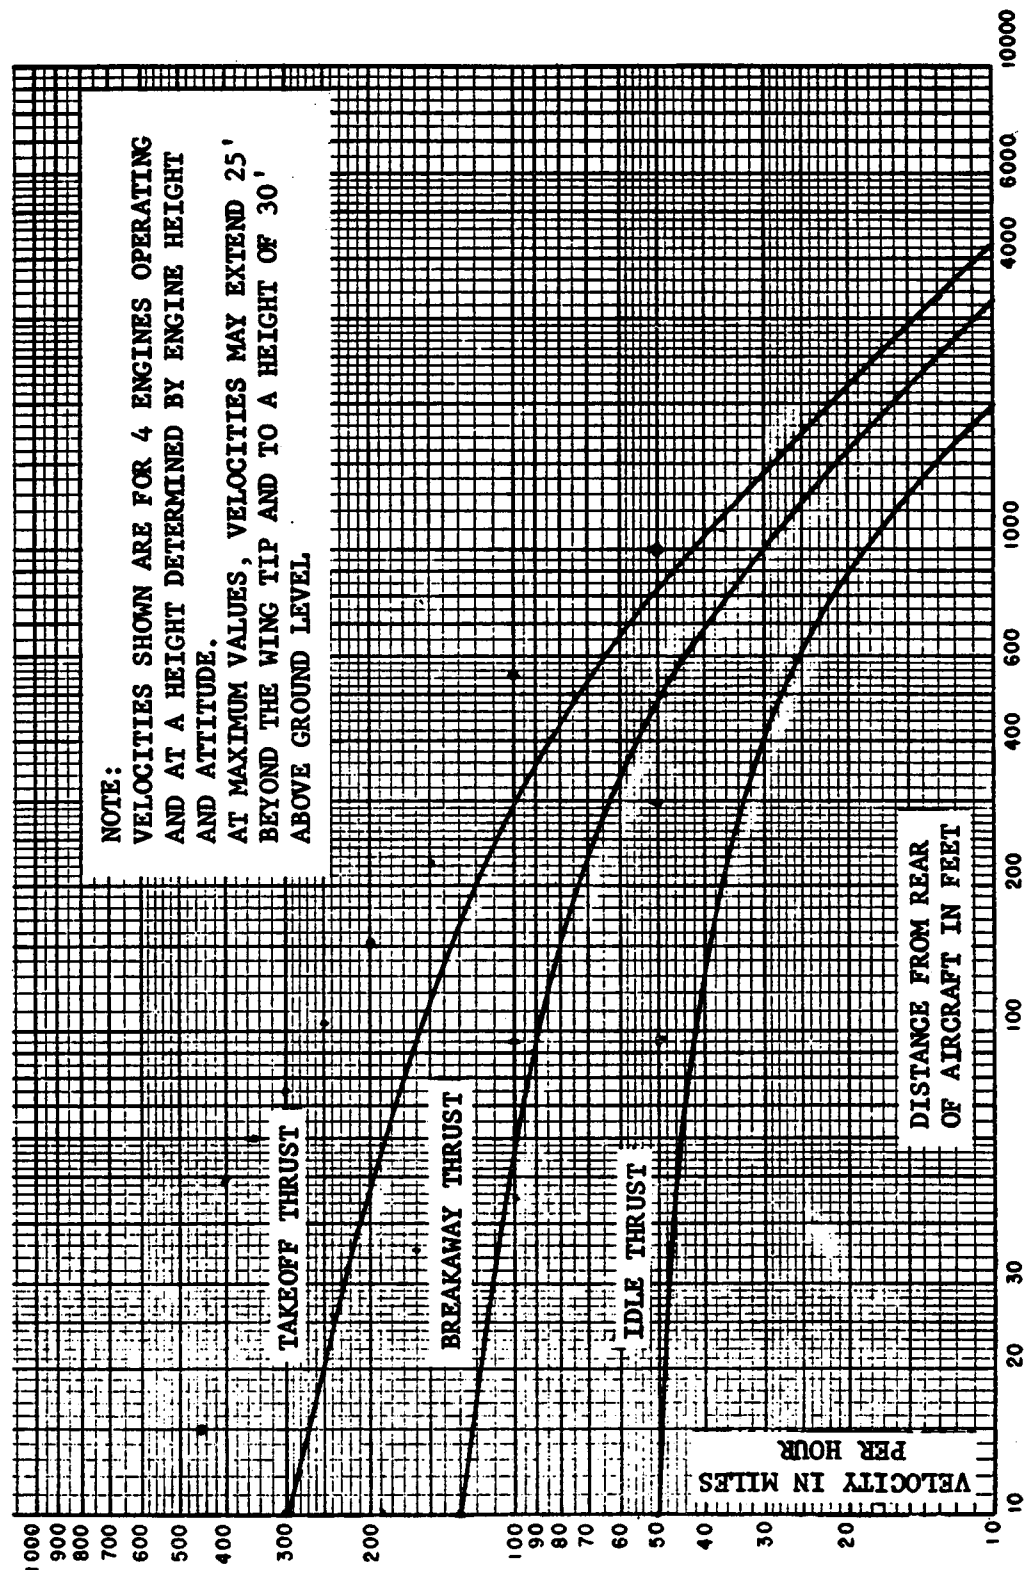


Figure 8-3. Velocity distance curves, B-747

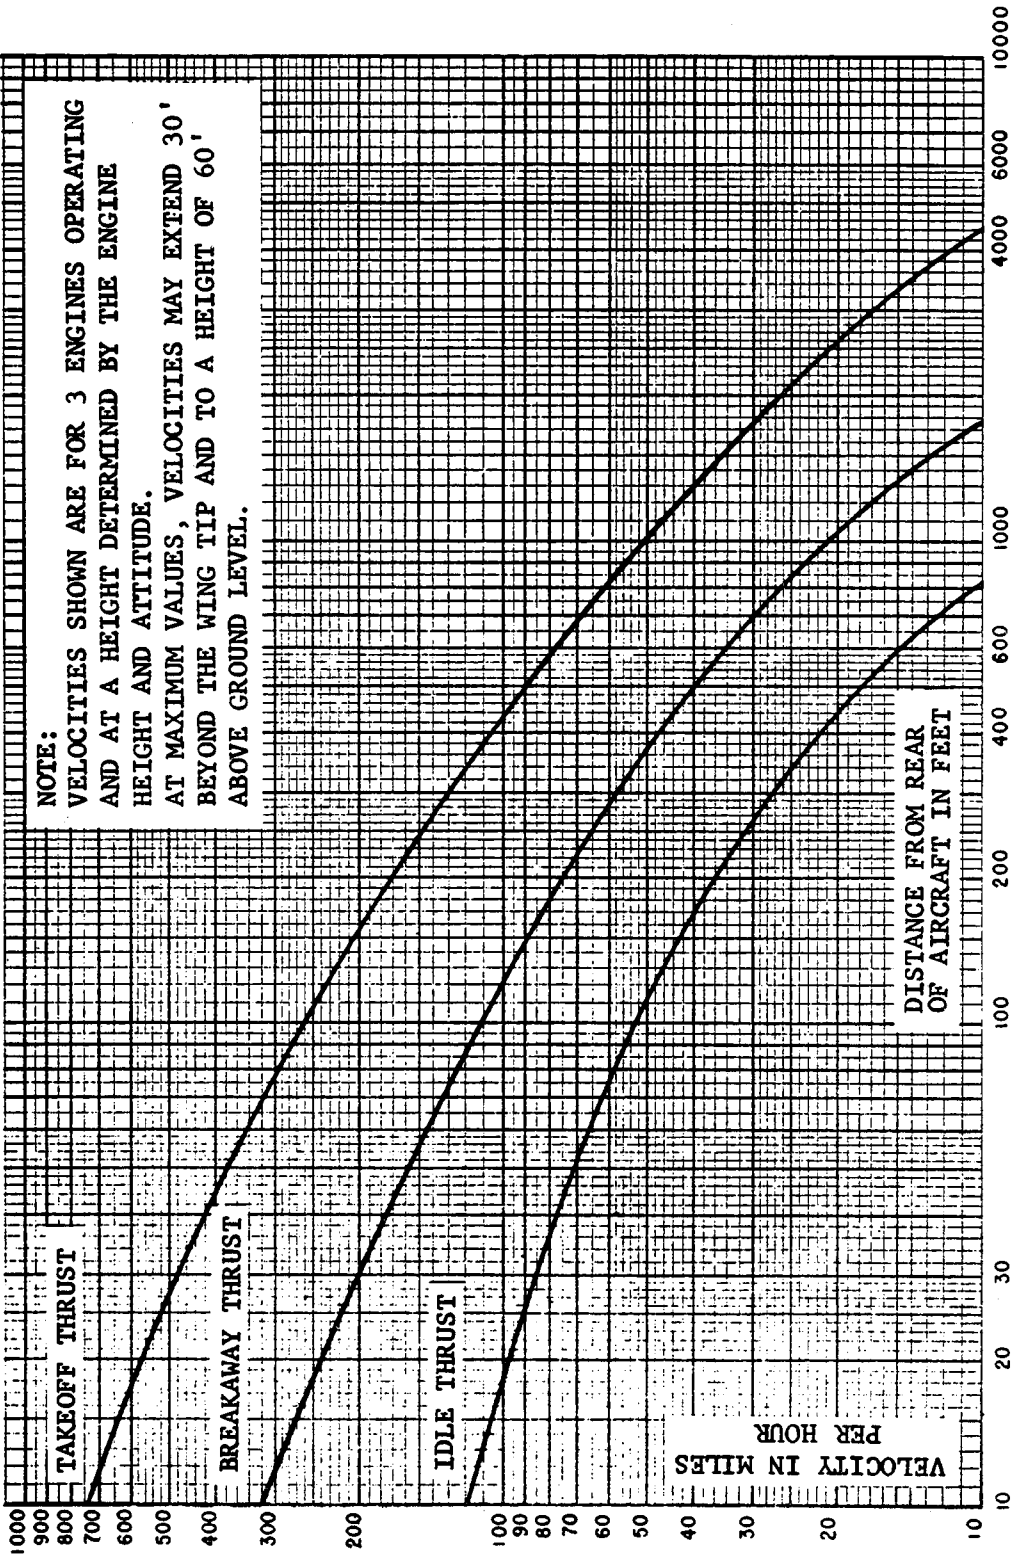



Figure 8-4. Velocity distance curves, DC-10

VELOCITY IN MILES/HOUR (KILOMETERS/HOUR)

Distance Behind Engine Aircraft	20' (6 m)	40' (12 m)	60' (18 m)	80' (24 m)	100' (30 m)
<u>Fan Jet Falcon</u>					
Idle	82(132)	36(58)	25(40)	22(35)	18(29)
Breakaway <u>1/</u>	150(241)	68(109)	46(74)	33(53)	27(43)
Takeoff	341(549)	155(249)	106(171)	75(121)	62(100)
<u>Jet Commander, Lear Jet, & Hansa</u>					
Idle	54(87)	24(39)	15(24)	11(18)	9(14)
Breakaway	114(183)	50(80)	31(50)	22(35)	18(29)
Takeoff	259(417)	114(183)	68(109)	52(84)	42(68)
<u>Jet Star & Sabreliner</u>					
Idle	92(148)	41(66)	25(40)	18(29)	15(24)
Breakaway	195(314)	85(137)	52(84)	39(63)	31(50)
Takeoff	443(713)	194(312)	119(192)	89(143)	72(116)
<u>Gulfstream II</u>					
Idle	153(246)	75(121)	48(77)	41(66)	34(55)
Breakaway	330(531)	150(241)	102(164)	72(116)	60(97)
Takeoff	750(1207)	341(549)	232(373)	164(264)	136(219)

1/ "Breakaway" is that percentage of power required to start airplanes moving and usually is approximately 55 percent of maximum continuous thrust.

Figure 8-5. Blast velocities of business jet airplanes

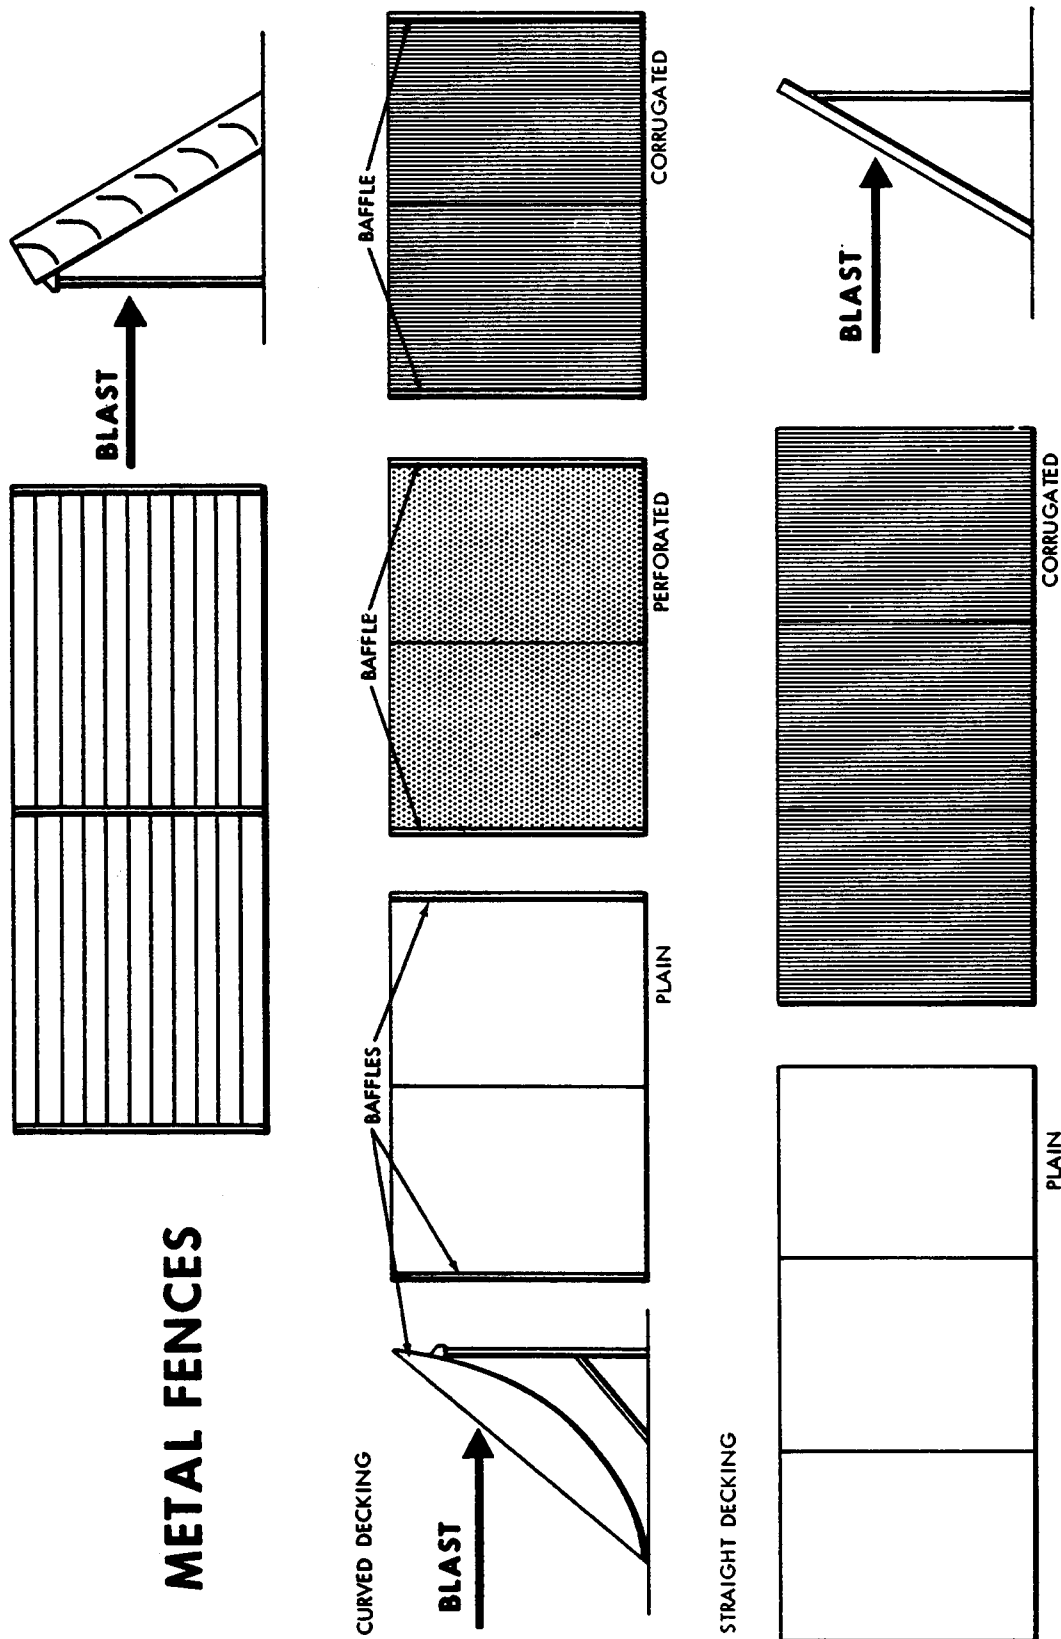

METAL FENCES

Figure 8-6. Typical blast deflector fences, metal

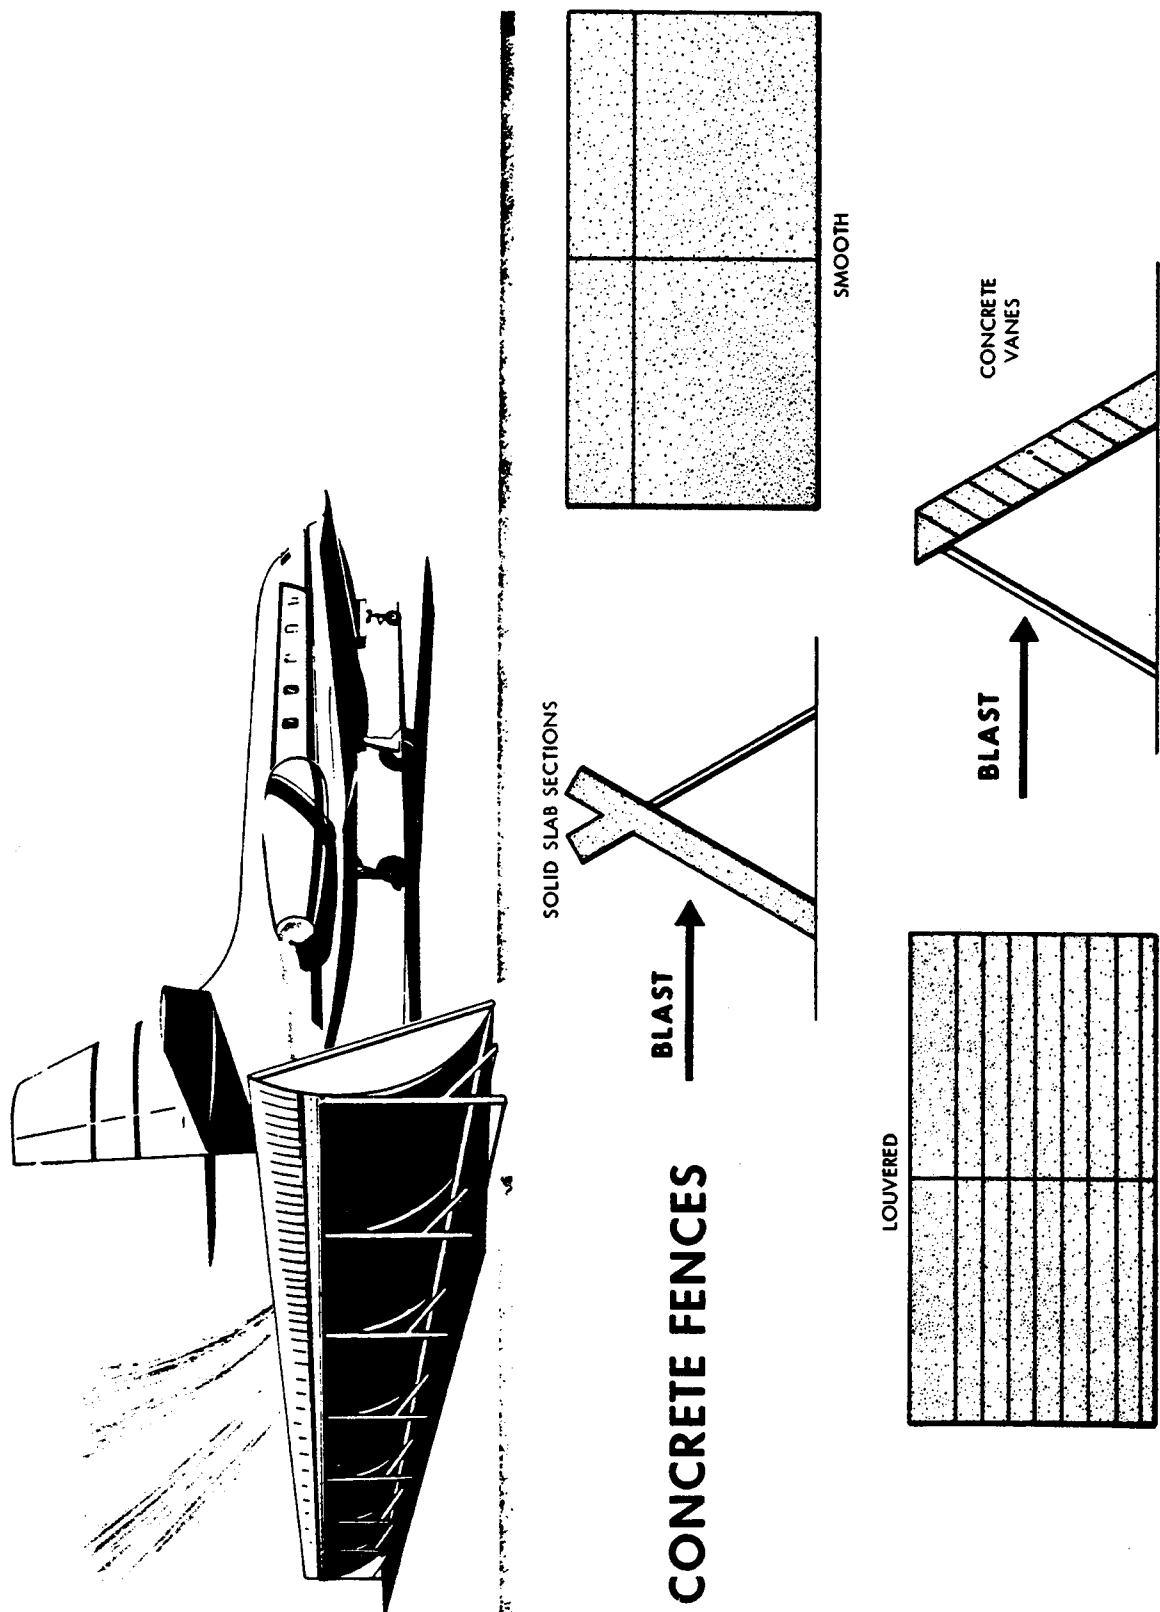


Figure 8-7. Typical blast deflector fences, concrete

Appendix 1. WIND ANALYSIS

1. OBJECTIVE. This appendix provides guidance on the assembly and analysis of wind data to determine runway orientation. It also provides guidance on analyzing the operational impact of winds on existing runways.

a. A factor influencing runway orientation and number of runways is wind. Ideally a runway should be aligned with the prevailing wind. Wind conditions affect all airplanes in varying degrees. Generally, the smaller the airplane, the more it is affected by wind, particularly crosswind components (see figure A1-1). Crosswinds are often a contributing factor in small airplane accidents.

b. Airport planners and designers should make an accurate analysis of wind to determine the orientation and number of runways. In some cases, construction of two runways may be necessary to give the desired wind coverage (95 percent coverage). The proper application of the results of this analysis will add substantially to the safety and usefulness of the airport.

2. CROSSWINDS. The crosswind component of wind direction and velocity is the resultant vector which acts at a right angle to the runway. It is equal to the wind velocity multiplied by the trigonometric sine of the angle between the wind direction and the runway direction. Normally, these wind vector triangles are solved graphically. An example is shown in figure A1-1. From this diagram, one can also ascertain the headwind and tailwind component for combinations of wind velocities and directions. Refer to paragraph 203 for allowable crosswind components.

3. COVERAGE AND ORIENTATION OF RUNWAYS. The most desirable runway orientation based on wind is the one which has the largest wind coverage and minimum crosswind components. Wind coverage is that percent of time crosswind components are below an acceptable velocity. The desirable wind coverage for an airport is 95 percent, based on the total numbers of weather observations. This value of 95 percent takes into account various factors influencing operations and the economics of providing the coverage. The data collection should be with an understanding of the objective; i.e., to attain 95-percent usability. At many airports, airplane operations are almost nil after dark, and it may be desirable to analyze the wind data on less than a 24 -hour observation period. At airports where operations are predominantly seasonal, regard should be given to the wind data for the predominant-use period. At locations where provision of a crosswind runway is impractical due to severe terrain constraints, consideration may be given to increasing operational

tolerance to crosswinds by upgrading the airport layout to the next higher airport reference code.

4. ASSEMBLING WIND DATA. The latest and best wind information should always be used to carry out a wind analysis. A record which covers the last 10 consecutive years of wind observations is preferred. Records of lesser duration may be acceptable on a case-by-case basis. In some instances, it may be highly desirable to obtain and assemble wind information for periods of particular significance; e.g., seasonal variations, instrument weather conditions, daytime versus nighttime, and regularly occurring gusts.

a. Data Source. The best source of wind information is the National Oceanic and Atmospheric Administration, National Climatic Data Center (NCDC). The NCDC is located at:

Climate Services Branch
National Climatic Data Center
151 Patton Avenue
Asheville, North Carolina 28801-5001
Tel: 828-271-4800/ Fax: 828-271-4876
Public Web Address: <http://www.ncdc.noaa.gov/>

The Center should be contacted directly to determine the availability of data for a particular site.

b. Data Costs. The EDS provides wind information at cost. The cost will vary, depending upon the complexity of the information desired, how the data are being stored, and whether the data have been assembled (summarized) previously. The wind summary for the airport site should be formatted with the standard 36 wind quadrants (the EDS standard for noting wind directions since January 1, 1964) and usual speed groupings (see figure A1-3). An existing wind summary of recent vintage is acceptable for analysis purposes if these standard wind direction and speed groupings are used. Figure A1-2 is an example of a typical EDS wind summary.

c. Data Not Available. In those instances when EDS data are not available for the site, it is permissible to develop composite wind data using wind information obtained from two or more nearby recording stations. Composite data are usually acceptable if the terrain between the stations and the site is level or only slightly rolling. If the terrain is hilly or mountainous, composite data may only have marginal validity. In extreme cases it may be necessary to obtain a minimum of 1 year of onsite wind observations. These meager records should be augmented with personal observations (wind-bent

trees, interviews with the local populace, etc.) to ascertain if a discernible wind pattern can be established. Airport development should not proceed until adequate wind data are acquired.

5. **ANALYZING WIND DATA.** One wind analysis procedure uses a scaled graphical presentation of wind information known as a windrose.

a. **Drawing the Windrose.** The standard windrose (figure A1-3) is a series of concentric circles cut by radial lines. The perimeter of each concentric circle represents the division between successive wind speed groupings. Radial lines are drawn so that the area between each successive pair is centered on the direction of the reported wind.

b. **Plotting Wind Data.** Each segment of the windrose represents a wind direction and speed grouping corresponding to the wind direction and speed grouping on the EDS summary. The recorded directions and speeds of the wind summary are converted to a percentage of the total recorded observations. Computations are rounded to the nearest one-tenth of 1 percent and entered in the appropriate segment of the windrose. Figure A1-4 illustrates a completed windrose based on data from figure A1-2. Plus (+) symbols are used to indicate direction and speed combinations which occur less than one-tenth of 1 percent of the time.

c. **Crosswind Template.** A transparent crosswind template is a useful aid in carrying out the windrose analysis. The template is essentially a series of three parallel lines drawn to the same scale as the windrose circles. The allowable crosswind for the runway width establishes the physical distance between the outer parallel lines and the centerline. When analyzing the wind coverage for a runway orientation, the design crosswind limit lines can be drawn directly on the windrose. NOTE: EDS wind directions are recorded on the basis of true north.

d. **Analysis Procedure.** The purpose of the analysis is to determine the runway orientation which provides the greatest wind coverage within the allowable crosswind limits. This can be readily estimated by rotating the crosswind template about the windrose center point until the sum of the individual segment percentages appearing between the outer "crosswind limit" lines is maximized. It is accepted practice to total the percentages of the segments appearing outside the limit lines and to subtract this number from 100. For analyses purposes, winds are assumed to be uniformly distributed throughout each of the individual segments. Figures A1-5 and A1-6 illustrate the analysis procedure as it would be used in determining the wind coverage for a runway, oriented 105-285, intended to serve all types of airplanes. The wind information is from figure A1-2. Several trial orientations may be needed before the orientation which maximizes wind coverage is found.

6. **CONCLUSIONS.** The example wind analysis shows that the optimum wind coverage possible with a single runway and a 13 -knot crosswind is 97.28 percent. If the analysis had shown that it was not possible to obtain at least 95-percent wind coverage with a single runway, then consideration should be given to provide an additional (crosswind) runway oriented to bring the combined wind coverage of the two runways to at least 95 percent.

7. **ASSUMPTIONS.** The analysis procedures assume that winds are uniformly distributed over the area represented by each segment of the windrose. The larger the area, the less accurate is this presumption. Therefore, calculations made using nonstandard windrose directions or speeds result in a derivation of wind coverage (and its associated justification for a crosswind runway) which is questionable.

8. **WIND ANALYSIS TOOL.** A wind analysis tool is available on the Airports-GIS website:
<http://airports-gis.faa.gov/public/>.


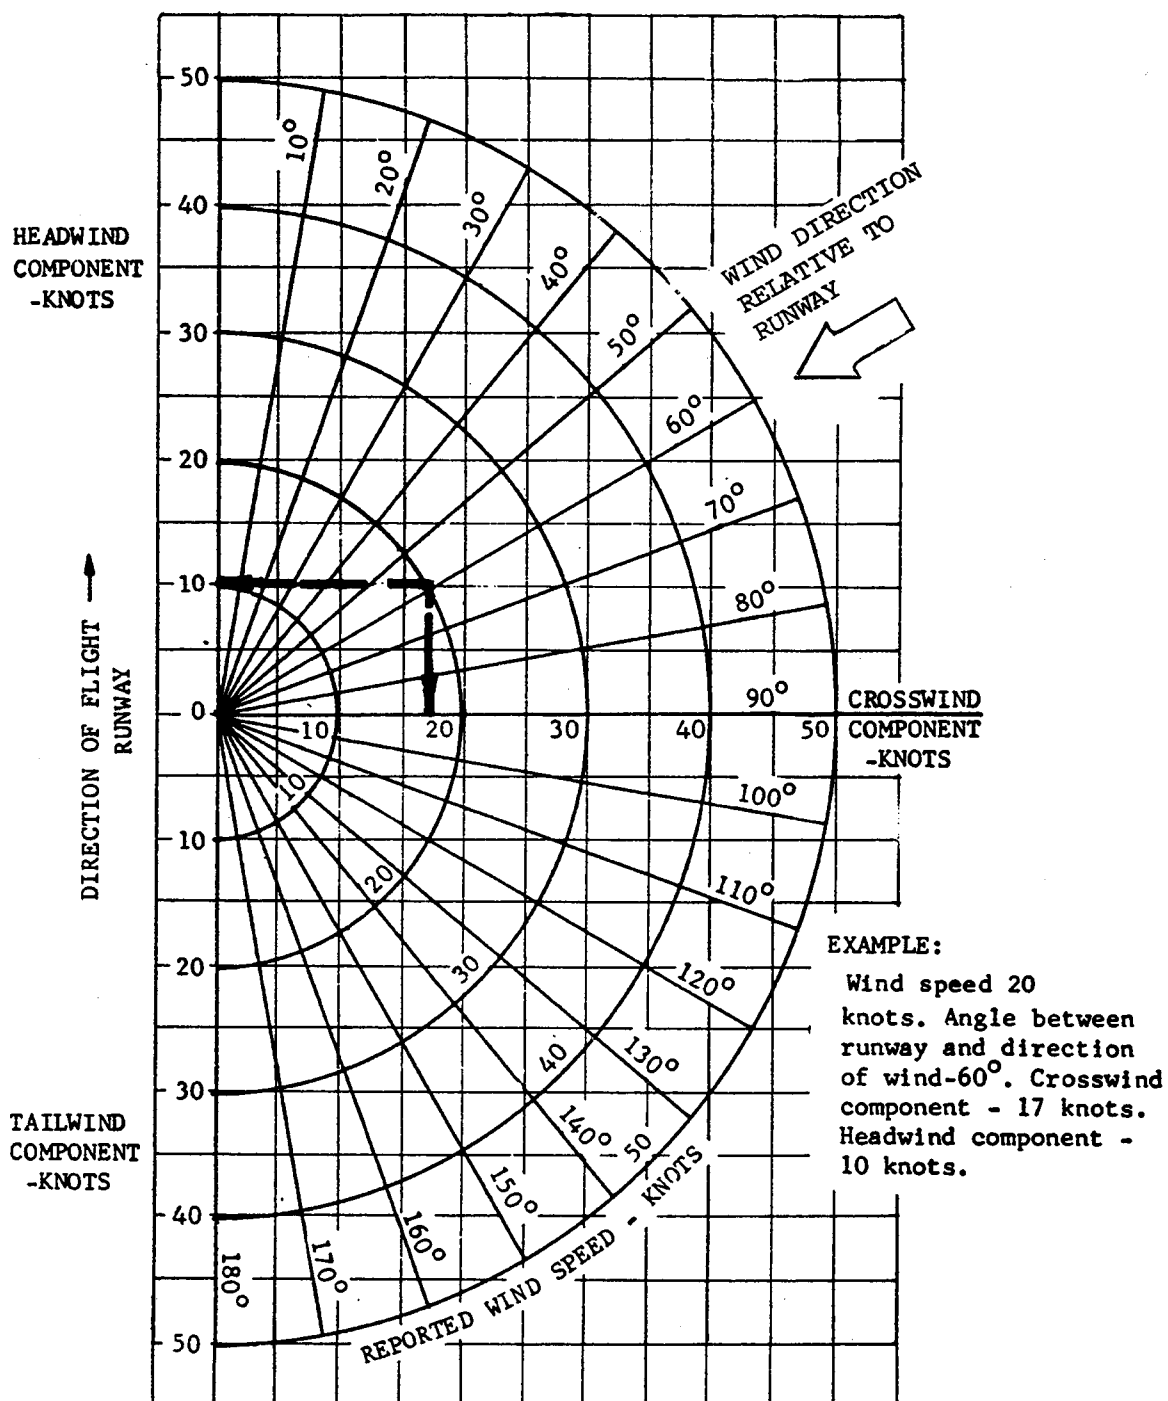


Figure A1-1. Wind vector diagram

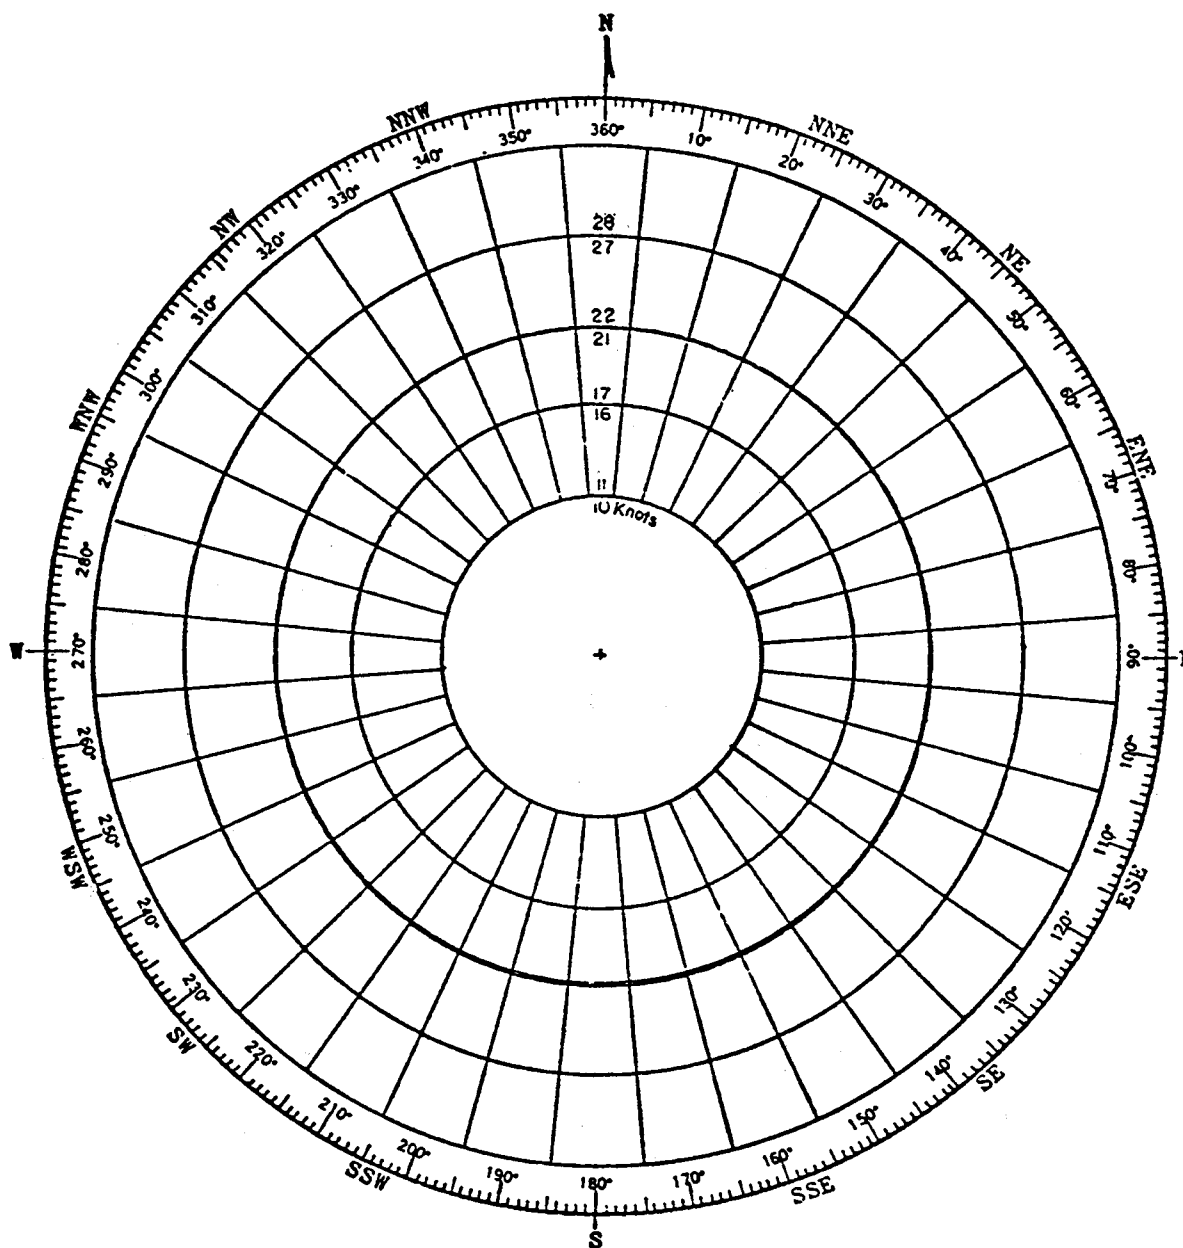

WIND SPEED DIVISIONS		RADIUS OF CIRCLE (KNOTS)
KNOTS	M.P.H.	
0 - 3.5	0 - 3.5	* 3.5 Units
3.5 - 6.5	3.5 - 7.5	* 6.5 "
6.5 - 10.5	7.5 - 12.5	10.5 - "
10.5 - 16.5	12.5 - 18.5	16.5 - "
16.5 - 21.5	18.5 - 24.5	21.5 - "
21.5 - 27.5	24.5 - 31.5	27.5 - "
27.5 - 33.5	31.5 - 38.5	*33.5 - "
33.5 - 40.5	38.5 - 46.5	*40.5 - "
40.5 - over	46.5 - over	

*May not be needed for
most windrose analyses.

Figure A1-3. Windrose blank showing direction and divisions


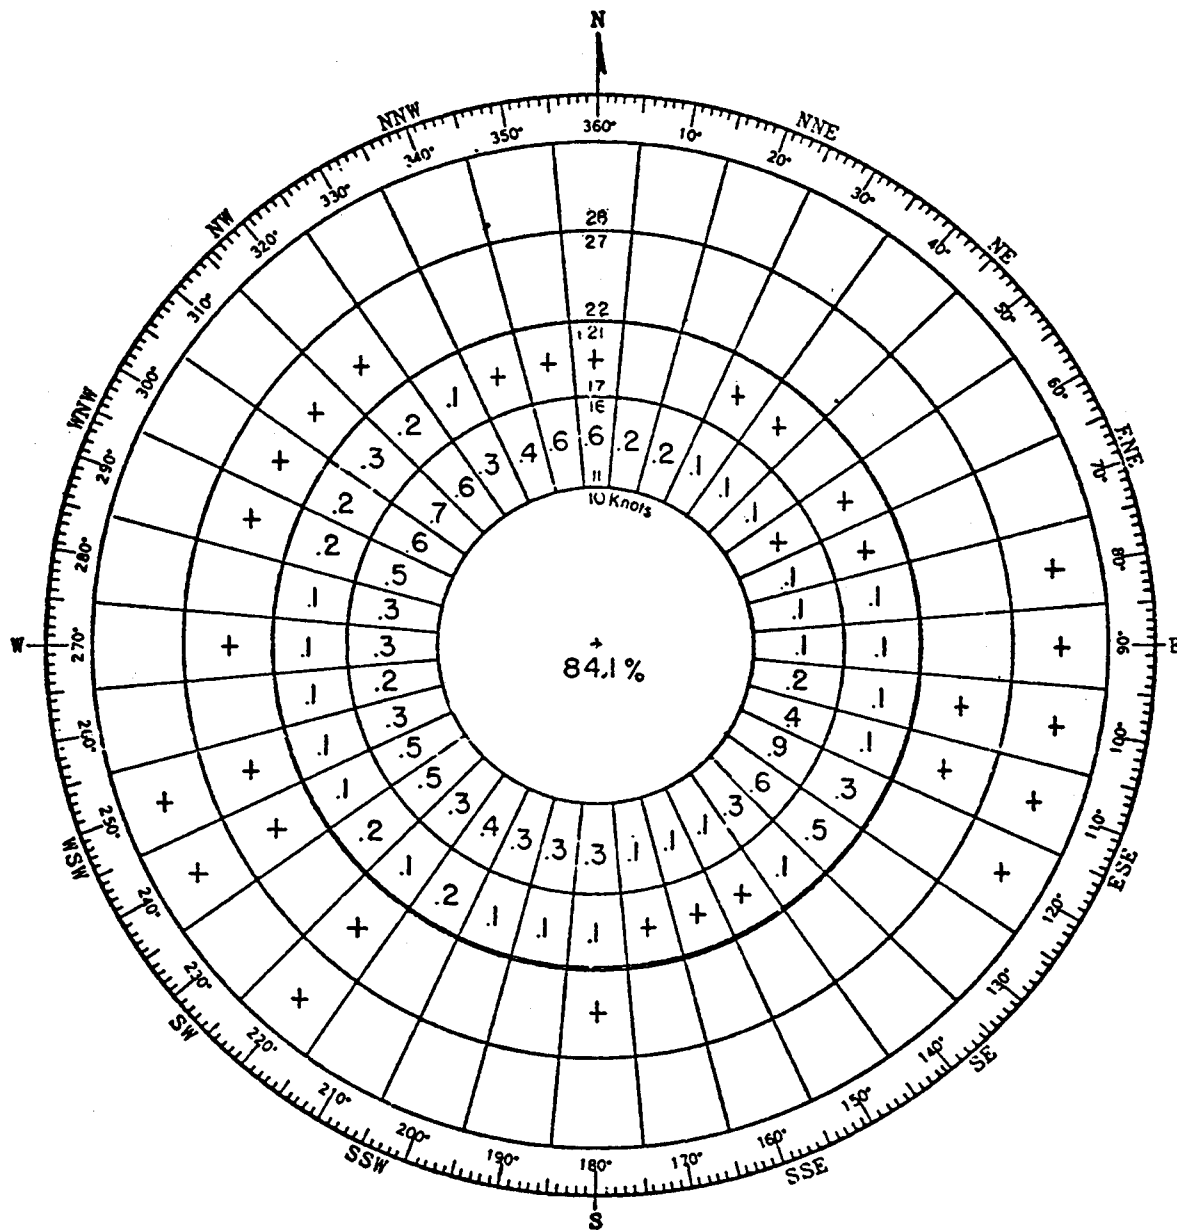


Figure A1-4. Completed windrose using figure A1-2 data

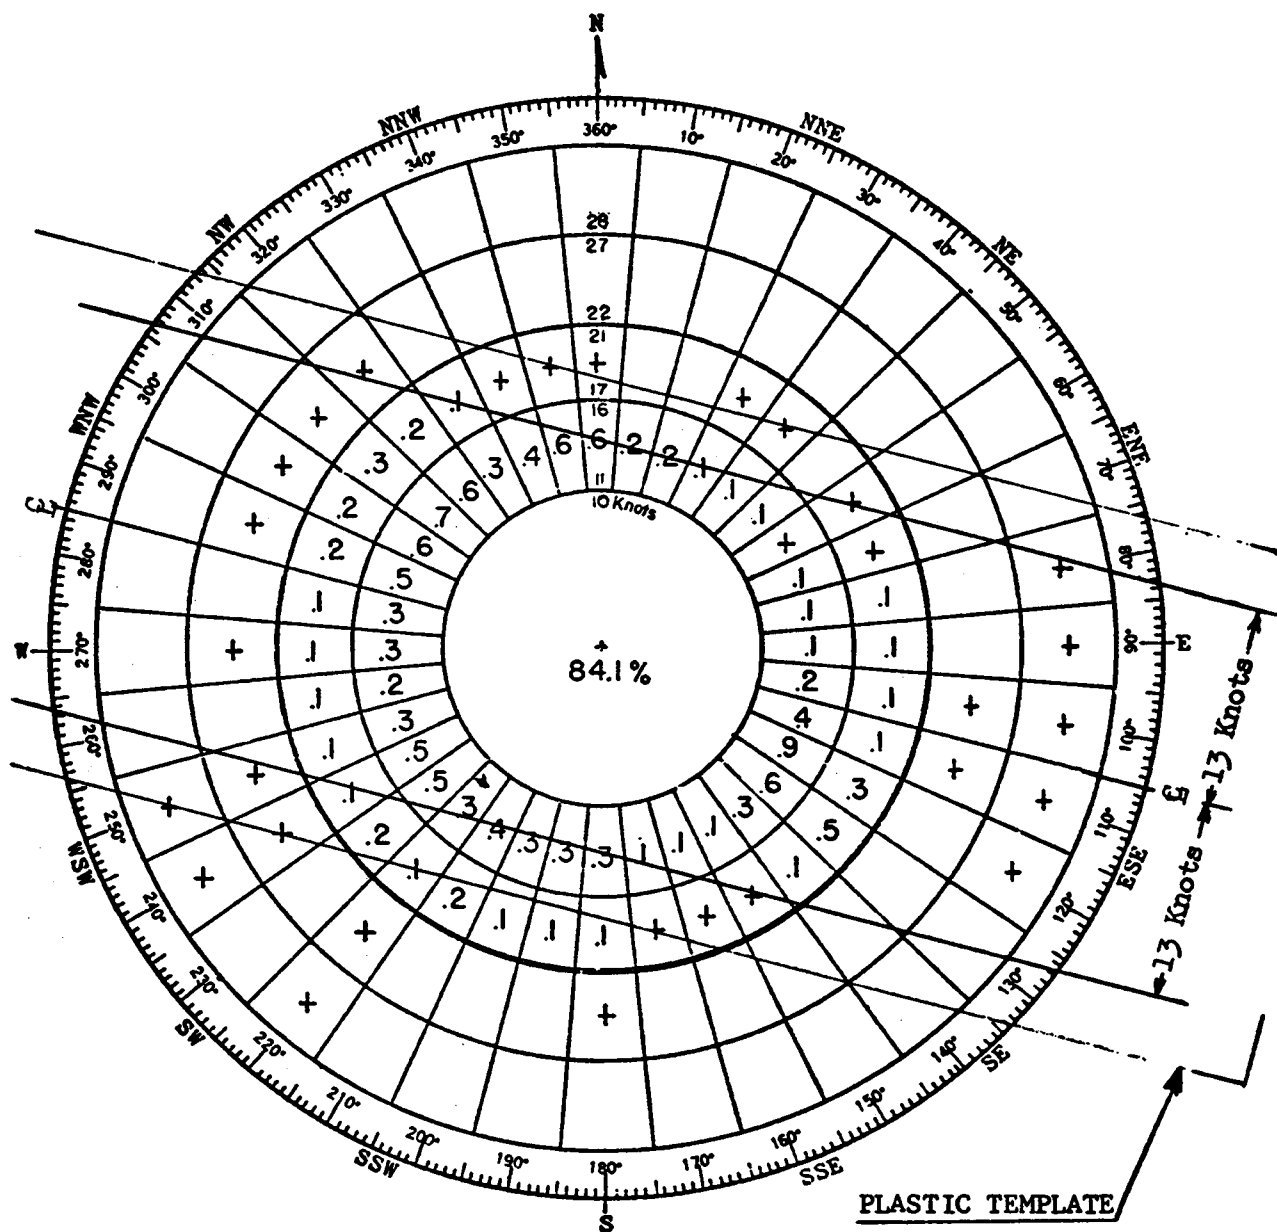

A runway oriented 105°-285° (true) would have 2.72% of the winds exceeding the design crosswind/crosswind component of 13 knots.

Figure A1-5. Windrose analysis

DIRECTION	ESTIMATED AREA NOT INCLUDED			
	11-16	17-21	22-27	28+
10	.12			
20	.12			
30	.05	+		
40	.04	+		
50	.01			
60		+		
70				
80			.01	+
90				
100				
110				
120				
130			.01	
140		.01		
150		+		
160	.01	+		
170	.04	+		
180	.14	.10	+	
190	.16	.10		
200	.16	.10		
210	.20	.20	+	
220	.11	.10	+	+
230	.03	.19		
240		.05	+	+
250		.01	+	+
260				
270				
280				
290				
300				
310				
320		.01	+	
330		.05		
340	.04	+		
350	.25	+		
360	.30	+		
SUM	1.78	.92	.02	+

1.78
.92
.02
2.72

100.00
2.72
97.28

100.00 - SUM = Coverage

100.00 - 2.72 = 97.28%
Coverage

Figure A1-6. Windrose analysis--estimating area not included

This page intentionally left blank.

Appendix 2. RUNWAY END SITING REQUIREMENTS

1. **PURPOSE.** This appendix contains guidance on siting thresholds to meet approach obstacle clearance requirements and departure obstacle clearance requirements.

2. **APPLICATION.**

a. The threshold should be located at the beginning of the full-strength runway pavement or runway surface. However, displacement of the threshold may be required when an object that obstructs the airspace required for landing and/or departing airplanes is beyond the airport owner's power to remove, relocate, or lower. Thresholds may also be displaced for environmental considerations, such as noise abatement, or to provide the standard RSA and ROFA lengths.

b. When a hazard to air navigation exists, the amount of displacement of the threshold or reduction of the TODA should be based on the operational requirements of the most demanding airplanes. The standards in this appendix minimize the loss of operational use of the established runway and reflect the FAA policy of maximum utilization and retention of existing paved areas on airports.

c. Displacement of a threshold reduces the length of runway available for landings. Depending on the reason for displacement of the threshold, the portion of the runway behind a displaced threshold may be available for takeoffs in either direction and landings from the opposite direction. Refer to Appendix 14, Declared Distances, for additional information.

d. Where specifically noted, the Glidepath Angle (GPA) and Threshold Crossing Height (TCH) of a vertically guided approach may be altered (usually increased) rather than displacing the threshold. Examples of approaches with positive vertical guidance include Instrument Landing System (ILS), Microwave Landing System (MLS), Localizer Performance with Vertical Guidance (LPV), Lateral Navigation/Vertical Navigation (LNAV/VNAV), and required navigation performance (RNP). Alternatively, a combination of threshold displacement and altering of the Glidepath Angle/Threshold Crossing Height (GPA/TCH) may also be accomplished. Guidelines for maximum and minimum values of TCH and GPA are contained in FAA Order 8260.3, *United States Standard for Terminal Instrument Procedures (TERPS)*. The tradeoff between threshold displacement, TCH, and GPA is complex, but can be analyzed by applying formula contained in the order. Contact the appropriate FAA Airports Regional or District

Office for assistance on the specific requirements and effects of GPA and TCH changes.

3. **LIMITATIONS.**

a. These standards should not be interpreted as an FAA blanket endorsement of the alternative to displace or relocate a runway threshold. Threshold displacement or relocation should be undertaken only after a full evaluation reveals that displacement or relocation is the only practical alternative.

b. The standards in this appendix are applicable for identifying objects affecting navigable airspace. See Title 14 Code of Federal Regulations Part 77, Safe, Efficient Use, and Preservation of the Navigable Airspace.

4. **EVALUATION CONSIDERATIONS.**

a. **Possible Actions.** When a penetration to a threshold siting surface defined in paragraph 5 exists, one or more of the following actions are required:

(1) **Approach Surfaces.**

(a) The object is removed or lowered to preclude penetration of applicable threshold siting surfaces;

(b) The threshold is displaced to preclude object penetration of applicable threshold siting surfaces, with a resulting shorter landing distance; or

(c) The GPA and/or TCH is/are modified, or a combination of threshold displacement and GPA/TCH increase is accomplished.

(d) Visibility minimums are raised.

(e) Night operations are prohibited unless the obstruction is lighted or an approved Visual Glide Slope Indicator (VGSI) is used.

(2) **Departure Surfaces for Designated Runways.** The applicability of the surface defined in Table A2-1 is dependant on the designation of primary runway(s) for departure. The Airport Sponsor, through the Airports District Office to the Regional Airspace Procedures Team (RAPT), will identify runway end(s) intended primarily for instrument departures. The determination of primary runway(s) for departure does not prohibit or negate the use of other runways. It only identifies the applicability of the surface in Table A2-1 to the runway end(s).

(a) Remove, relocate, or lower (or both relocate and lower) the object to preclude penetration of applicable siting surfaces unless it is fixed by function and/or designated impracticable. Within 6000' of the Table A2-1 surface origin, objects less than or equal to an elevation determined by application of the formula below are allowable.

$$E + (0.025 \times D)$$

Where:

E = DER elevation

D = Distance from OCS origin to object in feet

(b) Decrease the Takeoff Distance Available (TODA) to preclude object penetration of applicable siting surfaces, with a resulting shorter takeoff distance (the Departure End of the Runway (DER) is coincident with the end of the TODA where a clearway is not in effect); or

(c) Modify instrument departures. Contact the Flight Procedures Office (FPO) for guidance. Objects penetrating by < 35 feet may not require actions (a) or (b); however, they will impact departure minimums/climb gradients or departure procedures.

b. Relevant Factors for Evaluation.

(1) Types of airplanes that will use the runway and their performance characteristics.

(2) Operational disadvantages associated with accepting higher landing/ takeoff minimums.

(3) Cost of removing, relocating, or lowering the object.

(4) Effect of the reduced available landing/takeoff length when the runway is wet or icy.

(5) Cost of extending the runway if insufficient runway length would remain as a result of displacing the threshold. The environmental aspects of a runway extension need to also be evaluated under this consideration.

(6) Cost and feasibility of relocating visual and electronic approach aids, such as threshold lights, visual glide slope indicator, runway end identification lights, localizer, glide slope (to provide a threshold crossing

height of not more than 60 feet (18 m)), approach lighting system, and runway markings.

(7) Effect of the threshold change on noise abatement.

5. **CLEARANCE REQUIREMENTS.** The standard shape, dimensions, and slope of the surface used for locating a threshold are dependent upon the type of aircraft operations currently conducted or forecasted, the landing visibility minimums desired, and the types of instrumentation available or planned for that runway end.

a. **Approaches with Vertical Guidance.** Table A2-1 and Figure A2-1 describe the clearance surfaces required for instrument approach procedures with vertical guidance.

The Glidepath Qualification Surface (GQS) limits the height of obstructions between Decision Altitude (DA) and runway threshold (RWT). When obstacles exceed the height of the GQS, an approach procedure with vertical guidance (ILS, PAR, MLS, TLS, LPV, LNAV/VNAV, etc.) is not authorized. Further information can be found in the appropriate TERPS criterion.

b. **Instrument Approach Procedures Aligned with the Runway Centerline.** Table A2-1 and Figure A2-1 describe the minimum clearance surfaces required for instrument approach procedures aligned with the runway centerline.

c. **Procedures Not Aligned with the Runway Centerline.** To accommodate for offset procedures, follow the steps in Figure A2-2 to determine the offset boundary. The surface slope is as specified in the applicable paragraph, according to Table A2-1.

d. **Locating or Determining the DER.** The standard shape, dimensions, and slope of the departure surface used for determining the DER, as defined in TERPS, is only dependent upon whether or not instrument departures are being used or planned for that runway end. See Table A2-1 and Figures A2-1 and A2-2 for dimensions.

Subparagraph 5d(2) applies only to runways supporting Air Carrier departures and is not to be considered a clearance surface.

(1) For Departure Ends at Designated Runways.

(a) No object should penetrate a surface beginning at the elevation of the runway at the DER or end of clearway, and slopes at 40:1. Penetrations by existing obstacles of 35 feet or less would not require TODA reduction or other mitigations found in paragraph 4; however, they may affect new or existing departure procedures.

(2) Departure Runway Ends Supporting Air Carrier Operations.

(a) Objects should be identified that penetrate a one-engine inoperative (OEI) obstacle identification surface (OIS) starting at the DER and at the elevation of the runway at that point, and slopes upward at 62.5:1. See Figure A2-4. **Note:** This surface is provided for information only and does not take effect until January 1, 2012.

Table A2-1. Approach/Departure Requirements Table

	Runway Type	DIMENSIONAL STANDARDS* Feet					Slope/ OCS
		A	B	C	D	E	
1	Approach end of runways expected to serve small airplanes with approach speeds less than 50 knots. (Visual runways only, day/night)	0	60	150	500	2,500	15:1
2	Approach end of runways expected to serve small airplanes with approach speeds of 50 knots or more. (Visual runways only, day/night)	0	125	350	2,250	2,750	20:1
3	Approach end of runways expected to serve large airplanes (Visual day/night); or instrument minimums ≥ 1 statute mile (day only).	0	200	500	1,500	8,500	20:1
4	Approach end of runways expected to support instrument night operations, serving approach category A and B aircraft only. ¹	200	200	1,900	10,000 ²	0	20:1
5	Approach end of runways expected to support instrument night operations serving greater than approach category B aircraft. ¹	200	400	1,900	10,000 ²	0	20:1
6	Approach end of runways expected to accommodate instrument approaches having visibility minimums ≥ 3/4 but < 1 statute mile, day or night.	200	400	1,900	10,000 ²	0	20:1
7	Approach end of runways expected to accommodate instrument approaches having visibility minimums < 3/4 statute mile or precision approach (ILS, GLS, or MLS), day or night.	200	400	1,900	10,000 ²	0	34:1
8	Approach runway ends having Category II approach minimums or greater.	The criteria are set forth in TERPS, Order 8260.3.					
9	Approach end of runways expected to accommodate approaches with vertical guidance [Glideslope Qualification Surface (GQS).]	0	1/2 width runway +100	760	10,000 ²	0	30:1
10	Departure runway ends for all instrument operations.	0 ⁴	See Figure A2-3				40:1
11	Departure runway ends supporting Air Carrier operations. ⁵	0 ⁴	See Figure A2-4				62.5:1

* The letters are keyed to those shown in Figure A2-1.

Notes:

1. Marking & Lighting of obstacle penetrations to this surface or the use of a VGSI, as defined by the TERPS order, may avoid displacing the threshold.
2. 10,000 feet is a nominal value for planning purposes. The actual length of these areas is dependent upon the visual descent point position for 20:1 and 34:1 and Decision Altitude point for the 30:1.
3. When obstacles exceed the height of the GQS, an approach procedure with vertical guidance (ILS, PAR MLS, TLS, LPV, LNAV/VNAV, etc.) is not authorized. No vertical approaches will be authorized until the penetration(s) is/are removed except obstacles fixed by function and/or allowable grading (paragraphs 305 and 308).
4. Dimension A is measured relative to Departure End of Runway (DER) or TODA (to include clearway).
5. Data Collected regarding penetrations to this surface are provided for information and use by the air carriers operating from the airport. These requirements do not take effect until January 1, 2012.

6. Surface dimensions/Obstacle Clearance Surface (OCS) slope represent a nominal approach with 3 degree GPA, 50'TCH, <500' HATh. For specific cases refer to TERPS. The Obstacle Clearance Surface slope (30:1) supports a nominal approach of 3 degrees (also known as the Glide Path Angle). This assumes a threshold crossing height of 50 feet. Three degrees is commonly used for ILS systems and VGSI aiming angles. This approximates a 30:1 approach angle that is between the 34:1 and the 20:1 notice surfaces of Part 77. Surfaces cleared to 34:1 should accommodate a 30:1 approach without any obstacle clearance problems.
7. For runways with vertically guided approaches the criteria in Row 9 is in addition to the basic criteria established within the table, to ensure the protection of the Glidepath Qualification Surface (GQS).
8. For planning purposes, sponsors and consultants determine a tentative Decision Altitude based on a 3° Glidepath angle and a 50-foot Threshold Crossing Height.

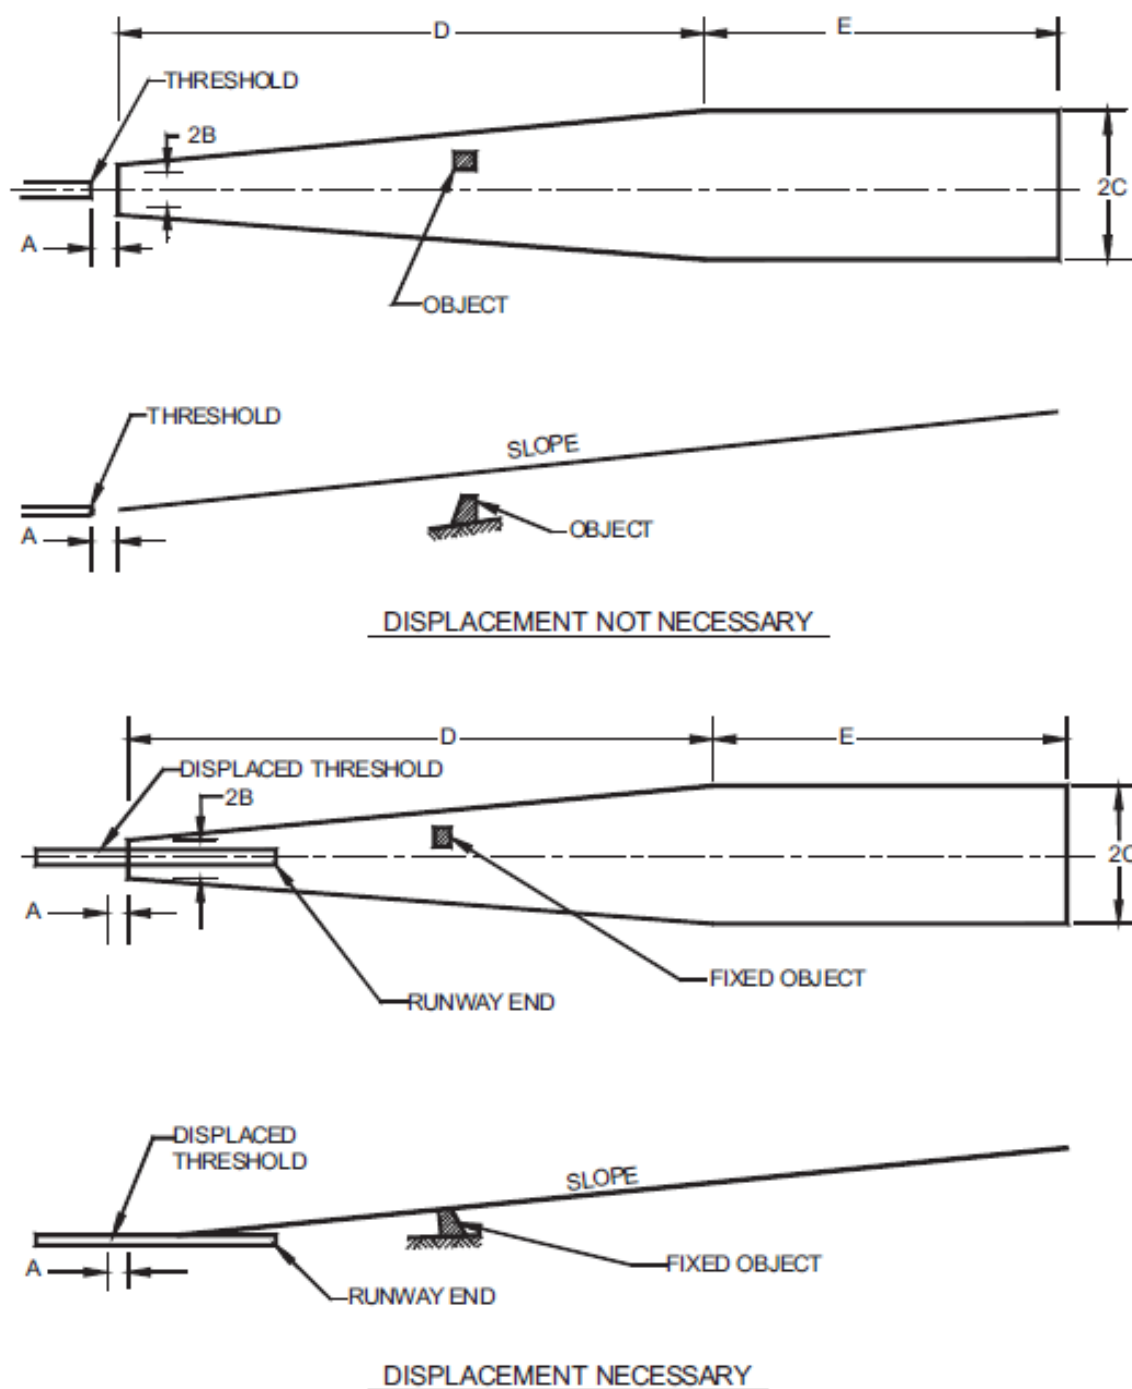


Figure A2-1. Approach slopes


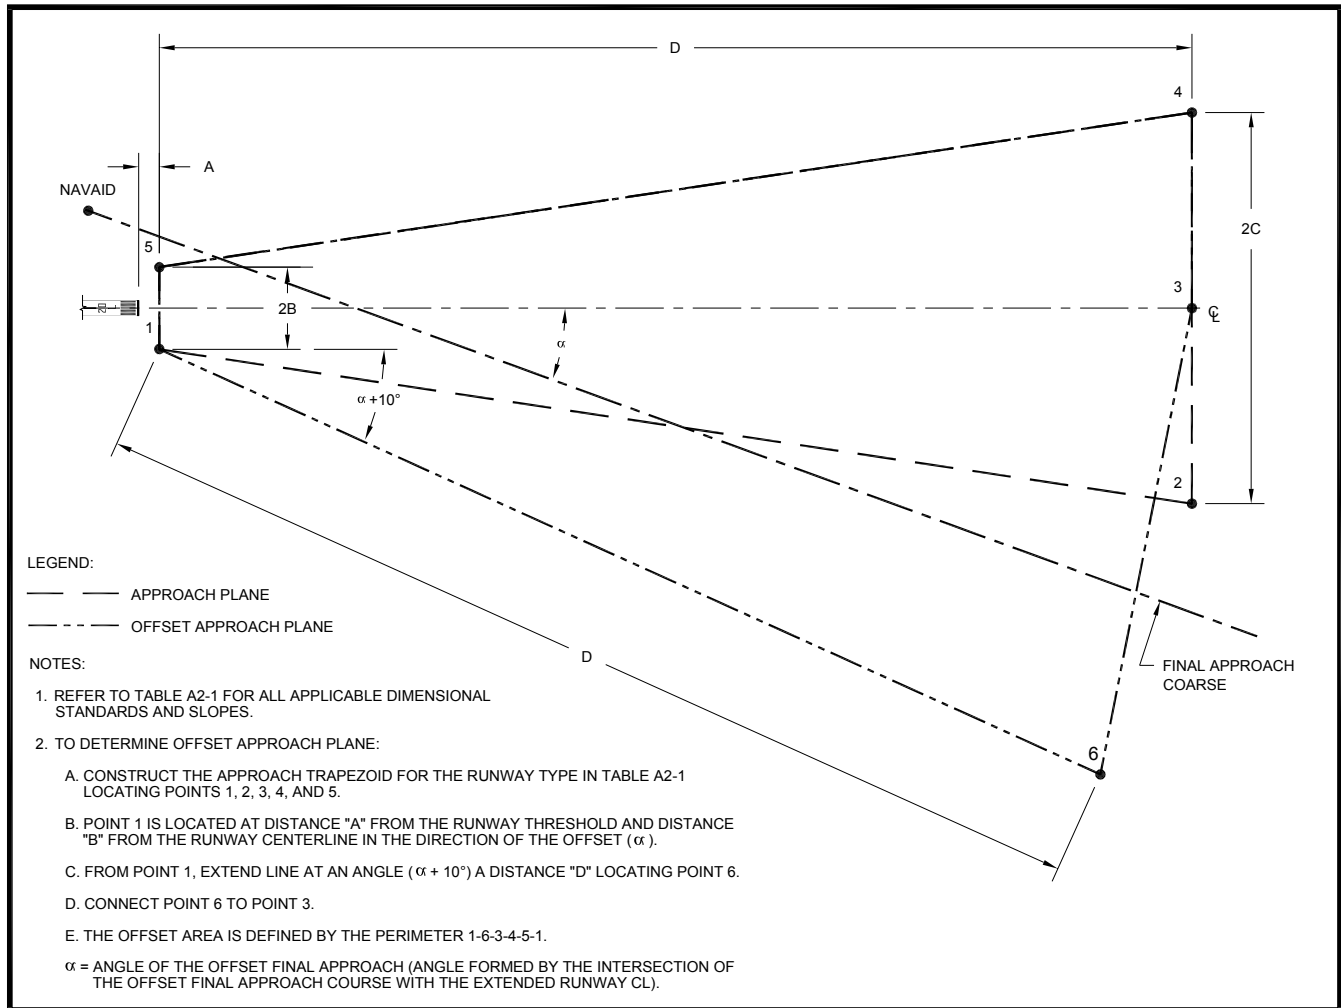


Figure A2-2. Offset Approach Course

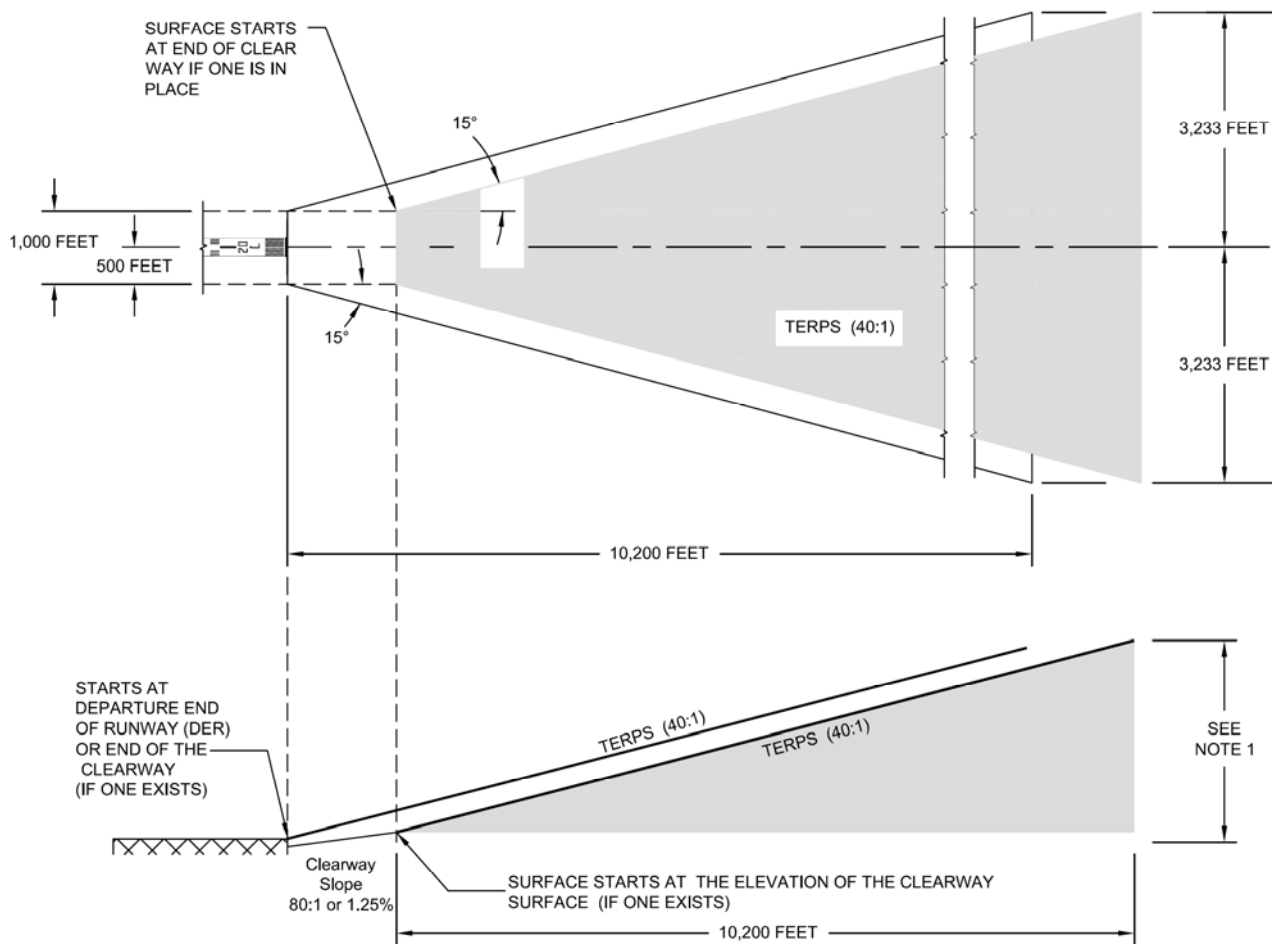

NOTES:

1. THIS IS AN INTERPRETATION OF THE APPLICATION OF THE TERPS SURFACE ASSOCIATED WITH A CLEARWAY.

Figure A2-3. Departure surface for Instrument Runways TERPS (40:1)

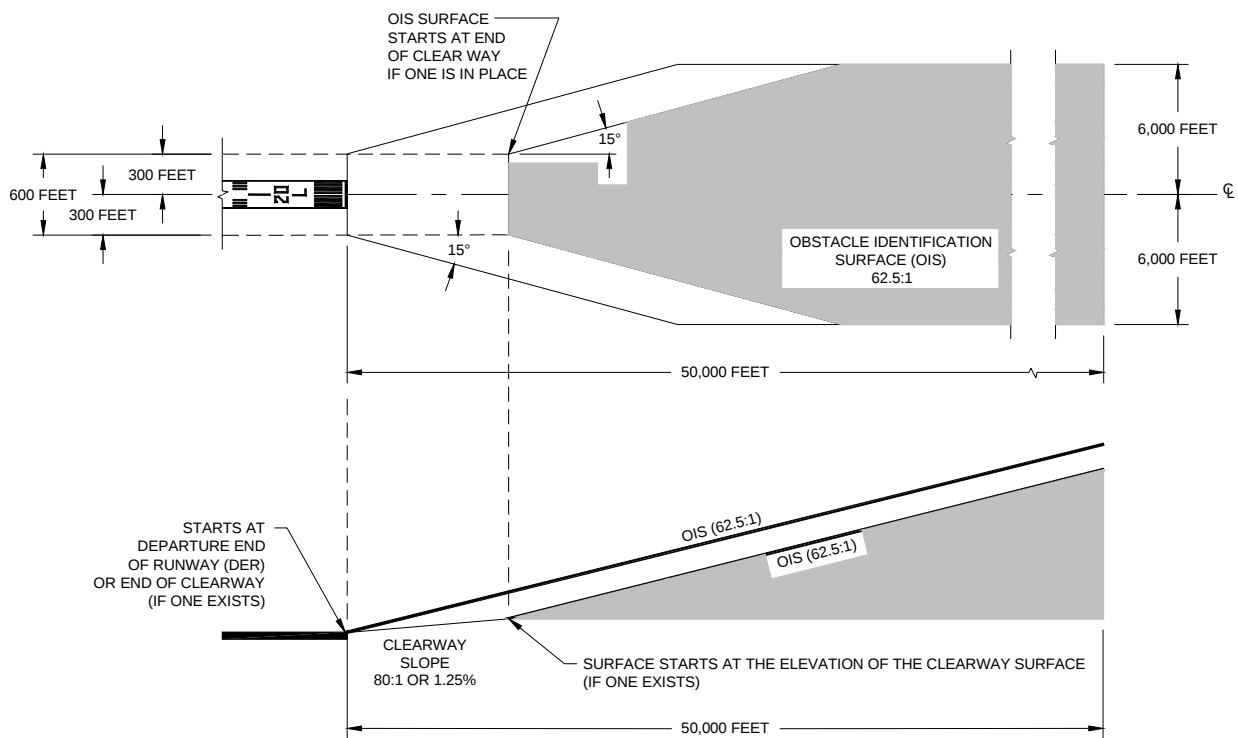


Figure A2-4. One-Engine Inoperative (OEI) Obstacle Identification Surface (62.5:1)

Appendix 3. AIRPORT REFERENCE POINT

1. DISCUSSION.

a. The airport reference point (ARP) geographically locates the airport horizontally. The ARP is normally not monumented or physically marked on the ground. The computation of this point uses only runway length.

b. Meaningful airport reference point computations use the ultimate runway lengths proposed for development. These computations do not use closed or abandoned areas. The FAA approved airport layout plan shows the ultimate development. If there is no airport layout plan, the ultimate runway lengths are the existing runways plus those that have airspace approval, less closed or abandoned areas.

c. The ARP is computed or recomputed as infrequently as possible. The only time that a recomputation is needed is when the proposed ultimate development is changed.

2. SAMPLE COMPUTATION. The following procedure determines the location of the airport reference point used in FAR Part 77 studies.

a. Establish two base lines perpendicular to each other as shown in Figure A3-1. Let the northerly base line be known as B and the westerly as A.

b. Establish the midpoint of each runway.

c. Determine the perpendicular distance from the base lines to the midpoints.

d. Calculate the moment of areas for each base line as shown in Figure A3-2.

e. Divide each moment of area by the sum of areas to determine distance of the ARP from each base line.

f. The location is converted into latitude and longitude.

3. ACCURACY. The latitude and longitude should be to the nearest second. Installation of navigational aids may need coordinates to the nearest tenth of a second. Coordinate with the appropriate FAA Airway Facilities field office to ascertain the need for accuracy closer than the nearest second.

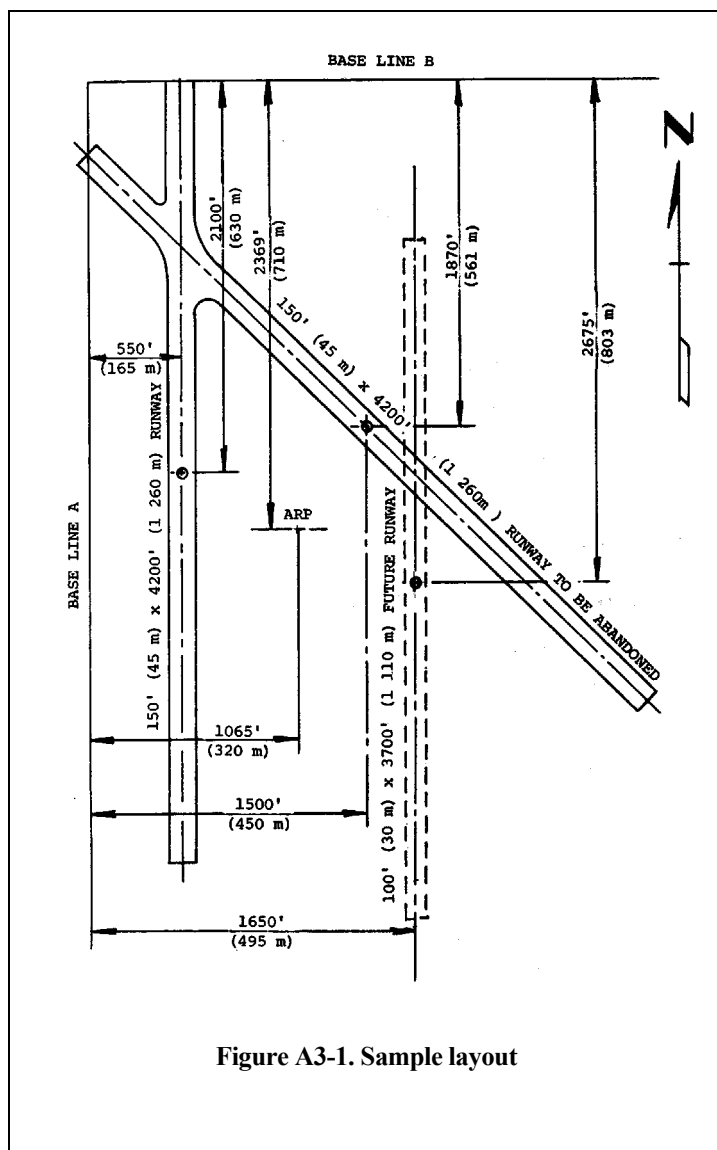


Figure A3-1. Sample layout

U.S. Customary Units

BASE LINE A:

$$\begin{array}{rclcl} 4,200 & \times & 550 & = & 2,310,000 \\ \underline{3,700} & \times & 1,650 & = & \underline{6,105,000} \\ 7,900 & & & & 8,415,000 \end{array}$$

$$= \frac{8,415,000}{7,900} = 1,065'$$

BASE LINE B:

$$\begin{array}{rclcl} 4,200 & \times & 2,100 & = & 8,820,000 \\ \underline{3,700} & \times & 2,675 & = & \underline{9,897,500} \\ 7,900 & & & & 18,717,500 \end{array}$$

$$= \frac{18,717,500}{7,900} = 2,369'$$

Metric Units

BASE LINE A:

$$\begin{array}{rclcl} 1\,266 & \times & 165 & = & 207\,900 \\ \underline{1\,110} & \times & 495 & = & \underline{549\,450} \\ 2\,370 & & & & 757\,350 \end{array}$$

$$= \frac{757\,350}{2\,370} = 320\text{ m}$$

BASE LINE B:

$$\begin{array}{rclcl} 1\,266 & \times & 630 & = & 793\,800 \\ \underline{1\,110} & \times & 803 & = & \underline{891\,330} \\ 2\,370 & & & & 1\,685\,130 \end{array}$$

$$= \frac{1\,685\,130}{2\,370} = 710\text{ m}$$

Note: Since the diagonal runway is to be abandoned, it is not used in the computation.

Figure A3-2. Sample computation – airport reference point

Appendix 4. COMPASS CALIBRATION PAD

1. **PURPOSE.** This appendix provides guidelines for the design, location and construction of a compass calibration pad and basic information concerning its use in determining the deviation error in an aircraft magnetic compass.

2. **BACKGROUND.**

a. An aircraft magnetic compass is a navigation instrument with certain inherent errors resulting from the nature of its construction. All types of magnetic compasses indicate direction with respect to the earth's magnetic field. This is true even for the gyro-stabilized and/or fluxgate compasses. Aircraft navigation is based on applying the appropriate angular corrections to the magnetic reading in order to obtain the true heading.

b. The aircraft magnetic compass should be checked following pertinent aircraft modifications and on a frequent, routine schedule. One method of calibrating the compass is to use a compass calibration pad to align the aircraft on known magnetic headings and make adjustments to the compass and/or placard markings to indicate the required corrections. There are other methods available for calibrating a magnetic compass, but for small aircraft the method outlined herein is normally used.

3. **APPLICATION.**

a. The process of aligning an aircraft on known magnetic headings for the purpose of determining the degree of error in the magnetic compass is commonly referred to as "swinging the compass." The technique which should be used is as follows:

(1) Place the aircraft on a compass calibration pad.

(2) Place the aircraft in level flying position.

(3) Remove compensating magnets from chambers or reset the fixed compensating magnets to neutral position, whichever is applicable, before swinging.

(4) Check indicator for fluid level and cleanliness. If fluid is required, the compass is defective.

(5) Check the pivot friction of the indicator by deflecting the card with a small magnet. The card should rotate freely in a horizontal plane.

(6) If a radio is used in the aircraft, there should be corrections noted for "radio on" and "radio off" conditions.

(7) Align the aircraft with the north magnetic heading and make the indicated reading correspond to the actual magnetic reading by use of the compensating magnets. Repeat for the east magnetic heading. Then place on south and west magnetic headings and remove half of indicated error by adjusting compensators. Engine(s) should be running.

(8) Turn the aircraft on successive 30-degree headings through 360 degrees. Placards should be marked to indicate correction at each 30-degree heading showing "radio on" and "radio off" corrections.

b. Calibration and adjustment of remote indicating gyro compasses, polar path compasses, and other systems of this type should be by a qualified instrument technician.

4. **DESIGN OF COMPASS CALIBRATION PAD.**

The design details shown in this appendix should be considered as guidance only and variations of these designs are acceptable provided the general requirements are met.

a. The compass calibration pad provides a series of 12 radials, either painted on with nonmetallic paint or inlaid in the surface of the calibration pad, extending toward predetermined magnetic directions every 30 degrees beginning with magnetic north. Each radial should be marked with three separate magnetic headings; one at the end of the radial indicating the direction along which each line lies; and one on each side of the line which indicates the magnetic heading of the aircraft when it is oriented at 90 degrees to the radial. Markings facing the pilot must correspond to the airplane's heading when traveling in that direction. The markings must be large enough to be easily read from the aircraft cockpit as the radial is being approached. The last zero may be dropped from the heading designation. Figure A4-1 shows a layout of markings.

b. Figures A4-2 and A4-3 depict suggested types of calibration pads. Type I, as shown in figure A4-2, can be either rigid or flexible pavement construction. Type II, as shown in figure A4-3, is applicable only to rigid pavements. The pavement thickness of either type shall be as required to support the user aircraft in a critical area in accordance with AC 150/5320-6. The concrete pavements, joint type, and spacing shall conform to standard practices, without no magnetic materials. Therefore, dowels (where required) shall be of aluminum, brass, or bronze, rather than steel.

c. Make the size of the calibration pad compatible with the requirements of the user aircraft. For small airplanes make the radius of the pad 50 feet (15 m); for basic transports make the radius 60 feet (18 m); for large two- and three-engine jets, other than basic transports, and all large propeller-driven airplanes make the radius 80 feet (24 m); and for large four-engine jets, other than basic transports, make the radius 110 feet (33 m). For aircraft over 300,000 pounds (136 000 kg), an analysis of the turning area required for the aircraft will be necessary to determine adaptability to the dimensions specified herein.

d. The Type II compass calibration pad shown in figure A4-3 provides wheel slots to assist in true alignment of aircraft normal to each radial. It may be desirable to construct a special device for use in obtaining true alignment for the calibration pad shown in figure A4-2. One method of establishing control points consists of hollow shell non-magnetic inserts along each radial. A wooden block with aluminum or bronze bolts to fit into the center hole of the brass insert can then be used to provide an accurate alignment of the aircraft wheels. Figure A4-1 shows design details of this system.

e. There are many satisfactory ways of providing a device to wheelblock an aircraft to obtain the required alignment, and the exact method is left to the discretion of the design engineer. The method detailed in Figure A4-1 is one suggestion. One alternative which comes to mind is the possibility of forming holes in the concrete with some form of removable dowel, rather than constructing the specially built brass inserts.

5. LOCATION OF COMPASS CALIBRATION PAD. The requirements specified herein have been determined through consultation with instrument calibration specialists, fixed base operators, and persons

in the Geological Survey with considerable experience in performing surveys of compass calibration pads.

a. Locate the site at least 300 feet (90 m) from power and communication cables (both above and below ground) and from other aircraft. Locate the site at least 600 feet (180 m) from large magnetic objects such as buildings, railroad tracks, high voltage electrical transmission lines, or cables carrying direct current (either above or below ground). In order to prevent interference with electronic navigational aid facilities located on the airport, make sure that the required clearances are maintained as specified in chapter 6. Control cables, runway and taxiway light bases or sign fixtures, pipelines, ducts, grates for drainage, distance remaining signs, and aircraft arresting gear should be avoided when they contain ferrous materials.

b. The compass calibration pad must be located off the side of a taxiway or runway a sufficient distance to satisfy the runway and taxiway clearances applicable to the airport on which it is located.

c. After tentative selection of a site through visual application of appropriate criteria contained herein, make a thorough magnetic survey of the site. Many sites which meet all visually applied criteria regarding distances from structures, etc., still are unsatisfactory because of locally generated or natural magnetic anomalies. At locations near heavy industrial areas, intermittent magnetic variations may be experienced and sufficient surveys at various periods of time are necessary to ascertain if this situation exists.

d. The difference between magnetic and true north must be uniform in the vicinity of the site. Make sufficient surveys to determine that the angular difference between true and magnetic north measured at any point does not differ from the angular difference measured at any other point by more than one-half degree within a space between 2 and 10 feet (0.6 and 3 m) above the surface of the base and extending over an area within a 250-foot (75 m) radius from the center.

6. CONSTRUCTION OF COMPASS CALIBRATION PAD. For pavement construction, the applicable portions of AC 150/5320-6 should be used. The following additional information is important:

a. Do not use magnetic materials, such as reinforcing steel or ferrous aggregate, in the construction of the calibration pad or of any pavement within a 300-foot (90 m) radius of the center of the

site. If a drainage pipe is required within 300 feet (90 m) of the center of the site, use a nonmetallic or aluminum culvert.

b. Each of the radials is oriented within one minute of the magnetic bearing indicated by its markings.

c. Mark the date of observation and any annual change in direction of magnetic north durably and legibly on the surface of the calibration pad near the magnetic north mark. It would be well to establish a permanent monument at some remote location on the true north radial for future reference.

d. The U.S. Geological Survey of the Department of Interior is available to conduct the necessary surveys to determine the difference between true and magnetic north and the uniformity of this difference. The cost for this service is that necessary to cover the expense to the U.S. Geological Survey. Requests for this service should be made to the following:

National Geometric Information Center
U.S. Geomagnetic Survey
Box 25046 MS 968
Denver, Colorado 80225-0046 USA
Tel: 1(303)273-8486 Fax: 1(303)273-8450
Public Web Site: <http://geomag.usgs.gov>

There are also many other competent registered surveyors or engineers who are capable of performing these surveys. It is recommended that a qualified engineer be employed to lay out the work in the field and to design the pavement for the critical aircraft that can reasonably be expected to use the pad.

e. After all construction work on the compass pad is completed, it is advisable to have the pad magnetically resurveyed to guard against the possibility of objectionable magnetic materials being introduced during the construction.

f. Magnetic surveys of existing compass calibration pads should be performed at regular intervals of 5 years or less. Additional surveys should be performed after major construction of utility lines, buildings, or any other structures within 600 feet (180 m) of the center of the pad.

7. VOR CHECKPOINT. At some airports, it may be advantageous to collocate a VOR checkpoint with the compass calibration pad. In such instances, the requirements presented in paragraph 201.3212 of FAA Handbook OA P 8200.1, United States Standard Flight Inspection Manual, should be followed.

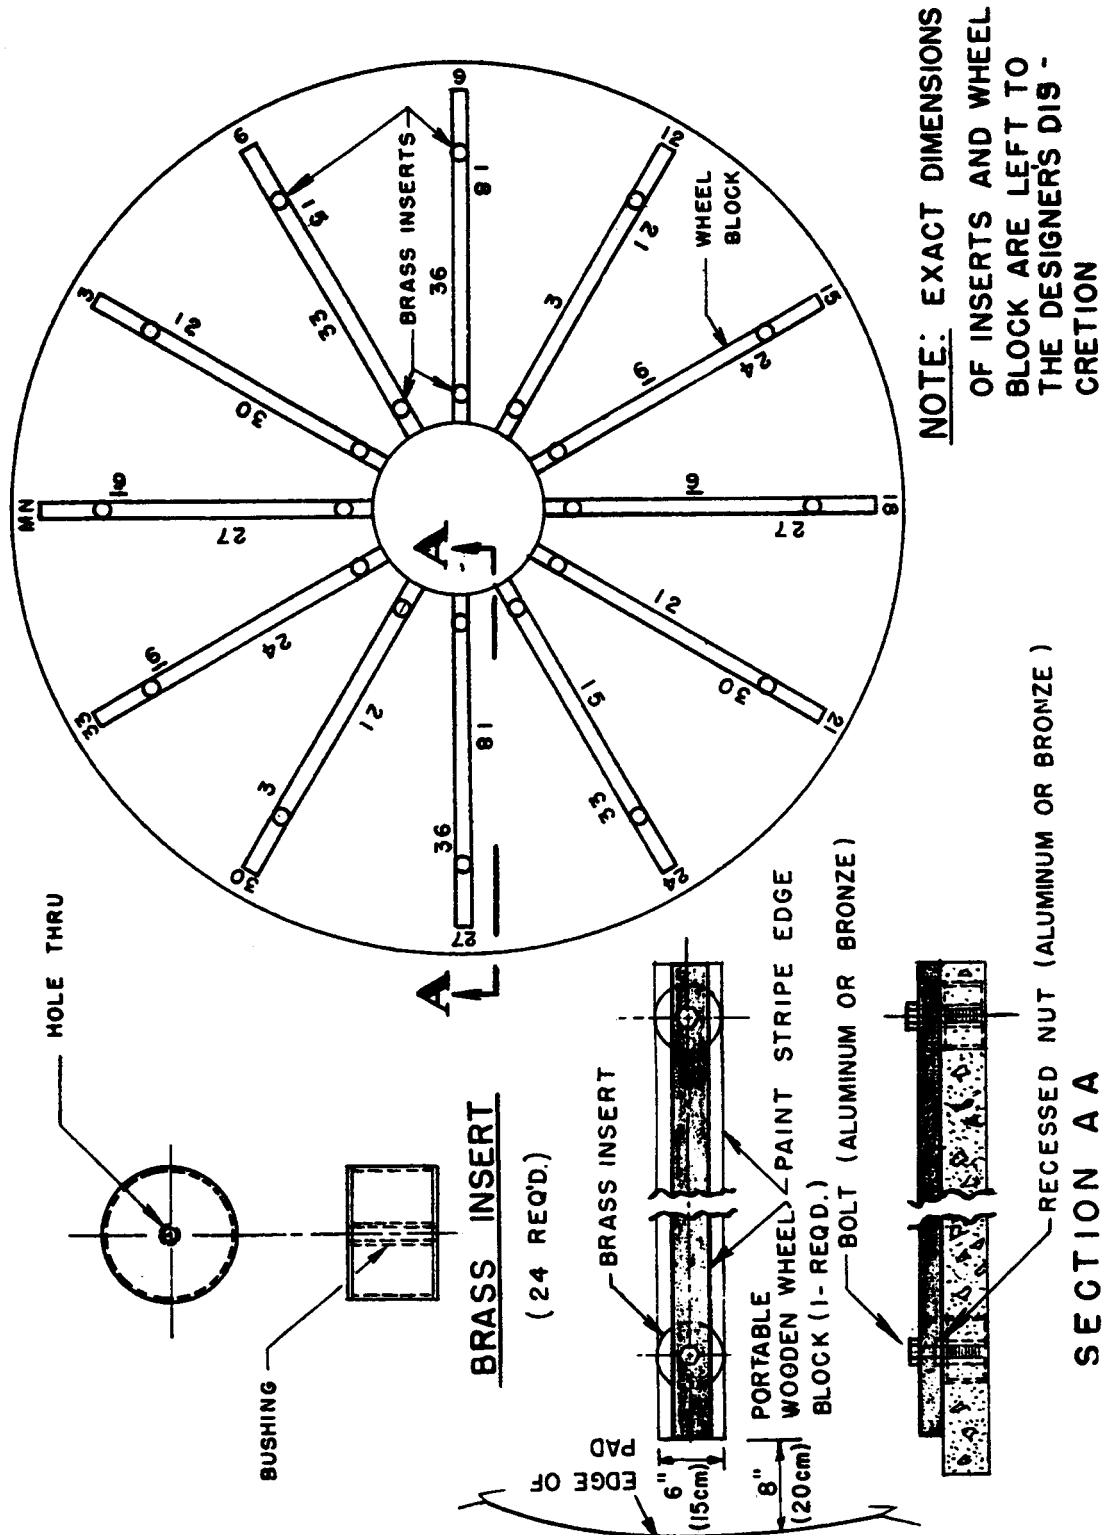


Figure A4-1. Marking layout and details of wheel block

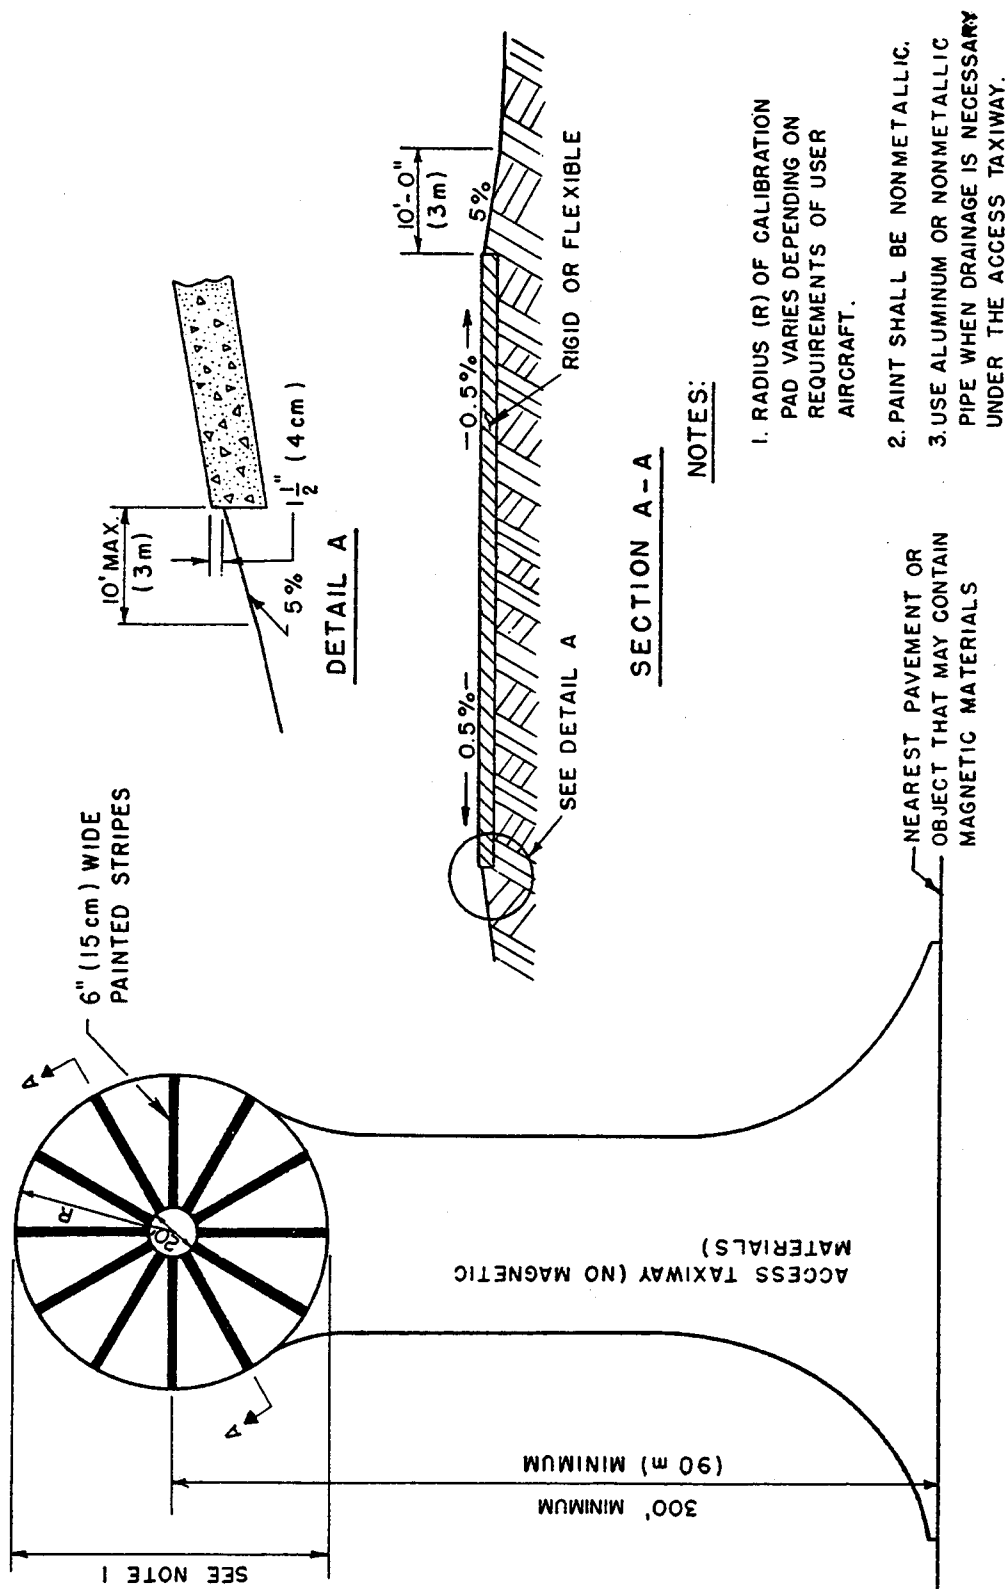


Figure A4-2. Type I. compass calibration pad

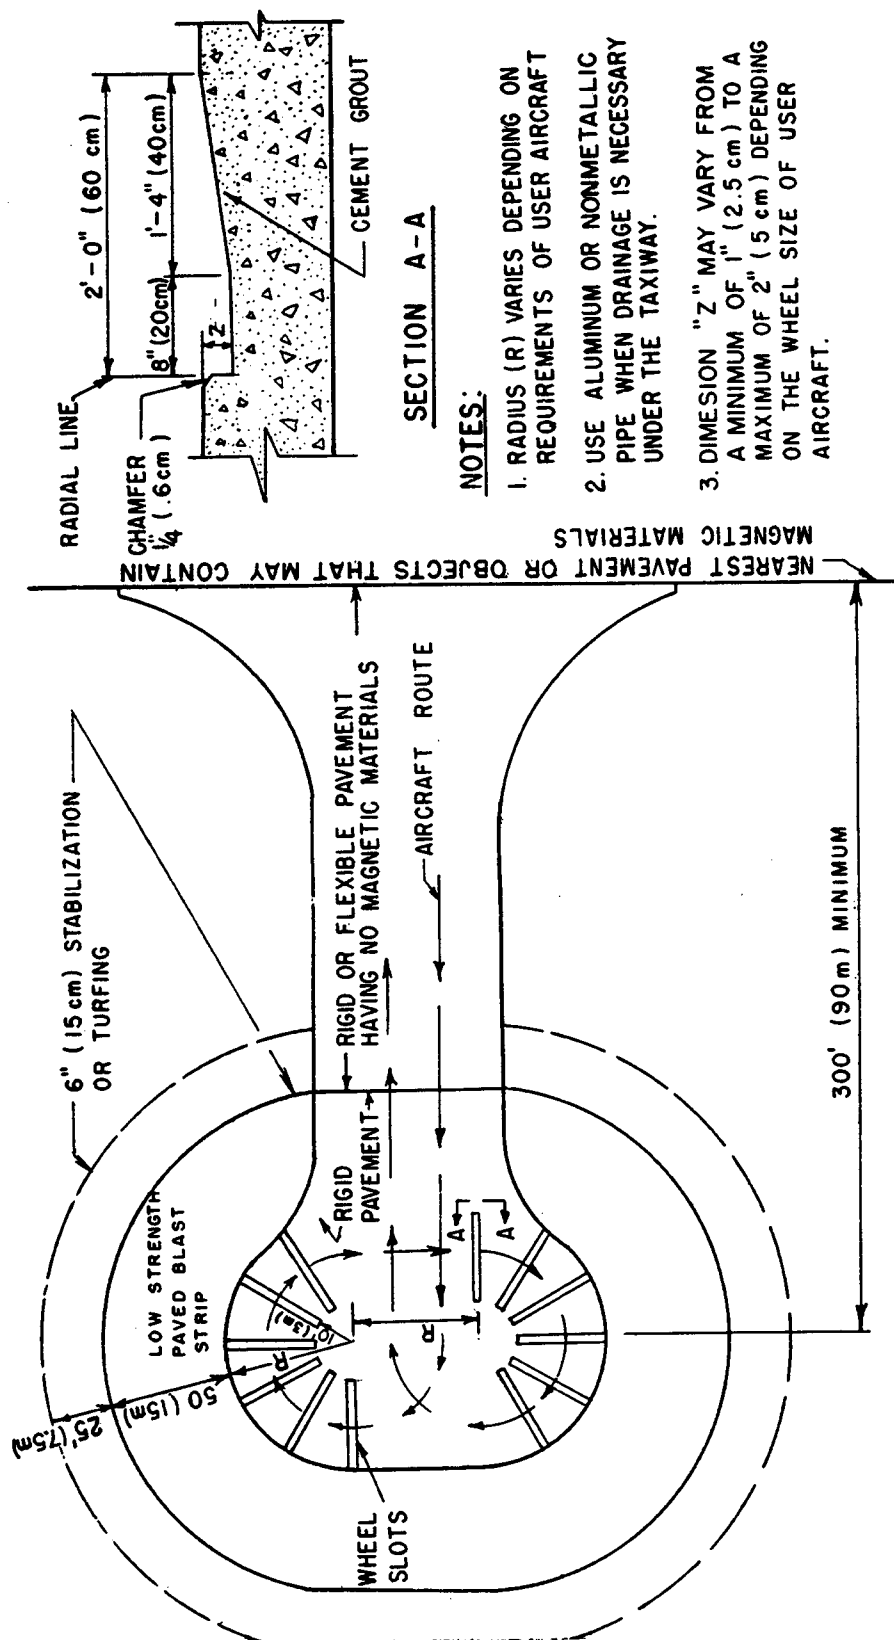


Figure A4-3. Type II. compass calibration pad

Appendix 5. SMALL AIRPORT BUILDINGS, AIRPLANE PARKING, AND TIEDOWNS

1. **GENERAL.** This chapter provides guidelines on airport buildings, airplane parking, and tiedowns at small airports. Airport buildings fulfill the needs of specific aviation activities. The fixed base operator's (FBO) building usually provides space for the commercial activities, maintenance and repair of aircraft, air charter, and the like. The administration building accommodates the public, pilots, passengers, visitors and also the airport manager's office. Constructed small airplane hangars generally house only airplanes.

a. Figure A5-1 illustrates a typical layout for the building area of a small airport. Siting the FBO building adjacent to the airplane parking apron offers both convenience for local and itinerate pilots. Apron frontage is a premium airport space and should be judiciously utilized. Most hangaring is essentially a garaging operation which usually does not require direct apron front access. The administration building should be near the FBO but sufficiently separated to preclude conflict between airplanes operating from these areas. Storage hangars are often T-hangars, grouped in multiunits in a separate area.

b. Other aviation-oriented buildings may be necessary on the airport. The function(s) of such a building in relation to other aviation activities helps determine its optimum location.

c. An airport master planning study indicates the number of based and transient airplanes expected to utilize the airport. This information will assist in the layout and design of the airplane parking apron(s) and tiedown area(s).

d. AC 150/5360-13 contains guidance on the planning and design of airport terminal buildings and related access facilities at large airports.

2. **TRANSIENT APRON.** Aprons provide parking for airplanes, access to the terminal facilities, fueling, and surface transportation. A determination on the total amount of apron area needed cannot be developed by formula or empirical relationship since local conditions often vary significantly from one airport to another. The ideal solution is conducting an onsite survey during typical busy days and counting the airplanes on the ground periodically during the day. This approach,

however, is impossible for new airports and likely impractical for many airports without a manager. Below is a method which includes factors that affect the determination of the area needed for transient parking and analyzes and estimates the demand for the transient airplane.

a. Calculate the total annual operations (local plus itinerant) from the best available source. Where specific data are not available, the following data, which reflect local plus itinerant operations, may be used: Non-NPIAS Public Use - 538/based aircraft; Reliever - 492/based aircraft; Other General Aviation - 637/based aircraft; and Primary - 700/based aircraft.

b. Obtain the record of aviation gas sales for the year for the airport.

c. Correlate gas sales with annual operations on a monthly basis.

d. Calculate the average daily operations for the most active month.

e. Assume the busy day is 10 percent more active than the average day.

f. Assume that a certain portion of the transient airplanes will be on the apron during the busy day. Consider fifty percent as a reasonable figure.

g. Allow an area of 360 square yards per transient airplane.

h. Adjust the calculated amount to accommodate expansion for at least the next 2-year period. A minimum suggested increase is 10 percent.

3. **APRON FOR BASED AIRPLANES.** The apron used for based airplanes should be separate from the transient airplanes. The area needed for parking based airplanes should be smaller per airplane than for transient. This is due to knowledge of the specific type of based airplanes and closer clearance allowed between airplanes. The following considerations apply in determining the total apron area required for based airplanes:

a. The total number of based airplanes.

b. The number of airplanes now hangared or expected to be within 2 years.

c. The number of airplane owners who will continue to tie down their airplane in a turfed (unpaved) area. At many general aviation airports a certain percentage of airplane owners will prefer to tie down in the most inexpensive area.

d. An area of 300 square yards (250 m²) per airplane. This should be adequate for all single engine and light twin engine airplanes, such as the Cessna 310, which has a wingspan of 37 feet (11 m) and a length of 27 feet (8 m).

e. An increase in total area to accommodate expansion for at least the next 2-year period. A minimum suggested increase is 10 percent.

4. **TIEDOWNS.** Tiedown locations for based airplanes will vary with local preference. The purpose of a tiedown layout is to park the maximum number of airplanes while satisfying taxilane object free area width criteria. Figure A5-2 illustrates two tiedown layouts for small airplanes in Airplane Design Group I. General information on tiedown techniques and procedures is contained in AC 20-35.

5. **OTHER CONSIDERATIONS.**

a. As airport activity increases, the demand for an area to load and unload airplanes will increase. This activity may be in the form of charter, air taxi, business, or personal airplane operations. Generally, the area should be large enough to accommodate two airplanes in front of the terminal building. Also, investigate requirements for possible local air mail service.

b. At small general aviation airports, a gas pump facility is usually the most economical method of airplane fueling. A fueling area should be near the terminal building. Some larger general aviation airports use fuel truck operations. Such an operation eliminates the need for gas pump areas and allows more area for airplane parking. In either case, appropriate static grounding capability must be provided.

c. In summary, the apron design should allow for flexibility and expandability. The design should use empirical relationships only when field data are not available. Arrangement of tiedown installation should allow apron area alterations as needed. Keeping both

ends of the apron free of structures will enhance future expansion.

6. **HANGARS.** Figure A5-3 illustrates typical layouts of hangar areas for different types of hangars. As noted, the recommended clearance between T-hangars is 75 feet (23 m) for one-way traffic and 125 feet (38 m) for two-way traffic. These clearances will accommodate most twin engine general aviation airplanes.

a. Prefabricated T-hangars are available in various sizes and lengths. Details on their erection and cost may be obtained from any of several manufacturers throughout the country.

b. The number of T-hangars depends upon local demand. However, expect a greater demand for protection from weather in the more severe climate areas.

7. **ADMINISTRATION BUILDING.** The necessity of an administration building is a managerial question answered on the weight of at least the following two factors. First, operationally, the chief factor is whether the airport can take care of present and anticipated airplane activity. Second, economically, the chief factor is the kind of community the airport serves and how well this community can support general aviation activity. Note that lower activity airports may not initially justify the construction of either an FBO or administration building. In many cases, the initial airport building is a small maintenance hangar with an attached office. Prior to the construction of an administrative type of building on a general aviation airport, the following basic questions should receive consideration:

a. Are there a minimum of 10 airplane departures and arrivals, not including touch and go, during the peak hours of a typically busy day during the year?

b. Is there at least one active fixed base operator on the airport?

c. Is airplane fuel available on the airport?

d. Is a hangar with repair facilities in operation on the airport?

e. Is a full-time airport manager on duty during the normal day?

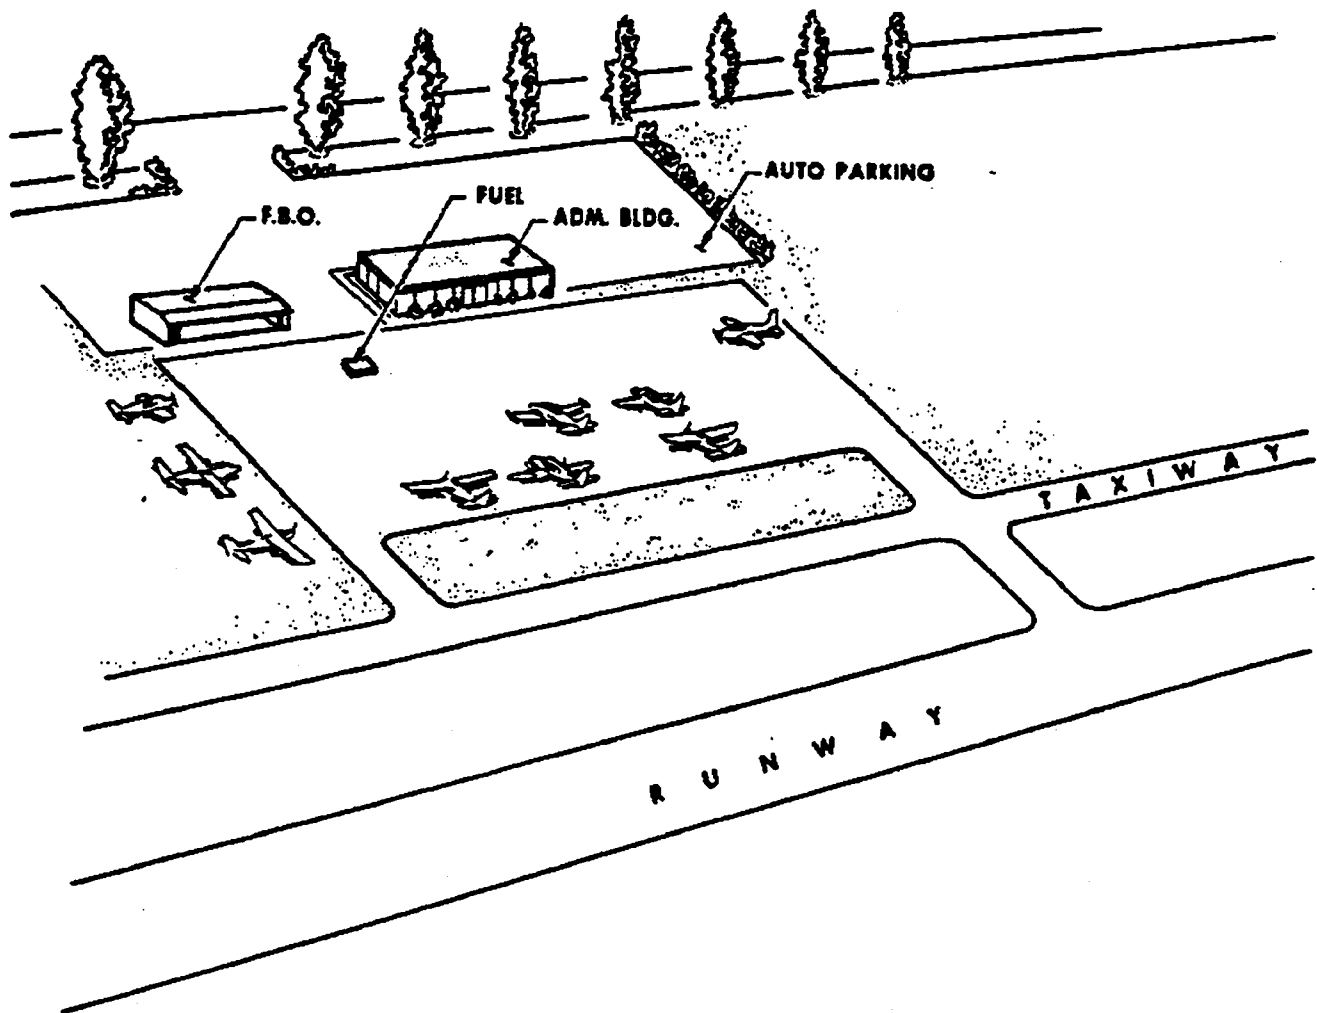


Figure A5-1. Parking apron area

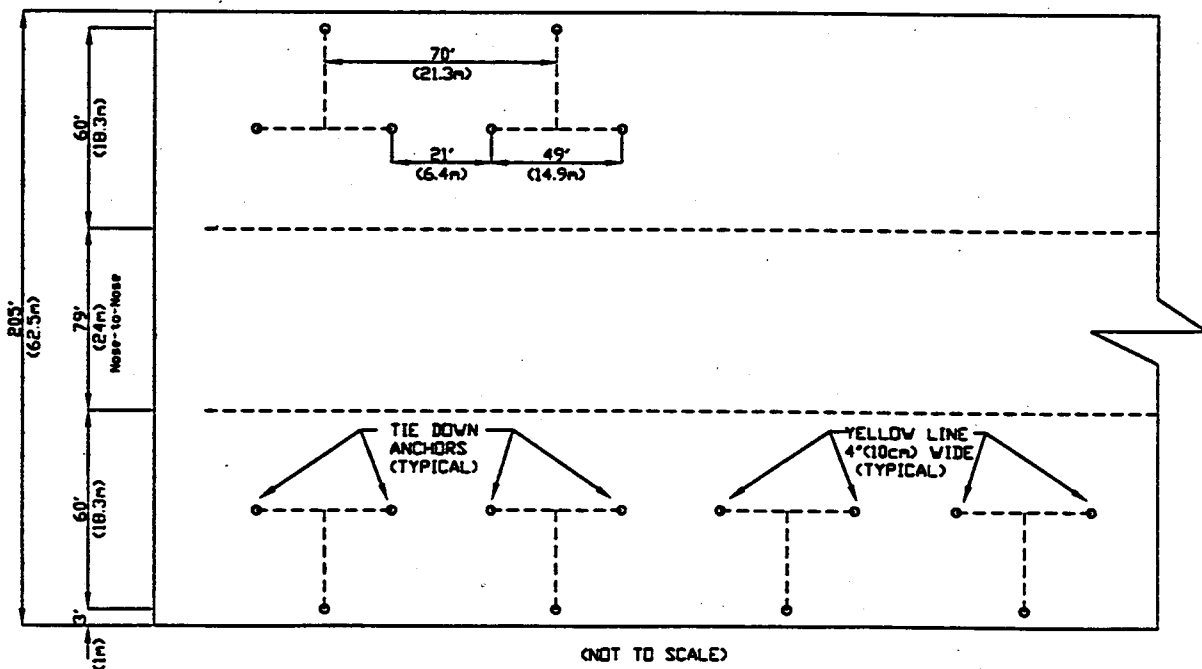
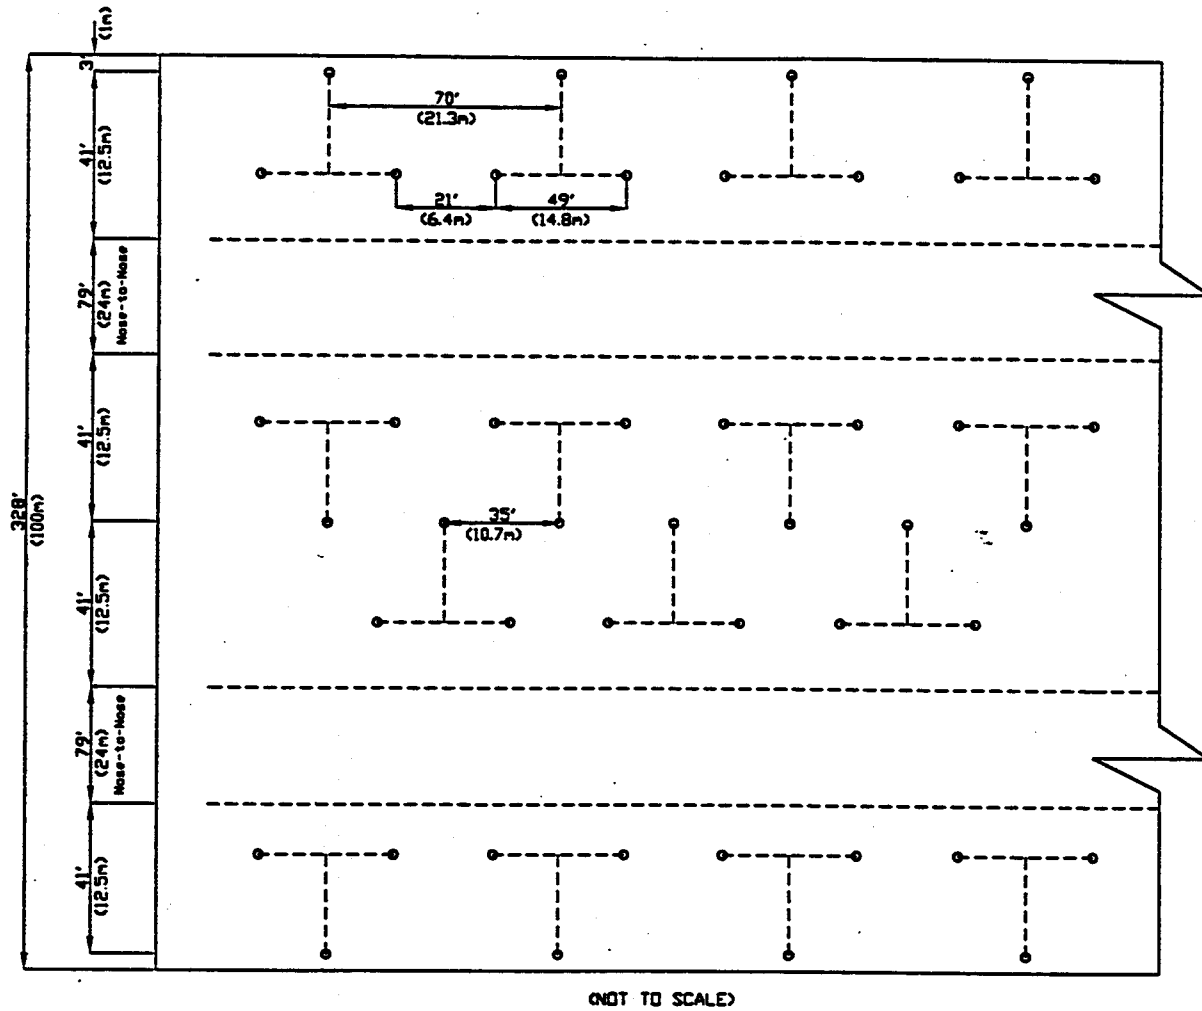


Figure A5-2. Tiedown layouts

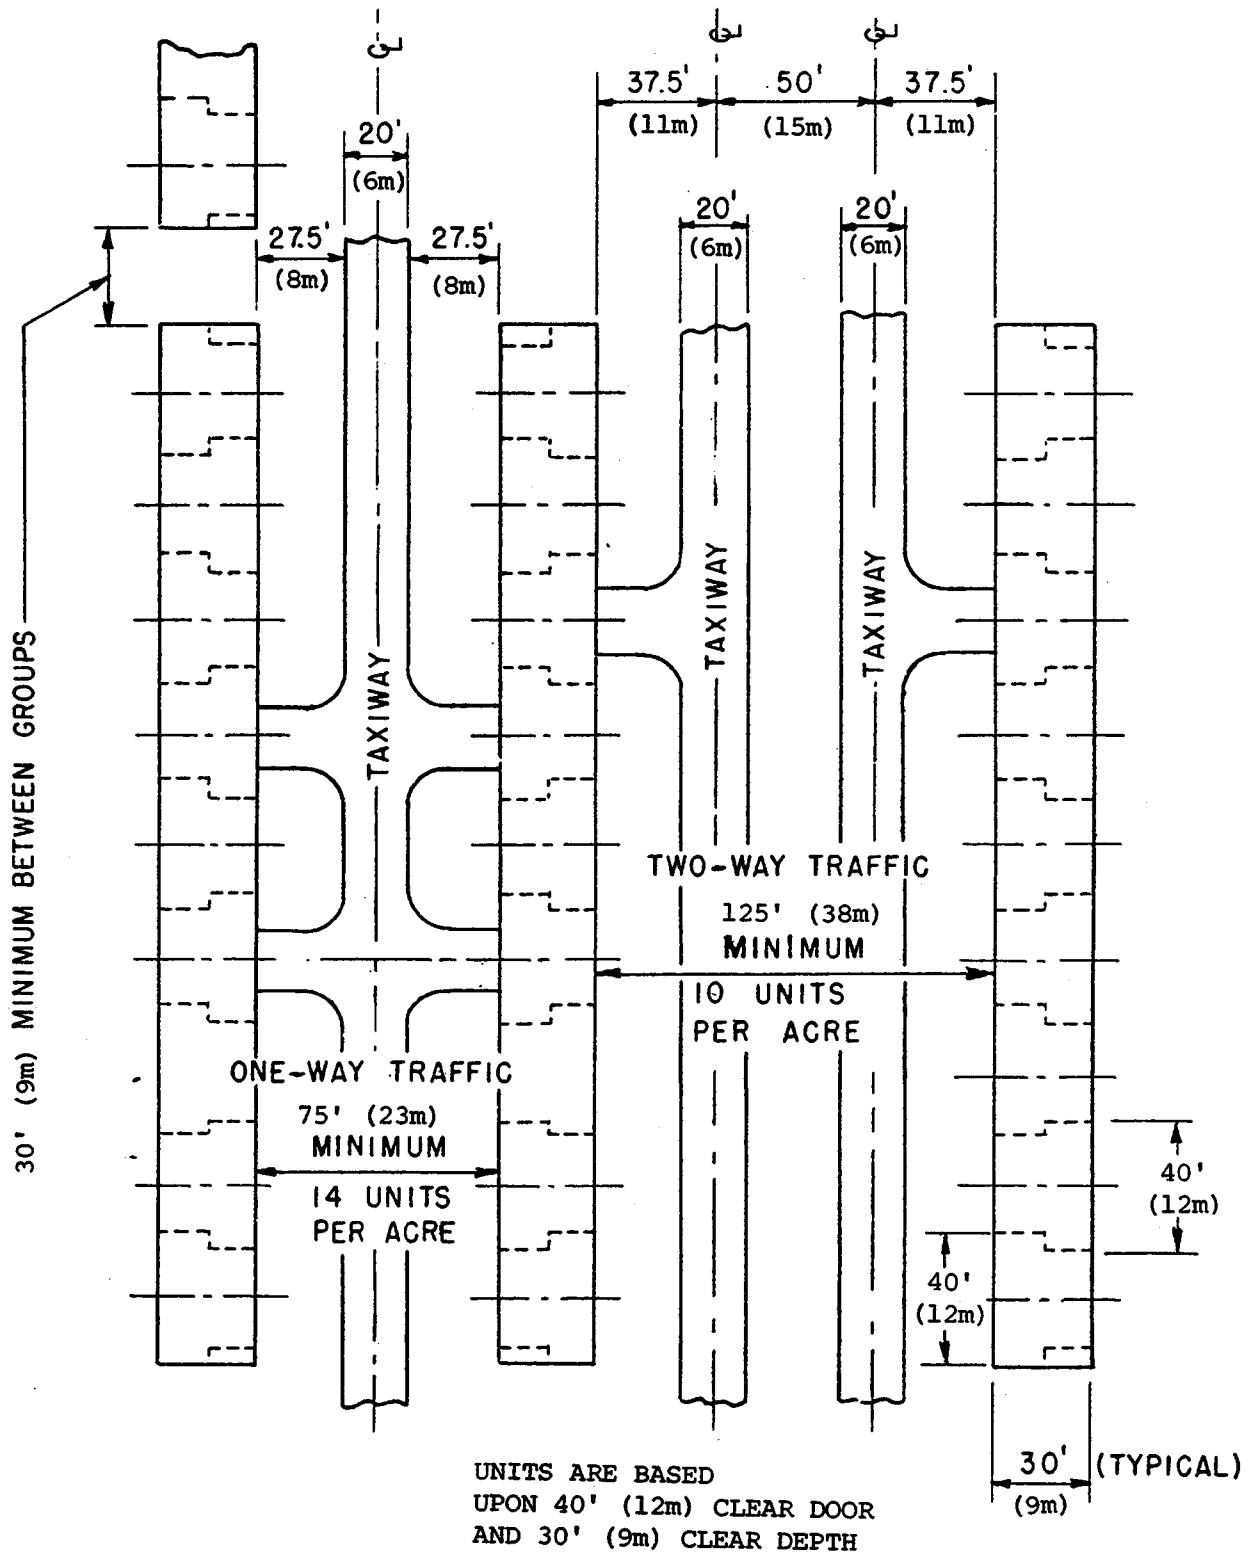


Figure A5-3. T-hanger layout

f. Are public waiting areas and restrooms already available in hangars or other buildings on the airport?

g. Is a public telephone available 24 hours a day for closing flight plans or requesting fuel or transportation to town?

8. **AIRPORT SURVEY.** A survey of an airport's aviation activity should precede the planning of an administration building. For survey purpose, "airport aviation activity" includes the number of active-based airplanes, the number of airplane operations (local and itinerant), and the number of pilots and passengers at the airport on a typically busy day.

a. A survey of current activity at the airport can determine what functional requirements need accommodating by and the total area of the administration building. Also surveys of other airports with similar aviation activity characteristics which already have administration buildings provide additional valuable data. The airport manager or a fixed base operator can gather the information on several typically busy days over a period of several weeks during the most active season. At many small airports, weekends are usually the busiest days and are a good time to measure peak activity. A Pilots Register is also useful in making a traffic count.

b. With respect to passengers, an airport manager obtains data on the two or three days in the week of the season historically known to be the busiest. This record of the plateau of high activity in terms of peak-hour operations and peak-hour passengers determines the typically busy hour by averaging the hourly activity for three or four of the busiest hours.

9. **BUILDING PLAN.** The specialized interior requirements of a small administration building are few and should reflect a basic simplicity by providing direct functional relationships between rooms and facilities.

a. The arrangement of elements within the building should address the airfield configuration, future building expansion, and the passenger and service driveways. In determining the details of space relations and requirements, the experienced general aviation airport manager is in the best position to assist in tailoring detailed building needs to actual aviation activity and should be a participant in the early planning conferences.

b. The building components should provide:

(1) Short and direct pedestrian routes from parking areas to public waiting areas or airport offices, and to the loading apron or tiedown areas; and

(2) A view of the airfield operations from the manager's office, the waiting room, and any eating facilities.

10. **EXPANSION.**

a. Identification of future expansion of the administration building should be from the outset. This is particularly important at a general aviation airport where it is difficult to accurately forecast and assess initial construction cost when based on actual measurable activity.

b. Normally, with the air field side of the building fixed, building expansion occurs only on the off-field side and the ends. When drives and walks resist expansion on the off-field side, all major expansion should proceed on the ends of the building.

11. **CIRCULATION.** The waiting room is the hub from which circulation routes radiate. Usually, an open plan with only the minimum essential partitioning allows better circulation and a more spacious building interior. The following items are important in assuring a satisfactory circulation of traffic through the building:

a. Short and direct routes from the entrance of the off-field side of the building to the exit on the field side.

b. Wide doorways at the main entry and exits.

c. Public corridors, as necessary, wide enough for comfortable traffic flow, but not excessive to raise initial and maintenance costs.

d. Adequate circulation aisles within the waiting area to assure free movement and comfort for the room occupants.

12. **WAITING ROOM.** As the central meeting and waiting space for passengers, visitors, pilots, and airport employees, the waiting room is the focal point of the building. It should merge with such other required spaces as the manager's office, eating facilities, and public restrooms. The closer this relationship, the more economical the building. Additional recommendations follow:

a. A view of airfield activities. The public enjoys seeing airplanes and their operations. Do not put utility rooms, restrooms, and other service facilities on the field side of the building if possible.

b. A comfortable seating arrangement. Comfortable seating need not be fixed seats or stereotyped. Such an arrangement at a small airport is especially good to promote the waiting room informality usually associated with small airport operations.

c. Concession items such as coin-operated parcel lockers and small item dispensing machines.

d. A bulletin board for information of interest to private pilots and the aviation public; for example, weather reports, notices to airmen, and FAA information.

e. Space for the mounting of aeronautical charts.

f. A folding partition to provide dual space use. This flexible arrangement conserves building space and makes it possible to hold meetings in the administration building without disturbing the essential business routine.

g. A public phone for closing flight plans, weather briefings, calling public transportation, etc.

13. MANAGER'S OFFICE. Expect variation in the room space for management use at a particular airport. Determining the local management's space requirements should follow after an analysis of the management equipment, furnishings, and personnel space needs. As a general planning guide, the minimum office size sufficient for the furnishings and functions of an office for a manager and one secretary should be about 180 square feet (17 m²).

14. EATING FACILITIES. Normally, some provision for food services is in the administration building for the comfort and convenience of airport users. The scope of the eating facilities in the building varies with local and itinerant aviation activity. There may be dispenser items, a snack bar, a coffee shop, a dining room, or a combination of these. Frequently, the airport eating facility attracts additional patrons because of its convenient location, its unusual cuisine, or the interest which the patrons have in aviation activity.

a. Food and drink dispensers are usually enough to satisfy initial needs at general aviation airports. Dispenser service requires little attention to operate. Grouped dispensers can better be seen from the main circulation route between the waiting area and the operation/management office.

b. Usually a concessionaire operates the coffee shop or dining room service. It is important to select the concessionaire early enough to receive concessionaire input in planning that part of the administration building. Computing the required size of space should proceed in terms of seated patrons and the kind and amount of food service and preparation equipment. Additional recommended planning considerations are:

(1) Direct relation with the waiting room;

(2) Convenient route from public entrances;

(3) Direct access from the food preparation area to the outside service drive;

(4) View of the airfield activity from the seating area; and

(5) Compliance with public health agency requirements.

15. PUBLIC RESTROOMS. Restrooms should be immediately accessible from the waiting room and meet federal, state, and local requirements for the handicap impaired.

16. ROADS AND AUTO PARKING. Establishing roads and parking areas directly related to the administration building should follow after arranging the configuration of the building, including passenger entrances/exits and service entries. Other important considerations are as follows:

a. Location of short-limit parking or stopping spaces should be close to the main off-field public entrance with enough distance left between building and parking spaces for any future building expansion planned toward these parking spaces.

b. Consolidation of public and employee parking spaces should be into one centrally located parking area when both an administration building and a hangar area are contemplated. This plan is feasible when a convenient relation is established from the

outset between the administration building and the hangars.

c. For special events, there should be one or more well-drained turfed areas, located beside the airport access roads for overflow parking.

d. Additional parking areas should exist if the administration building contains eating facilities which outside customers regularly patronized.

e. There should be separate service drives for kitchens from public drives and parking. However, the service drive may often be adjacent to the apron access drive. This requires preventive measures to prohibit restaurant vehicles from inadvertently driving onto the apron.

f. Designated parking spaces for the handicap impaired are required to comply with applicable federal, state, and local requirements

Appendix 6. METRIC CONVERSION AND TYPICAL AIRPORT LAYOUT PLAN

This appendix was cancelled by AC 150/5070-6, Airport Master Plans. Please replace pages 125–130.

| This page intentionally left blank.

Appendix 7. AIRPORT LAYOUT PLAN COMPONENTS AND PREPARATION

This appendix was cancelled by AC 150/5070-6, Airport Master Plans. Please replace pages 131–138.

| This page intentionally left blank.

Appendix 8. RUNWAY DESIGN RATIONALE

1. SEPARATIONS. Dimensions shown in tables 2-1, 2-2, 3-1, 3-2, and 3-3 may vary slightly due to rounding off.

a. **Runway to holdline separation** is derived from landing and takeoff flight path profiles and the physical characteristics of airplanes. The runway to holdline standard satisfies the requirement that no part of an airplane (nose, wingtip, tail, etc.) holding at a holdline penetrates the obstacle free zone (OFZ). Additionally, the holdline standard keeps the nose of the airplane outside the runway safety area (RSA) when holding prior to entering the runway. When the airplane exiting the runway is beyond the standard holdline, the tail of the airplane is also clear of the RSA. Additional holdlines may be required to prevent airplane, from interfering with the ILS localizer and glide slope operations.

b. **Runway to parallel taxiway/taxilane separation** is determined by the landing and takeoff flight path profiles and physical characteristics of airplanes. The runway to parallel taxiway/taxilane standard precludes any part of an airplane (tail, wingtip, nose, etc.) on a parallel taxiway/taxilane centerline from being within the runway safety area or penetrating the OFZ.

c. **Runway to airplane parking areas** is determined by the landing and takeoff flight path profiles and physical characteristics of airplanes. The runway to parking area standard precludes any part of a parked airplane (tail, wingtip, nose, etc.) from being within the runway object free area or penetrating the OFZ.

2. OBSTACLE FREE ZONE (OFZ). The portion of the OFZ within 200 feet (60 m) of the runway centerline is required for departure clearance. The additional OFZ, beyond 200 feet (60 m) from runway centerline, is required to provide an acceptable accumulative target level of safety without having to adjust minimums. The level of safety for precision instrument operations is determined by the collision risk model. The collision risk model is a computer program developed from observed approaches and missed approaches. It provides the probability of an airplane passing through any given area along the flight path of the airplane. To obtain an acceptable accumulative target level of safety with objects in the OFZ, operating minimums may have to be adjusted.

3. RUNWAY SAFETY AREA.

a. **Historical Development.** In the early years of aviation, all airplanes operated from relatively unimproved

airfields. As aviation developed, the alignment of takeoff and landing paths centered on a well defined area known as a landing strip. Thereafter, the requirements of more advanced airplanes necessitated improving or paving the center portion of the landing strip. The term "landing strip" was retained to describe the graded area surrounding and upon which the runway or improved surface was constructed. The primary role of the landing strip changed to that of a safety area surrounding the runway. This area had to be capable, under normal (dry) conditions, of supporting airplanes without causing structural damage to the airplanes or injury to their occupants. Later, the designation of the area was changed to "runway safety area," to reflect its functional role. The runway safety area enhances the safety of airplanes which undershoot, overrun, or veer off the runway, and it provides greater accessibility for firefighting and rescue equipment during such incidents. Figure A8-1 depicts the approximate percentage of airplanes undershooting and overrunning the runway which stay within a specified distance from the runway end. The runway safety area is depicted in figure 3-1 and its dimensions are given in tables 3-1, 3-2, and 3-3.

b. **Recent Changes.** FAA recognizes that incremental improvements inside standard RSA dimensions can enhance the margin of safety for aircraft. This is a significant change from the earlier concept where the RSA was deemed to end at the point it was no longer graded and constructed to standards. Previously, a modification to standards could be issued if the actual, graded and constructed RSA did not meet dimensional standards as long as an acceptable level of safety was provided. Today, modifications to standards no longer apply to runway safety areas. (See paragraph 6) Instead, FAA airport regional division offices are required to maintain a written determination of the best practicable alternative for improving non-standard RSAs. They must continually analyze the non-standard RSA with respect to operational, environmental, and technological changes and revise the determination as appropriate. Incremental improvements are included in the determination if they are practicable and they will enhance the margin of safety.

4. RUNWAY OBJECT FREE AREA (ROFA).

The ROFA is a result of an agreement that a minimum 400-foot (120 m) separation from runway centerline is required for equipment shelters, other than localizer equipment shelters. The aircraft parking limit line no longer exists as a separate design standard. Instead, the separations required for parked aircraft and the building restriction line from the runway centerline are determined by object clearing criteria.

Appendix 8

5. RUNWAY SHOULDERS AND BLAST PADS.

Chapter 8 contains the design considerations for runway shoulders and blast pads.

6. CLEARWAY. The use of a clearway for takeoff computations requires compliance with the clearway definition of 14 CFR Part 1.

7. STOPWAY. The use of a stopway for takeoff computations requires compliance with the stopway definition of 14 CFR Part 1.

8. RUNWAY PROTECTION ZONE (RPZ).

Approach protection zones were originally established to define land areas underneath aircraft approach paths in which control by the airport operator was highly desirable to prevent the creation of airport hazards. Subsequently, a 1952 report by the President's Airport Commission (chaired by James Doolittle), entitled "The Airport and Its Neighbors," recommended the establishment of clear areas beyond runway ends. Provision of these clear areas was not only to preclude obstructions potentially hazardous to aircraft, but also to control building construction as a protection from nuisance and hazard to people on the

ground. The Department of Commerce concurred with the recommendation on the basis that this area was "primarily for the purpose of safety and convenience to people on the ground." The FAA adopted "Clear Zones" with dimensional standards to implement the Doolittle Commission's recommendation. Guidelines were developed recommending that clear zones be kept free of structures and any development which would create a place of public assembly.

In conjunction with the introduction of the RPZ as a replacement term for clear zone, the RPZ was divided into "object free" and "controlled activity" areas. The RPZ function is to enhance the protection of people and property on the ground. Where practical, airport owners should own the property under the runway approach and departure areas to at least the limits of the RPZ. It is desirable to clear the entire RPZ of all aboveground objects. Where this is impractical, airport owners, as a minimum, shall maintain the RPZ clear of all facilities supporting incompatible activities. Incompatible activities include, but are not limited to, those which lead to an assembly of people.

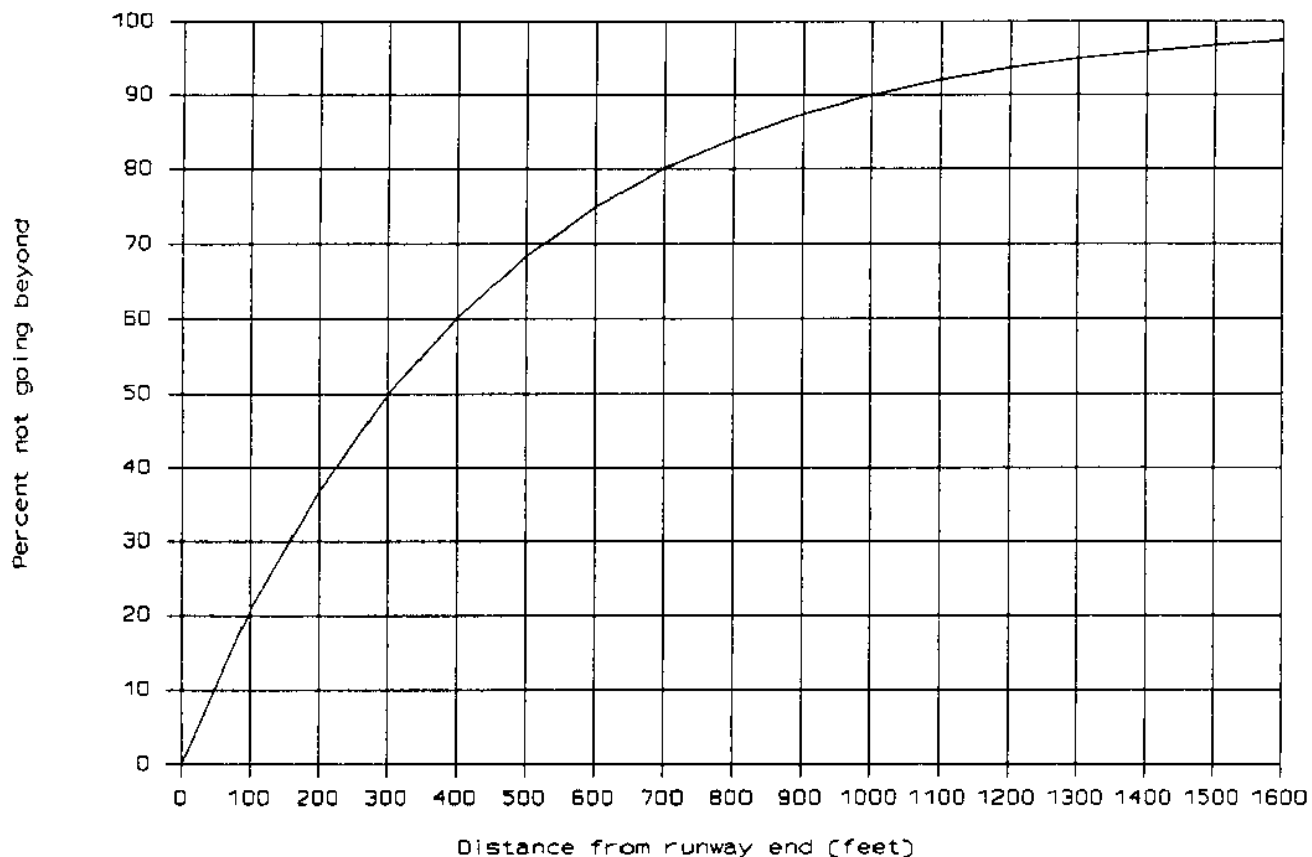


Figure A8-1. Approximate distance airplanes undershoot and overrun the runway end

Appendix 9. TAXIWAY AND TAXILANE DESIGN RATIONALE

1. **INTRODUCTION.** An airport operator is occasionally faced with the problem of having to cope with unusual terrain, local conditions, or the need to accommodate a specific airplane without accommodating other more demanding airplanes in the same airplane design group. This appendix provides the reasoning behind the selection of the various widths, clearances, and separations related to airplane physical characteristics. This rationale is usable, on a case-by-case basis, when local conditions or a specific airplane require modification of FAA airport design standards.

2. **BACKGROUND AND RATIONALE.** The minimum pavement widths, curve radii, and separations associated with airplane movement areas and airplane physical characteristics establish the taxiway system. Since the taxiway system is the transitional facility which supports airport operational capacity, the capability to maintain an average taxiing speed of at least 20 m.p.h. (30 km per hour) needs to be built into the system.

a. **Separations.** The parameters affecting separation criteria for taxiing airplanes, other than between a runway and its parallel taxiway, are wingspan and wingtip clearance. The need for ample wingtip clearance is driven by the fact that the pilots of most modern jets cannot see their airplane's wingtips.

(1) Taxiway to taxiway centerline separation, as shown in figure A9-1, is equal to 1.20 times the wingspan of the most demanding airplane plus 10 feet (3 m). This gives a wingtip clearance of 0.20 times the wingspan plus 10 feet (3 m). However, this separation may require an increase to accommodate minimum radius taxiway turns of 180 degrees, as shown in figure 4-10. The minimum acceptable radius is one which results in a maximum nosewheel steering angle (B) of 50 degrees. Appendix 10 discusses nosewheel steering angles.

(2) Taxiway centerline to object separation, as shown in figures A9-2 and A9-3, has the same wingtip clearances as taxiway to taxiway centerline separation. Thus, a minimum separation between a taxiway centerline and an object is 0.70 times the wingspan of the most demanding airplane, plus 10 feet (3 m).

(3) Taxiway object free area width is equal to twice the taxiway centerline to object separation.

(4) Taxilane centerline to object separation, as shown in figure A9-4, is equal to 0.60 times the wingspan of the most demanding airplane plus 10 feet (3 m). This gives a wingtip clearance of 0.10 times the wingspan plus 10 feet (3 m). This gives a wingtip clearance of one-half of that for an apron taxiway plus 5 feet (1.5 m). Reduced clearances are acceptable because taxi speed is very slow outside the movement area, taxiing is precise, and special operator guidance techniques and devices are normally present.

(5) Taxilane object free area width is twice the taxilane to object separation for a single lane width and 2.30 times the wingspan of the most demanding airplane plus 30 feet (9 m) for a dual lane width.

b. **Taxiway Width.** For a taxiway system to function safely and efficiently, the taxiway pavement needs to be of sufficient width to provide adequate clearance between the outside wheel and the pavement edge. This clearance permits normal deviations from the taxiway centerline or the intended path while taxiing at 20 mph (30 km per hour).

(1) Taxiway widths relate to the physical characteristics of airplanes. For example, a small high-performance jet airplane with long takeoff and landing requirement and a narrow undercarriage may operate on a relatively narrow taxiway. Conversely, a large airplane with short takeoff and landing capability, but with a wide undercarriage, requires a wider taxiway. Consequently, taxiway width is independent of runway length. The taxiway width should be at least equal to the sum of the undercarriage width plus two times the acceptable taxiway edge safety margin of the most demanding airplane.

(2) Table 4-1 specifies the clearance for tangents and curves, illustrated in figure A9-5, as taxiway edge safety margin.

c. **Curves and Fillets.** Taxiing around turns is difficult for pilots of airplanes with long wheelbases or when the cockpit is high and in front of the nosewheel. Appendix 10 covers detailed fillet design.

d. **Taxiway Shoulders.** Chapter 8 contains the design considerations for taxiway shoulders.

e. **Taxiway Safety Area.** To provide room for rescue and firefighting operations, the taxiway safety area width equals at least the wingspan of the most demanding airplane.

3. **EXIT TAXIWAY LOCATION.** Table A9-1 presents cumulative percentages of airplanes observed exiting existing runways at specific exit taxiway locations. In general, each 100-foot (30 m) reduction of the distance from the threshold to the exit taxiway reduces the runway occupancy time by approximately 3/4 of a second for each airplane using the exit. Conversely, the runway occupancy time of each additional airplane now overrunning the new exit location is increased by approximately 3/4 of a second for each 100 feet (30 m) from the old location to the next available exit.

For example, the percent of airplanes exiting at or before an exit located 4,000 feet (1220 m) from the threshold are:

a. When the runway is wet, 100 percent of A, 80 percent of B, 1 percent of C, and 0 percent of D airplanes;

b. When the runway is dry and the exit is right angled, 100 percent of A, 98 percent of B, 8 percent of C, and 0 percent of D airplanes; and

c. When the runway is dry and the exit is acute angled, 100 percent of A, 98 percent of B, 26 percent of C, and 3 percent of D airplanes.

When selecting the location and type of exit both the wet and dry runway conditions along with a balance between increases and decreases in runway occupancy time should be considered.

Table A9-1. Exit taxiway cumulative utilization percentages

DISTANCE THRESHOLD TO EXIT	WET RUNWAYS				DRY RUNWAYS							
	RIGHT & ACUTE ANGLED EXITS				RIGHT ANGLED EXITS				ACUTE ANGLED EXITS			
	A	B	C	D	A	B	C	D	A	B	C	D
0 ft (0 m)	0	0	0	0	0	0	0	0	0	0	0	0
500 ft (152)	0	0	0	0	0	0	0	0	1	0	0	0
1000 ft (305 m)	4	0	0	0	6	0	0	0	13	0	0	0
1500 ft (457 m)	23	0	0	0	39	0	0	0	53	0	0	0
2000 ft (610 m)	60	0	0	0	84	1	0	0	90	1	0	0
2500 ft (762 m)	84	1	0	0	99	10	0	0	99	10	0	0
3000 ft (914 m)	96	10	0	0	100	39	0	0	100	40	0	0
3500 ft (1067 m)	99	41	0	0	100	81	2	0	100	82	9	0
4000 ft (1219 m)	100	80	1	0	100	98	8	0	100	98	26	3
4500 ft (1372 m)	100	97	4	0	100	100	24	2	100	100	51	19
5000 ft (1524 m)	100	100	12	0	100	100	49	9	100	100	76	55
5500 ft (1676 m)	100	100	27	0	100	100	75	24	100	100	92	81
6000 ft (1829 m)	100	100	48	10	100	100	92	71	100	100	98	95
6500 ft (1981 m)	100	100	71	35	100	100	98	90	100	100	100	99
7000 ft (2134 m)	100	100	88	64	100	100	100	98	100	100	100	100
7500 ft (2286 m)	100	100	97	84	100	100	100	100	100	100	100	100
8000 ft (2438 m)	100	100	100	93	100	100	100	100	100	100	100	100
8500 ft (2591 m)	100	100	100	99	100	100	100	100	100	100	100	100
9000 ft (2743 m)	100	100	100	100	100	100	100	100	100	100	100	100

A - Small, single engine 12,500 lbs (5 700 kg) or less
 B - Small, twin engine 12,500 lbs (5 700 kg) or less
 C - Large 12,500 lbs (5 700 kg) to 300,000 lbs (136 000 kg)
 D - Heavy 300,000 lbs (136 000 kg)

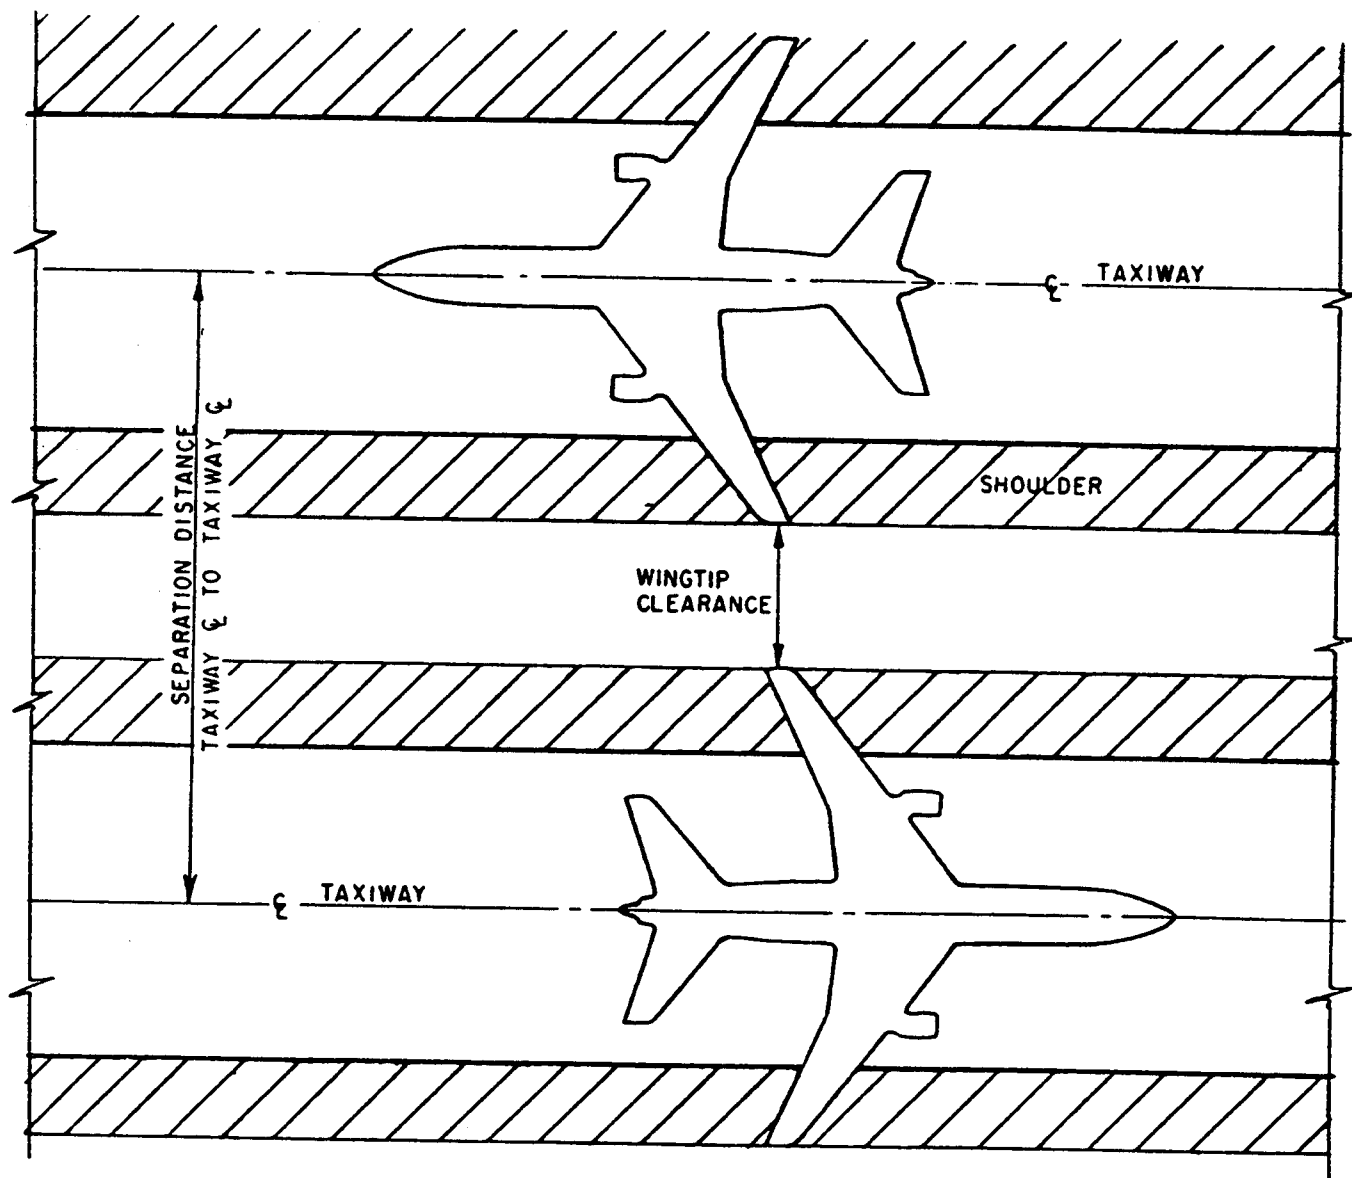


Figure A9-1. Wingtip clearance - parallel taxiways

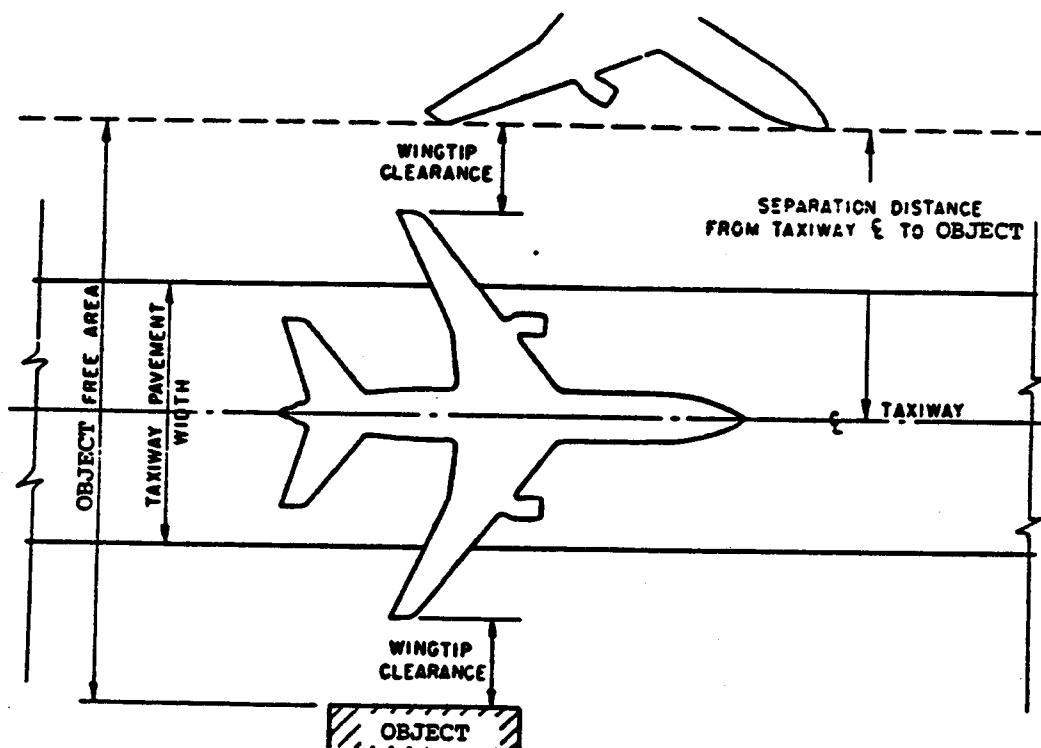


Figure A9-2. Wingtip clearance from taxiway

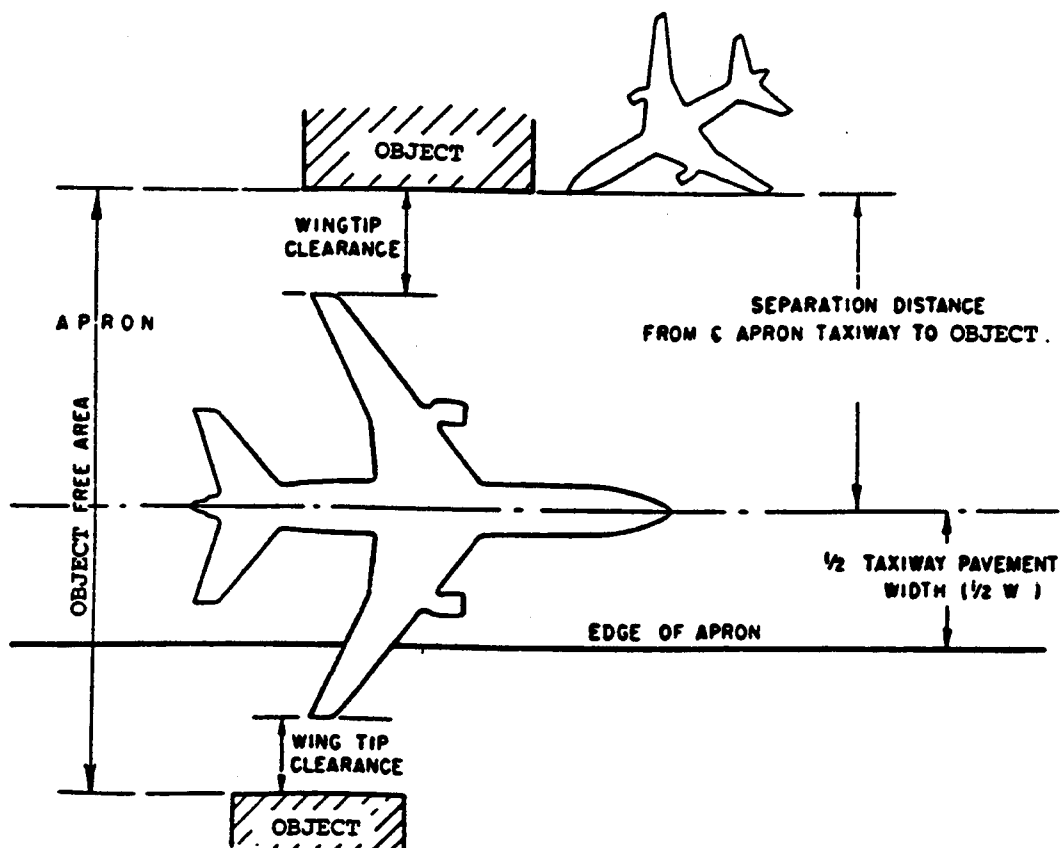


Figure A9-3. Wingtip clearance from apron taxiway


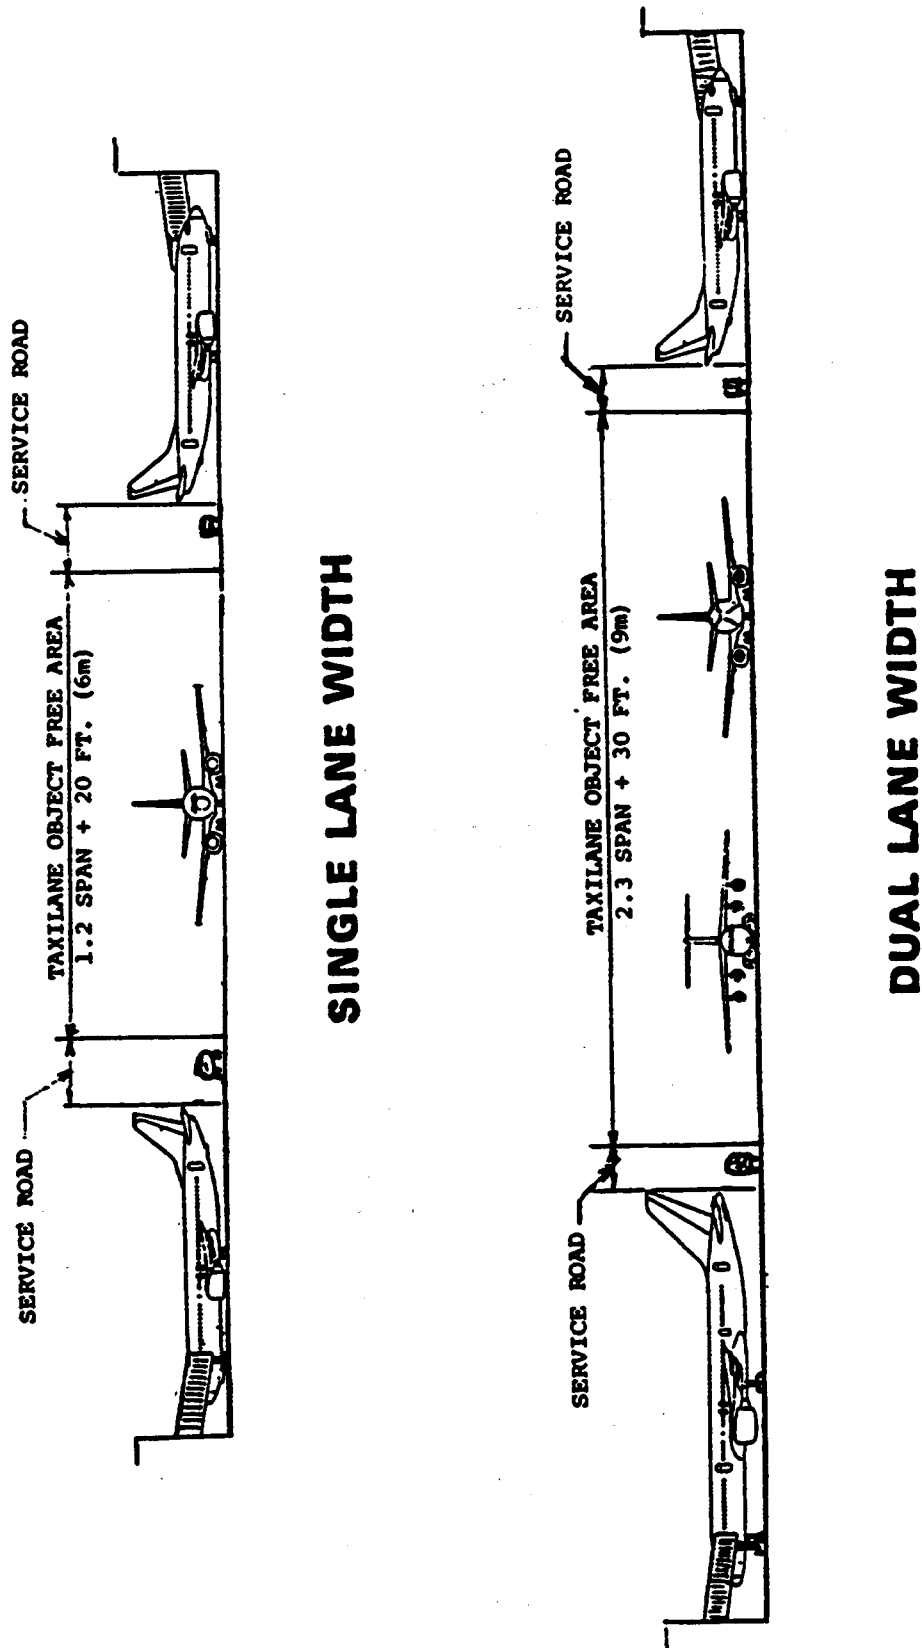


Figure A9-4. Wingtip clearance from taxiway

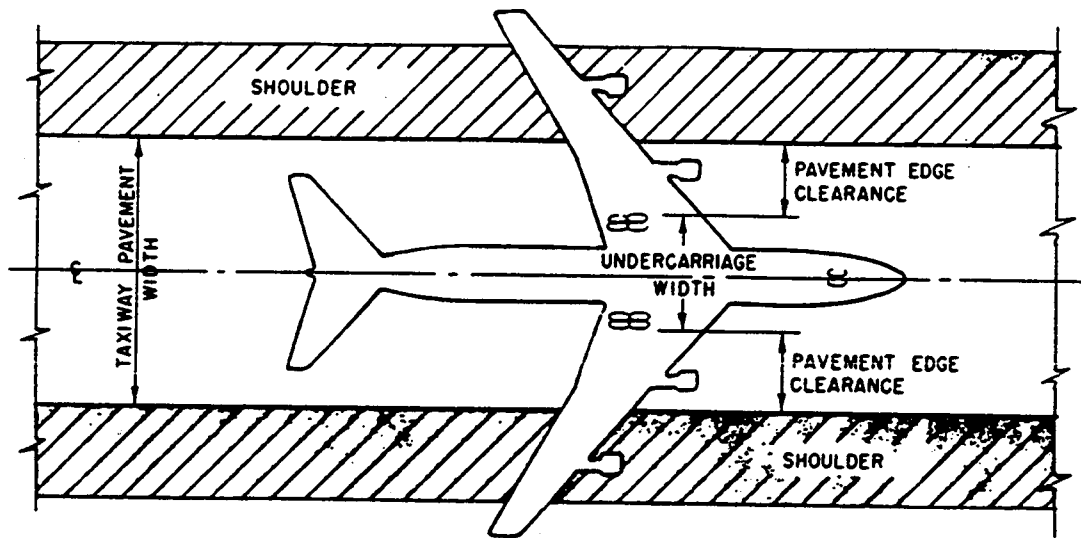

NOTE: UNDERCARRIAGE WIDTH AS USED IN THIS AC MEANS THE DISTANCE BETWEEN OUTSIDES OF TIRES.

Figure A9-5. Pavement edge clearance on tangent

4. **WINGTIP TRACE.** The following equations calculate the rectangular coordinates of points on the wingtip trace.

$$x = x_c - t \cos (A - B) \pm .5s \sin (A - B)$$

$$y = y_c + t \sin (A - B) \pm .5s \cos (A - B)$$

x_c and y_c are the rectangular coordinates of a selected point on the centerline pavement markings. One centerline point is required for each trace point.

A is the angle formed by the tangent to the centerline pavement markings and the longitudinal axis of the airplane at the selected point. Appendix 10 provides instructions for obtaining this angle.

B is the angle direction of the centerline pavement markings at the select centerline point.

t is the longitudinal distance from the center of airplane cockpit to the airplane wingtip.

s is the airplane wingspan.

To obtain the wingtip clearance trace, add the wingtip clearance to the wingtip trace.

a. The airport design computer program described in appendix 11 provides the OFA clearance fillet requirement directly.

(1) Figure A9-6 depicts the McDonnell-Douglas MD-88 wingtip clearance traces for a 100-foot (30.5m) radius of turn with centerline pavement markings.

(2) Figure A9-7 depicts the McDonnell-Douglas MD-88 wingtip clearance trace for a 100-foot (30.5 m) radius of turn with offset centerline pavement markings located on a 120-foot (30.5 m) radius arc.

(3) Figure A9-8 depicts the Boeing 727-200 wingtip clearance trace for a 100-foot (30.5 m) radius of turn with offset centerline pavement markings located on a 120-foot (30.5 m) radius arc.

(4) Figure A9-9 depicts the Boeing 727-100 wingtip clearance trace for a 100-foot (30.5 m) radius of turn with offset centerline pavement markings located on a 120-foot (30.5 m) radius arc.

b. The computer program treats the offset taxiway pavement markings arcs as five sections:

(1) A tangent section;

(2) A circular section comprised of a $\pm \cos^{-1}(\text{turn radius}/\text{offset radius})$ degree angle (same sign as the intersection angle) and a 0-foot radius;

(3) the offset arc (a circular section comprised of the intersection angle and the offset radius);

(4) A circular section comprised of a $\pm \cos^{-1}(\text{turn radius}/\text{offset radius})$ degree angle (opposite sign as the intersection angle) and a 0-foot radius; and

(5) A tangent section.

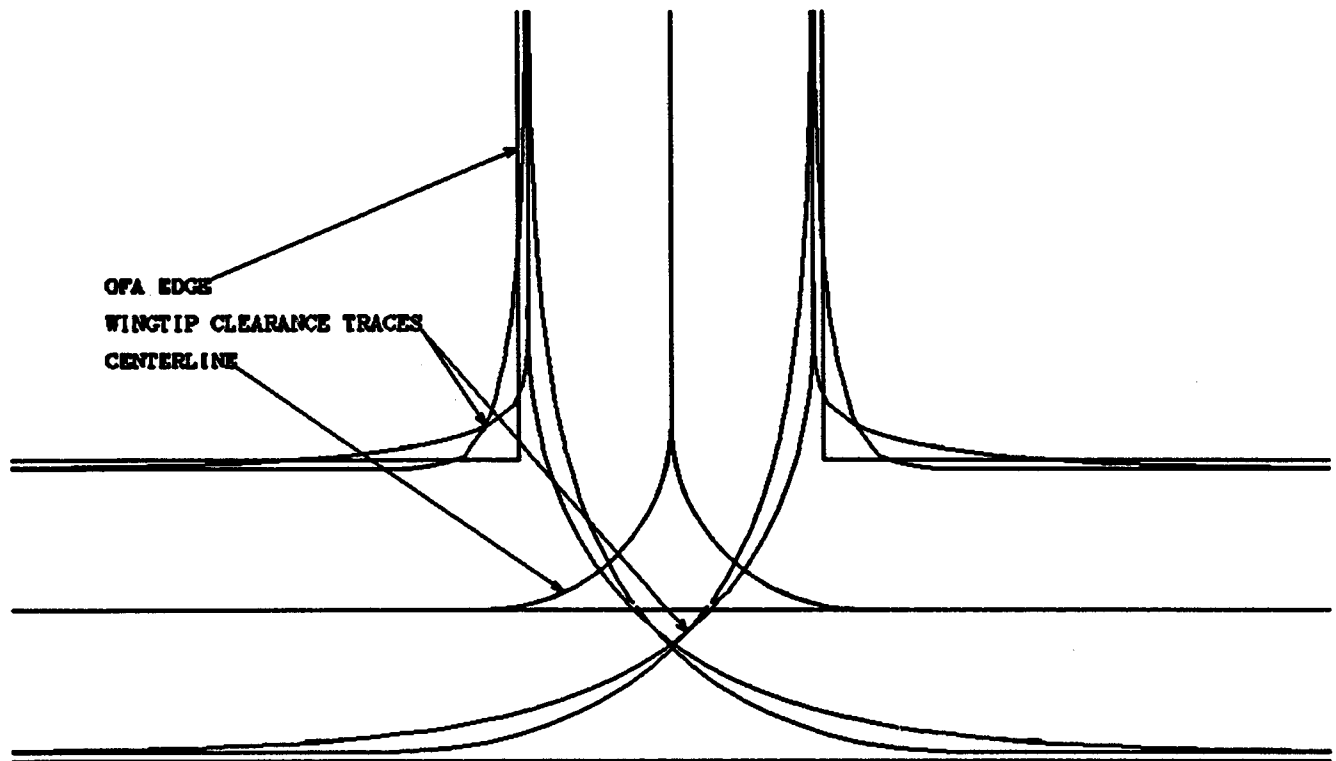


Figure A9-6. McDonnell-Douglas MD-88 wingtip clearance trace for a 100-foot (30.5 m) radius centerline

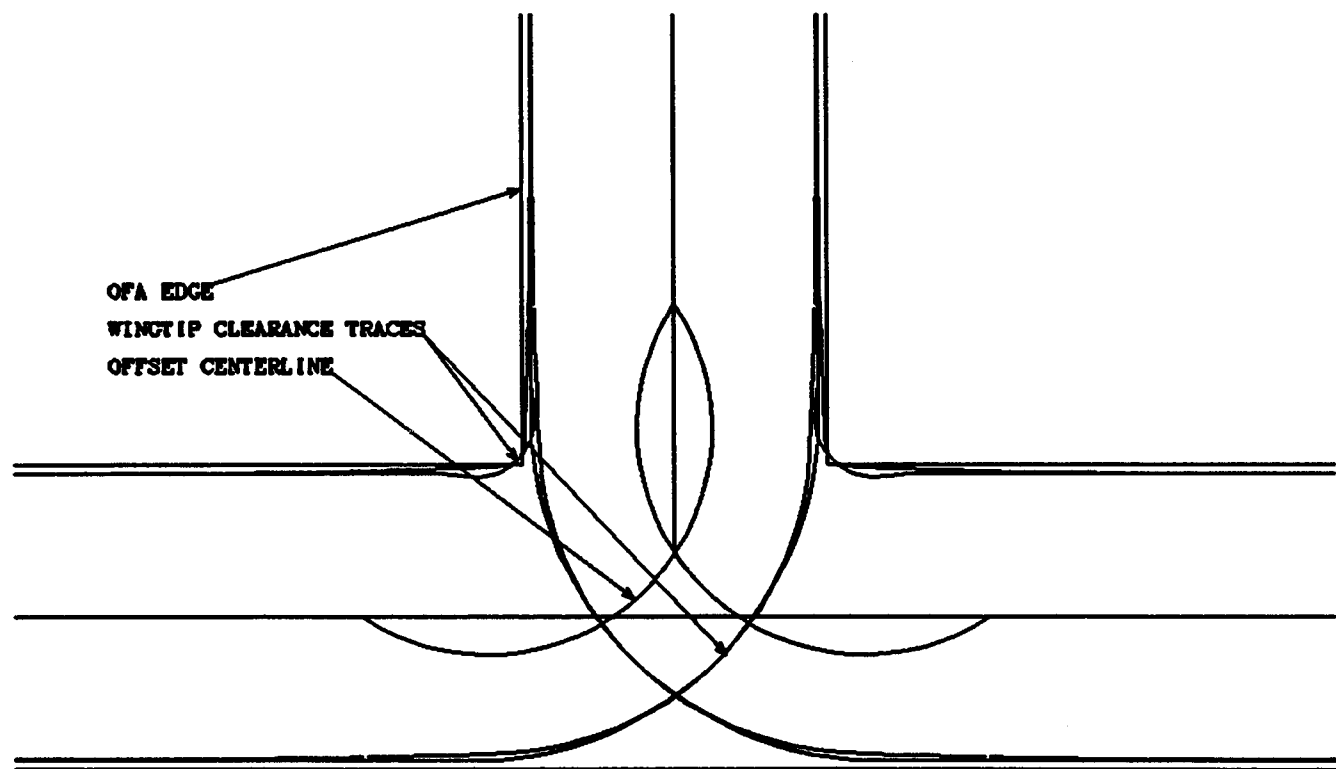


Figure A9-7. McDonnell-Douglas MD-88 wingtip clearance trace for a 120-foot (36.5 m) radius offset centerline

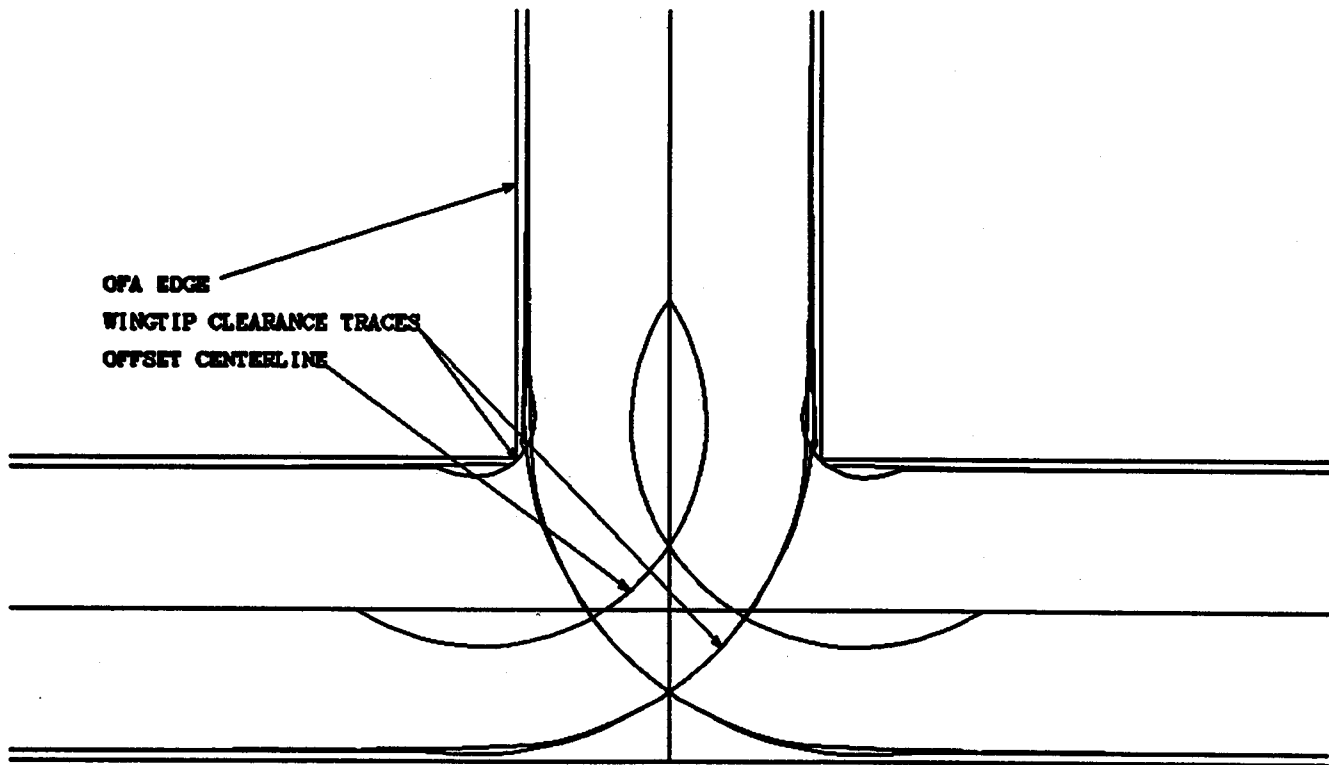


Figure A9-8. Boeing 727-200 wingtip clearance trace for a 120-foot (36.5 m) radius offset centerline

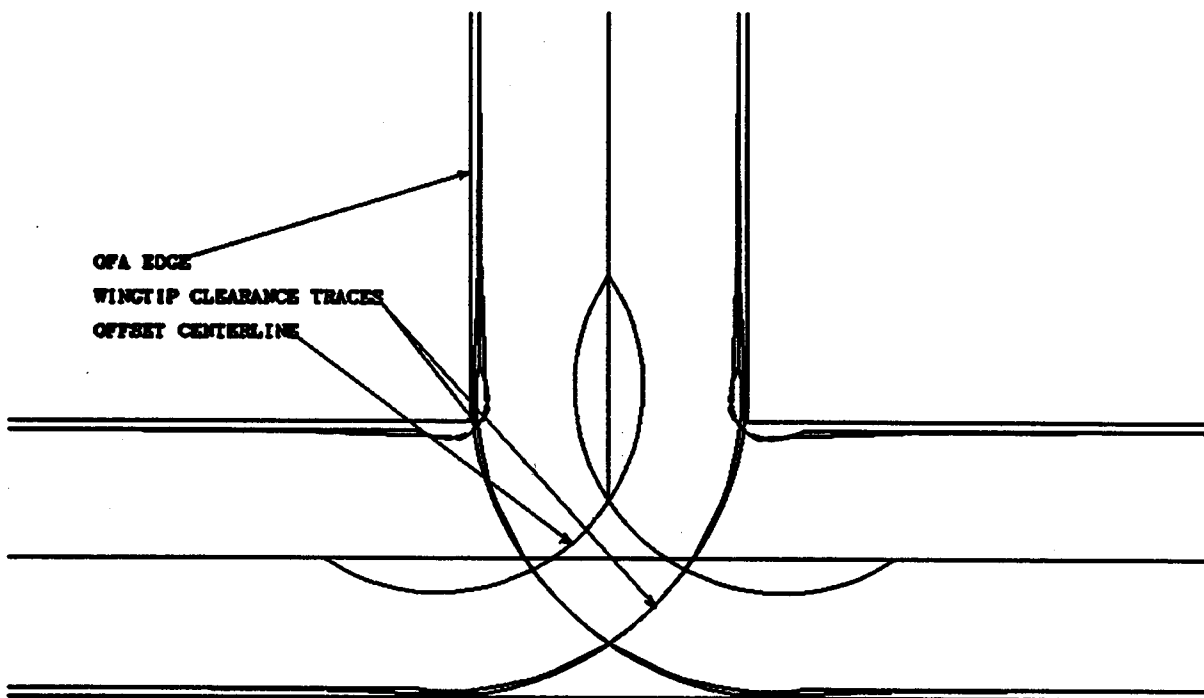


Figure A9-9. Boeing 727-100 wingtip clearance trace for a 120-foot (36.5 m) radius offset centerline

Appendix 10. TAXIWAY FILLET DESIGN

1. **INTRODUCTION.** This appendix details the methodology for the design of fillets for airport taxiways. This methodology is equally applicable for either the judgmental oversteering and the maintaining cockpit over centerline method of fillet design. The computer program cited in Appendix 11 computes these fillet dimensions for the maintaining cockpit over centerline method of fillet design. Figures A10-1 and A10-2 illustrate the terms and symbols used in the following equations:

a. **Angle A.** The angle formed by the tangent to the guideline and the longitudinal axis of airplane at point N.

(1) For R less than d:

$$A = 2 \tan^{-1} [x \tan(\tan^{-1}((\tan(.5A_o) - R/d)/x) + 28.648xS/R) + R/d]$$

(2) For R equal to d:

$$A = 2 \tan^{-1} [1/(1/(\tan(.5A_o) - 1) - .5S/R) + 1]$$

(3) For R greater than d:

$$A = 2 \tan^{-1} [y/(2/(1 - z) - 1) + R/d]$$

(4) For tangent section:

$$A = 2 \tan^{-1} [\tan(.5A_o)/2.7183^{S/d}]$$

b. **Angle A_{max}** Angle A with point N at the point of tangency (P.T.) or at the point of change of curvature (P.C.C.). At the end of a long curve:

$$A_{\max} = \sin^{-1}(d/R)$$

c. **Angle A_o** Angle A with point N at the point of curvature (P.C.). The angle A_o at the end of a long tangent section is zero (0) degrees.

d. **Angle A_t** Angle A with point N at the point of tangency (P.T.).

e. **Nosewheel Steering Angle (B).** The angle the nosewheel makes with the longitudinal axis of the airplane. In the design of pavement fillets, check to ensure that the nosewheel steering angle does not exceed 50 degrees. If exceeded, choose a larger radius of arc (R).

$$B = \tan^{-1}[(w/d)\tan A]$$

$$B_{\max} = \tan^{-1}[(w/d)\tan A_{\max}]$$

f. **Airplane Datum Length (d).** The distance between point N and the center of the main undercarriage.

g. **Radius of Fillet Arc (F).** The radius of the fillet measured from the center of the taxiway longitudinal curvature (O). To provide an acceptable taxiway edge safety margin (M), the radius of fillet should be equal to or less than:

$$F = (R^2 + d^2 - 2Rd \sin A_{\max})^{.5} - .5u - M$$

h. **Length of Lead-in to Fillet (L).** The distance from the P.T. to the end of the fillet. To provide an acceptable taxiway edge safety margin (M), the length of lead-in to the fillet should be equal to or greater than:

$$L = d\{\ln[4d \tan(.5A_o)/(W - u - 2M)]\} - d$$

i. **Taxiway Edge Safety Margin (M).** The minimum distance between the outside of the airplane wheels and the pavement edge. The minimum acceptable taxiway edge safety margin is given in table 4-1.

j. **Point N.** The point beneath the longitudinal axis of the airplane which tracks the guideline on the ground. Point N is located:

(1) For judgmental oversteering, beneath the longitudinal axis of the airplane at a distance from the center of the main undercarriage equal to the following. This distance provides a safety margin to compensate for the lack of positive guidance.

(a) Widening on only one side:

$$d = (R^2 - (R + .5W - 2M)^2 + w^2)^{.5}$$

(b) Widening symmetrical:

$$d = (R^2 - (2R - F - 2M)^2 + w^2)^{.5}$$

(2) For cockpit over centerline, beneath the cockpit of the airplane.

k. Radius of Arc (R). The radius of the arc at point N measured from center of curvature (O) to the point N.

l. Distance S. The distance from the P.C. to the point N along the arc for arc sections and from the P.T. to the point N along the tangent for tangent sections.

m. Undercarriage Width (u). The distance between the airplane's outer main wheels, including the width of the wheels. For airport design purposes, when the dimension "u" is not available, assume "u" to be 1.15 times the airplane's main gear track.

n. Wheelbase (w). The distance between the nosewheel and the center of the main undercarriage.

o. Taxiway Width (W). The taxiway pavement width on the tangent section. The taxiway width should be greater than the sum of the undercarriage width plus two times the acceptable taxiway edge safety margin (M).

p. Symbol x.

$$x = (1 - (R/d)^2)^5$$

q. Symbol y.

$$y = ((R/d)^2 - 1)^5$$

r. Symbol z.

$$z = 2.7183^{ySR} (R/d + y - \tan(.5A_o)) / (R/d - y - \tan(.5A_o))$$

2. EXAMPLE NO. 1, JUDGMENTAL OVERSTEERING. Given: Airplane wingspan 196 feet (59.7 m), wheelbase 84 feet (25.6 m), undercarriage width 41 feet (12.5 m), and R = 150 feet (45 m) for 180 degree turn. Taxiway width is 75 feet (23 m), fillet radius, widening on only one side, is 97 feet (29 m), and lead-in to fillet is 250 feet (75 m).

Step 1 - Acceptable M = 15.0 feet (4.5 m)

Step 2 - Calculate A_{max} = 27.3 degrees
(27.2 degrees)

Step 3 - Calculate B_{max} = 32.2 degrees
(32.6 degrees)

Step 4 - Calculate provided M = 15.8 feet
(4.8 m)

3. EXAMPLE NO. 2, MAINTAINING COCKPIT OVER CENTERLINE. Given: Airplane wingspan 196 feet (59.7 m), wheelbase 84 feet (25.6 m), distance between main undercarriage and cockpit 90 feet (27.4 m), undercarriage width 41 feet (12.5 m), and cockpit following R = 150 feet (45 m) for 180 degree turn. Taxiway width is 75 feet (22 m).

Step 1 - Acceptable M = 15.0 feet (4.5 m)

Step 2 - Calculate A_{max} = 36.4 degrees
(37.0 degrees)

Step 3 - Calculate B_{max} = 34.5 degrees
(35.1 degrees)

Step 4 - Calculate F_{max} = 85.2 feet (25.2 m)

Step 5 - Calculate L_{min} = 215 feet (60.2 m)

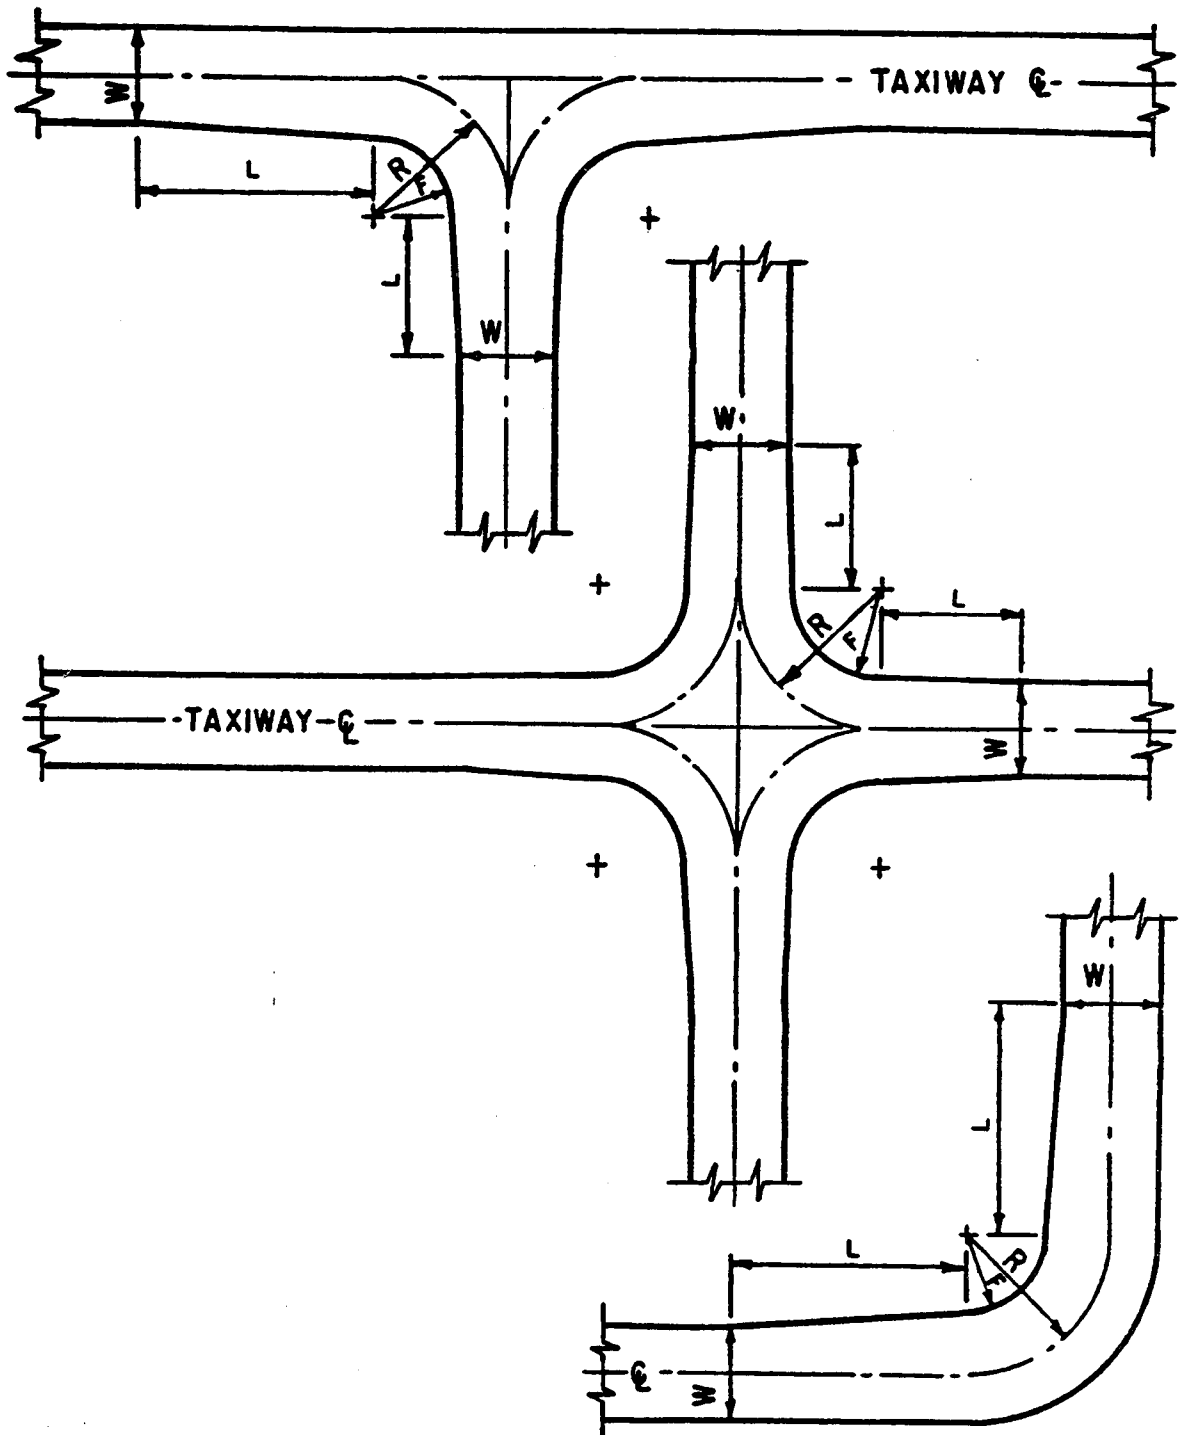


Figure A10-1. Taxiway intersection details

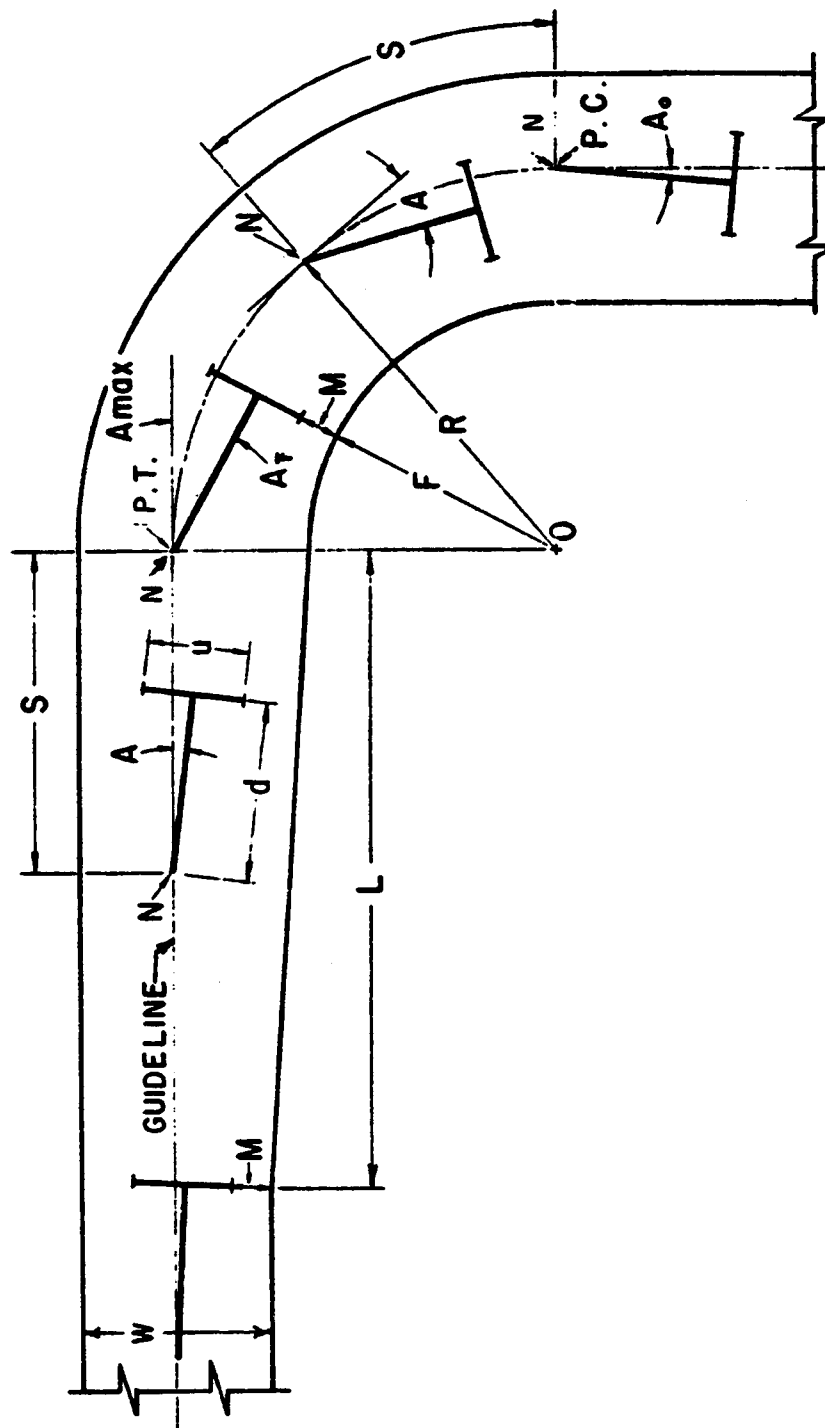


Figure A10-2. Depiction of symbols

Appendix 11. COMPUTER PROGRAM

This appendix was cancelled. Please replace pages 153-164.

This page intentionally left blank.

Appendix 12. AIRPLANE DATA**1. BACKGROUND.**

a. Airplane physical characteristics have operational and economic significance which materially affect an airport's design, development, and operation. Their consideration when planning a new airport or improving existing airport facilities maximizes their possible utilization and safety within expected demands. For example, they influence the design aspects of runways, taxiways, ramps, aprons, servicing facilities, gates, and life safety facilities. In addition, airport designers should consider anticipated growth in air traffic and the effects of near future model airplane operating weights and physical dimensions on ground operating areas.

b. Military airplanes frequently operate at civil airports. Joint-use airports should also meet the physical characteristics of military airplanes. Hence, during airport facility design, consider routine military operations such as medical evacuation, strategic deployment and dispersal, and Reserve and National Guard training missions.

c. Civil airplane versions of military counterparts are shown below.

MILITARY DESIGNATION	CIVIL DESIGNATION
C-7	DeHavilland Caribou
C-9A	McDonnell Douglas DC-9-30
C-12	Beech Huron
C-45	Twin Beech 18
C-46	Curtis-Wright Commando
C-47/R-5D	Douglas DC-3, Skytrain
C-54/R-4D	Douglas DC-4, Skymaster
C-97	Boeing Stratocruiser
C-118/R-6D	Douglas DC-6, Liftmaster
C-119	Fairchild/Republic Flying Box Car
C-121/R-7	Lockheed 749, 1049 Constellation
C-123	Fairchild/Republic Provider
C-130	Lockheed L-382 Hercules
C-131, T-29	Convair 240/340/580
C-135	Boeing 707-120B, Starlifter
C-137, VC-137B, C	Boeing 707-320B
C-140	Lockheed 1329 JetStar
C-141	Lockheed StarLifter
E-4	Boeing 747-200B
KC-10A	McDonnell Douglas, DC-10-30CF, Extender
KC-135A	Boeing 707, Stratotanker
P-3	Lockheed L-188 Electra, 185/285 Orion
T-34	Beech Mentor
T-37	Cessna 318
T-39	Rockwell International NA-265-40 Sabreliner
T-42	Beech Cochise
T-43A	Boeing 737-200
T-47A	Cessna 552
U-3	Cessna 310/T310
U-9	Aero Commander 560
U-18	DeHavilland Twin Otter

2. EXPLANATORY INFORMATION.

a. Presentation of data is in three forms:

(1) Figures A12-1 to A12-8 are representatives of general types of airplanes and not a specific model.

(2) Most figures illustrate a particular model with its specific data.

(3) Some figures present data for several similar models or series of airplanes by a single representative drawing (e.g., General Dynamics/Convair 880 and 990).

b. The alpha-symbols in the data tables and drawings use the following list of airplane physical characteristics:

Alpha-Symbol Airplane Physical Characteristics

A	Wingspan
B	Length Overall
C	Height Overall
D	Wheelbase
E	Nose to centerline of main gear
F	Wheel track (tread)
G	Centerline of fuselage to centerline of inboard engine
H	Centerline of fuselage to centerline of outboard engine
J	Outside of main gear to wingtip
K	Vertical clearance of inboard engine or propeller at maximum weight
L	Vertical clearance of outboard engine or propeller at maximum weight
M	Centerline of fuselage to approximate pivot point based on maximum nosewheel steering angle or locked wheels
N	Vertical clearance of wingtip at maximum weight
P	Height of exhaust of jet engine on centerline of fuselage (three-engine jet airplane only)

c. Measurement of turn radius is either at maximum nosewheel steering angle or with locked wheels, whichever produces the larger radius. It is a horizontal measurement from the pivot point to the farthest point of the airplane during execution of a turn. This dimension represents a maximum effort maneuver not normally used by the airlines due to excessive tire wear. THIS DIMENSION IS NOT FOR AIRPORT FACILITY DESIGN PURPOSES. Contact the airline(s) involved for the turn radius to use for design purposes.

d. The abbreviation "SRS" denotes "series."

e. The abbreviation "NA" denotes "datum is not available."

f. The weight and dimensional information for transport type airplanes are from aircraft manufacturer publications titled "Airplane Characteristics, Airport Planning." Each airplane model has a publication that is available from its manufacturer. Since each publication has considerably more information of interest to an airport designer than assembled in this advisory circular, revisions are frequent. For example, weight and dimensional data is subject to change as a result of modifications and improvements to the airplane that differs from this advisory circular. Hence, it is advisable during airport facility planning and design to contact manufacturers of applicable airplanes.

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
BELLANCA	7	CITABRIA	1,650 LB 748 KG	1,650 LB 748 KG	33'5" 10.19M	22'8" 6.91M	6'8" 2.03M	16'1" 4.90M	6'4" 1.93M	2	
CESSNA	120		1,450 LB	1,450 LB	32'10"	21'0"	6'3"		6'5"	2	
	140		658 KG	658 KG	10.00M	6.40M	1.91M		1.96M		
	170		2,200 LB 998 KG	2,200 LB 998 KG	36'0" 10.97M	25'0" 7.60M	6'7" 2.00M			4	
	180	SKYWAGON	2,800 LB	2,800 LB	36'2"	25'9"	7'9"		7'8"	4	21'10"
	185		1 270 KG	1,270 KG	11.04M	7.85M	2.34M		2.31M		6.65M
HELIO AIRCRAFT	190		3,350 LB	3,350 LB	36'2"	27'1"	7'2"			4	
	195		1 520 KG	1,520 KG	11.04M	8.26M	2.16M				
	H-250	HELIO	3,400 LB	3,400 LB	39'0"	31'6"	8'10"	23'5"	9'0"	6	
	H-295	COURIER	1,542 KG	1,542 KG	10.87M	9.59M	2.70M	7.22M	2.75M		
	HST-550	HELIO STALLION	5,000 LB 2 268 KG	5,100 LB 2,313 KG	41'0" 12.49M	39'7" 11.04M	9'3" 2.83M		9'8" 2.96M	11	

MODEL 185 HAS MAXIMUM WEIGHTS OF 3,350 LB (1 520 KG) AND 6 SEATS.
MODEL 195 HAS LENGTH OF 27'4" (8.33M).

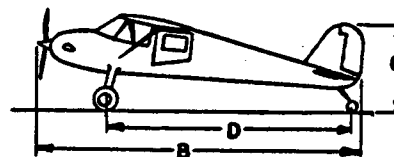
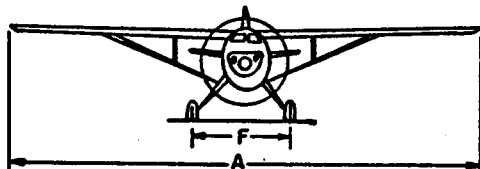


Figure A12-1. Single engine, high wing, tailwheel airplanes 8,000 lb. (3,628 Kg) or less

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
PIPER	PA-12, 14, 15	SUPER CRUISER	1,750 LB 794 KG	1,750 LB 794 KG	35'6" 10.80M	22'6" 6.85M	6'10" 2.08M		6'3" 1.91M	3	20'8" 6.29M
	PA-18	SUPER CUB	1,500 LB 680 KG	1,500 LB 680 KG	35'3" 10.72M	22'5" 6.83M	6'8" 2.03M			2	20'7" 2.26M
	PA-20	PACER	1,650 LB 748 KG	1,650 LB 748 KG	29'4" 8.90M	20'5" 6.20M	6'3" 1.91M			4	
SILVAIRE	8		1,400 LB 635 KG	1,400 LB 635 KG	35'0" 10.67M	20'0" 6.10M	6'3" 1.91M		6'4" 1.93M	2	
TAYLOR- CRAFT	BC-12		1,150 LB 522 KG	1,150 LB 522 KG	36'0" 10.97M	22'0" 6.72M	6'8" 2.03M		6'0" 1.83M	2	
UNIVAIR AIRCRAFT	108	VOYAGER	2,150 LB 975 KG	2,150 LB 975 KG	33'11" 10.34M	24'6" 7.46M	6'10" 2.08M	18'7" 5.66M	7'1" 2.16M	4	20'6" 2.24M

NOTE: MODEL PA-20 MAY HAVE MAXIMUM WEIGHTS OF 1,800 LB (816 KG).

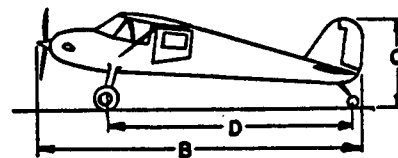
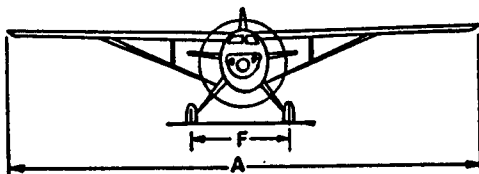


Figure A12-2. Single engine, high wing, tailwheel airplanes 8,000 lb. (3,628 Kg) or less (cont'd)

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
BEDE AIRCRAFT	BD-4		1,400 LB 635 KG	1,400 LB 635 KG	25'6" 7.77M	21'11" 6.68M	6'3" 1.91M		8'3" 2.51M	4	
	150		1,600 LB 726 KG	1,600 LB 726 KG	32'9" 9.98M	23'10" 7.26M	8'0" 2.44M	4'10" 1.48M	6'7" 2.01M	2	19'10" 6.05M
CESSNA	172	SKYHAWK	2,300 LB 1 043 KG	2,300 LB 1 043 KG	35'10" 10.93M	26'11" 8.20M	8'10" 2.84M	5'4" 1.63M	7'2" 2.23M	4	19'8" 6.00M
	177	CARDINAL	2,500 LB 1 134 KG	2,500 LB 1 134 KG	35'6" 10.82M	27'2" 8.28M	8'6" 2.59M	6'5" 1.96M	8'4" 2.54M	4	
	182	SKYLANE	2,950 LB 1 338 KG	2,950 LB 1 338 KG	35'10" 10.93M	28'1" 8.56M	8'11" 2.72M	5'7" 1.70M	8'0" 2.44M	4	21'4" 6.50M
	206	STATIONAIR	3,600 LB 1 633 KG	3,600 LB 1 633 KG	35'10" 10.93M	28'0" 8.53M	9'8" 2.95M	6'11" 2.11M	8'2" 2.49M	6	
	207	SUPER SKYWAGON	3,800 LB 1 724 KG	3,800 LB 1 724 KG	35'10" 10.93M	31'9" 9.68M	9'7" 2.92M		10'0" 3.04M	6	
	210	CENTURION	3,800 LB 1 724 KG	3,800 LB 1 724 KG	36'9" 11.20M	28'3" 8.61M	9'8" 2.95M	5'9" 1.76M	8'6" 2.59M	6	22'5" 6.84M
PIPER	PA-22	TRI-PACER	1,800 LB 816 KG	1,800 LB 816 KG	29'4" 8.97M	20'4" 6.20M	6'3" 1.91M			3	19'11" 6.07M

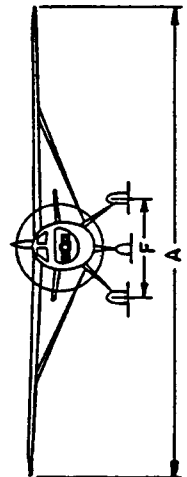
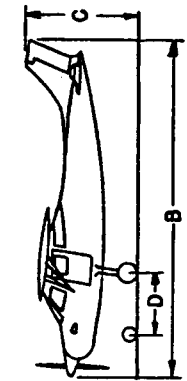


Figure A12-3. Single engine, high wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
AEROSTAR AVIATION	415	ERCOUPE	1,450 LB 658 KG	1,450 LB 658 KG	30'0" 9.14M	20'7" 6.27M	6'3" 1.91M	5'4" 1.63M	7'9" 2.36M	2	18'9" 5.71M
	H-20		2,525 LB 1,145 KG	2,525 LB 1,145 KG	35'0" 10.67M	23'7" 7.06M	8'4" 2.54M	5'7" 1.70M	9'1" 2.77M	4	22'1" 6.72M
	H-22	HARK 22	3,680 LB 1,669 KG	3,680 LB 1,669 KG	35'0" 10.67M	27'0" 8.23M	9'10" 3.00M	8'3" 2.51M	11'0" 3.35M	5	
BEECH- CRAFT	23	MUSKETEER	2,450 LB 1,111 KG	2,200 LB 998 KG	32'9" 9.98M	25'0" 7.62M	8'3" 2.51M	6'4" 1.91M	11'10" 3.61M	4	
	V-35B	BONANZA	3,400 LB 1,542 KG	3,400 LB 1,542 KG	33'6" 10.21M	26'5" 8.05M	6'7" 2.01M	7'0" 2.13M	9'7" 2.92M	4	21'6" 6.55M
	F-33	BONANZA	3,050 LB 1,383 KG	3,050 LB 1,383 KG	32'10" 10.00M	25'6" 7.77M	8'3" 2.51M	7'5" 2.26M	9'7" 2.92M	5	21'3" 6.48M
	F-33A	BONANZA	3,400 LB 1,542 KG	3,400 LB 1,542 KG	33'6" 10.21M	26'8" 8.13M	8'3" 2.51M	7'5" 2.26M	9'7" 2.92M	5	21'3" 6.48M
DELLANCA	260	VIKING	3,000 LB	3,000 LB	24'2"	23'6"	7'4"	6'8"	9'0"	4	
	300		1,361 KG	1,361 KG	10.41M	7.15M	2.23M	2.03M	2.75M		

NOTE: MODEL H-20 MAY BE KNOWN AS: CHAPARRAL, EXECUTIVE, MUSTANG, RANGER, STATESMAN.

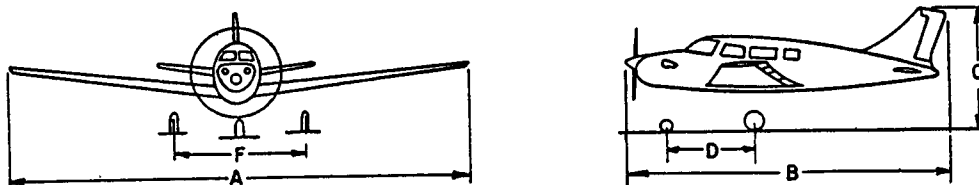


Figure A12-4. Single engine, low wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
GRUMMAN	AA-1	YANKEE	1,500 LB 680 KG	1,500 LB 680 KG	24'6" 7.47M	19'3" 5.87M	6'10" 2.08M	4'5" 1.35M	8'3" 2.51M	2	
NAVION	G-1	RANGE- MASTER	3,315 LB 1 504 KG	3,150 LB 1 489 KG	34'9" 10.59M	27'6" 8.38M	8'4" 2.54M	5'8" 1.74M	8'9" 2.67M	4	
PIPER	PA-24	COMMANCHE	2,550 LB 1 157 KG	2,550 LB 1 157 KG	36'0" 10.97M	24'9" 7.54M	7'5" 2.25M	6'7" 2.01M	9'8" 2.94M	4	22'10" 6.96M
	PA-28-180	CHEROKEE	2,400 LB 1 089 KG	2,400 LB 1 089 KG	30'0" 9.14M	23'6" 7.16M	7'4" 2.22M	6'3" 1.89M	10'0" 3.04M	4	20'0" 6.08M
	PA-28-200	CHEROKEE ARROW	2,600 LB 1 179 KG	2,600 LB 1 179 KG	30'0" 9.14M	24'2" 7.37M	8'0" 2.44M	7'5" 2.26M	10'6" 3.20M	5	20'3" 6.17M
	PA-32	CHEROKEE SIX	3,400 LB 1 542 KG	3,400 LB 1 542 KG	32'10" 10.00M	27'9" 8.45M	7'11" 2.41M	7'10" 2.39M	10'7" 3.22M	6	21'9" 6.63M
ROCKWELL INTERNAT.	112		2,475 LB 1 127 KG	2,475 LB 1 127 KG	35'0" 10.67M	27'2" 8.28M	10'1" 3.07M		7'2" 2.18M	4	

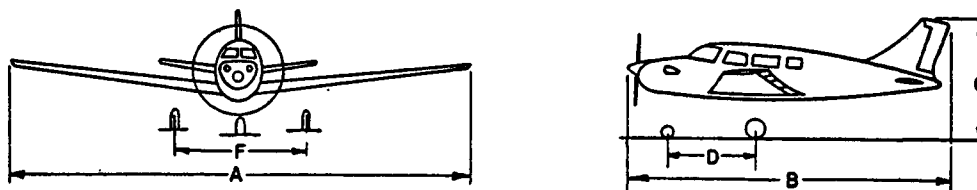


Figure A12-5. Single engine, low wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less (cont'd)

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
AEROSTAR AVIATION	600 601	AEROSTAR	5,500 LB 2 495 KG	5,500 LB 2 495 KG	34'3" 10.44M	34'10" 10.62M	12'2" 3.71M		10'3" 3.12M	5	
BEECH- CRAFT	B-55	BARRON	5,100 LB 2 313 KG	5,100 LB 2 313 KG	37'10" 11.53M	28'0" 8.53M	9'2" 2.79M	7'0" 2.13M	7'0" 2.13M	4	23'8" 7.21M
	E-55	BARRON	5,300 LB 2 404 KG	5,300 LB 2 404 KG	37'10" 11.53M	29'0" 8.88M	9'2" 2.79M	8'0" 2.44M	8'0" 2.44M	4	23'8" 7.21M
	B-60	DUKE	6,775 LB 3 073 KG	6,775 LB 3 073 KG	39'3" 11.96M	33'10" 10.32M	12'4" 3.76M	9'3" 2.82M	11'0" 3.35M	6	
CSSNA	310		5,100 LB 2 313 KG	5,100 LB 2 313 KG	37'6" 11.43M	29'7" 9.02M	9'11" 3.03M	9'6" 2.90M	12'0" 3.66M	6	24'0" 7.31M

NOTE: E-55 TURBO HAS MAXIMUM WEIGHTS OF 5,900 LB (2 676 KG).
310 TURBO HAS MAXIMUM WEIGHTS OF 5,500 LB (2 495 KG).

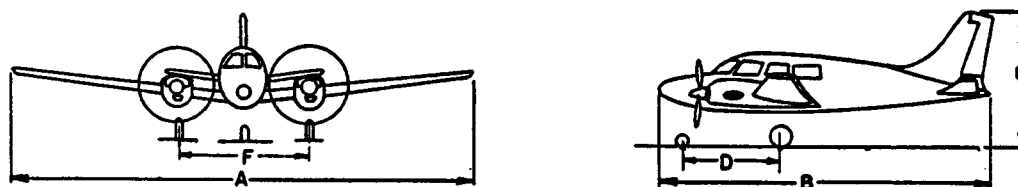


Figure A12-6. Twin engine, low or mid wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
CESSNA	401, 402, 421	TWIN CESSNA	6,300 LB 2 858 KG	6,200 LB 2 812 KG	39'10" 12.27M	36'2" 11.02M	11'8" 3.56M	10'6" 3.20M	14'8" 4.47M	6	
PIPER	PA-23-160	APACHE	3,800 LB 1 724 KG	3,800 LB 1 724 KG	37'2" 11.32M	27'5" 8.34M	9'6" 2.87M	7'6" 2.28M	11'0" 3.35M	5	24'0" 7.31M
	PA-23-250	AZTEC	4,800 LB 2 177 KG	4,800 LB 2 177 KG	37'0" 11.27M	27'7" 8.42M	10'4" 3.15M	7'6" 2.28M	11'4" 3.45M	6	24'0" 7.31M
	PA-30	TWIN CONQUANCHO	3,600 LB 1 633 KG	3,600 LB 1 633 KG	36'0" 10.97M	25'2" 7.67M	8'3" 2.51M	7'4" 2.23M	9'10" 2.98M	4	22'8" 6.90M
	PA-31	NAVAJO	6,200 LB 2 812 KG	6,200 LB 2 812 KG	40'8" 12.40M	32'8" 9.94M	13'0" 3.96M	8'8" 2.64M	13'9" 4.19M	7	27'3" 8.32M

NOTE: MODEL (421) HAS OPTIONAL TAKEOFF WEIGHT OF 6,350 LB (2 880 KG).
(421B) 7,450 LB (3 379 KG).



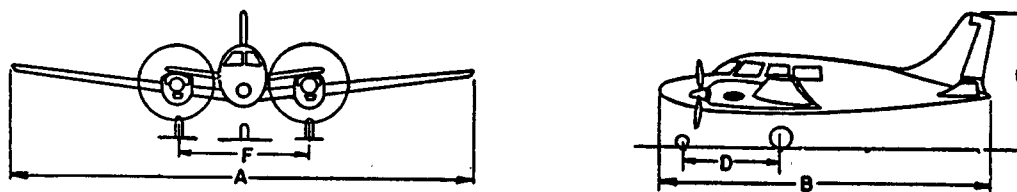




Figure A12-7. Twin engine, low or mid wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less (cont,d)

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
CESSNA	336	SUPER	4,630 LB	4,400 LB	38'2"	29'10"	9'4"	7'10"	8'2"	4	
	337	SKYMASTER	2,100 KG	1,996 KG	11.85M	9.10M	2.85M	2.39M	2.48M		
ROCKWELL INTERNAT.	500	AERO COMMANDER	6,500 LB	6,500 LB	49'6"	35'1"	14'6"		12'11"	7	31'2"
			2,948 KG	2,948 KG	15.09M	10.69M	4.42M		3.94M		9.50M
	560, 680	GRAND	7,700 LB	7,700 LB	49'1"	36'7"	14'6"	14'0"	12'11"	7	
	SHRIKE	SHRIKE CDR	3,493 KG	3,493 KG	14.96M	11.15M	4.42M	4.28M	3.94M		

NOTE: SHRIKE COMMANDER HAS MAXIMUM WEIGHTS OF 6,750 LB (3,062 KG).
MODEL 681, TURBO II, HAWK COMMANDER HAS WINGSPAN OF 44'0" (13.41M) AND
MAXIMUM WEIGHTS OF 9,400 LB (4,264 KG); OTHERWISE AS MODEL 560.

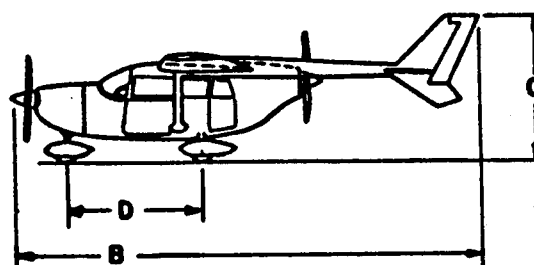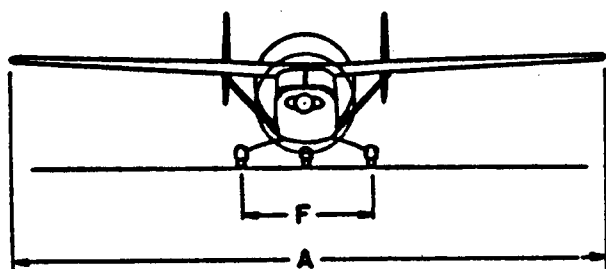

CESSNA SUPER SKYMASTER.

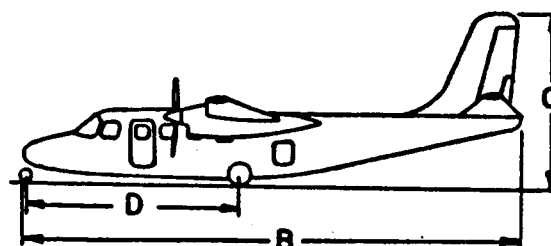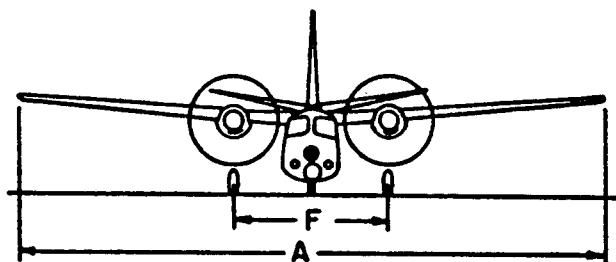

ROCKWELL INTERNATIONAL AERO COMMANDER SERIES.

Figure A12-8. Twin engine, high or mid wing, tricycle gear airplanes 8,000 lb. (3,628 Kg) or less

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	TURN RADIUS
MOHAWK	23,480 LB	22,710 LB	71'11"	63'4"	20'5"	23'9"	29'9"	10'3"	9'8"	30'5"	5'5"	5.2°	41'1"
298	10 653 KG	10 301 KG	21.92M	19.30M	6.22M	7.24M	9.07M	3.12M	2.95M	9.27M	1.65M	1.60M	12.52M

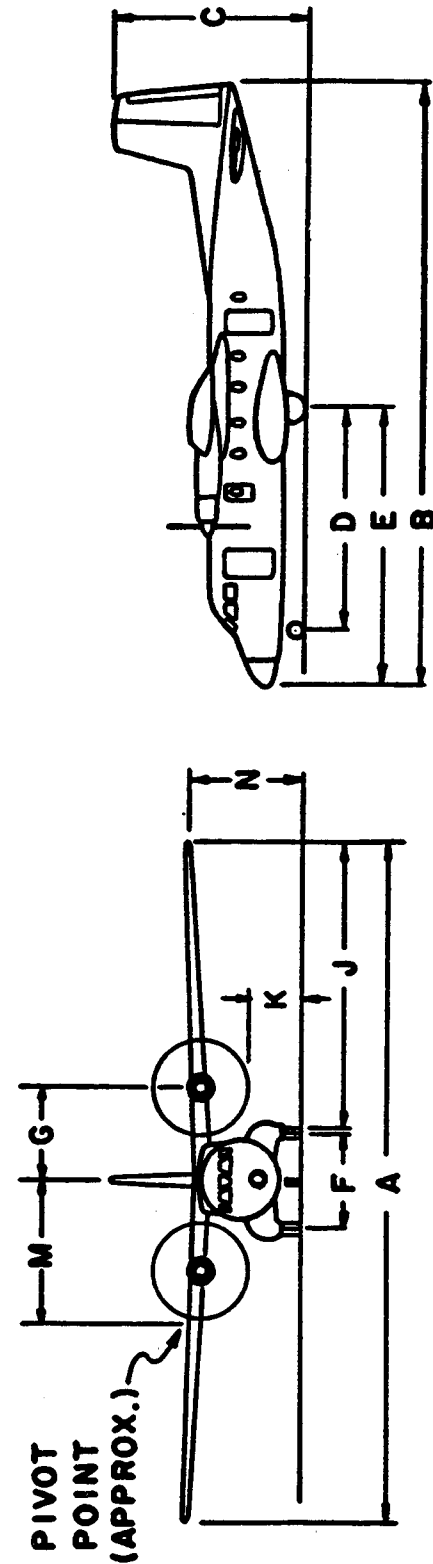


Figure A12-9. Aérospatiale Nord 262

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	N	TURN RADIUS
CARAVELLE	114,640 LB	104,990 LB	112'6"	105'0"	28'7"	38'6"	55'6"	17'1"	7'10"	46'7"	7'2"	33'2"	7'5"	90'3"
	52 000 KG	47 623 KG	34.29M	32.00M	8.72M	11.74M	16.92M	5.21M	2.39M	14.20M	2.18M	10.11M	2.26M	27.51M

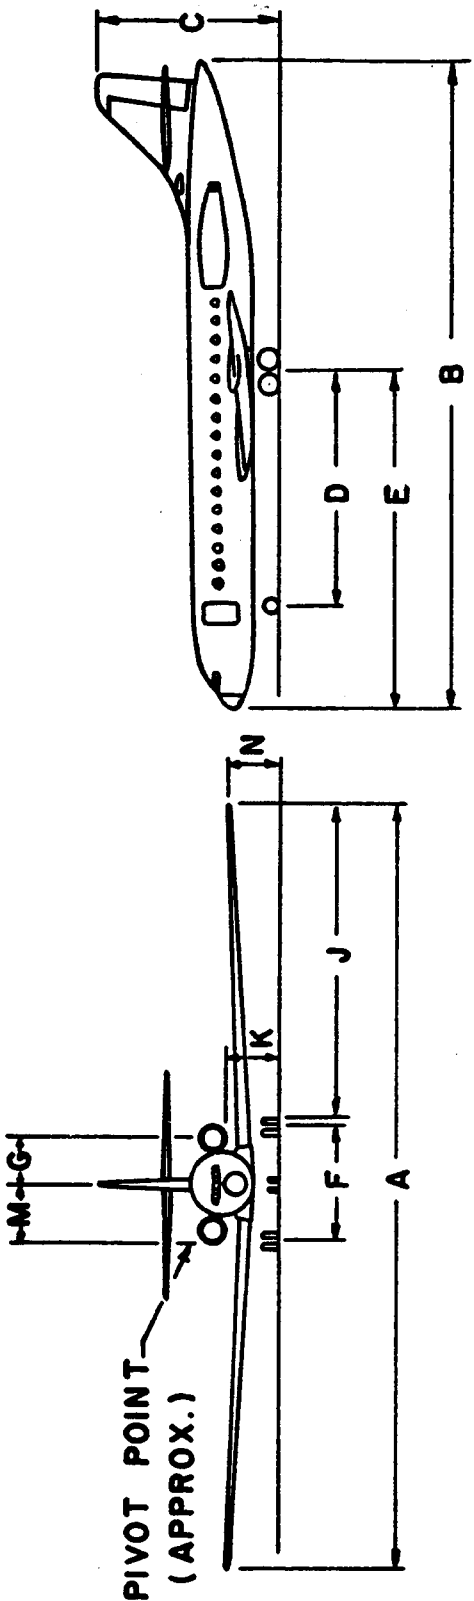


Figure A12-10. Aérospatiale/Sud SE-210 Caravelle

MODEL	MAXIMUM TAXI WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	N	TURN RADIUS
A-300 -82	302,000 LB 136 985 KG	281,000 LB 127 459 KG	147'1" 44.83M	175'6" 53.49M	55'6" 16.92M	60'10" 18.54M	82'8" 25.20M	31'6" 9.60M	26'0" 7.92M	55'10" 17.02M	2'7" 0.79M	37'3" 11.35M	19'4" 5.89M	113'6" 34.59M
A-300 -84	330,700 LB 150 003 KG	293,200 LB 132 993 KG	147'1" 44.83M	175'6" 53.49M	55'6" 16.92M	60'10" 18.54M	82'8" 25.20M	31'6" 9.60M	26'0" 7.92M	55'5" 16.89M	2'7" 0.79M	37'3" 11.35M	19'4" 5.89M	113'6" 34.59M
A-300 -600	363,763 LB 165 000 KG	304,238 LB 138 000 KG	147'1" 44.83M	177'6" 54.08M	54'8" 16.66M	61'1" 18.26M	82'11" 25.27M	31'6" 9.60M	26'0" 7.92M	55'5" 16.89M	3'3" 0.98M	37'11" 11.35M	18'9" 5.70M	109'3" 33.31M
A-310 -300	330,693 LB 150 000 KG	271,169 LB 123 000 KG	144'1" 43.90M	153'2" 46.67M	52'4" 15.95M	49'11" 15.21M	71'9" 21.87M	31'6" 9.60M	25'3" 7.70M	54'2" 16.51M	2'2" 0.65M	34'2" 10.41M	16'11" 5.17M	108'2" 32.97M
A-320 -100	145,505 LB 66 000 KG	124,482 LB 56 000 KG	111'3" 33.91M	123'3" 37.57M	39'1" 11.91M	41'6" 12.64M	58'1" 17.70M	24'11" 7.59M	18'10" 5.74M	40'10" 12.45M	1'10" 0.33M	15'1" 4.61M	13'5" 4.08M	72'3" 21.99M

NOTE: A-310-200 HAS OPTIONAL (TAXI) WEIGHT OF 305,560 LB (138 610 KG) AND 313,055 LB (141 999 KG).
268,963 LB (122 000 KG).



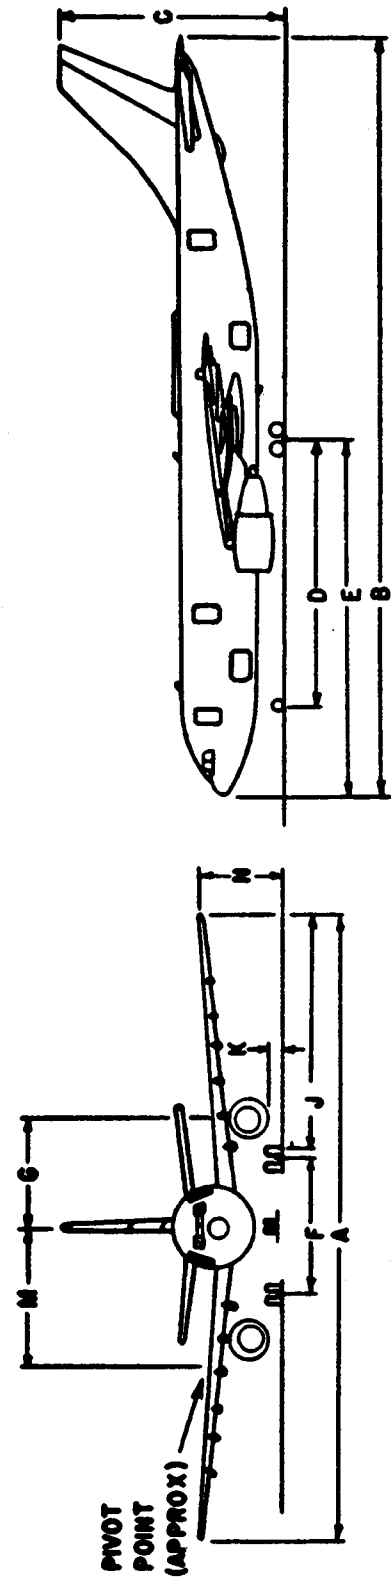


Figure A12-11. Airbus Industries A300, 310, and 320

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	H	M	TURN RADIUS
ATR-42	34,725 LB	34,170 LB	80'7"	74'5"	25'5"	28'10"	34'4"	13'5"	13'3"	32'5"	3'6"	16'8"	12'1"	57'1"
200	15 751 KG	15 499 KG	24.56M	22.68M	7.75M	8.75M	10.46M	4.09"	4.04M	9.88M	1.07M	5.08M	3.68M	17.40M
ATR-42	35,605 LB	35,275 LB	80'7"	74'5"	25'5"	28'10"	34'4"	13'5"	13'3"	32'5"	3'6"	16'8"	12'1"	57'1"
300	16 150 KG	16 000 KG	24.56M	22.68M	7.75M	8.75M	10.46M	4.09M	4.04M	9.88M	1.07M	5.08M	3.68M	17.40M
ATR-72	44,070 LB	43,870 LB	88'9"	89'2"	25'1"	35'1"	40'11"	13'5"	13'3"	36'6"	3'6"	20'5"	12'3"	64'10"
	19 990 KG	19 899 KG	27.05M	27.18M	7.65M	10.69M	12.47M	4.09M	4.04M	11.13M	1.07M	6.22M	3.73M	19.76M

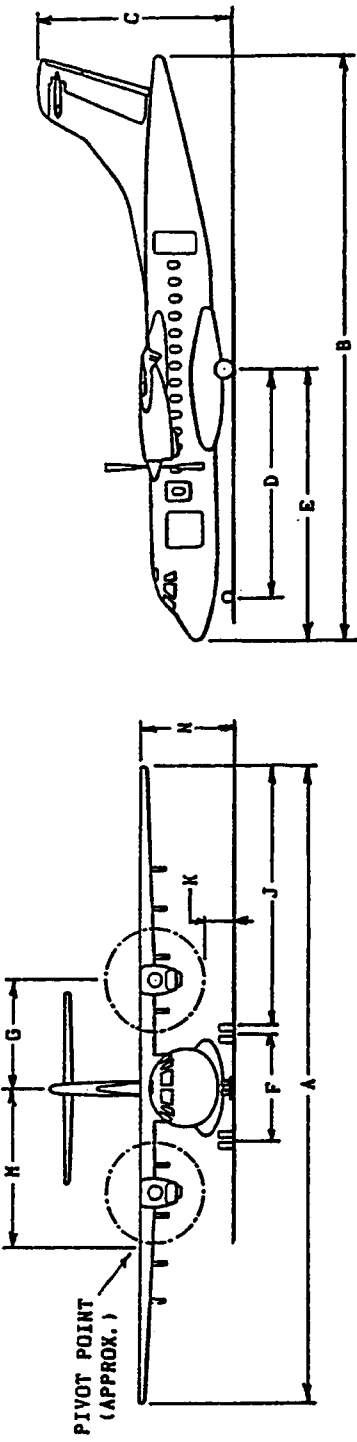

ATR - 42

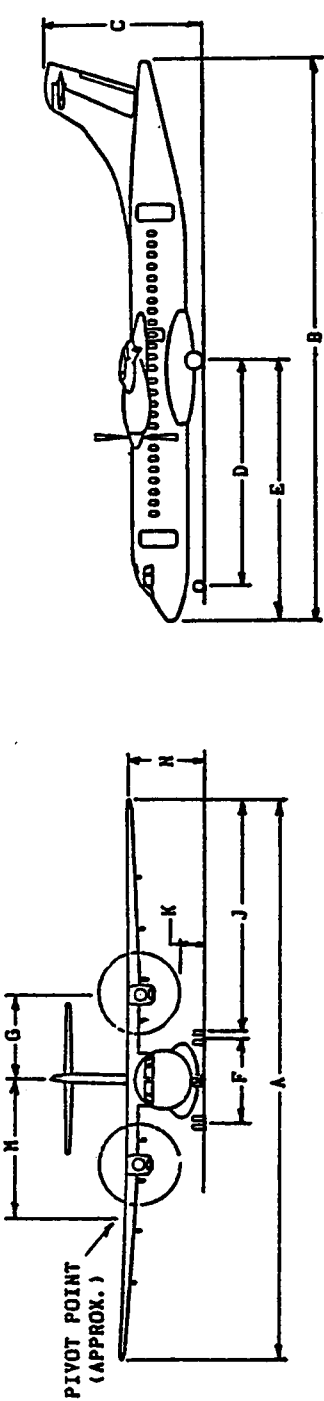

ATR - 72

Figure A12-12. Avions de Transport Regional ATR-42 & -72

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
10	16,740 LB 8 500 KG	17,640 LB 8 001 KG	42'11" 13.08M	45'6" 13.87M	15'1" 4.60M									
20	28,660 LB 13 000 KG	27,320 LB 12 392 KG	53'6" 16.31M	56'3" 17.14M	17'5" 5.31M	18'10" 5.74M	12'2" 3.71M	5'6" 1.68M	18'11" 5.77M	5'8" 1.72M	15'3" 4.65M	4'10" 1.47M	42'0" 12.80M	
50	37,480 LB 17 001 KG	35,715 LB 16 200 KG	61'11" 18.87M	60'9" 18.52M	22'11" 6.98M	23'9" 7.24M	13'1" 3.99M							
200	30,650 LB 13 903 KG	28,800 LB 13 063 KG	53'6" 16.31M	56'3" 17.14M	17'5" 5.31M									
900	45,500 LB 20 638 KG	42,000 LB 19 051 KG	63'5" 19.33M	66'3" 20.19M	24'10" 7.57M									

NOTE: MODEL 50 HAS OPTIONAL MAXIMUM TAKEOFF WEIGHT OF 40,760 LB (18,497 KG).

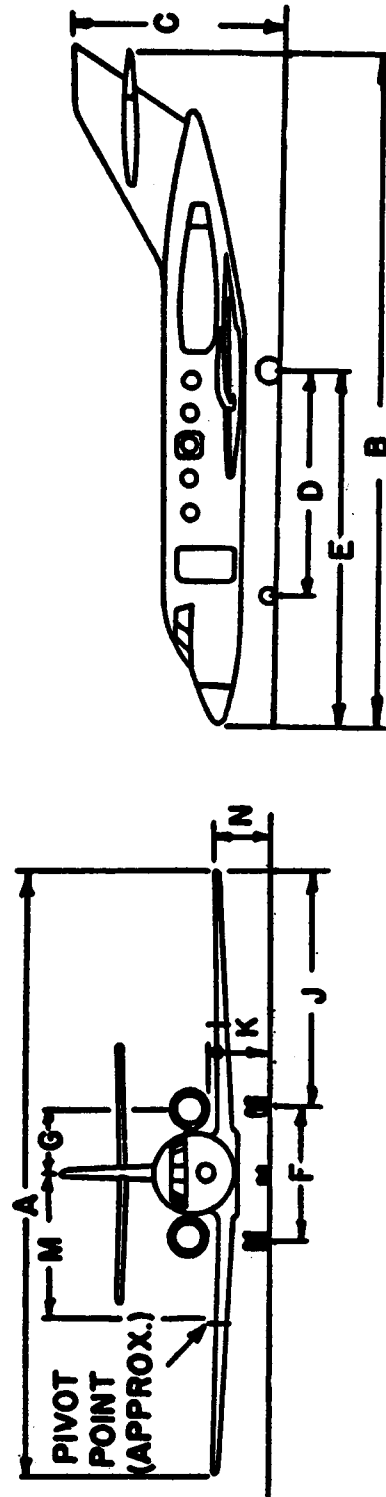


Figure A12-13. Avions Marcel Dassault Mystère 20 (Fan Jet Facon)

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	N	TURN RADIUS
200	79,000 LB	69,000 LB	88'6"	93'6"	24'6"	33'1"	48'5"	14'3"	8'2"	35'9"	6'7"	7'8"	7'4"	52'6"
400	35 834 KG	31 298 LB	26.97M	28.48M	7.46M	10.15M	14.49M	4.34M	2.49M	10.90M	2.01M	2.34M	2.24M	15.95M
500	104,500 LB	86,000 LB	93'6"	107'0"	24'6"	41'5"	56'9"	14'3"	8'2"	42'8"	6'7"	7'8"	7'4"	
	47 400 KG	39 009 KG	28.49M	32.61M	7.46M	12.35M	17.30M	4.34M	2.49M	13.00M	2.01M	2.34M	2.24M	

SRS 400 HAS MAXIMUM (TAKEOFF) WEIGHT OF 87,000 LB (39 463 KG).
78,000 LB (35 380 KG).

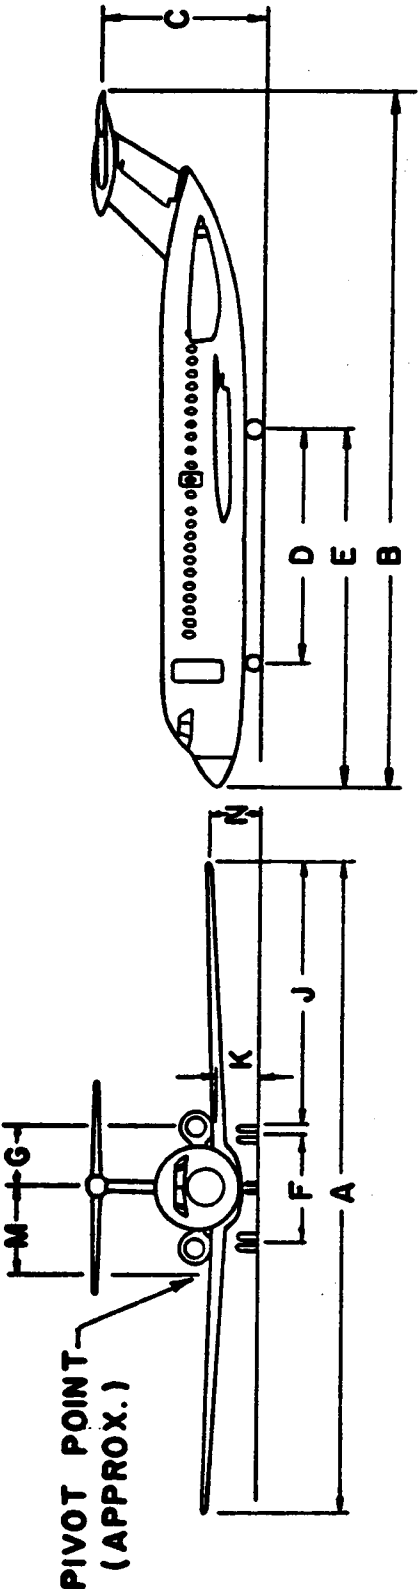


Figure A12-14. BAe 1-11

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
CONCORDE	408,000 LB	245,000 LB	83'10"	205'5"	37'5"	59'8"	122'10"	25'4"	18'1"	27'3"	6'1"	32'5"	8'6"	127'0"
	185,066 KG	111,130 KG	25.55M	62.61M	11.40M	18.19M	37.44M	7.72M	5.51M	8.31M	1.85M	9.88M	2.59M	38.71M

*TIP OF PROBE, NOSE FULLY LOWERED 8'6" (2.59M).

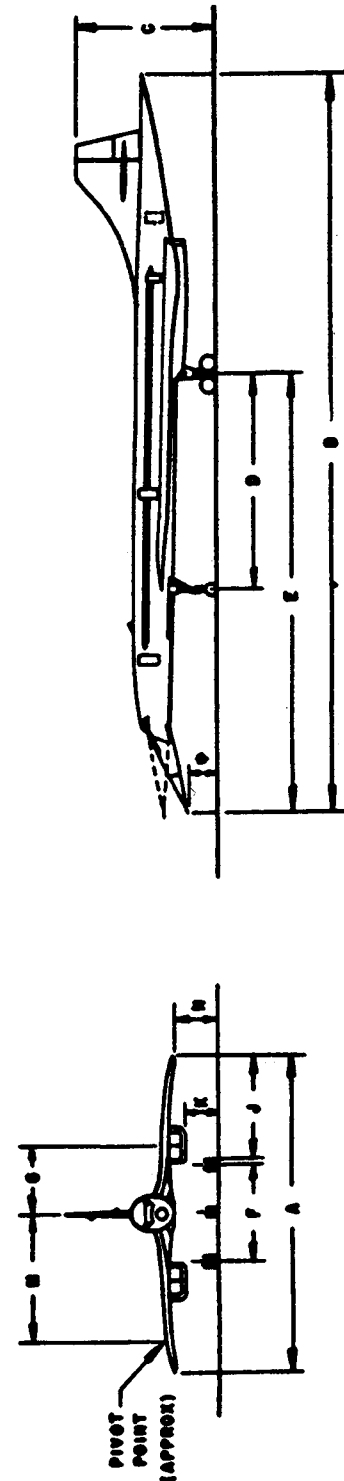


Figure A12-15. B.A.C./SNIAS Concorde

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
VC-10	312,000 LB	216,000 LB	146'2"	156'9"	39'6"	65'10"		21'5"						
-1100	141 521 KG	97 976 KG	44.60M	48.39M	12.04M	20.06M		6.53M						
VC-10	335,100 LB	237,000 LB	146'2"	171'8"	39'6"	72'1"		21'5"						
-1150	151 999 KG	107 501 KG	44.60M	52.32M	12.04M	21.97M		6.53M						

SRS 1150 KNOWN AS VC-10 SUPER.

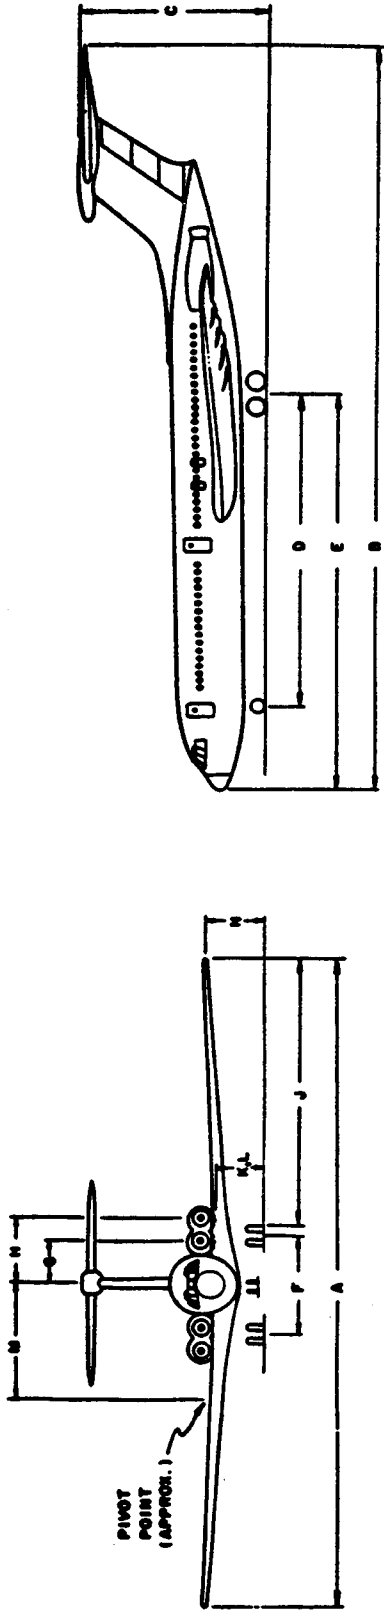


Figure A12-16. B.A.C./Vickers VC-10

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
745	64,500 LB	57,500 LB	93'9"	81'10"	26'9"	25'3"	35'8"	23'10"	12'9"		33'9"	1'1"		20'10"	8'7"	67'8"
	29 257 KG	26 082 KG	28.57M	24.94M	8.15M	7.70M	10.87M	7.32M	3.88M		10.29M	0.33M		6.56M	2.62M	20.62M
810	72,500 LB	62,000 LB	94'0"	85'8"	26'10"	29'1"	39'6"	23'10"	12'9"		33'9"	1'1"		24'5"	8'7"	71'3"
	32 865 KG	28 123 KG	28.65M	25.83M	8.18M	8.86M	12.04M	7.32M	3.88M		10.29M	0.33M		7.39M	2.62M	21.72M

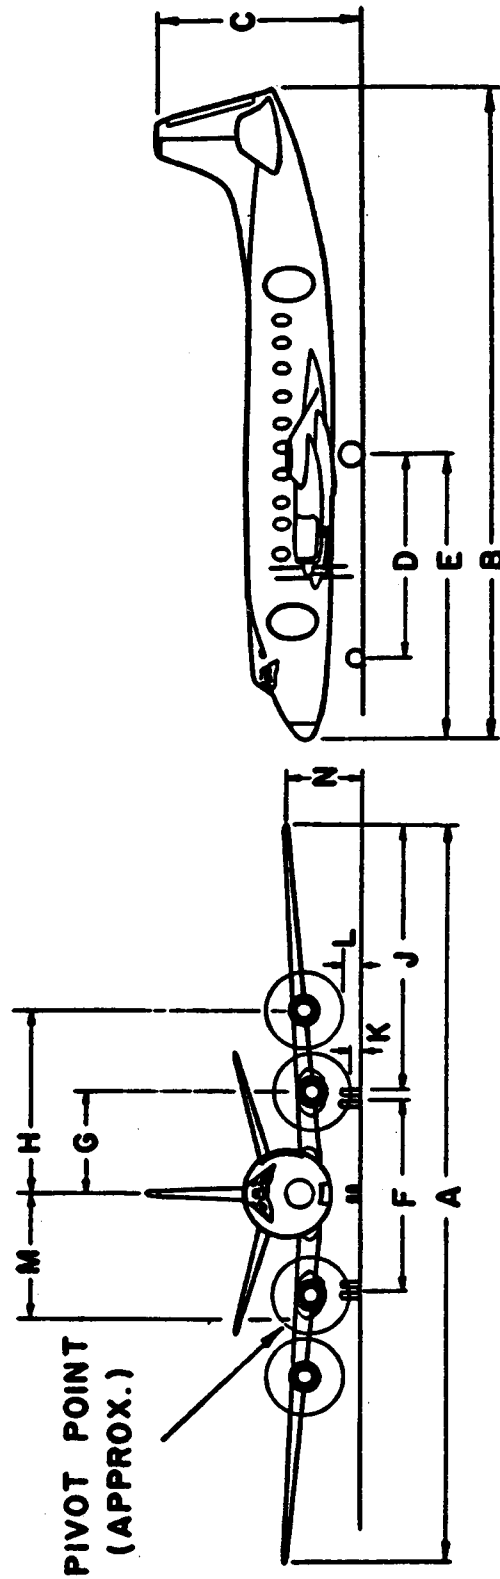


Figure A12-17. B.A.C./Vickers Viscount

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	TURN RADIUS
1	14,000 LB 6 350 KG	13,300 LB 6 033 KG	54'5" 16.59M	46'1" 14.05M	12'11" 3.94M	22'6" 6.86M	28'8" 8.74M	16'10" 5.13M	4'10" 1.47M	18.1° 5.51M	2'11° 0.89M	4'6" 1.37M	

NOTE: FORWARD WING SPAN:
AFT POSITION 20'11" (6.38M).
FORWARD POSITION 24'11" (7.59M).




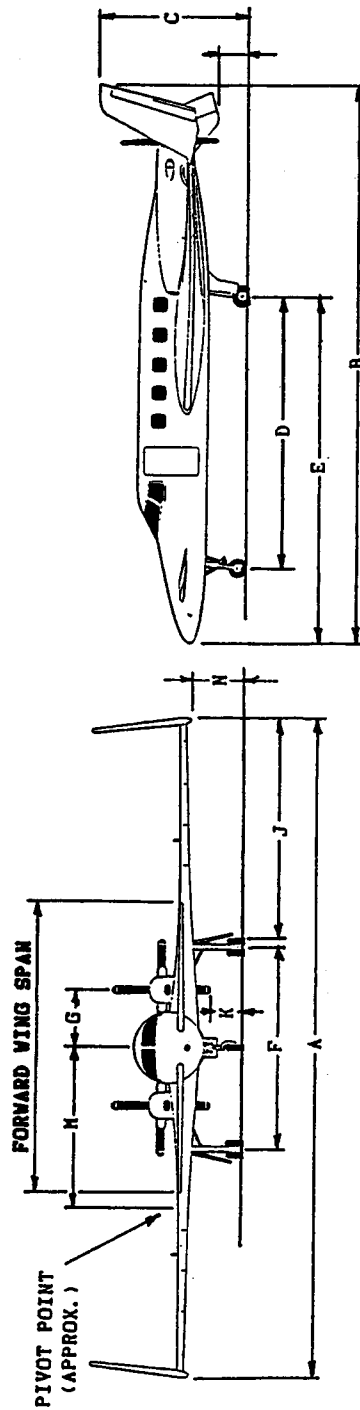


Figure A12-18. Beech Starship

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
C99	11,300 LB 5 126 KG	11,300 LB 5 126 KG	45'11" 14.00M	44'7" 13.59M	14'5" 4.39M	18'0" 5.49M	13'0" 3.97M	17	40'0" 12.19M
1900	16,600 LB 7 530 KG	16,100 LB 7 303 KG	54'6" 16.61M	57'10" 17.63M	14'11" 4.55M	23'10" 7.26M	17'2" 5.23M	19	39'4" 11.99M

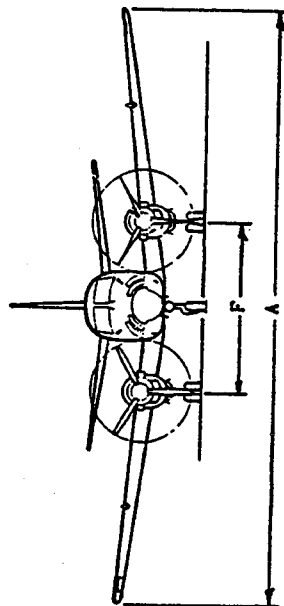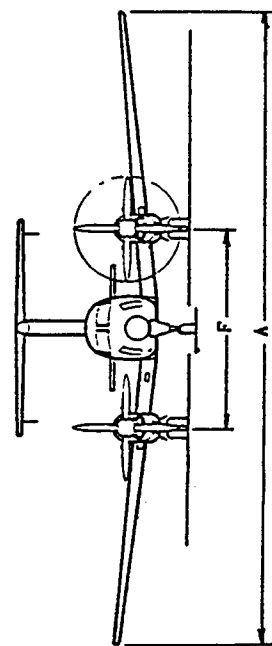

C 99 AIRLINER

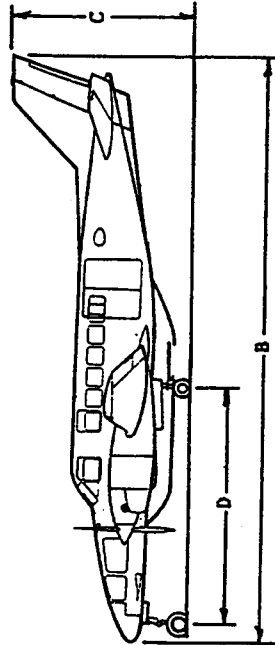

1900 AIRLINER

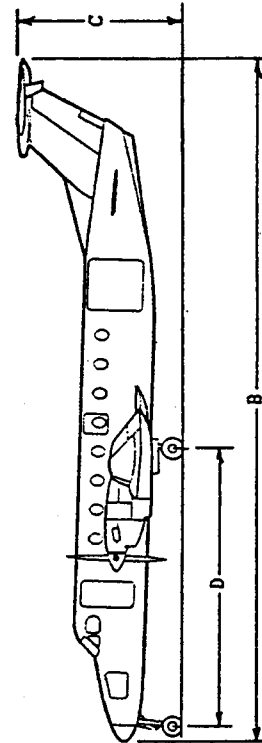


Figure A12-19. Beechcraft Airliner

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
A-90	9,650 LB 4 391 KG	9,500 LB 4 323 KG	50'3" 15.32M	36'6" 11.14M	14'8" 4.47M	12'4" 3.76M	12'9" 3.89M	8	
A-100	10,600 LB 4 823 KG	10 500 LB 4 778 KG	45'11" 14.00M	39'11" 12.18M	15'4" 4.67M	14'11" 4.55M	13'0" 3.97M	10	

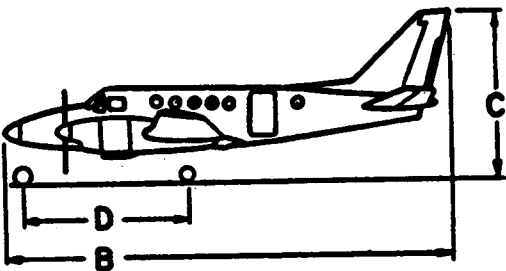
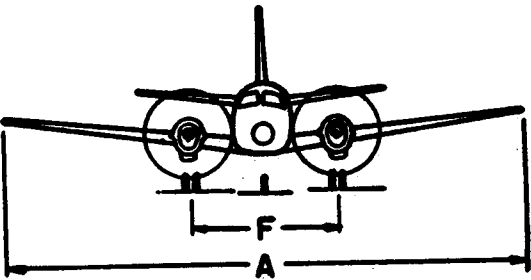


Figure A12-20. Beechcraft King Air

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
18	9,900 LB 4 500 KG	9,500 LB 4 323 KG	49'8" 15.14M	35'3" 10.74M	9'4" 2.87M	23'9" 7.24M	12'11" 3.94M	10	30'3" 9.53M
TURBO 18	10,280 LB 4 673 KG	9,775 LB 4 444 KG	46'0" 14.03M	37'5" 11.40M	9'7" 2.95M			12	
VOLPAR TURBOLINER	11,500 LB 5 324 KG	11,000 LB 5 000 KG	46'0" 14.03M	44'3" 13.49M	9'7" 2.95M			15	

NOTES: MODEL 18 HAS RECIPROCATING ENGINES.
TURBOPROP CONVERSIONS HAVE TRICYCLE LANDING GEAR.

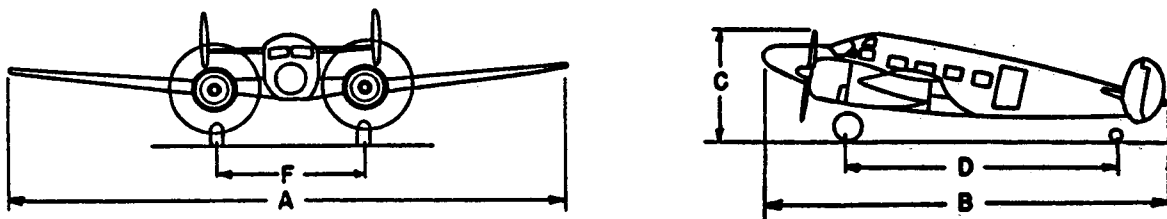


Figure A12-21. Beechcraft Model 18 and Conversions

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
A-65	7,700 LB 3 493 KG	7,350 LB 3 334 KG	45°11' 14.00M	35°6' 10.83M	14°3' 4.34M	12°4' 3.76M	12°9' 3.89M	6	29°4' 8.94M
B-80	8,800 LB 3 992 KG	8,800 LB 3 992 KG	50°3' 15.31M	35°6' 10.83M	14°3' 4.34M	12°4' 3.76M	12°9' 3.89M	8	29°4' 8.94M

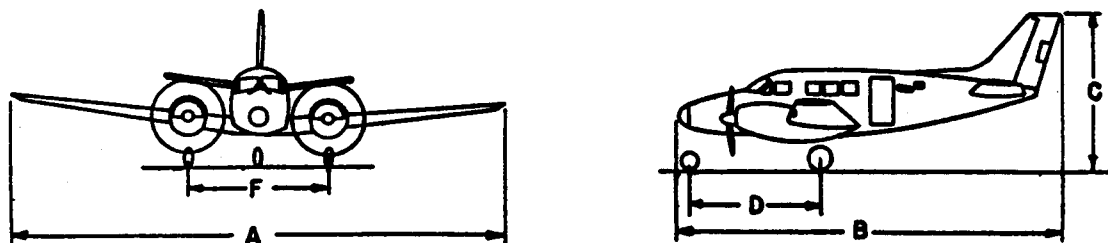


Figure A12-22. Beechcraft Queen Air

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
STRATO- FORTRESS	489,000 LB 221,353 KG	430,000 LB 204,117 KG	185'0" 56.39M	156'7" 47.73M	40'10" 12.45M	49'9" 15.16M	89'10" 27.16M	11'4" 3.45M	32'2" 9.80M	60'0" 18.29M	86'2" 26.26M	6'4" 1.93M	4'8" 1.42M	39'0" 11.89M	5'6" 1.68M	132'0" 40.23M

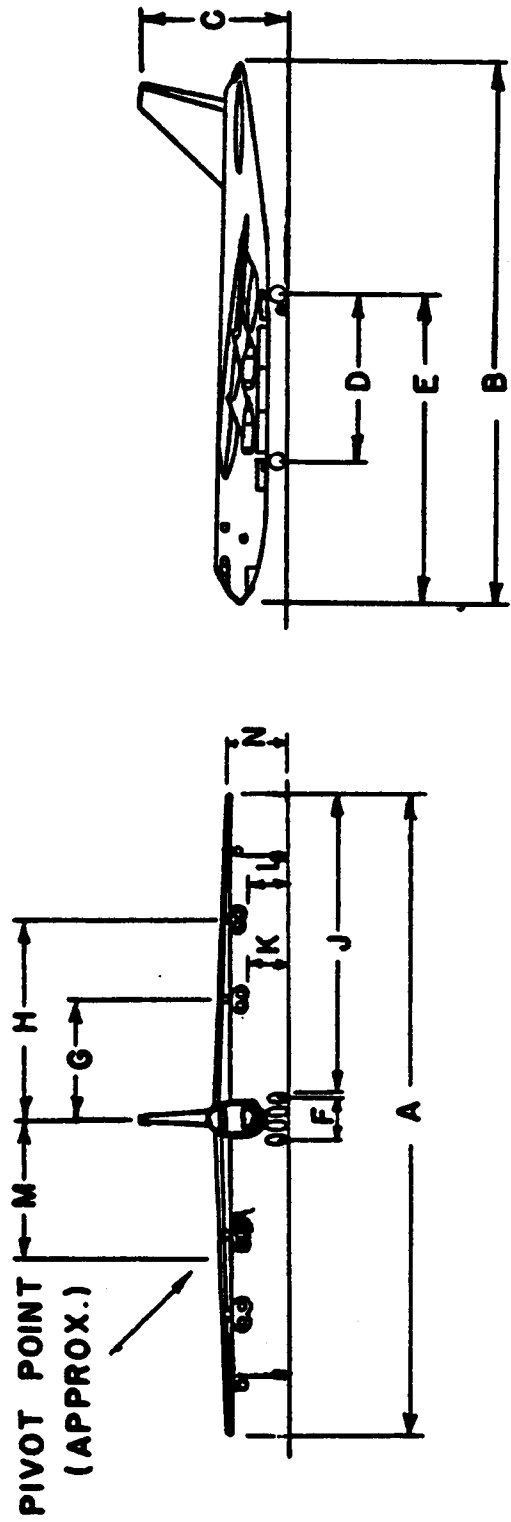


Figure A12-23. Boeing B-52 Stratofortress

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
STRATO- CRUISER	145,800 LB	121,700 LB	141'3"	110'4"	38'3"	39'2"	42'10"	28'6"	14'1"	31'2"	55'4"	1'5"	2'7"	14'3"		84'10"
	66 134 KG	55 202 KG	43.05M	33.63M	11.65M	11.93M	13.06M	8.70M	4.29M	9.50M	16.87M	0.43M	0.79M	4.34M		25.86M

NOTE: OPTIONAL TAKEOFF WEIGHTS: 153,000 LB (69 400 KG) AND 175,000 LB (79 379 KG).

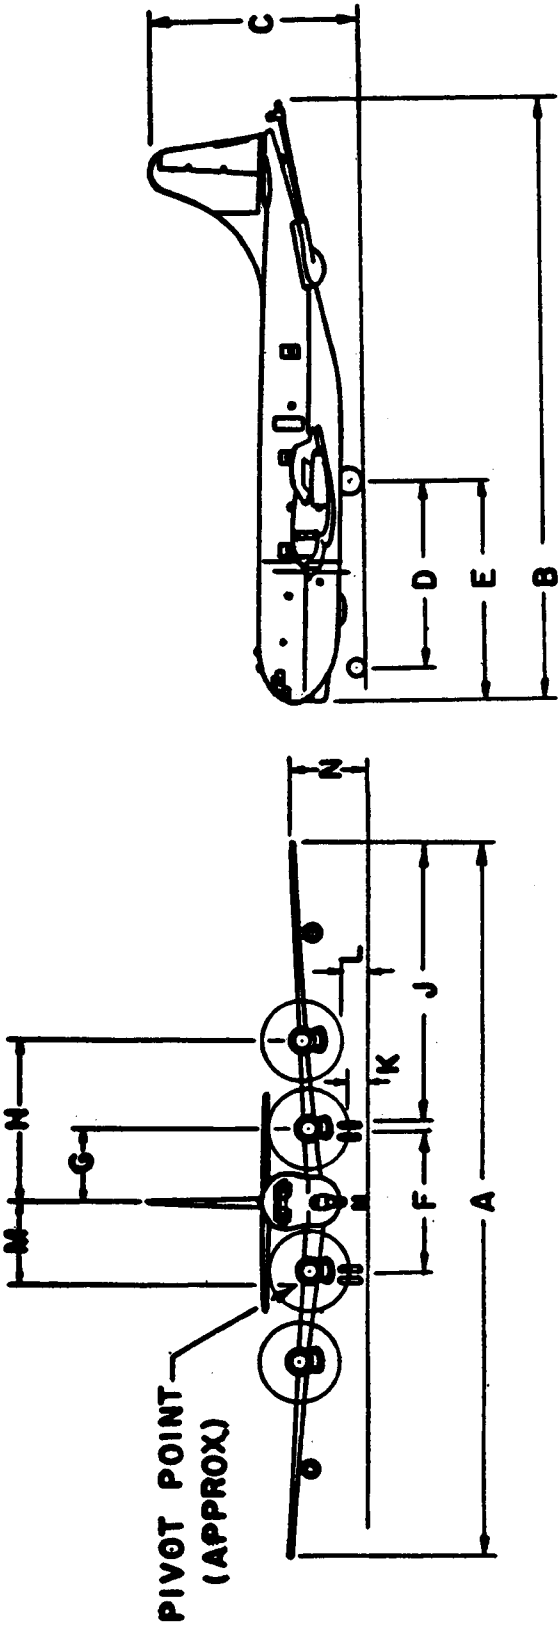


Figure A12-24. Boeing KC-97L

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
	301,600 LB	185,000 LB	130'10"	136'3"	38'5"	45'8"	63'1"	22'1"	27'2"	46'1"	51'11"	2'4"	4'8"	12'4"	107'0"	
	136,803 KG	83,915 KG	39.88M	41.53M	11.71M	13.92M	19.23M	6.73M	8.28M	14.25M	15.98M	0.71M	1.42M	3.76M	32.60M	

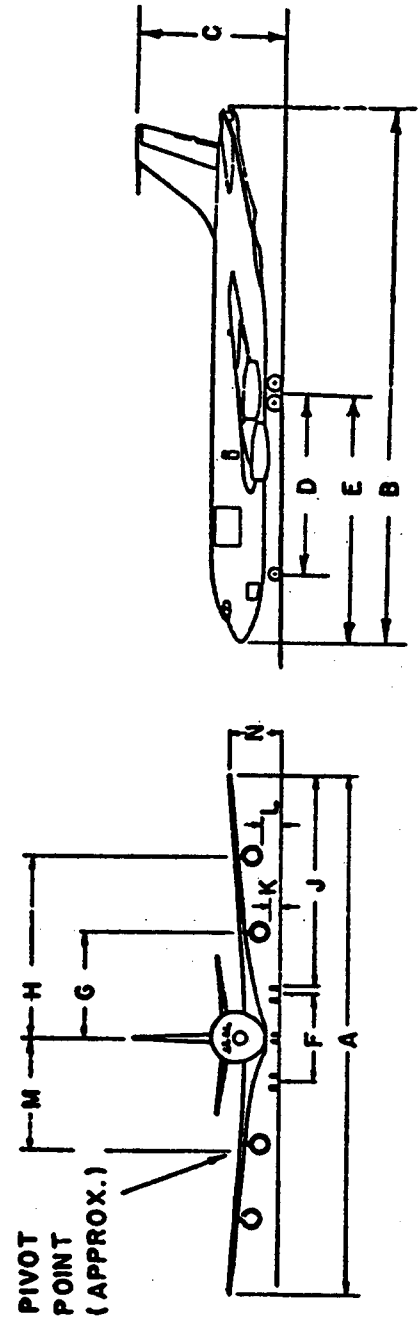


Figure A12-25. Boeing KC-135A

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
720	229,300 LB 104 009 KG	175,000 LB 79 379 KG	130'10" 39.88M	136'2" 41.50M	41'5" 12.62M	50'8" 15.44M	68'1" 20.75M	21'11" 6.67M	27'2" 8.28M	46'1" 14.05M	52'6" 16.00M	2'7" 0.79M	4'3" 1.30M	32'9" 9.98M	10'10" 3.30M	102'5" 31.22M
720B	234,300 LB 106 277 KG	175,000 LB 79 379 KG	130'10" 39.88M	136'9" 41.68M	41'2" 12.55M	50'8" 15.44M	68'1" 20.75M	21'11" 6.67M	27'2" 8.28M	46'1" 14.05M	52'6" 16.00M	2'1" 0.64M	3'9" 1.14M	32'9" 9.98M	10'10" 3.30M	102'5" 31.22M
707- 120B	257,340 LB 116 727 KG	190,000 LB 86 183 KG	130'10" 39.88M	145'1" 44.22M	41'8" 12.70M	52'4" 15.95M	69'9" 21.25M	22'1" 6.73M	27'2" 8.28M	46'1" 14.05M	52'3" 15.93M	2'4" 0.71M	4'2" 1.27M	36'7" 11.15M	11'7" 3.53M	107'0" 32.61M
707- 320/420	312,000 LB 141 521 LB	207,000 LB 93 894 KG	142'5" 43.41M	152'11" 46.61M	42'2" 12.85M	59'0" 17.98M	76'5" 23.28M	22'1" 6.73M	32'6" 9.91M	51'5" 15.67M	59'1" 17.70M	2'9" 0.84M	4'7" 1.40M	38'4" 11.68M	12'1" 3.68M	114'0" 34.75M
707- 320B,C	327,000 LB 148 325 KG	207,000 LB 93 894 KG	145'9" 44.42M	152'11" 46.61M	42'1" 12.83M	59'0" 17.98M	76'5" 23.28M	22'1" 6.73M	32'6" 9.91M	51'5" 15.67M	59'9" 18.21M	2'9" 0.84M	4'7" 1.40M	38'4" 11.68M	12'1" 3.68M	116'0" 35.36M

NOTE: OPTIONAL TAKEOFF AND LANDING WEIGHTS:

- 707 332,600 LB (151 316 KG) MAXIMUM TAKEOFF WEIGHT.
- 320B 215,000 LB (97 522 KG) MAXIMUM LANDING WEIGHT.
- 707 333,600 LB (151.316 KG) MAXIMUM TAKEOFF WEIGHT.
- 320C 247,000 LB (112 037 KG) MAXIMUM LANDING WEIGHT.

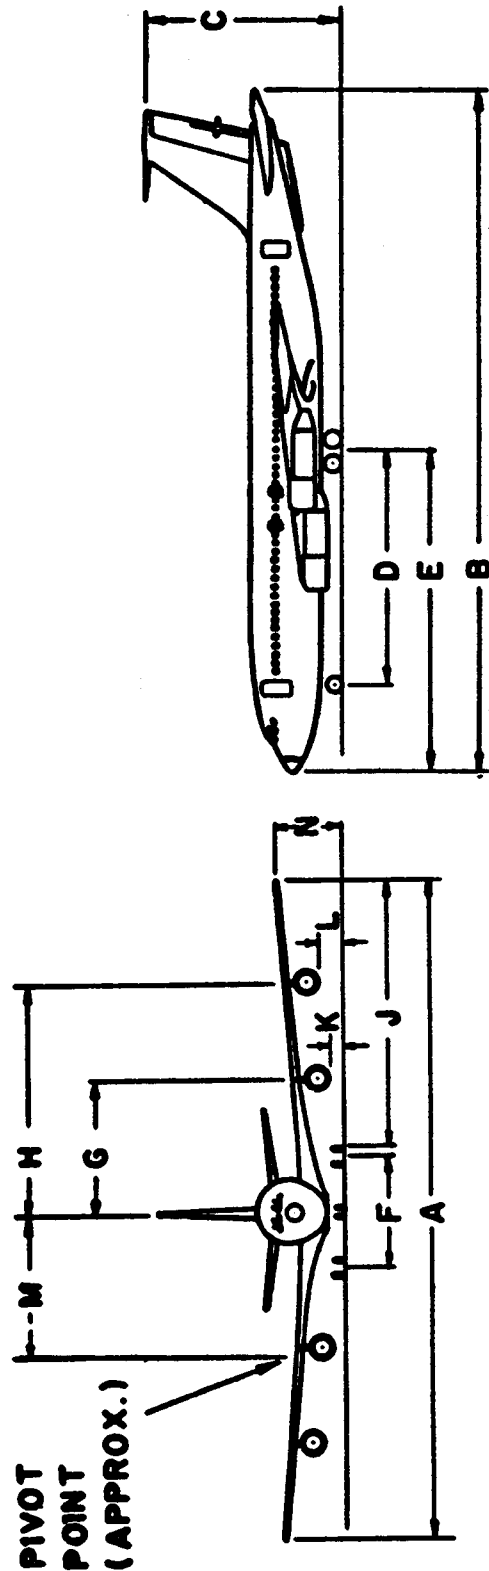


Figure A12-26. Boeing 707-720

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	P	TURN RADIUS
100	160,000 LB	137,500 LB	108'0"	133'2"	34'3"	53'3"	68'4"	18'9"	9'3"	42'6"	10'4"	14'4"	5'8"	12'0"	72'0"
	72 575 KG	62 369 KG	32.92M	40.59M	10.44M	16.23M	20.83M	5.72M	2.82M	12.95M	3.15M	4.37M	1.72M	3.66M	21.95M
100-C	160,000 LB	137,500 LB	108'0"	133'2"	34'3"	53'3"	68'4"	18'9"	9'3"	42'6"	10'4"	14'4"	5'8"	12'0"	72'0"
	72 575 KG	62 369 KG	32.92M	40.59M	10.44M	16.23M	20.83M	5.72M	2.82M	12.95M	3.15M	4.37M	1.72M	3.66M	21.95M
200	172,000 LB	150,000 LB	108'0"	153'2"	24'11"	63'3"	78'4"	18'9"	9'3"	42'4"	10'4"	16'11"	4'9"	12'0"	82'0"
	78 018 KG	68 039 KG	32.92M	46.68M	10.65M	19.28M	23.88M	5.72M	2.82M	12.90M	3.15M	5.16M	1.44M	3.66M	24.99M

NOTE: OPTIONAL TAKEOFF AND LANDING WEIGHTS:

100	160,000 LB (72 575 KG)	169,000 LB (76 657 KG)	MAXIMUM TAKEOFF WEIGHT.
	142,500 LB (64 637 KG)	142,500 LB (64 637 KG)	MAXIMUM LANDING WEIGHT.
100C	160,000 LB (72 575 KG)	169,000 LB (76 657 KG)	MAXIMUM TAKEOFF WEIGHT.
	140,000 LB (63 503 KG)	142,500 LB (64 637 KG)	MAXIMUM LANDING WEIGHT.
200	184,800 LB (83 824 KG)	190,500 LB (86 409 KG)	MAXIMUM TAKEOFF WEIGHT.
	154,500 LB (70 080 KG)	154,500 LB (70 080 KG)	MAXIMUM LANDING WEIGHT.

209,500 LB (95 028 KG)	MAXIMUM TAKEOFF WEIGHT.
161,000 LB (73 028 KG)	MAXIMUM LANDING WEIGHT.

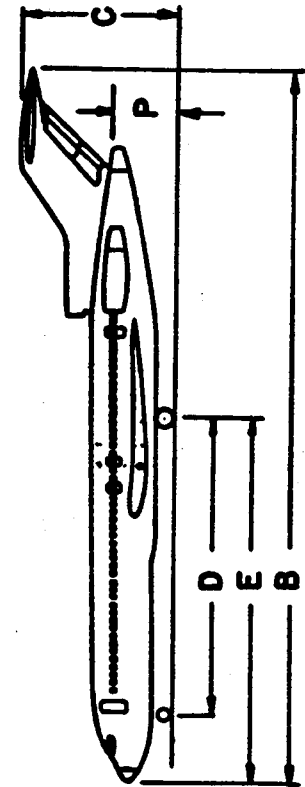
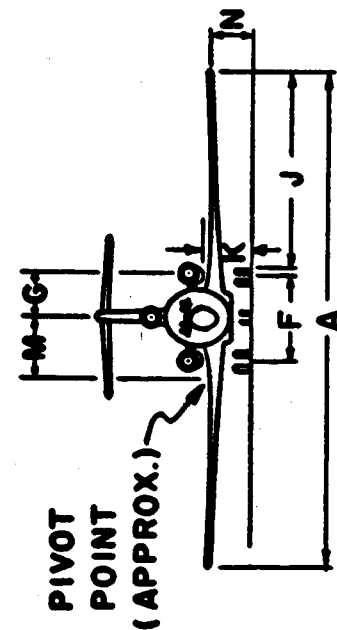


Figure A12-27. Boeing 727

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
100	97,000 LB 43 998 KG	89,700 LB 40 687 KG	93'0"	94'0"	37'2"	34'4"	47'4"	17'2"	15'10"	36'1"	1'8"	9'2"	10'0"	57'2"
			28.35M	28.65M	11.33M	10.46M	14.42M	5.23M	4.83M	11.00M	0.51M	2.80M	3.05M	17.42M
200	100,000 LB 45 359 KG	95,000 LB 43 091 KG	93'0"	100'2"	37'3"	37'4"	50'4"	17'2"	15'10"	36'1"	1'8"	10'0"	10'0"	58'2"
			28.35M	30.53M	11.35M	11.38M	15.34M	5.23M	4.83M	11.00M	0.51M	3.05M	3.05M	17.73M
300	124,500 LB 56 472 KG	114,000 LB 51 710 KG	94'9"	109'7"	36'7"	40'10"	54'0"	17'2"	15'10"	36'11"	1'6"	11'0"	10'0"	64'0"
			28.88M	33.40M	11.15M	12.45M	16.46M	5.23M	4.83M	11.25M	0.46M	3.35M	3.05M	19.51M
400	138,500 LB 68 823 KG	121,000 LB 54 885 KG	94'9"	119'7"	36'7"	46'10"	60'0"	17'2"	15'10"	36'11"	1'6"	12'6"	10'0"	69'4"
			28.88M	36.45M	11.15M	14.27M	18.29M	5.23M	4.83M	11.25M	0.46M	3.81M	3.05M	20.83M
500	115,500 LB 52 390 KG	110,000 LB 49 895 KG	94'9"	101'9"	36'7"	36'4"	49'6"	17'2"	15'10"	36'11"	1'6"	9'8"	10'0"	60'7"
			28.88M	30.01M	11.15M	11.07M	15.09M	5.23M	4.83M	11.25M	0.46M	2.95M	3.05M	18.47M
NOTE: OPTIONAL TAKEOFF AND LANDING WEIGHTS.														
100	103,000 LB (46 720 KG)	110,000 LB (49 895 KG)	MAXIMUM TAKEOFF WEIGHT.											
	98,000 LB (44 452 KG)	99,000 LB (44 906 KG)	MAXIMUM LANDING WEIGHT.											
200	103,000 LB (46 720 KG)	109,000 LB (49 442 KG)	110,000 LB (49 895 KG)											
	95,000 LB (43 091 KG)	98,000 LB (44 452 KG)	99,000 LB (44 906 KG)											
200	109,000 LB (49 442 KG)	110,000 LB (49 895 KG)	110,000 LB (49 895 KG)											
CONV	98,000 LB (44 452 KG)	99,000 LB (44 906 KG)	103,000 LB (46 720 KG)											
200 ADV	115,500 LB (52 390 KG)	117,000 LB (53 070 KG)	119,500 LB (54 204 KG)											
C, OC	103,000 LB (46 720 KG)	105,000 LB (47 627 KG)	105,000 LB (47 627 KG)											
300	130,000 LB (58 967 KG)	135,000 LB (61 235 KG)	137,000 LB (62 142 KG)											
	114,000 LB (51 710 KG)	114,000 LB (51 710 KG)	114,000 LB (51 710 KG)											
400	142,500 LB (64 637 KG)	150,000 LB (68 039 KG)	142,500 LB (64 637 KG)											
	121,000 LB (54 885 KG)	124,000 LB (56 245 KG)	124,000 LB (56 245 KG)											
500	124,500 LB (56 472 KG)	133,500 LB (60 555 KG)	124,500 LB (56 472 KG)											
	110,000 LB (49 895 KG)	110,000 LB (49 895 KG)	110,000 LB (49 895 KG)											

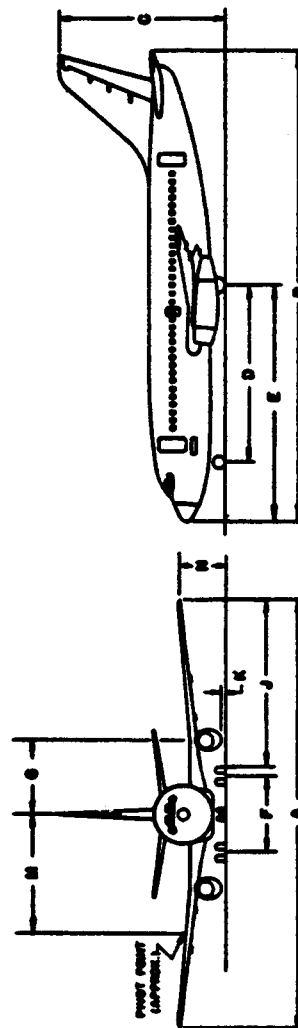


Figure A12-28. Boeing 737

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
100B	SEE	SEE	195'8"	231'10"	64'3"	84'0"	109'5"	36'1"	39'9"	69'10"	77'3"	3'9"	4'11"	40'0"	17'7"	151'0"
200B, C	NOTE	NOTE	59.64M	70.66M	19.58M	25.60M	33.35M	11.00M	12.12M	21.29M	23.55M	1.14M	1.50M	12.19M	5.36M	46.02M
300PASS																
200C	SEE	SEE	195'8"	231'10"	64'8"	84'0"	109'5"	36'1"	39'9"	69'10"	77'3"	3'9"	6'0"	40'0"	17'7"	151'0"
200F CARGO	NOTE	NOTE	59.64M	70.66M	19.71M	25.60M	33.35M	11.00M	12.12M	21.29M	23.55M	1.14M	1.83M	12.19M	5.36M	46.02M
SP	SEE	SEE	195'8"	184'9"	65'10"	67'4"	92'9"	36'1"	39'2"	69'6"	77'4"	3'7"	5'7"	40'0"	17'2"	151'0"
	NOTE	NOTE	59.64M	56.31M	20.07M	20.52M	28.27M	11.00M	11.94M	21.18M	23.57M	1.09M	1.70M	12.19M	5.23M	46.02M
400	SEE	SEE	213'0"	231'10"	64'3"	84'0"	109'5"	36'1"	39'2"	69'6"	85'10"	3'9"	6'0"	40'0"	16'9"	159'0"
	NOTE	NOTE	64.92M	70.66M	19.58M	25.60M	33.35M	11.00M	11.94M	21.18M	26.16M	1.14M	1.83M	12.19M	5.11M	48.46M
NOTE: OPTIONAL TAKEOFF AND LANDING WEIGHTS. 564-585 DENOTES STANDARD AND OPTIONAL WEIGHT IN THOUSANDS OF POUNDS.																
100/100B	710,000 LB	750,000 LB	735,000 LB	871,000 LB	860,000 LB	860,000 LB	MAXIMUM TAKEOFF WEIGHT.									
*100SF	564,000 LB	585,000 LB	564,000 LB	571,000 LB	564,000 LB	564,000 LB	MAXIMUM LANDING WEIGHT.									
#100B SR																
200B	775,000 LB	785,000 LB	800,000 LB	823,000 LB	833,000 LB	833,000 LB	MAXIMUM TAKEOFF WEIGHT.									
	564,000 LB	564,000 LB	585,000 LB	630,000 LB	630,000 LB	630,000 LB	MAXIMUM LANDING WEIGHT.									
200B	775,000 LB	785,000 LB	800,000 LB	820,000 LB	833,000 LB	833,000 LB	MAXIMUM TAKEOFF WEIGHT.									
CONBI	585-630 LB	630,000 LB	630,000 LB	630,000 LB	630,000 LB	630,000 LB	MAXIMUM LANDING WEIGHT.									
200C P	775,000 LB	800,000 LB	785,000 LB	820,000 LB	833,000 LB	833,000 LB	MAXIMUM TAKEOFF WEIGHT.									
*200C C	630,000 LB	630,000 LB	630,000 LB	630,000 LB	630,000 LB	630,000 LB	MAXIMUM LANDING WEIGHT.									
200F	775,000 LB	785,000 LB	800,000 LB	823,000 LB	833,000 LB	833,000 LB	MAXIMUM TAKEOFF WEIGHT.									
CARGO	630,000 LB	630,000 LB	630,000 LB	630,000 LB	630,000 LB	630,000 LB	MAXIMUM LANDING WEIGHT.									
300	710,000 LB	735,000 LB	750,000 LB	820,000 LB	833,000 LB	833,000 LB	MAXIMUM TAKEOFF WEIGHT.									
*300 SR	564,000 LB	564,000 LB	564,000 LB	515,000 LB	535,000 LB	535,000 LB	MAXIMUM LANDING WEIGHT.									
300/200B	775,000 LB	785,000 LB	800,000 LB	820,000 LB	833,000 LB	833,000 LB	MAXIMUM TAKEOFF WEIGHT.									
	574-630 LB	574-630 LB	574-630 LB	574-630 LB	574-640 LB	574-640 LB	MAXIMUM LANDING WEIGHT.									
300	775,000 LB	785,000 LB	800,000 LB	820,000 LB	833,000 LB	833,000 LB	MAXIMUM TAKEOFF WEIGHT.									
CONBI	605-630 LB	605-630 LB	605-630 LB	605-630 LB	605-630 LB	605-630 LB	MAXIMUM LANDING WEIGHT.									
SP	630,000 LB	660,000 LB	670,000 LB	690,000 LB	696,000 LB	696,000 LB	MAXIMUM TAKEOFF WEIGHT.									
	450-465 LB	450-465 LB	450-465 LB	450-465 LB	450-465 LB	450-465 LB	MAXIMUM LANDING WEIGHT.									
400	800,000 LB	800,000 LB	833,000 LB	833,000 LB	850-870 LB	850-870 LB	MAXIMUM TAKEOFF WEIGHT.									
	574-585 LB	630,000 LB	574-585 LB	630,000 LB	630,000 LB	630,000 LB	MAXIMUM LANDING WEIGHT.									

METRIC CONVERSION TABLE

POUNDS	KILOGRAMS	POUNDS	KILOGRAMS
450,000	204 117	690,000	312 979
465,000	210 920	696,000	315 700
515,000	233 600	710,000	322 051
520,000	235 868	735,000	333 390
535,000	242 672	750,000	340 194
564,000	255 826	775,000	351 534
571,000	259 001	785,000	356 070
574,000	260 362	800,000	362 874
585,000	265 352	820,000	371 946
600,000	272 155	823,000	373 307
605,000	274 423	833,000	377 842
630,000	285 763	850,000	385 554
660,000	299 371	870,000	394 625
670,000	303 907		

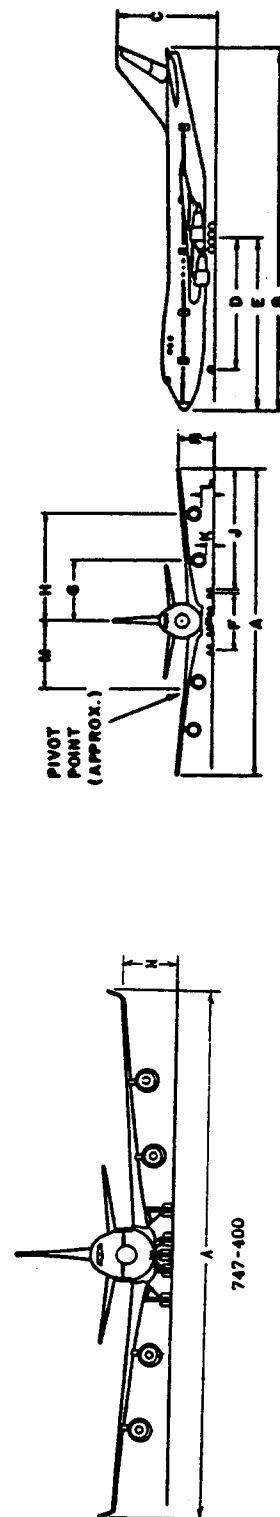


Figure A12-29. Boeing 747

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	TURN RADIUS
200	282,000 LB 127 913 KG	257,000 LB 116 573 KG	156'11" 47.57M	159'2" 48.51M	52'11" 16.13M	64'7" 19.69M	79'6" 24.23M	30'6" 9.30M	26'0" 7.92M	60'1" 18.31M	2'8" 0.81M	36'0" 10.97M	16'3" 4.95M 117'0° 35.66M
200ER	335,000 LB 151 953 KG	278,000 LB 126 099 KG	156'11" 47.57M	159'2" 48.51M	52'11" 16.13M	64'7" 19.69M	79'6" 24.23M	30'6" 9.30M	26'0" 7.92M	60'1" 18.31M	2'8" 0.81M	36'0" 10.97M	16'3" 4.95M 117'0° 35.66M
300	345,000 LB 156 489 KG	300,000 LB 136 078 KG	156'11" 47.57M	180'3" 54.94M	52'7" 16.03M	74'8" 22.76M	89'7" 27.31M	30'6" 9.30M	26'0" 7.92M	60'1" 18.31M	2'10" 0.66M	41'0" 12.50M	16'1" 4.90M 123'0° 37.49M
300ER	380,000 LB 172 365 KG	300,000 LB 136 078 KG	156'11" 47.57M	180'3" 54.94M	52'7" 16.03M	74'8" 22.76M	89'7" 27.31M	30'6" 9.30M	26'0" 7.92M	60'1" 18.31M	2'10" 0.66M	41'0" 12.50M	16'1" 4.90M 123'0° 37.49M
NOTE: OPTIONAL TAKEOFF AND LANDING WEIGHTS:													
200	300,000 LB (136 078 KG)	310,000 LB (140 614 KG)				315,000 LB (142 882 KG)							
270	270,000 LB (122 470 KG)	270,000 LB (122 470 KG)				272,000 LB (123 377 KG)							
200ER	345,000 LB (156 489 KG)	351,000 LB (159 211 KG)				380,000 LB (172 365 KG)							
278	278,000 LB (126 099 KG)	278,000 LB (126 099 KG)				285,000 LB (129 274 KG)							
300	350,000 LB (158 757 KG)												
300	300,000 LB (136 078 KG)												
300ER	387,000 LB (175 540 KG)	400,000 LB (181 437 KG)				407,000 LB (184 612 KG)							
300	300,000 LB (136 078 KG)	320,000 LB (145 150 KG)				320,000 LB (145 150 KG)							
MAXIMUM TAKEOFF WEIGHT. MAXIMUM LANDING WEIGHT.													

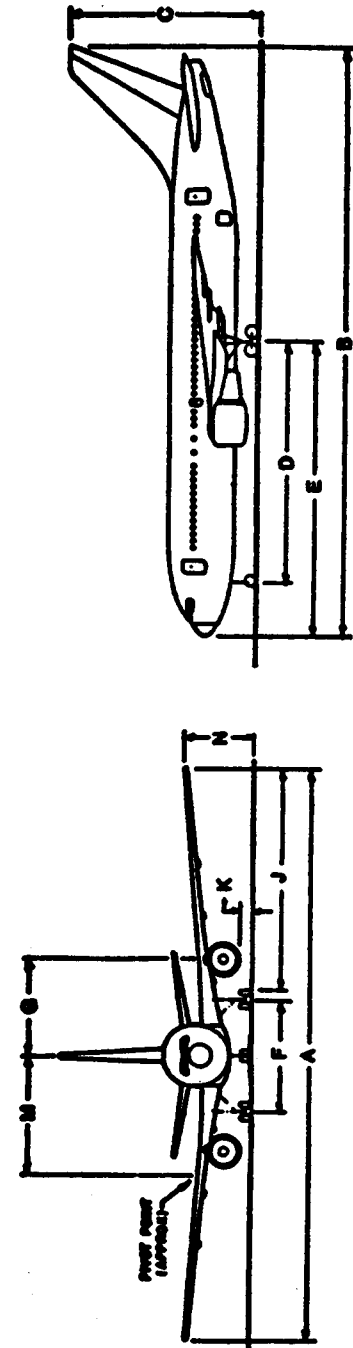


Figure A12-31. Boeing 767

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
100	74,600 LB 33,838 KG	71,800 LB 32,591 KG	86'5" 26.34M	85'10" 26.16M	28'3" 8.61M	33'1" 10.08M	40'7" 12.37M	15'6" 4.72M	13'7" 4.14M	22'4" 6.81M	33'8" 10.26M	5'0" 1.52M	4'8" 1.42M	15'6" 4.72M	13'11" 4.24M	37'10" 11.53M
200	88,250 LB 40,030 KG	77,000 LB 34,927 KG	86'5" 26.34M	93'8" 28.55M	28'3" 8.61M	36'9" 11.20M	44'2" 13.46M	15'6" 4.72M	13'7" 4.14M	22'4" 6.81M	33'8" 10.26M	5'0" 1.52M	4'7" 1.40M	15'6" 4.72M	13'11" 4.24M	41'2" 12.55M
300	104,000 LB 47,174 KG	90,000 LB 40,823 KG	86'5" 26.34M	104'2" 31.75M	28'1" 8.56M	36'9" 11.20M	48'10" 14.68M	15'6" 4.72M	13'7" 4.14M	22'4" 6.81M	33'8" 10.26M	5'0" 1.52M	4'7" 1.40M	15'6" 4.72M	13'11" 4.24M	46'8" 14.22M

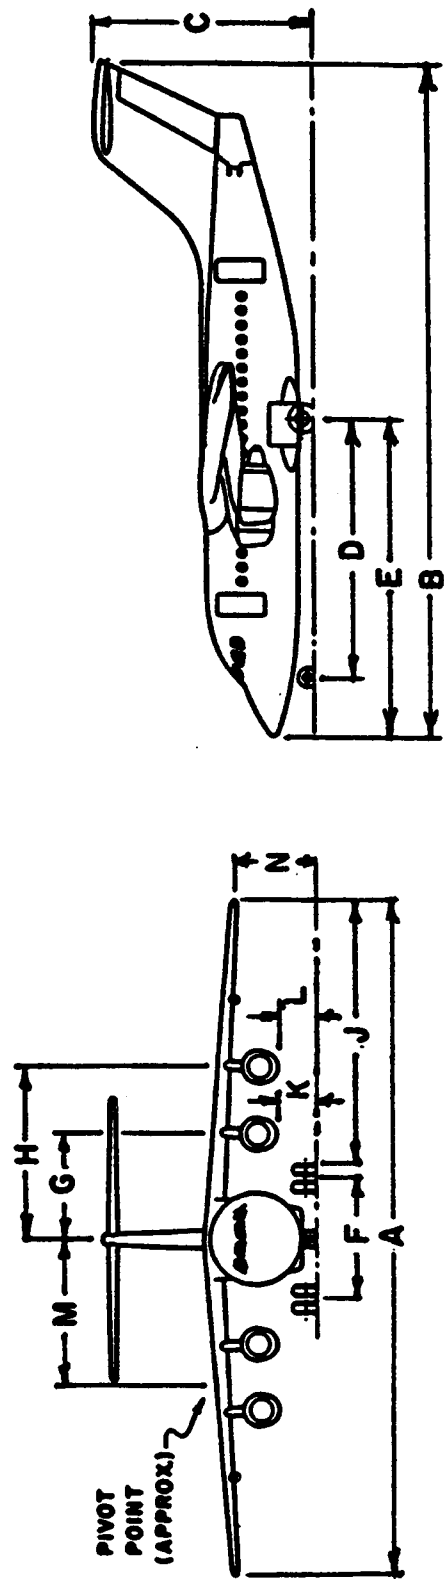


Figure A12-32. British Aerospace 146

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
44D4	210,000 LB 95 254 KG	165,000 LB 74 843 KG	142'4" 43.38M	136'10" 41.71M	38'5" 11.71M	49'11" 15.21M	62'8" 19.10M	31'0" 9.43M	15'6" 4.72M	31'8" 9.63M	53'11" 16.43M	1'2" 0.36M	1'8" 0.51M	10'3" 3.12M	10'3" 3.12M	113'0" 34.44M
44-6	205,000 LB 92 986 KG	165,000 LB 74 843 KG	142'4" 43.38M	136'10" 41.71M	38'5" 11.71M	49'11" 15.21M	62'8" 19.10M	31'0" 9.43M	15'6" 4.72M	31'8" 9.63M	53'11" 16.43M	1'2" 0.36M	1'8" 0.51M	10'3" 3.12M	10'3" 3.12M	113'0" 34.44M
44-J	210,000 LB 95 254 KG	175,000 LB 79 379 KG	142'4" 43.38M	152'0" 46.33M	38'5" 11.71M	60'0" 18.29M	72'9" 22.17M	31'0" 9.43M	15'6" 4.72M	31'8" 9.63M	53'11" 16.43M	1'2" 0.36M	1'8" 0.51M	10'3" 3.12M	10'3" 3.12M	113'0" 34.44M

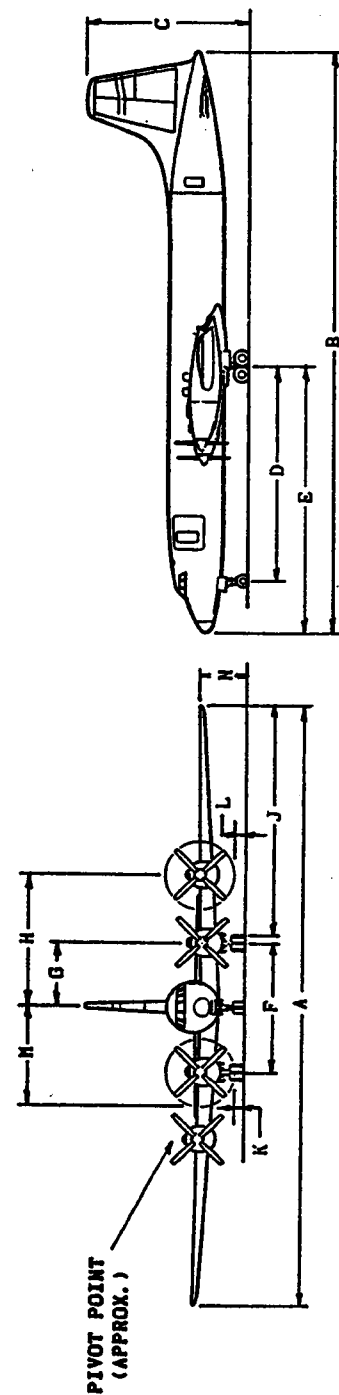


Figure A12-33. Canadiar CL-44

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
66	58,156 LB	53,000 LB	105'4"	81'6"	29'2"	26'2"	35'3"	25'0"	12'6"	39'0"	1'0"	13'0"	65'0"	
	26 379 KG	24 040 KG	32.11M	24.84M	8.89M	7.98M	10.74M	7.62M	3.81M	11.89M	0.30M	3.96M	19.81M	

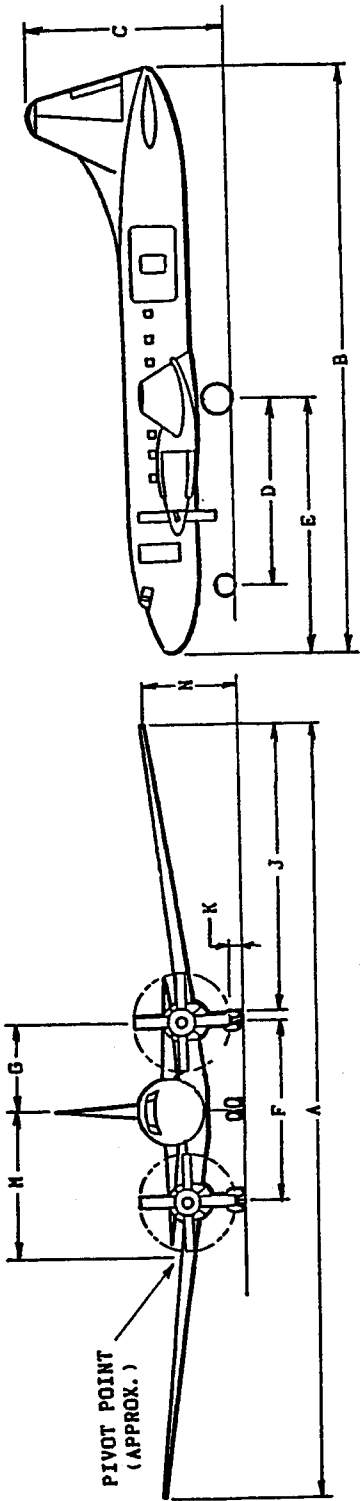


Figure A12-34. Canadiar CL-66

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
I	11,850 LB 5 375 KG	11,350 LB 5 146 KG	47'1" 14.35M	43'6" 13.26M	14'4" 4.37M	15'2" 4.62M		12'7" 3.84M		14'11" 4.55M				
II	13,300 LB 6 033 KG	12,700 LB 5 761 KG	51'8" 15.75M	47'2" 14.38M	15'0" 4.57M									
S/II	15,100 LB 6 849 KG	14,400 LB 6 532 KG	52'2" 15.90M	47'2" 14.38M	15'0" 4.57M									
III	22,000 LB 9 979 KG	20,000 LB 9 072 KG	53'6" 16.31M	55'6" 16.92M	16'10" 5.13M									
V	16,100 LB 7 303 KG		52'2" 15.90M	49'11" 14.91M	15'0" 4.57M									



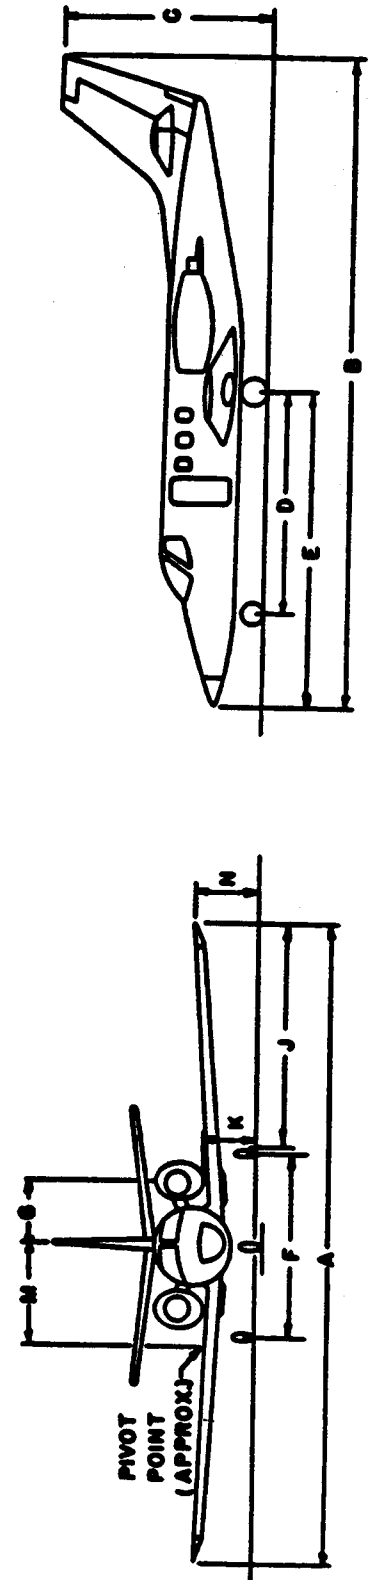


Figure A12-35. Cessna Citation

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	TURN RADIUS
C-212	16,976 LB	16,424 LB	62'3"	49'10"	20'8"	17'10"		10'2"	8'8"	26'1"	4'2"	9'2"	49'2"
200	7 700 KG	7 450 KG	18.97M	15.19M	6.30M	5.44M		3.10M	2.64M	7.95M	1.27M	2.79M	14.95M
235	31,752 LB	31,311 LB	84'8"	70'3"	26'10"	22'8"		12'10"	11'6"	35'11"	5'2"		
	14 402 KG	14 202 KG	25.61M	21.41M	8.18M	6.91M		3.91M	3.51M	10.95M	1.57M		

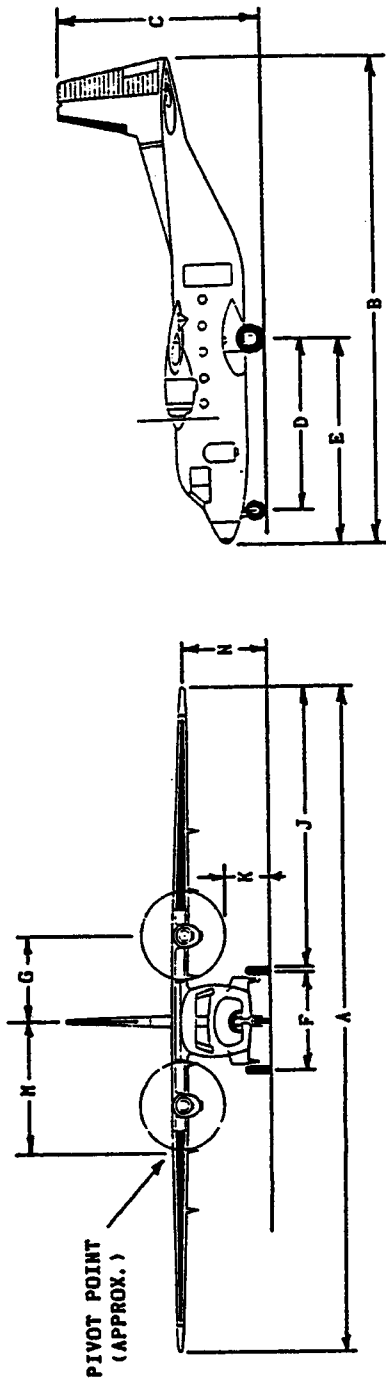

C-212

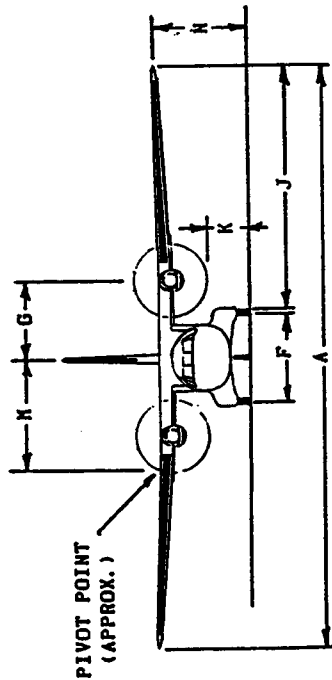

CN-235

Figure A12-36. Construcciones Aeronauticas CASA C-212 and 235

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	N	TURN RADIUS
240	41,790 LB 18,956 KG	39,800 LB 18,053 KG	91'9" 27.97M	74'8" 22.76M	26'11" 8.20M	24'10" 7.57M	32'9" 9.98M	25'0" 7.62M	12'6" 3.81M	32'2" 9.80M	1'0" 0.31M	14'8" 4.47M	9'0" 2.74M	60'6" 18.44M
340	49,100 LB 22,271 KG	46,500 LB 21,092 KG	105'4" 32.16M	81'6" 24.84M	28'2" 8.59M	26'2" 7.98M	34'1" 10.39M	25'0" 7.62M	12'6" 3.81M	38'7" 11.76M	1'0" 0.31M	14'8" 4.47M	11'0" 3.35M	67'4" 20.52M
440	49,100 LB 22,271 KG	47,650 LB 21,614 KG	105'4" 32.16M	81'6" 24.84M	28'2" 8.59M	26'2" 7.98M	36'5" 11.10M	25'0" 7.62M	12'6" 3.81M	38'7" 11.76M	1'0" 0.31M	14'8" 4.47M	11'0" 3.35M	67'4" 20.52M
580	54,600 LB 24,766 KG	52,000 LB 23,587 KG	105'4" 32.16M	81'6" 24.84M	29'2" 8.89M	26'2" 7.98M	36'5" 11.10M	25'0" 7.62M	12'6" 3.81M	38'7" 11.76M	1'0" 0.31M	14'8" 4.47M	11'0" 3.35M	67'4" 20.52M
600	46,200 LB 20,956 KG	44,000 LB 19,958 KG	91'9" 27.97M	74'8" 22.76M	26'11" 8.20M	24'10" 7.57M	32'9" 9.98M	25'0" 7.62M	12'6" 3.81M	32'2" 9.80M	1'3" 0.38M	14'8" 4.47M	9'0" 2.74M	60'6" 18.44M
640	55,000 LB 24,948 KG	52,500 LB 23,814 KG	105'4" 32.16M	81'6" 24.84M	28'2" 8.59M	26'2" 7.98M	36'5" 11.10M	25'0" 7.62M	12'6" 3.81M	38'7" 11.76M	1'1" 0.33M	14'8" 4.47M	11'0" 3.35M	67'4" 20.52M

NOTE: MODELS 240, 340, 440 HAVE RECIPROCATING ENGINES. ALL OTHERS HAVE TURBOPROP ENGINES.

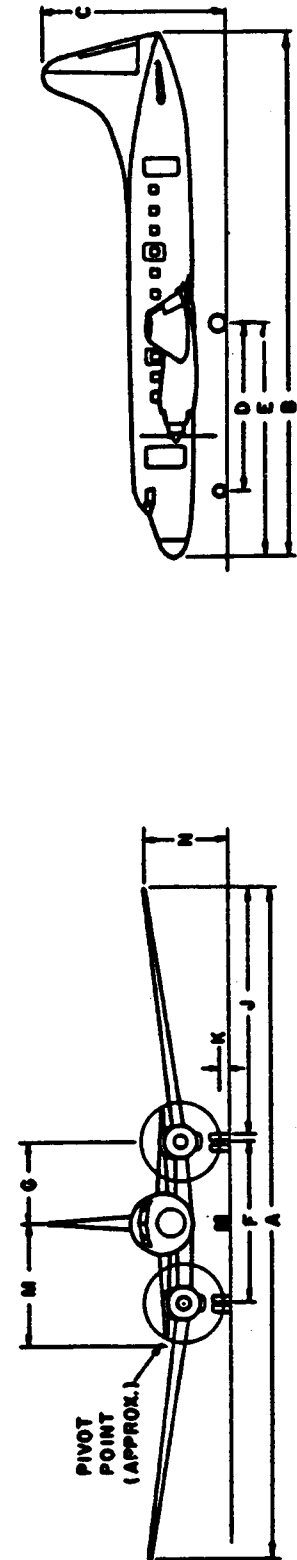


Figure A12-37. Convair-liner and Turboprop Conversions

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
CARIBOU	28,500 LB 12 927 KG	28,500 LB 12 927 KG	95'7" 29.13M	72'7" 22.12M	31'10" 9.70M			23'1" 7.04M		35'3" 10.74M				



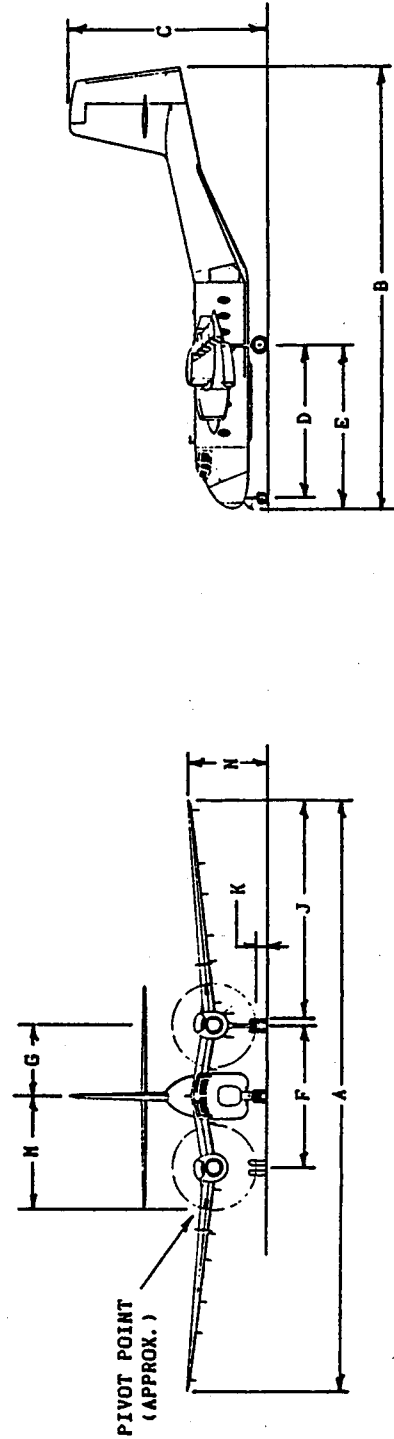


Figure A12-38. De Havilland Canada C-7 Caribou

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
DASH 7	43,000 LB 19,504 KG	41,000 LB 18,597 KG	93'0" 28.35M	80'8" 24.59M	26'2" 7.98M	27'6" 8.38M		23'6" 7.16M		33'8" 10.26M	5'3" 1.60M			14'2" 4.32M
DASH 8 100	34,500 LB 15,649 KG	33,900 LB 15,377 KG	90'0" 27.43M	84'3" 25.68M	24'7" 7.49M	32'2" 9.80M		25'10" 7.87M	12'11" 3.94M		3'1" 0.94M			11'11" 3.63M
DASH 8 300	41,100 LB 18,643 KG	40,000 LB 18,144 KG	90'0" 27.43M	84'3" 25.68M	24'7" 7.49M	32'2" 9.80M		25'10" 7.87M	12'11" 3.94M		3'1" 0.94M			11'11" 3.63M

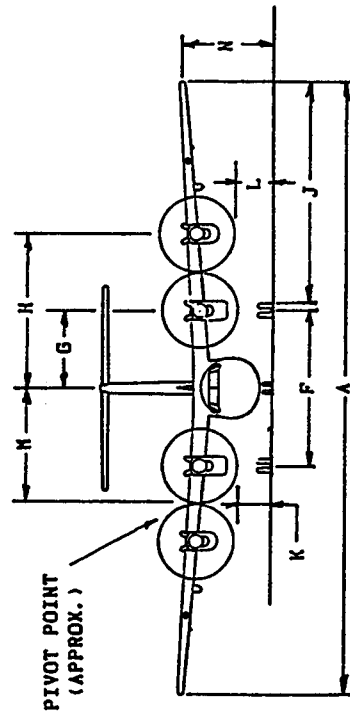

DASH 7

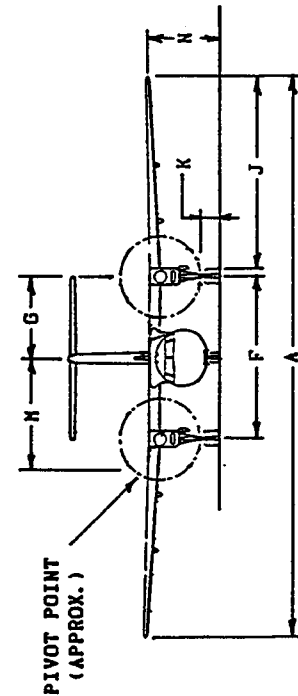

DASH 8

Figure A12-39. De Havilland Canada DASH 7 & DASH 8

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
-------	------------------------------	------------------------------	---	---	---	---	---	---	---	---	---	---	---	---	---	----------------

GOLBE-	175,000 LB	110,000 LB	174'2"	130'5"	48'4"	37'3"		34'2"	17'1"			3'0"				
MASTER	79,379 KG	49,895 KG	53.10M	39.77M	14.72M	11.35M		10.41M	5.21M			0.91M				

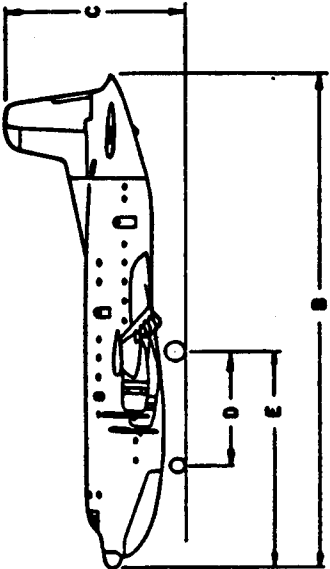
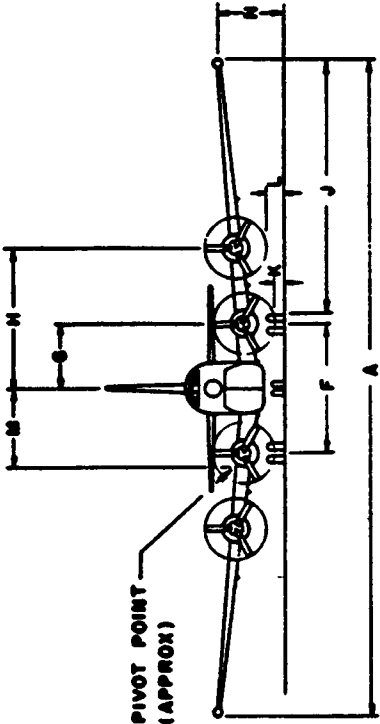


Figure A12-40. Douglas C-124 Globemaster

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
TWIN OTTER	12,500 LB 5 670 KG	12,300 LB 5 579 KG	65'0" 19.81M	51'8" 15.75M	19'6" 5.94M	14'9" 4.50M	12'6" 3.81M	21	48'0" 14.63M

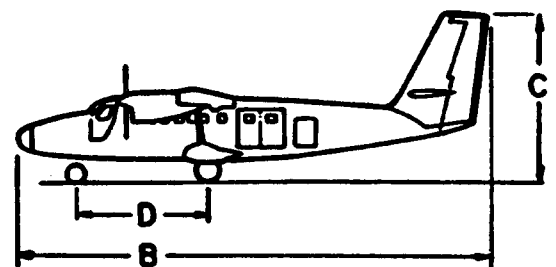
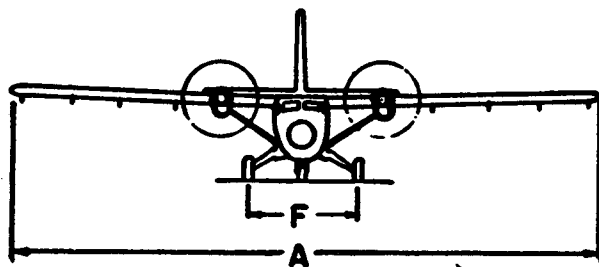


Figure A12-41. De Havilland Canada DHC-6 Twin Otter

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
228- 201	13,183 LB 5 990 KG	13,007 LB 5 900 KG	55'8" 16.97M	54'4" 16.56M	15'11" 4.85M	20'8" 6.30M	25'5" 7.75M	10'10" 3.30M	7'10" 2.39M	21'11" 6.68M	3'6" 1.07M	21'4" 6.50M	6'3" 1.91M	48'6" 14.78M
228- 202	13,669 LB 6 200 KG	13,007 LB 5 900 KG	55'8" 16.97M	54'4" 16.56M	15'11" 4.85M	20'8" 6.30M	25'5" 7.75M	10'10" 3.30M	7'10" 2.39M	21'11" 6.68M	3'6" 1.07M	21'4" 6.50M	6'3" 1.91M	48'6" 14.78M

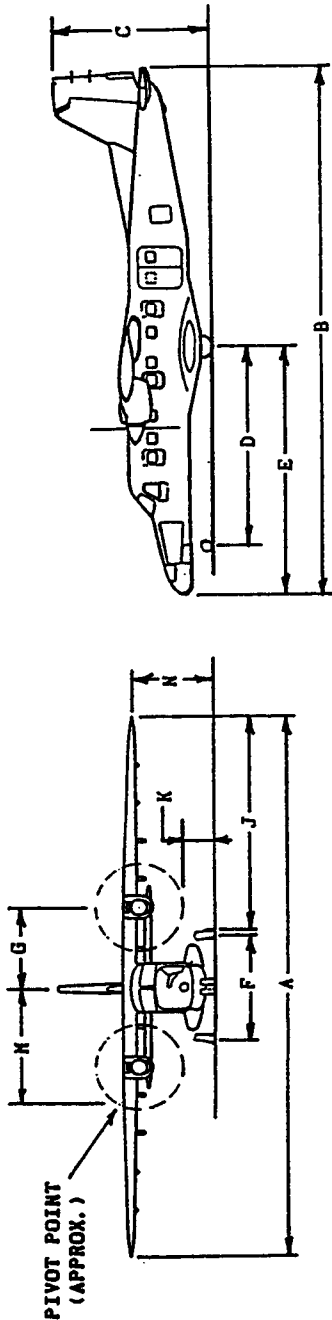


Figure A12-42. Dornier Gmb H

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
DC-3	25,200 LB	25,200 LB	95'0"	64'6"	23'6"	37'11"	18'6"	18'6"	9'3"	37'7"	1'4"	9'3"	9'4"	57'3"
	11 431 KG	11 431 KG	28.96M	19.66M	7.16M	11.56M	5.64M	5.64M	2.82M	11.46M	0.41M	2.82M	2.84M	17.45M

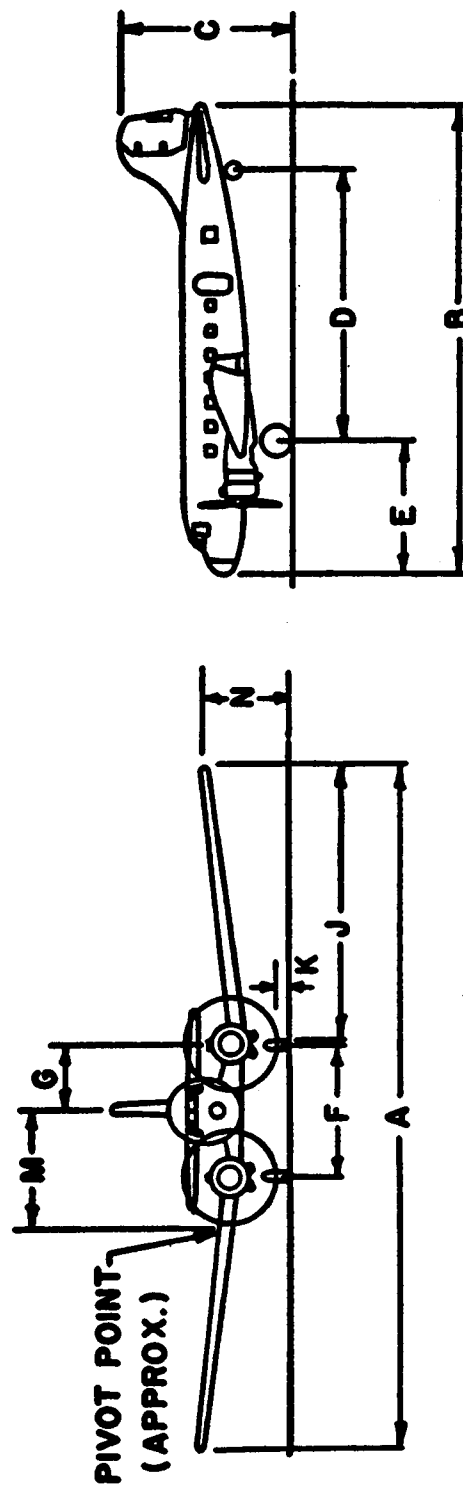


Figure A12-43. Douglas DC-3

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
DC-4	73,000 LB 33 112 KG	63,500 LB 28 803 KG	117'6"	93'11"	27'11"	27'5"	36'0"	24'8"	12'4"	26'4"	44'7"	2'2"	3'9"	13'9"	13'6"	86'2"
																26.26M
DC-6	104,000 LB 47 174 KG	86,200 LB 39 100 KG	117'6"	105'7"	29'3"	36'2"	44'9"	24'8"	12'4"	26'4"	44'7"	1'11"	3'6"	13'11"	13'6"	72'8"
																22.15M
DC-7	143,000 LB 64 864 KG	111,000 LB 50 349 KG	127'6"	112'3"	31'8"	39'6"	48'1"	34'8"	17'4"	31'4"	44'7"	1'3"	3'10"	17'4"	13'6"	81'1"
																24.71M

NOTE: MODEL DC-4 HAS ROUNDED VERTICAL STABILIZER AND CIRCULAR CABIN WINDOWS.

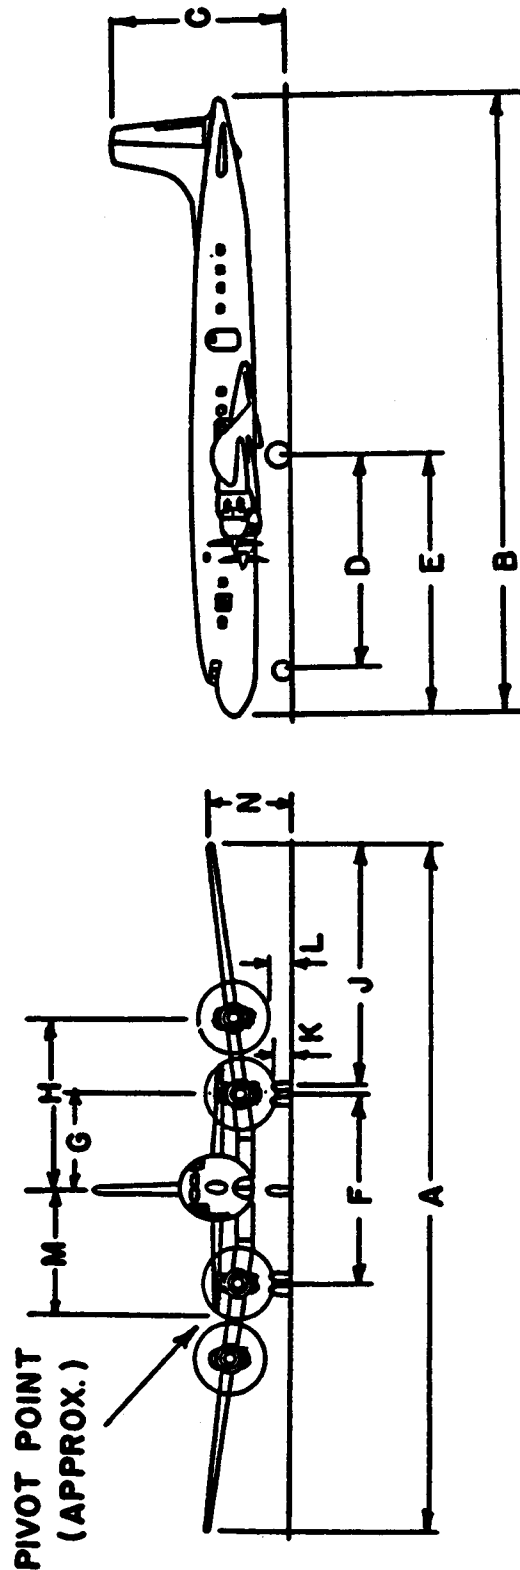


Figure A12-44. Douglas DC-4/6/7

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	TURN RADIUS
EMB-110P1	12,500 LB 5 670 KG	12,500 LB 5 670 KG	30'3" 15.32M	49'6" 15.09M	16'6" 5.03M	16'2" 4.93M	23'8" 7.21M	16'3" 4.95M	7'11" 2.41M	16'9" 5.11M	0'10" 0.25M	16'6" 5.03M	6'7" 2.01M
EMB-110P1/41	13,007 LB 5 900 KG	12,566 LB 5 700 KG											
EMB-110P2	12,500 LB 5 670 KG	12,500 LB 5 670 KG											
EMB-110P2/41	13,007 LB 5 900 KG	12,599 LB 5 700 KG											

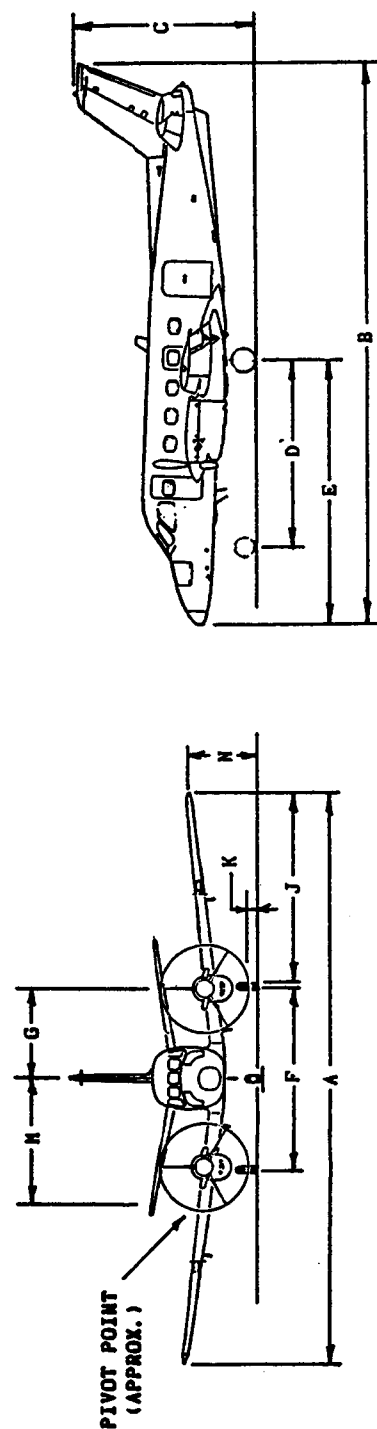


Figure A12-45. Embraer Emb 110

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
EMB														
120	11,500 LB 5 216 KG	11,250 LB 5 103 KG	64'11" 19.79M	65'7" 19.99M	20'10" 6.35M	22'11" 6.99M	21'7" 21.58M	10'10" 3.30M	20'6" 6.25M	1'9" 0.53M	21'8" 6.60M			51'8" 15.75M

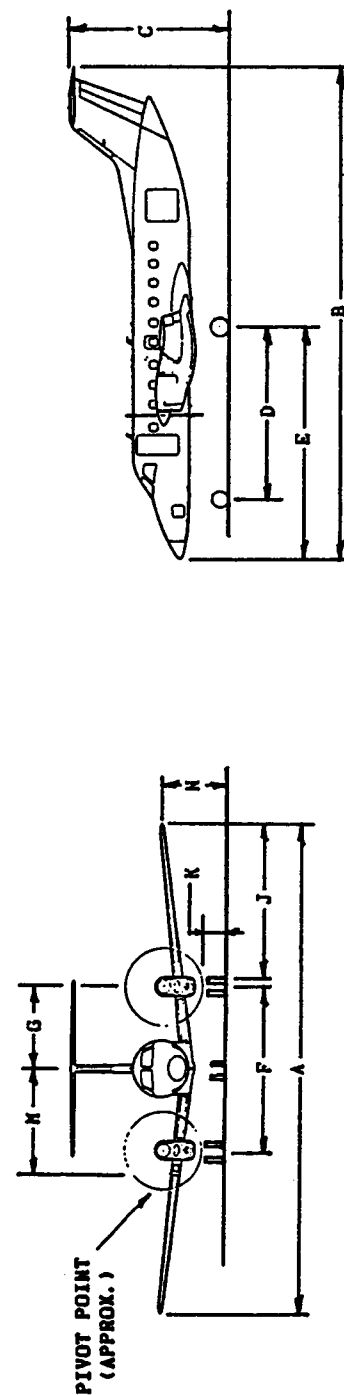


Figure A12-46. Embraer Emb 120

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	N	TURN RADIUS
FLYING	77,000 LB	72,700 LB	109'3"	86'6"	27'6"			29'2"		38'4"	3'0"	15'0"	70'0"	
BOXCAR	34 927 KG	32 976 KG	33.32M	26.38M	8.38M			8.69M		11.68M	0.91M	4.56M	21.34M	

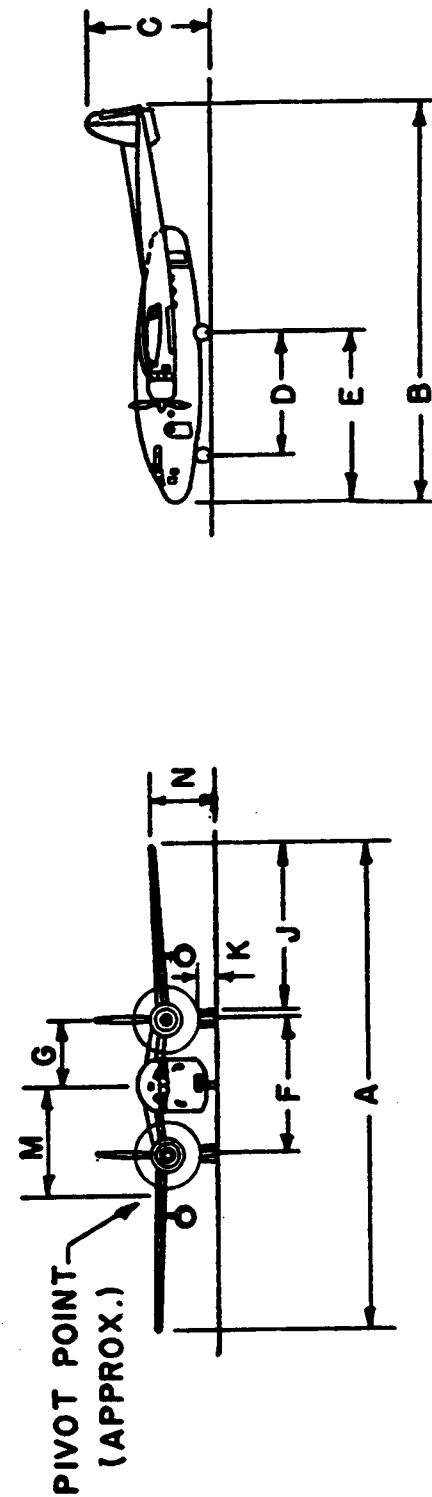


Figure A12-47. Fairchild C-119K Flying Boxcar

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	H	H	TURN RADIUS
PROVIDER	60,000 LB 27 216 KG	34,000 LB 24 494 KG	110'0" 33.52M	76'3" 23.24M	34'6" 10.52M			12'1" 3.68M	14'10" 4.52M	48'0" 14.63M	3'8" 1.12M	14'10" 4.52M	14'0" 4.27M	70'0" 21.34M

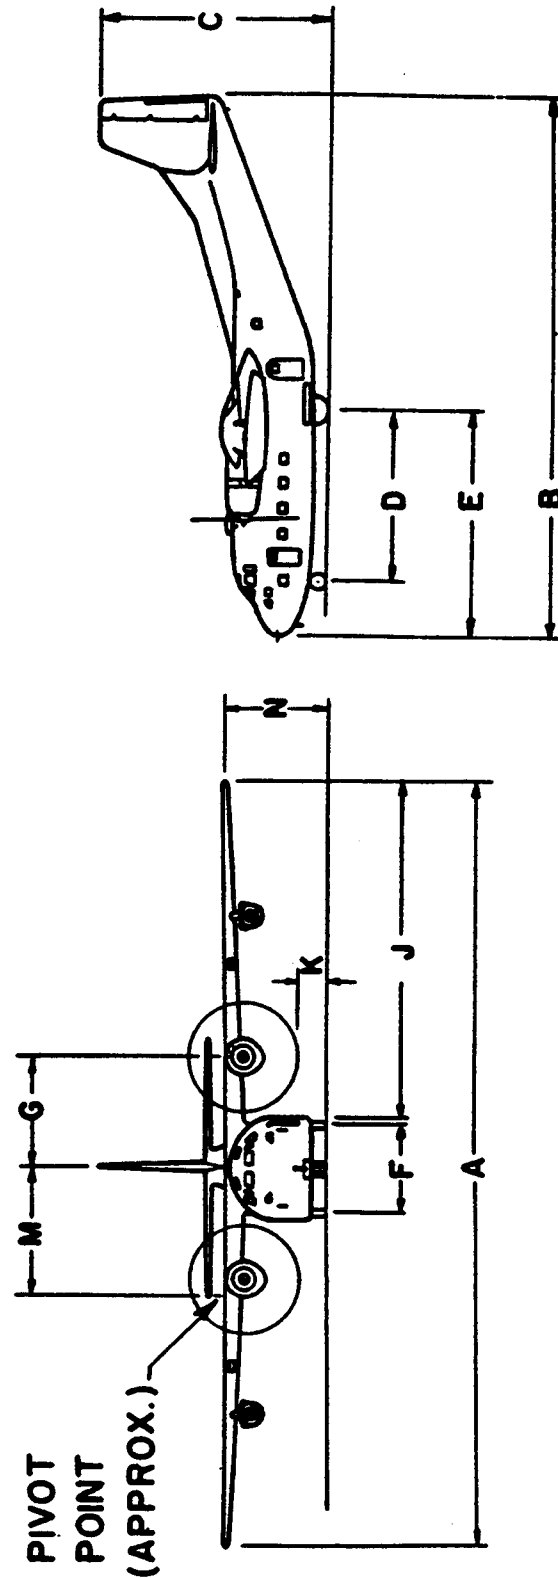


Figure A12-48. Fairchild C-123K Provider

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
F-27, B	40,500 LB 18 370 KG	38,500 LB 17 463 KG	95'2" 29.52M	77'2" 23.52M	27'6" 8.38M	28'8" 8.73M	34'6" 10.52M	23'8" 7.22M	11'10" 3.61M	34'6" 10.52M	2'10" 0.87M	16'6" 5.03M	11'10" 3.61M	64'0" 19.51M
FH-227, C, E	43,500 LB 19 731 KG	43,000 LB 19 504 KG	95'2" 29.01M	83'1" 25.32M	27'6" 8.38M	34'7" 10.55M	40'3" 12.27M	23'8" 7.22M	11'10" 3.61M	34'9" 10.59M	3'2" 0.97M	12'4" 3.76M	11'10" 3.61M	59'7" 18.16M

NOTE: F-27A, J HAVE MAXIMUM (TAKEOFF) WEIGHT OF 42,000 LB (19 051 KG).
(LANDING) 40,000 LB (18 144 KG).

FH-227B, D HAVE MAXIMUM (TAKEOFF) WEIGHT OF 45,500 LB (20 638 KG).
(LANDING) 45,000 LB (20 412 KG).

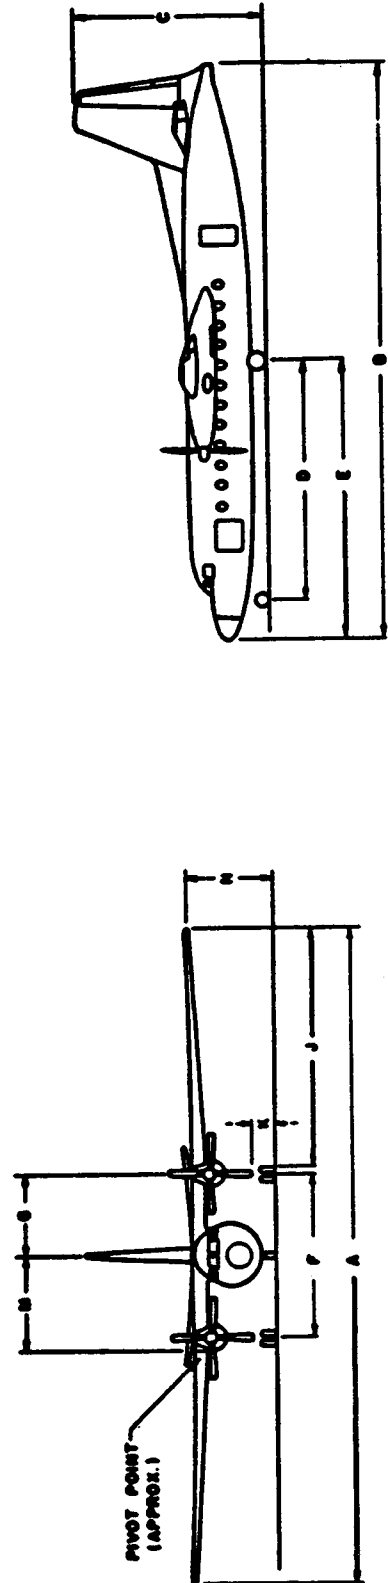


Figure A12-49. Fairchild F-27

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	NOTE	TURN RADIUS
100	40,300 LB 18,370 KG	40,000 LB 18,144 KG	95'2" 29.01M	77'2" 23.52M	27'11" 8.51M	28'8" 8.74M	23'8" 7.21M								
200, 400, 600	45,000 LB 20,412 KG	41,000 LB 18,597 KG	95'2" 29.01M	77'4" 23.57M	28'8" 8.74M	28'8" 8.74M	34'6" 10.52M	23'8" 7.21M	11'10" 3.61M	34'7" 10.54M		12'2" 3.71M	11'11" 3.63M	28'2" 8.59M	58'1" 17.70M
500	45,000 LB 20,412 KG	42,000 LB 19,051 KG	95'2" 29.01M	82'3" 25.07M	29'3" 8.92M	31'11" 9.73M	37'9" 11.51M	23'8" 7.21M	11'10" 3.61M	34'7" 10.54M		13'7" 4.14M	12'2" 3.71M	28'2" 8.59M	59'5" 18.11M

NOTE: CENTERLINE OF FUSELAGE TO CENTERLINE OF PYLON TANKS IF INSTALLED.

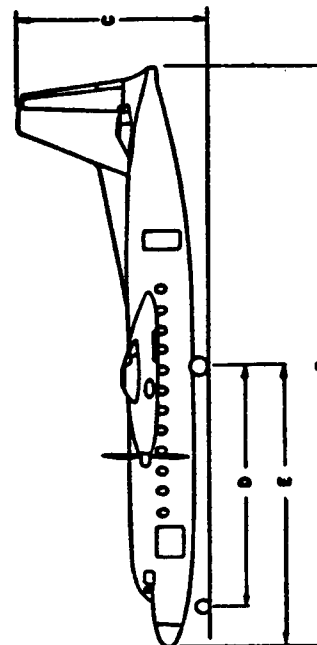
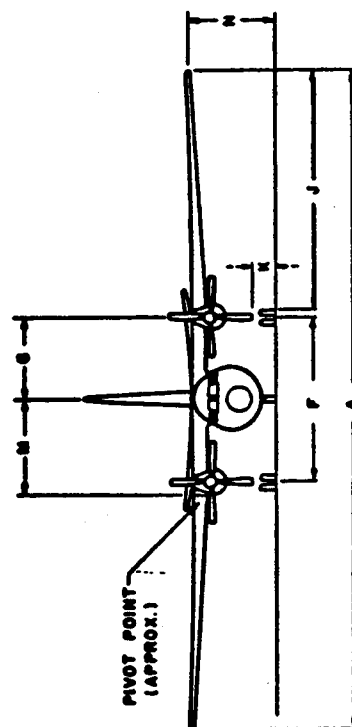


Figure A12-50. Fokker F-27

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
1000	65,000 LB 29 484 KG	59,000 LB 26 762 KG	77'4" 23.57M	89'11" 27.42M	27'10" 8.48M	29'3" 8.89M	16'7" 5.11M	16'7" 5.11M	8'6" 2.59M	28'10" 8.78M	5'2" 1.60M	8.3° 2.51N	7.9° 2.37N	50'0" 15.24M
2000	65,000 LB 29 484 KG	59,000 LB 26 762 KG	77'4" 23.57M	97'2" 29.62M	27'10" 8.48M	33'11" 10.34M	16'7" 5.11M	16'7" 5.11M	8'6" 2.59M	28'10" 8.78M	5'2" 1.60M	8.3° 2.51N	7.9° 2.37N	50'0" 15.24M
3000	73,000 LB 33 112 KG	64,000 LB 29 030 KG	82'3" 25.07M	89'11" 27.41M	27'10" 8.48M	29'3" 8.89M	16'7" 5.11M	16'7" 5.11M	8'6" 2.59M	28'10" 8.78M	5'2" 1.60M	8.3° 2.51N	7.9° 2.37N	50'0" 15.24M
4000	73,000 LB 33 112 KG	66,500 LB 30 164 KG	82'3" 25.07M	97'2" 29.62M	27'10" 8.48M	33'11" 10.34M	16'7" 5.11M	16'7" 5.11M	8'6" 2.59M	28'10" 8.78M	5'2" 1.60M	8.3° 2.51N	7.9° 2.37N	50'0" 15.24M
5000	70,800 LB 32 114 KG	64,000 LB 29 030 KG	82'3" 25.07M	89'11" 27.41M	27'10" 8.48M	29'3" 8.89M	16'7" 5.11M	16'7" 5.11M	8'6" 2.59M	28'10" 8.78M	5'2" 1.60M	8.3° 2.51N	7.9° 2.37N	50'0" 15.24M
6000	73,000 LB 33 112 KG	66,500 LB 30 164 KG	82'3" 25.07M	97'2" 29.62M	27'10" 8.48M	33'11" 10.34M	16'7" 5.11M	16'7" 5.11M	8'6" 2.59M	28'10" 8.78M	5'2" 1.60M	8.3° 2.51N	7.9° 2.37N	50'0" 15.24M

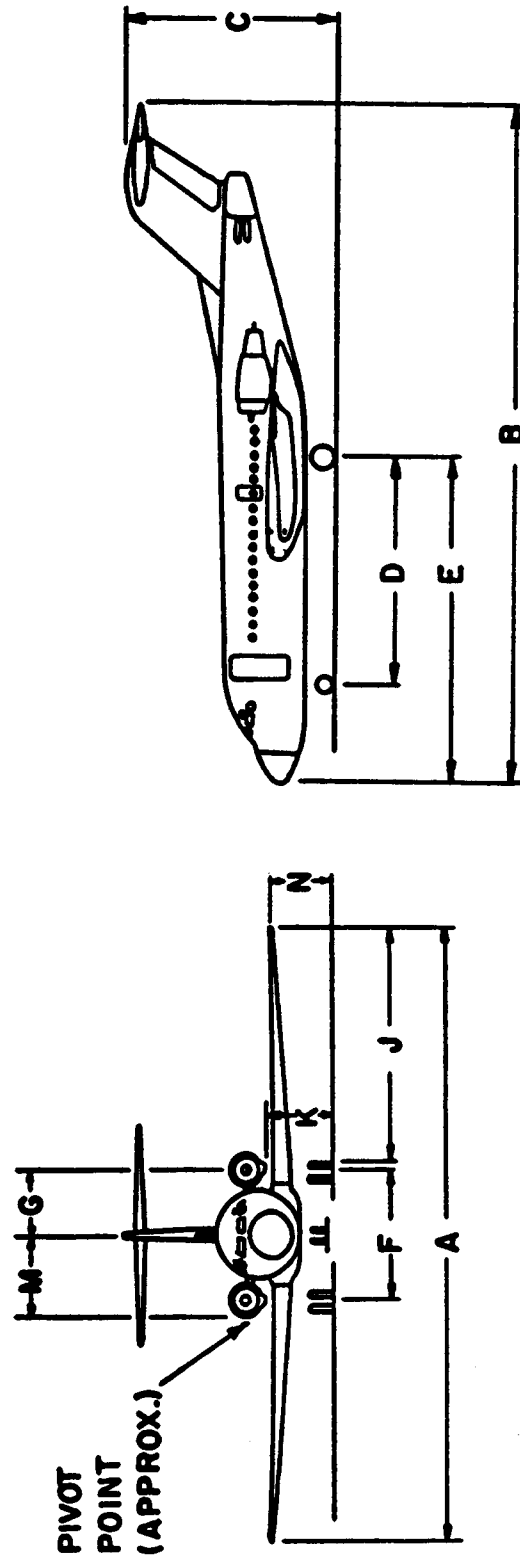


Figure A12-51. Fokker F-28

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	N	TURN RADIUS
24	13,000 LB	11,880 LB	35'7"	43'3"	12'7"	16'2"	21'9"	8'3"	3'8"	12'9"	4'10"	16'0"	3'3"	34'0"
240, F	5 897 KG	5 389 KG	10.85M	13.18M	3.84M	4.98M	6.63M	2.51M	1.12M	3.89M	1.49M	4.88M	0.99M	10.36M
25	15,000 LB	13,300 LB	35'7"	47'7"	12'7"	16'2"	26'0"	8'3"	3'8"	13'1"	4'10"	16'0"	3'3"	34'0"
258, C, D	6 804 KG	6 033 KG	10.85M	14.50M	3.84M	4.98M	7.92M	2.51M	1.12M	3.99M	1.49M	4.88M	0.99M	10.36M
256	16,300 LB	13,700 LB	35'7"	47'7"	12'4"	17'3"	27'1"	8'3"	3'8"	14'4"	4'10"	14'6"	3'6"	1.07M
	7 394 KG	6 214 KG	10.85M	14.50M	3.76M	5.26M	8.25M	2.51M	1.12M	4.26M	1.49M			
28/29	15,000 LB		43'9"	47'7"	12'4"									
	6 804 KG		13.34M	14.50M	3.76M									
35/36	17,000 LB	13,300 LB	38'1"	48'8"	12'4"									
	7 711 KG	6 033 KG	11.61M	14.83M	3.76M									
35A/36A	18,300 LB	15,300 LB	39'6"	48'8"	12'4"									
	8 301 KG	6 940 KG	12.07M	14.83M	3.76M									
55/56	21,500 LB	18,000 LB	43'9"	55'1"	14'8"									
SSC, ER, LR	9 752 KG	8 165 KG	13.34M	16.79M	4.47M									

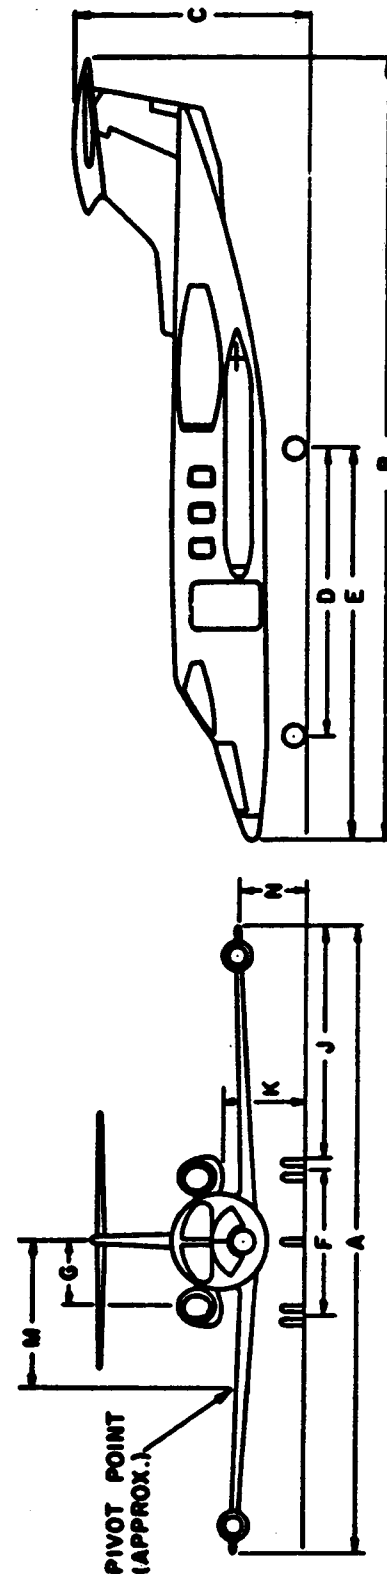


Figure A12-52. Gates Learjet

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	N	M	TURN RADIUS
880	184,500 LB 83 688 KG	137,000 LB 62 142 KG	120'0" 36.58M	129'4" 39.42M	36'0" 10.97M	53'1" 16.18M	64'10" 19.76M	18'10" 5.74M	22'2" 6.76M	41'4" 12.60M	49'3" 15.01M	2'8" 0.81M	3'11" 1.19M	19'5" 5.92M	10'11" 3.33M	84'0" 25.60M
990	246,200 LB 111 674 KG	202,000 LB 91 626 KG	120'0" 36.58M	139'2" 42.42M	39'6" 12.04M	57'3" 17.45M	68'11" 21.01M	19'11" 6.07M	22'2" 6.76M	41'4" 12.60M	48'10" 14.88M	2'9" 0.84M	4'0" 1.22M	29'3" 8.92M	12'9" 3.89M	93'8" 28.53M

NOTE: OPTIONAL TAKEOFF AND LANDING WEIGHTS.

880 193,500 LB (88 770 KG) MAXIMUM TAKEOFF WEIGHT.

155,000 LB (70 307 KG) MAXIMUM LANDING WEIGHT.

990 255,000 LB (115 666 KG) MAXIMUM TAKEOFF WEIGHT.

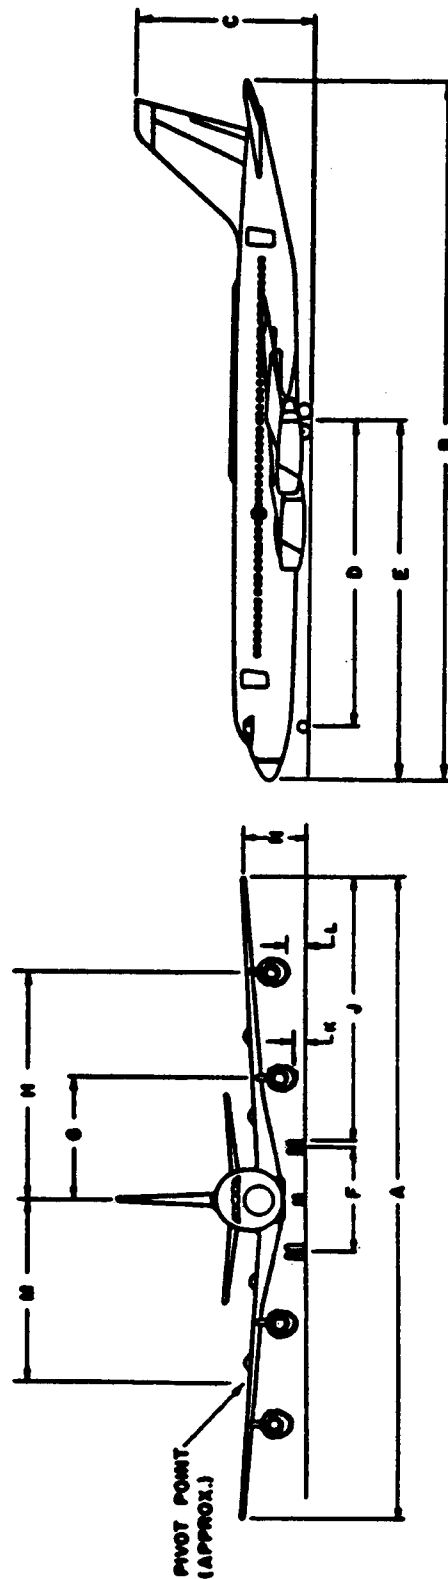


Figure A12-53. General Dynamics/Convair 880/990

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	H	M	TURN RADIUS
G-159C	33,600 LB 15,241 KG	30,400 LB 13,789 KG	78'4"	75'4"	23'0"	19'10"	26'8"	24'7"	12'1"	25'6"	1'6"	12'1"	8'8"	51'7"
			23.88M	22.96M	7.01M	6.04M	8.11M	7.47M	3.68M	7.77M	0.45M	3.68M	2.65M	15.67M

NOTE: OPTIONAL MAXIMUM (TAKEOFF) WEIGHT 36,000 LB (16,329 KG).
(LANDING) 34,285 LB (15,551 KG).

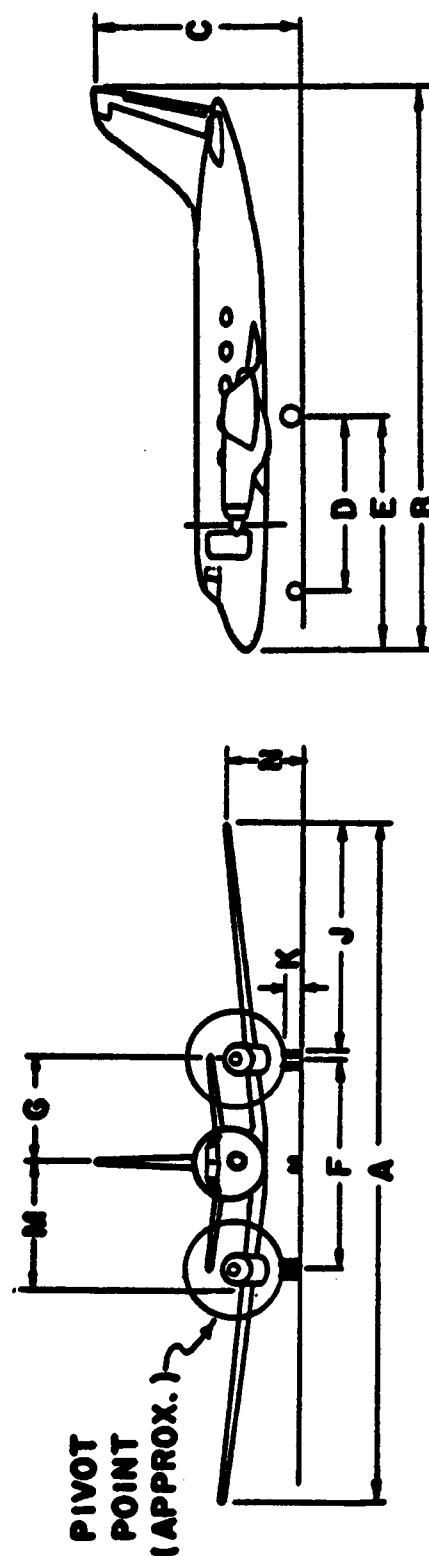


Figure A12-54. Grumman Gulfstream I

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	H	N	TURN RADIUS
II	65,300 LB	58,500 LB	68'10"	79'11"	24'6"	33'4"	40'5"	13'8"	6'3"	26'8"	8'10"	6'9"	6'0"	45'0"
	29 620 KG	26 535 KG	20.98M	24.36M	7.47M	10.16M	12.32M	4.15M	1.91M	8.11M	2.69M	2.07M	1.83M	13.72M
II-TT	65,300 LB		71'8"	79'11"	24'6"									
	29 620 KG		21.84M	24.36M	7.47M									
III	69,700 LB	58,500 LB	77'10"	83'1"	24'5"									47'6"
	31 615 KG	26 535 KG	23.72M	25.32M	7.44M									14.48M
IV	71,780 LB	58,500 LB	77'10"	87'10"	24'5"									48'2"
	32 559 KG	26 535 KG	23.72M	26.77M	7.44M									14.68M

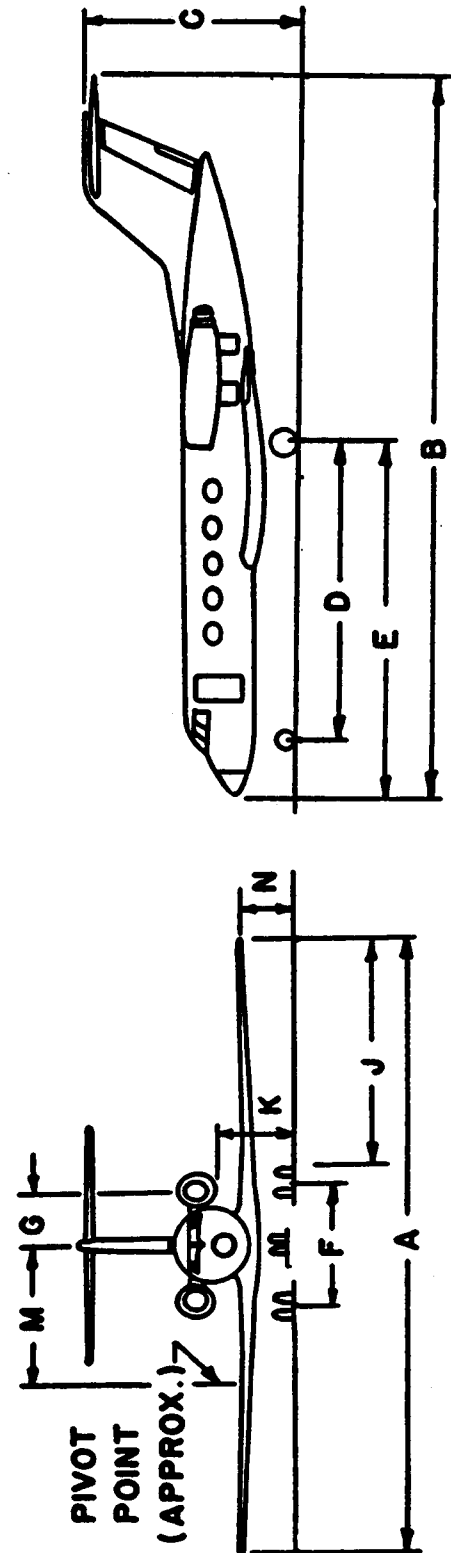


Figure A12-55. Grumman Gulfstream II

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	DRAFT	NUMBER SEATS	TURN RADIUS
GRUMMAN	G-64/ G-111	ALBATROSS	31,150 LB	31,150 LB	96'8"	62'10"	25'10"	17'6"	17'8"	3'6"	28	
			14 129 KG	14 129 KG	29.46M	19.15M	7.67M	5.33M	5.38M	1.07M		

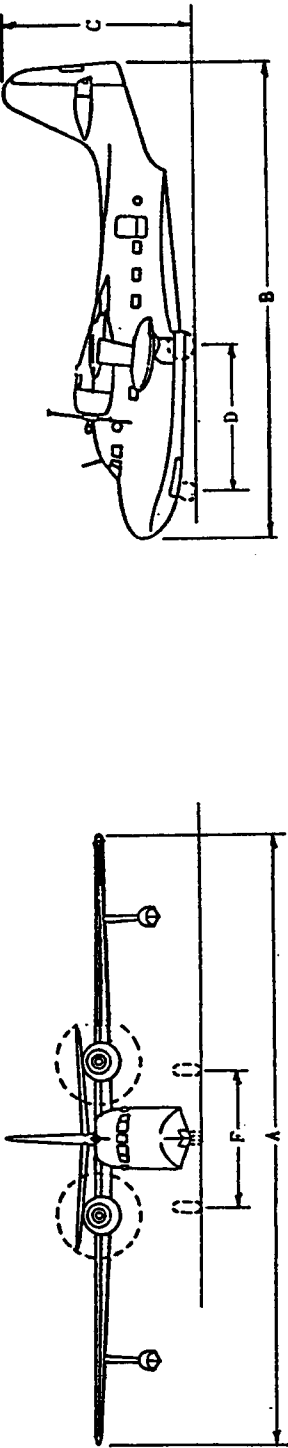


Figure A12-56. Grumman G-64/G-III

BUILDER	MODEL	NAME	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	DRAFT	NUMBER SEATS	TURN RADIUS
GRUMMAN	G-73	MALLARD	12,750 LB 5 783 KG	12,750 LB 5 783 KG	66'8" 20.32M	48'4" 14.73M	18'9" 5.72M	14'10" 4.52M	12'10" 3.91M		10	

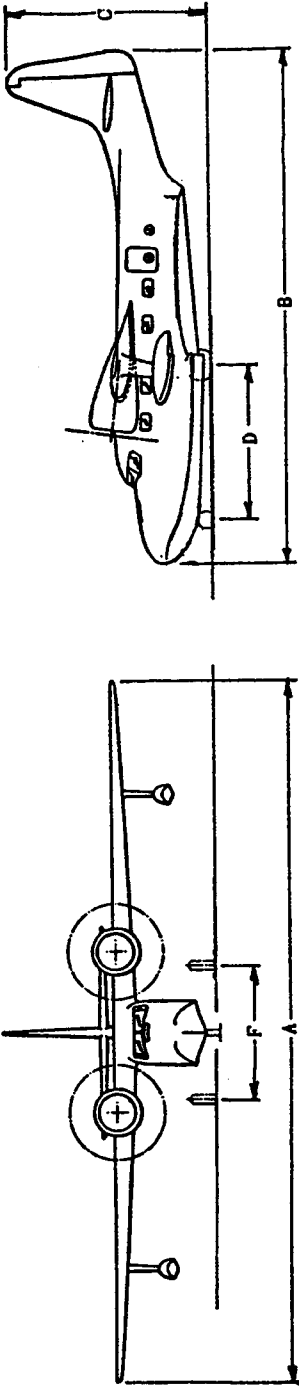


Figure A12-57. Grumman G-73

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	H	N	TURN RADIUS
HFB-320	20,280 LB	19,400 LB	47'6"	54'6"	16'2"	22'1"	28'2"	7'9"	4'8"	19'7"	5'11"	8'3"	7'3"	29'5"
	9 199 KG	8 800 KG	14.48M	16.61M	4.93M	6.73M	8.58M	2.39M	1.42M	5.97M	1.60M	2.51M	2.21M	8.94M

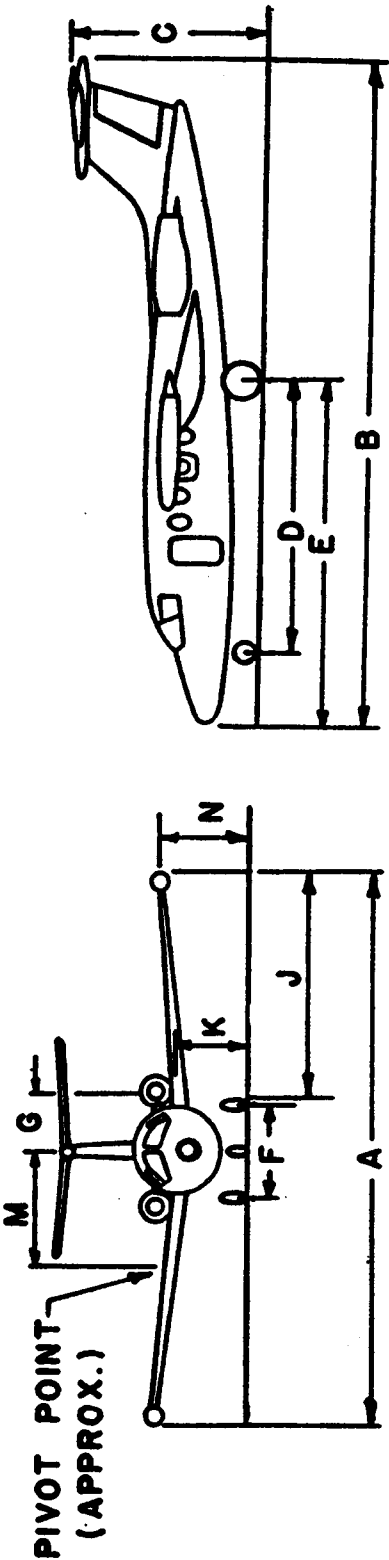


Figure A12-58. Hamburger-Flugzeugbau HFB-320 Hansa

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
DH. 104	8,950 LB 4 060 KG	8,500 LB 3 856 KG	57'0" 17.61M	39'3" 11.97M	13'4" 4.07M		13'8" 4.17M	9	35'4" 10.83M

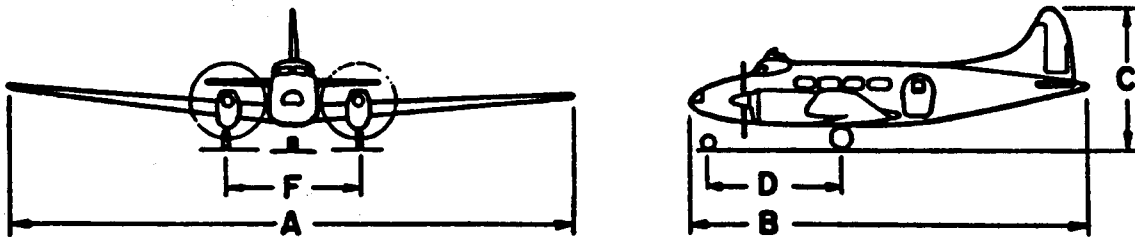


Figure A12-59. Hawker Siddeley DH. 104 Dove

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
DH.114	13,500 LB 6,123 KG	13,150 LB 5,965 KG	71'6" 21.79M	48'6" 14.78M	15'7" 4.75M	14'5" 4.39M	16'8" 5.14M	15'0" 4.57M								

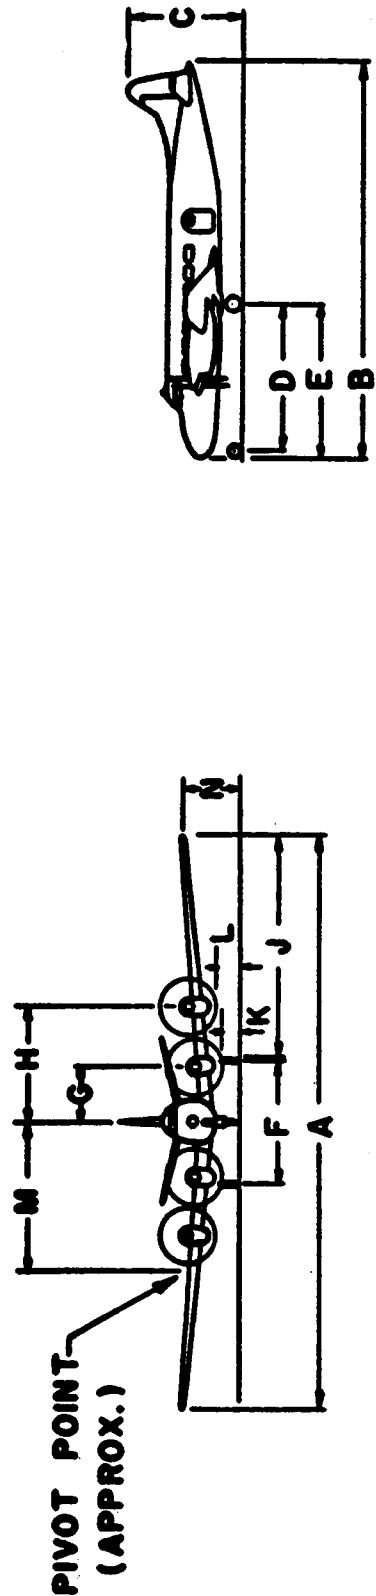


Figure A12-60. Hawker Siddeley DH. 114 Heron

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	H	M	TURN RADIUS
400A	23,300 LB 10 569 KG	20,000 LB 9 072 KG	47'0" 14.33M	47'5" 14.45M	16'6" 5.08M	18'9" 5.72M	26'3" 8.00M	9'2" 2.79M	4'2" 1.27M	18'7" 5.66M	4'9" 1.45M	19'0" 5.79M	4'4" 1.32M	43'0" 13.11M
600A	25,000 LB 11 340 KG	22,000 LB 9 979 KG	47'0" 14.33M	50'6" 15.39M	17'3" 5.26M									
700A	24,200 LB 10 977 KG	22,000 LB 9 979 KG	47'0" 14.33M	50'8" 15.44M	17'7" 5.36M									
800A	27,400 LB 12 428 KG	23,350 LB 10 591 KG	51'3" 15.67M	51'2" 15.60M	17'6" 5.33M									

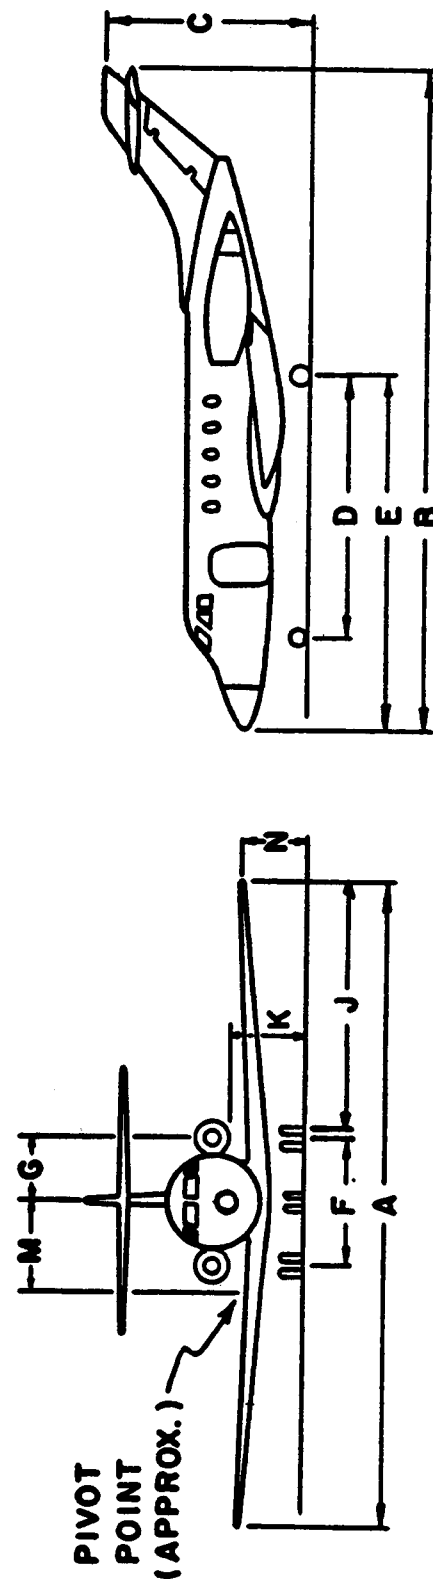


Figure A12-61. Hawker Siddeley HS-125

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
2A	44,490 LB	42,100 LB	98'6"	67'0"	24'10"	20'8"	24'9"	24'9"		35'11"	2'0"			59'0"
	20 160 KG	19 096 KG	30.02M	20.49M	7.63M	6.32M	7.60M	7.60M		10.95M	0.61M			17.98M
2B	46,500 LB		102'6"	67'0"	24'10"									
	21 092 KG		31.24M	20.49M	7.63M									

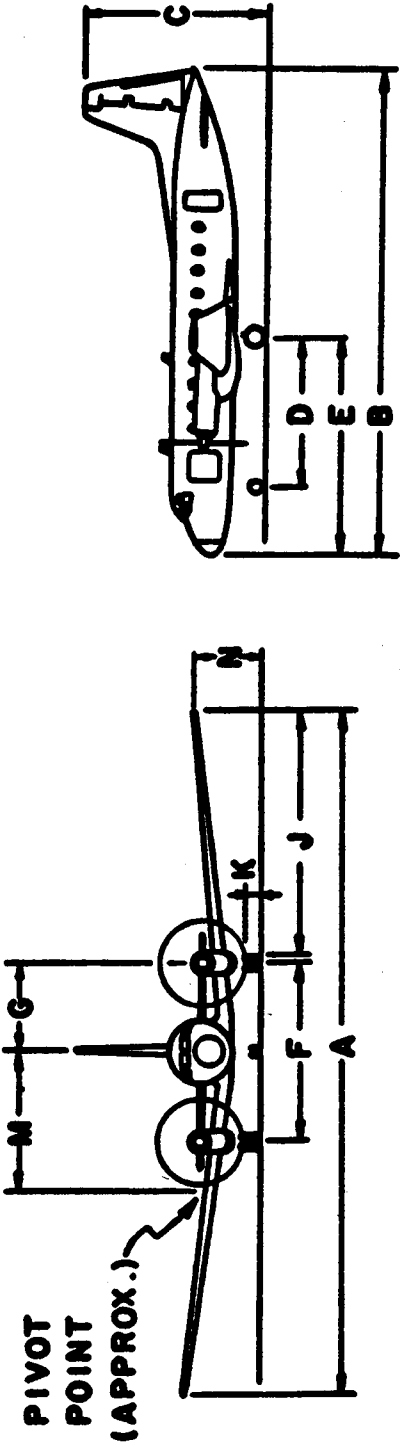


Figure A12-62. Hawker Siddeley HS-748

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
11-62	357,000 LB	252,000 LB	141'9"	174'4"	40'6"	80'5"		22'4"			58'0"					17.76M
	161,932 KG	114,305 KG	43.20M	53.13M	12.34M	24.57M		6.80M								

NOTE: OPTIONAL TAKEOFF WEIGHT 367,760 LB (166,813 KG).

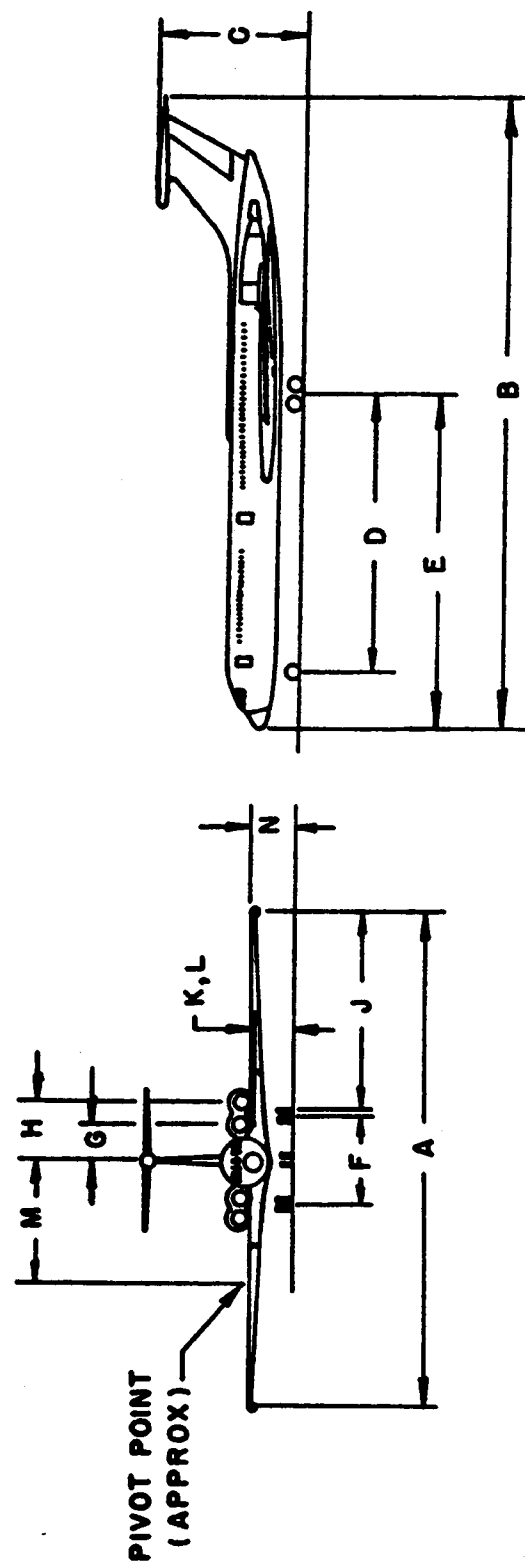


Figure A12-63. Ilyushin IL-62

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	H	N	TURN RADIUS
1121	16,800 LB 7 620 KG	16,000 LB 7 257 KG	43'4" 13.21M	50'5" 15.37M	15'9" 4.80M	23'9" 7.24M	11'2" 3.40M	3'4" 1.02M	3'4" 1.02M	15'9" 4.80M	5'2" 1.60M	23'8" 7.21M	4'11" 1.50M	45'5" 13.64M
1123	20,500 LB 9 299 KG	19,000 LB 8 618 KG	43'4" 13.21M	52'3" 15.93M	15'9" 4.80M	23'9" 7.24M	12'0" 3.66M	3'4" 1.02M	3'4" 1.02M	15'9" 4.80M	5'2" 1.60M			
1124	22,850 LB 10 365 KG	19,000 LB 8 618 KG	44'10" 13.67M	52'3" 15.93M	15'10" 4.83M	25'7" 7.80M	11'0" 3.35M	4'2" 1.27M	4'2" 1.27M	16'10" 5.13M	4'3" 1.30M	4'0" 1.22M	4'0" 1.22M	
1124A	23,500 LB 10 659 KG	19,000 LB 8 618 KG	44'10" 13.67M	52'3" 15.93M	15'10" 4.83M	25'7" 7.80M	11'0" 3.35M	4'2" 1.27M	4'2" 1.27M	16'10" 5.13M	4'3" 1.30M			
1125	23,500 LB 10 659 KG	20,700 LB 9 389 KG	52'8" 16.05M	55'7" 16.94M	18'2" 5.54M	24'1" 7.34M	30'9" 9.37M	9'1" 2.77M	4'4" 1.32M	21'1" 6.43M	7'0" 2.13M			

NOTE: MODEL 1121 FORMERLY PRODUCED BY NORTH AMERICAN ROCKWELL AS "JET COMMANDER."

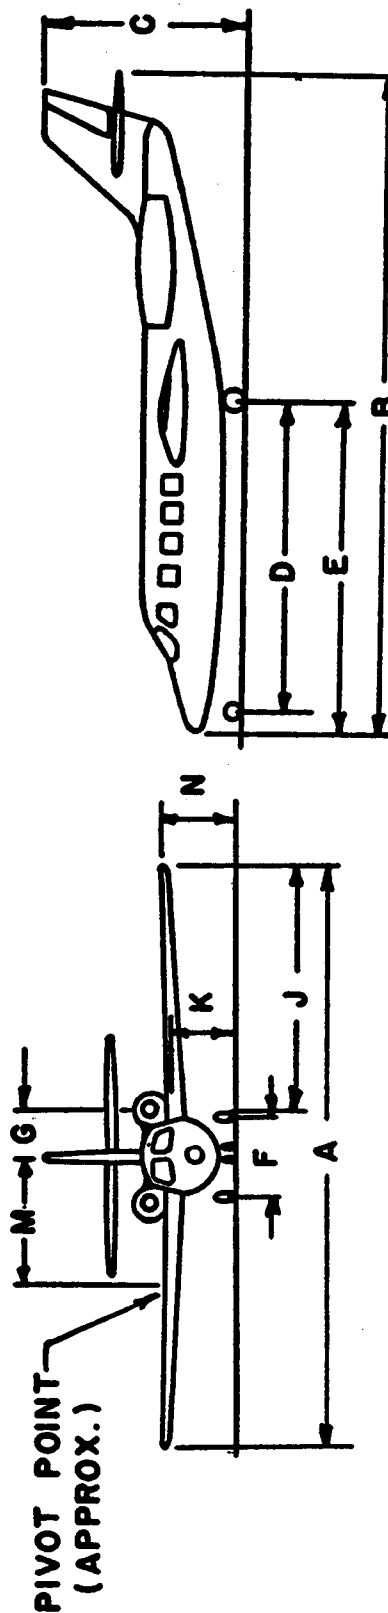


Figure A12-64. Israel Aircraft Industries Westwind

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
749A	107,000 LB	69,500 LB	123'0"	95'2"	22'5"	33'0"	39'3"	28'0"	14'0"	29'10"	45'5"	1'9"	3'11"	31'1"	15'11"	92'7"
	48 534 KG	40 597 KG	37.49M	29.01M	6.83M	10.06M	11.96M	8.53M	4.27M	9.09M	13.64M	0.53M	1.19M	9.47M	4.85M	28.22M
1049	120,000 LB	101,500 LB	123'0"	113'7"	24'10"	43'7"	49'11"	28'0"	14'0"	29'10"	45'5"	1'9"	3'11"	26'0"	16'3"	87'6"
	54 431 KG	46 040 KG	37.49M	34.62M	7.57M	13.28M	15.21M	8.53M	4.27M	9.09M	13.64M	0.53M	1.19M	7.92M	4.95M	20.07M
1649A	160,000 LB	123,000 LB	150'0"	116'2"	23'5"	45'7"	54'4"	38'5"	19'2"	37'4"	53'10"	1'5"	3'7"	28'4"	16'11"	103'5"
	72 575 KG	55 792 KG	45.72M	35.41M	7.14M	13.89M	16.56M	11.71M	5.84M	11.38M	16.41M	0.44M	1.09M	8.64M	5.16M	32.13M

NOTE: MODEL 1049C HAS MAXIMUM (TAKEOFF) WEIGHT OF 137,500 LB (62 369 KG).
113,000 LB (51 256 KG).

PIVOT POINT
(APPROX.)

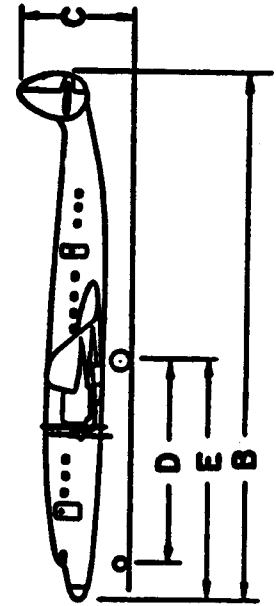
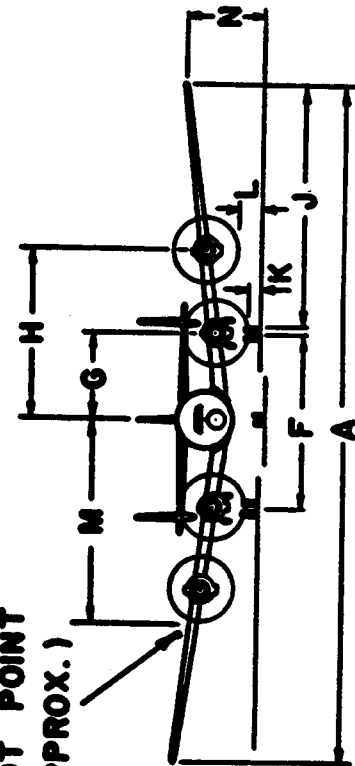


Figure A12-65. Lockheed Constellation and Super Constellation

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	TURN RADIUS
C-5B	769,000 LB 348 813 KG	635,850 LB 288 417 KG	222'8"	247'10"	65'1"	82'1"	116'11"	37'5"	39'8"	61'11"	92'8"	10'9"	7'11"	13'7"	162'6"
			67.87N	75.54N	19.84M	25.02M	35.64M	11.40M	12.09M	18.87N	28.25M	3.28M	2.41M	4.14M	49.53M

NOTE: OPTIONAL TAKEOFF WEIGHT 837,000 LB (379 637 KG).

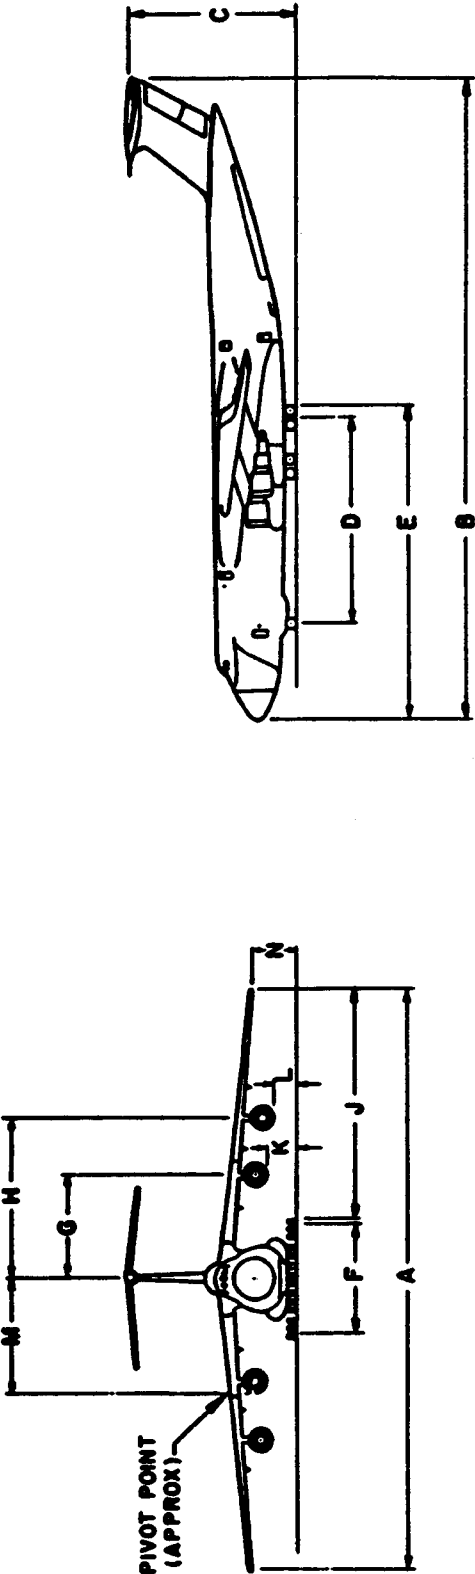


Figure A12-66. Lockheed C-5B Galaxy

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
C-141A	316,600 LB 143,607 KG	316,100 LB 143,381 KG	159'11" 48.74M	145'0" 44.19M	39'4" 11.99M	55'0" 16.76M	60'7" 18.46M	17'6" 5.34M	23'9" 7.24M	38'4" 11.69M	70'0" 21.34M	3'11" 1.19M	3'4" 1.01M	10'0" 3.05M	6'0" 1.83M	92'0" 28.04M
C-141B	342,000 LB 155,582 KG		159'11" 48.74M	168'4" 51.31M	39'4" 11.99M											

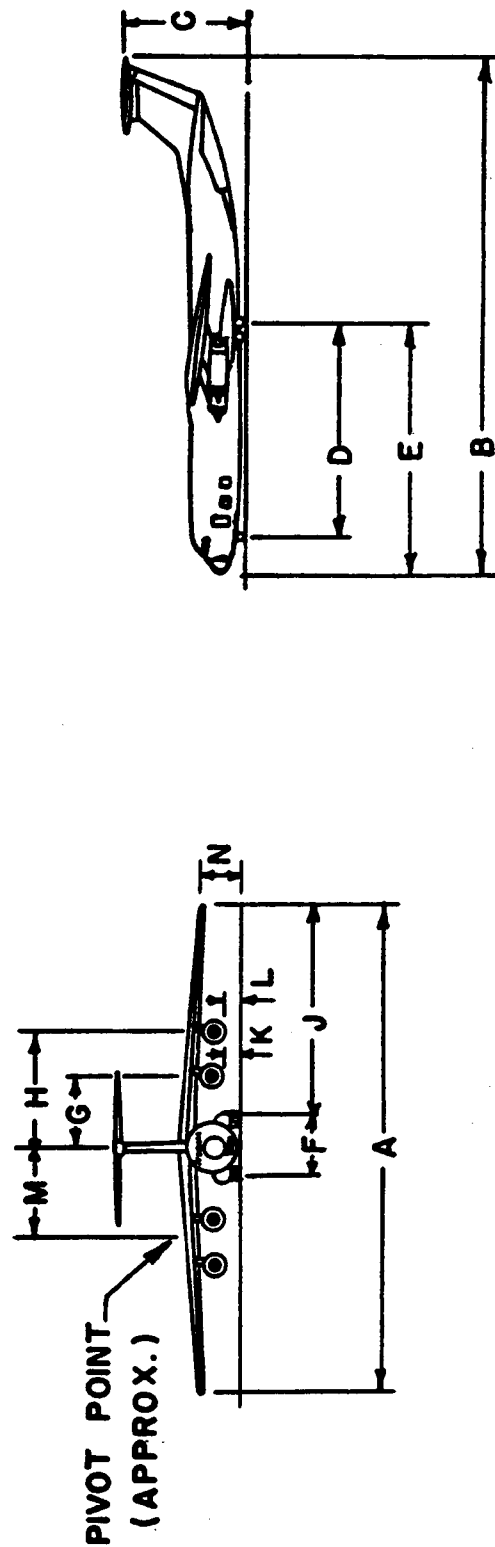


Figure A12-67. Lockheed C-141 Starlifter

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
L-188	116,000 LB 52,617 KG	95,650 LB 43,386 KG	99'0" 29'91M	104'7" 31.88M	33'8" 10.26M	37'0" 11.27M	48'3" 14.71M	31'2" 9.50M	15'7" 4.75M	29'9" 9.07M	37'9" 9.98M	1'3" 0.33M	2'6" 0.76M	15'7" 4.75M	10'11" 3.33M	65'1" 19.84M

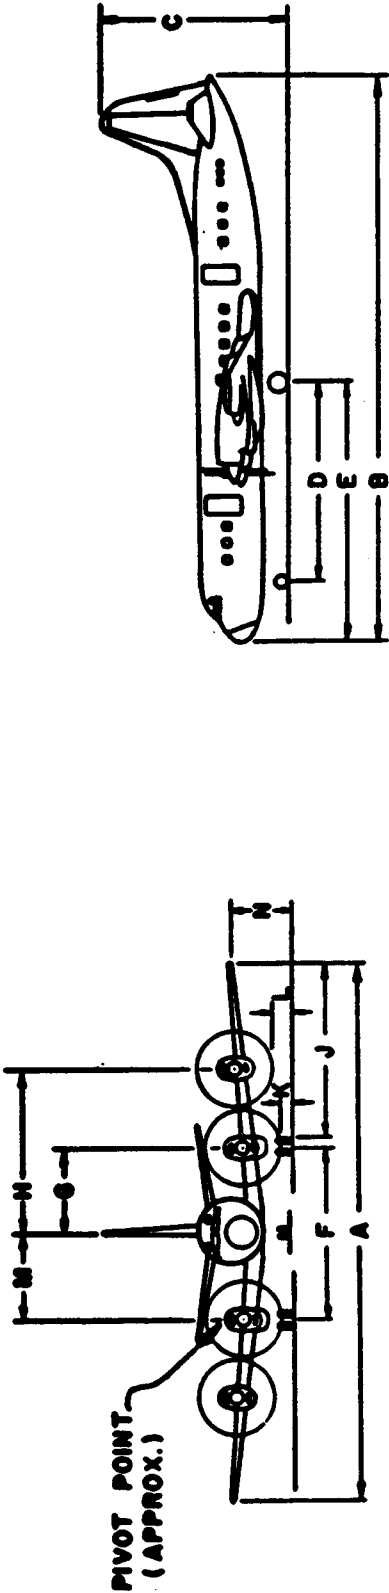


Figure A12-68. Lockheed L-188 Electra II

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
L-100-20	155,000 LB 70 307 KG	130,000 LB 58 967 KG	132'7"	106'1"	39'4"	37'1"	48'7"	14'3"	16'9"	33'4"	57'5"	5'11"	6'11"	12'0"	15'4"	88'0"
			40.41M	32.33M	11.94M	11.30M	14.80M	4.34M	5.11M	10.16M	17.50M	1.80M	2.11M	3.65M	4.67M	26.82M
L-100-30	155,000 LB 70 307 KG	135,000 LB 61 235 KG	132'7"	112'9"	39'2"	40'5"	51'11"	14'3"	16'9"	33'4"	57'5"	5'11"	6'11"	14'0"	15'3"	90'0"
			40.41M	34.36M	11.93M	12.31M	15.81M	4.34M	5.11M	10.16M	17.50M	1.80M	2.11M	4.27M	4.64M	27.43M
C-130H	175,000 LB 79 379 KG	155,000 LB 70 307 KG	132'7"	97'9"	39'5"	32'1"	43'7"	14'3"	16'9"	33'4"	58'4"	5'8"		13'8"	13'8"	85'0"
			40.41M	29.79M	12.01M	9.78M	13.28M	4.34M	5.11M	10.16M	17.78M	1.73M		4.17M	4.17M	25.91M

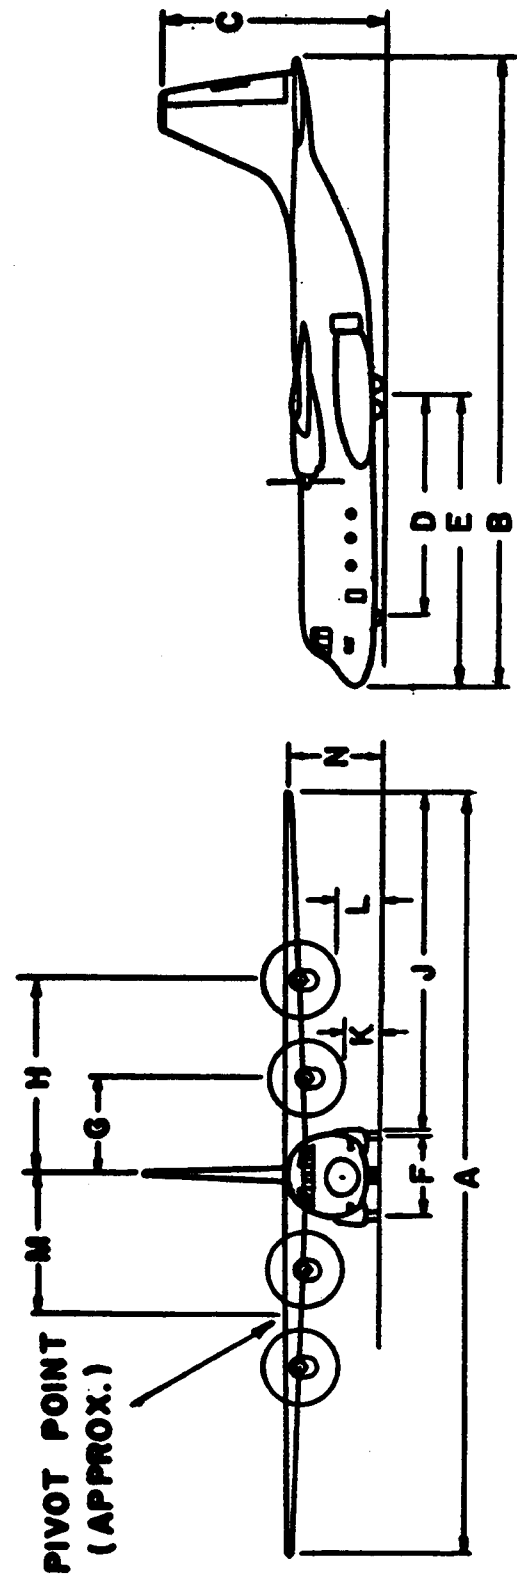


Figure A12-69. Lockheed L-100 Hercules

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	P	TURN RADIUS
1	430,000 LB 195 045 KG	358,000 LB 162 386 KG	155'4" 47.35M	177'8" 54.15M	55'10" 17.02M	70'0" 21.34M	99'9" 30.40M	36'0" 10.97M	34'10" 10.62M	56'8" 17.27M	2'11" 0.89M	38'10" 11.84M	18'9" 5.72M	121'3" 36.96M
100	466,000 LB 211 374 KG	368,000 LB 166 922 KG	155'4" 47.35M	177'8" 54.15M	55'10" 17.02M	70'0" 21.34M	99'9" 30.40M	36'0" 10.97M	34'10" 10.62M	56'8" 17.27M	2'11" 0.89M	38'10" 11.84M	18'9" 5.72M	121'3" 36.96M
200	466,000 LB 211 374 KG	368,000 LB 166 922 KG	155'4" 47.35M	177'8" 54.15M	55'10" 17.02M	70'0" 21.34M	99'9" 30.40M	36'0" 10.97M	34'10" 10.62M	56'8" 17.27M	2'11" 0.89M	38'10" 11.84M	18'9" 5.72M	121'3" 36.96M
500	496,000 LB 224 982 KG	368,000 LB 166 922 KG	155'4" 47.35M	164'2" 50.04M	55'10" 17.02M	61'8" 18.80M	91'5" 27.86M	36'0" 10.97M	34'10" 10.62M	56'8" 17.27M	2'11" 0.89M	34'0" 10.36M	20'0" 6.10M	116'10" 35.61M
500 EX. WING	496,000 LB 224 982 KG	368,000 LB 166 922 KG	164'4" 50.09M	164'2" 50.04M	55'10" 17.02M	61'8" 18.80M	91'5" 27.86M	36'0" 10.97M	34'10" 10.62M	61'2" 18.64M	2'11" 0.89M	34'0" 10.36M	20'0" 6.10M	122'0" 37.19M

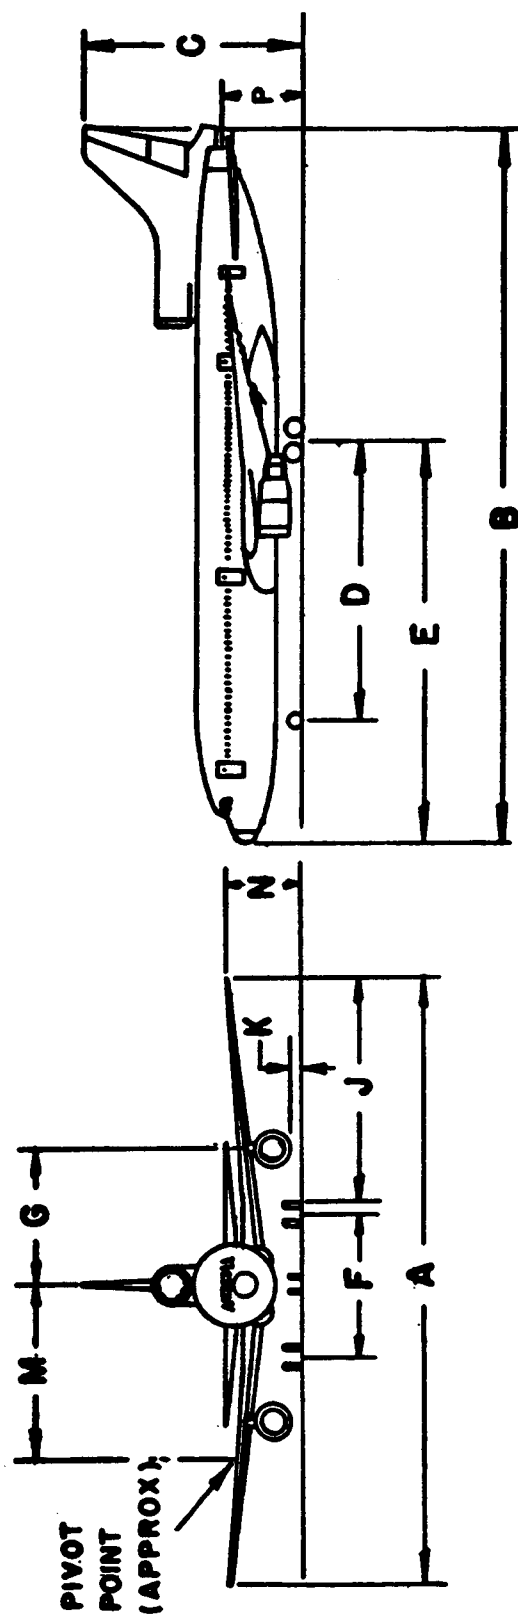


Figure A12-70. Lockheed L-1011 Tristar

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
1329	42,000 LB 19 501 KG	35,000 LB 15 876 KG	54'5" 16.29M	60'5" 18.42M	20'5" 6.22M	20'7" 6.28M	34'11" 10.65M	12'4" 3.76M	5'7" 1.71M	7'11" 2.42M	19'4" 5.90M	5'2" 1.60M	5'2" 1.60M	7'2" 2.19M	4'5" 1.34M	43'4" 13.21M

JETSTAR II HAS OPTIONAL MAXIMUM (TAKEOFF) WEIGHT OF 43,750 LB (19 845 KG).
(LANDING) 36,000 LB (16 329 KG).

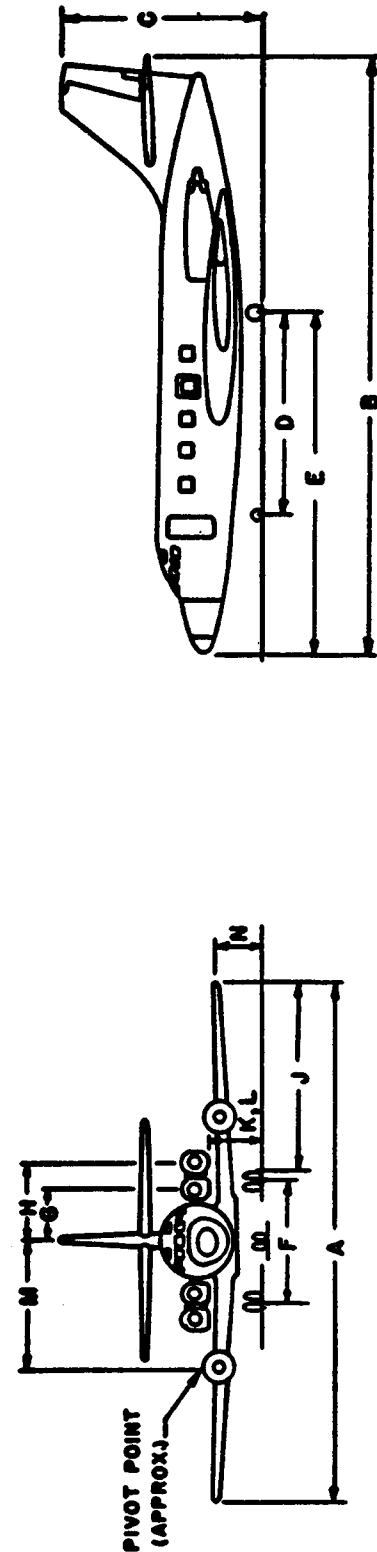


Figure A12-71. Lockheed L-1329 Jetstar

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	N	TURN RADIUS
404	44,900 LB 20,366 KG	43,000 LB 19,504 KG	93'4" 28.45M	74'7" 22.73M	28'8" 8.24M	22'5" 6.83M	32'3" 9.83M	25'0" 7.62M	12'6" 3.81M	32'8" 9.96M	0'11" 0.28M	12'6" 3.81M	12'6" 3.81M	59'2" 18.03M

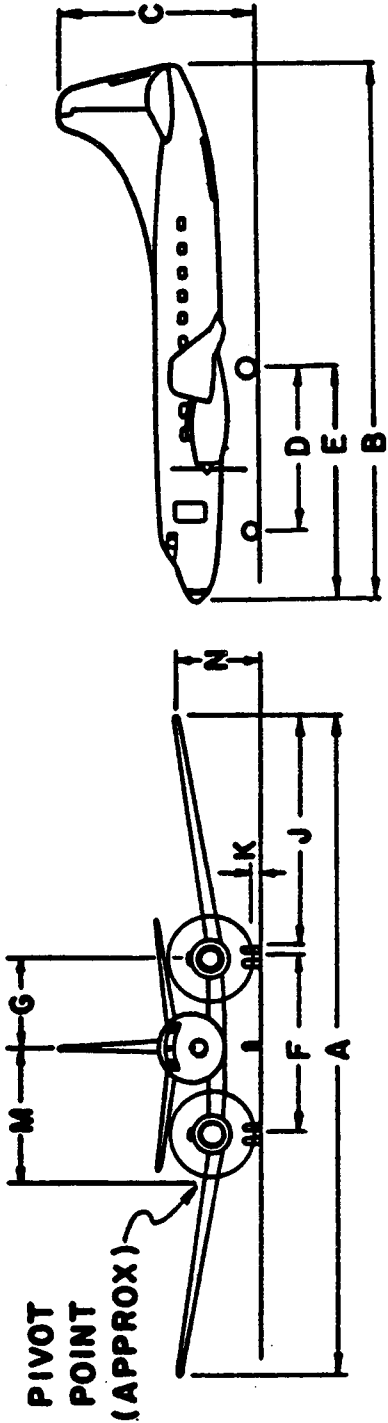


Figure A12-72. Martin 404

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
20, 30, 40	315,000 LB 142,884 KG	207,000 LB 93,895 KG	142'5"	150'9"	43'4"	57'6"	73'5"	20'10"	25'9"	44'7"	58'10"	4'0"	5'5"	21'1"	15'3"	96'10"
			43.41M	45.95M	13.21M	17.53M	22.38M	6.35M	7.85M	13.59M	17.93M	1.22M	1.63M	6.43M	4.65M	29.51M
55	325,000 LB 147,420 KG	217,000 LB 98,431 KG	142'5"	150'9"	43'4"	57'6"	73'5"	20'10"	25'9"	44'7"	58'10"	3'1"	4'7"	21'1"	15'3"	96'10"
			43.41M	45.95M	13.21M	17.53M	22.38M	6.35M	7.85M	13.59M	17.93M	0.94M	1.40M	6.43M	4.65M	29.51M
55F	325,000 LB 147,420 KG	240,000 LB 108,864 KG	142'5"	150'9"	43'4"	57'6"	73'5"	20'10"	25'9"	44'7"	58'10"	3'1"	4'7"	21'1"	15'3"	96'10"
			43.41M	45.95M	13.21M	17.53M	22.38M	6.35M	7.85M	13.59M	17.93M	0.94M	1.40M	6.43M	4.65M	29.51M
61	325,000 LB 147,420 KG	240,000 LB 108,864 KG	142'5"	187'5"	43'0"	77'6"	93'5"	20'10"	25'9"	44'7"	58'10"	3'3"	4'7"	27'0"	15'1"	106'11"
71			43.41M	57.12M	13.11M	23.62M	28.47M	6.35M	7.85M	13.59M	17.93M	0.99M	1.40M	8.23M	4.60M	32.59M
61F	328,000 LB 148,781 KG	258,000 LB 117,029 KG	142'5"	187'5"	43'0"	77'6"	93'5"	20'10"	25'9"	44'7"	58'10"	3'3"	4'7"	27'0"	15'1"	106'11"
71CF			43.41M	57.12M	13.11M	23.62M	28.47M	6.35M	7.85M	13.59M	17.93M	0.99M	1.40M	8.23M	4.60M	32.59M
62, 72, 72AF	350,000 LB 158,760 KG	240,000 LB 108,864 KG	148'5"	157'6"	43'5"	60'10"	76'9"	20'10"	25'9"	44'7"	61'8"	2'7"	4'2"	39'4"	15'6"	116'5"
			45.24M	48.00M	13.23M	18.54M	23.39M	6.35M	7.85M	13.59M	18.80M	0.79M	1.27M	11.99M	4.72M	35.48M
62F	350,000 LB 158,760 KG	250,000 LB 113,400 KG	148'5"	157'6"	43'5"	60'10"	76'9"	20'10"	25'9"	44'7"	61'8"	2'7"	4'2"	39'4"	15'6"	116'5"
72CF			45.24M	48.00M	13.23M	18.54M	23.39M	6.35M	7.85M	13.59M	18.80M	0.79M	1.27M	11.99M	4.72M	35.48M
63	355,000 LB 161,028 KG	258,000 LB 117,029 KG	148'5"	187'5"	43'0"	77'6"	93'5"	20'10"	25'9"	44'7"	61'8"	2'7"	4'2"	38'10"	15'4"	116'1"
73			45.24M	57.12M	13.11M	23.62M	28.47M	6.35M	7.85M	13.59M	18.80M	0.79M	1.27M	11.84M	4.67M	35.38M
63F, 73CF	355,000 LB 161,028 KG	275,000 LB 124,740 KG	148'5"	187'5"	43'0"	77'6"	93'5"	20'10"	25'9"	44'7"	61'8"	2'7"	4'2"	38'10"	15'4"	116'1"
73AF			45.24M	57.12M	13.11M	23.62M	28.47M	6.35M	7.85M	13.59M	18.80M	0.79M	1.27M	11.84M	4.67M	35.38M

NOTE: OPTIONAL TAKEOFF AND LANDING WEIGHTS:
72 335,000 LB (151,953 KG) MAXIMUM TAKEOFF WEIGHT.
240,000 LB (108,864 KG) MAXIMUM LANDING WEIGHT.
72AF 335,000 LB (151,953 KG) MAXIMUM TAKEOFF WEIGHT.
250,000 LB (113,400 KG) MAXIMUM LANDING WEIGHT.

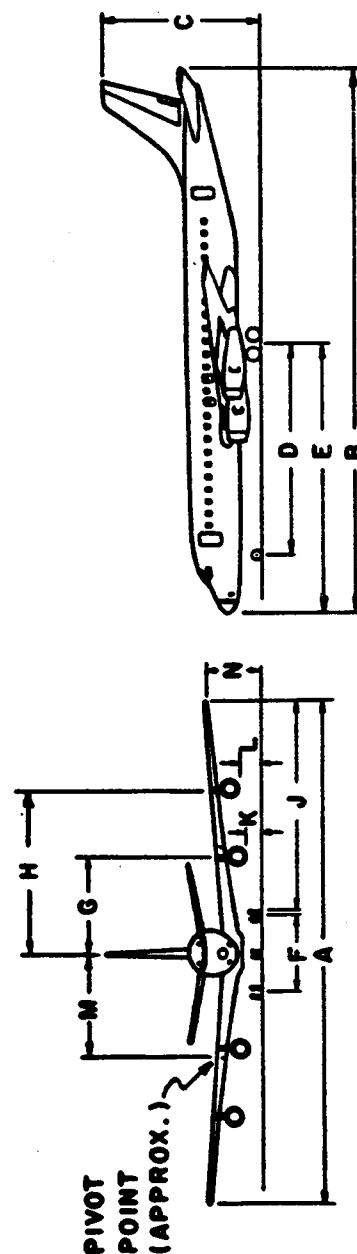


Figure A12-73. McDonnell-Douglas DC-8

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	TURN RADIUS
15	90,700 LB 41 141 KG	81,700 LB 37 058 KG	89'5" 27.25M	104'5" 31.83M	27'7" 8.41M	43'8" 13.31M	51'4" 15.64M	16'4" 4.98M	8'11" 2.72M	35'0" 10.67M	6'5" 1.96M	8'6" 2.59M	7'2" 2.18M	59'7" 18.16M
15F	90,700 LB 41 141 KG	81,700 LB 37 058 KG	89'5" 27.25M	104'5" 31.83M	27'7" 8.41M	43'8" 13.31M	51'4" 15.64M	16'4" 4.98M	8'11" 2.72M	35'0" 10.67M	6'5" 1.96M	8'6" 2.59M	7'2" 2.18M	59'7" 18.16M
21	98,000 LB 44 452 KG	95,300 LB 43 227 KG	93'4" 28.45M	104'5" 31.83M	27'5" 8.36M	43'8" 13.31M	51'4" 15.64M	16'4" 4.98M	8'11" 2.72M	36'10" 11.23M	6'5" 1.96M	8'6" 2.59M	7'3" 2.21M	59'6" 18.14M
32	110,000 LB 49 895 KG	99,000 LB 44 906 KG	93'4" 28.45M	119'4" 36.37M	27'9" 8.46M	53'2" 16.21M	60'9" 18.52M	16'4" 4.98M	8'11" 2.72M	36'10" 11.23M	6'5" 1.96M	10'4" 3.15M	7'3" 2.21M	65'2" 19.86M
33F	110,000 LB 49 895 KG	99,000 LB 44 906 KG	93'4" 28.45M	119'4" 36.37M	27'9" 8.46M	53'2" 16.21M	60'9" 18.52M	16'4" 4.98M	8'11" 2.72M	36'10" 11.23M	6'5" 1.96M	10'4" 3.15M	7'3" 2.21M	65'2" 19.86M
41	114,000 LB 51 710 KG	102,000 LB 46 266 KG	93'4" 28.45M	125'7" 38.28M	28'5" 8.66M	56'2" 17.12M	63'8" 19.41M	16'0" 4.88M	8'11" 2.72M	37'0" 11.28M	6'11" 2.11M	10'11" 3.33M	7'2" 2.18M	68'6" 20.88M
51	121,000 LB 54 885 KG	110,000 LB 49 895 KG	93'4" 28.45M	133'7" 40.72M	28'9" 8.76M	60'11" 18.57M	68'6" 20.88M	16'0" 4.88M	8'11" 2.72M	37'0" 11.28M	6'10" 2.08M	11'10" 3.61M	7'1" 2.16M	71'10" 21.89M
81, 82, 83, 88	SEE NOTE	SEE NOTE	107'10" 32.87M	147'10" 45.06M	30'3" 9.22M	72'5" 22.07M	80'0" 24.38M	16'8" 5.08M	8'11" 2.72M	43'9" 13.34M	7'6" 2.29M	14'0" 4.27M	8'7" 2.62M	81'2" 24.74M
87	SEE NOTE	SEE NOTE	107'10" 32.87M	130'5" 39.75M	31'2" 9.50M	62'11" 19.18M	70'6" 21.49M	16'8" 5.08M	8'11" 2.72M	43'9" 13.34M	7'6" 2.29M	12'2" 3.71M	8'8" 2.64M	71'7" 21.82M

NOTE: TAKEOFF AND LANDING WEIGHTS:

81	140,000 LB (63 503 KG) MAXIMUM TAKEOFF WEIGHT. 128,000 LB (58 060 KG) MAXIMUM LANDING WEIGHT.	86	149,500 LB (67 812 KG) MAXIMUM TAKEOFF WEIGHT. 130,000 LB (58 967 KG) MAXIMUM LANDING WEIGHT.
82	149,500 LB (67 812 KG) MAXIMUM TAKEOFF WEIGHT. 130,000 LB (58 967 KG) MAXIMUM LANDING WEIGHT.	87	149,500 LB (67 812 KG) MAXIMUM TAKEOFF WEIGHT. 130,000 LB (58 967 KG) MAXIMUM LANDING WEIGHT.
83	160,000 LB (72 575 KG) MAXIMUM TAKEOFF WEIGHT. 139,500 LB (63 276 KG) MAXIMUM LANDING WEIGHT.	87	140,000 LB (63 503 KG) MAXIMUM TAKEOFF WEIGHT. 128,000 LB (58 060 KG) MAXIMUM LANDING WEIGHT.

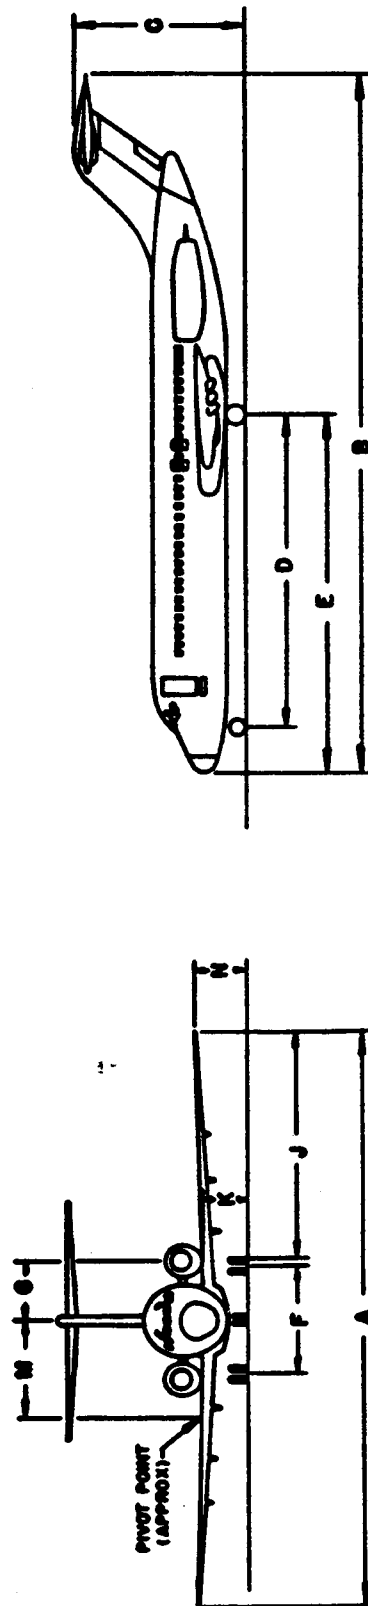


Figure A12-74. McDonnell-Douglas DC-9 and MD-80

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	N	P	TURN RADIUS
10	443,000 LB	363,500 LB	155'4"	182'3"	58'5"	72'5"	100'4"	35'0"	26'10"	57'1"	2'9"	39'0"	14'5"	29'7"	121'8"
	200 941 KG	164 881 KG	47.35M	55.55M	17.81M	22.07M	30.58M	10.67M	8.18M	17.40M	0.84M	11.89M	4.32M	9.02M	37.08M
30	590,000 LB	411,000 LB	165'4"	181'7"	58'7"	72'5"	100'4"	35'0"	26'10"	62'1"	2'10"	37'2"	14'4"	29'6"	125'4"
	267 620 KG	186 426 KG	50.39M	55.35M	17.86M	22.07M	30.58M	10.67M	8.18M	18.92M	0.86M	11.33M	4.37M	8.99M	38.20M
40	535,000 LB	403,000 LB	165'4"	182'3"	58'7"	72'5"	100'4"	35'0"	26'10"	62'1"	2'10"	37'2"	14'4"	29'6"	125'4"
	251 744 KG	182 798 KG	50.39M	55.55M	17.86M	22.07M	30.58M	10.67M	8.18M	18.92M	0.86M	11.33M	4.37M	8.99M	38.20M
KC-10A	590,000 LB	426,000 LB	165'4"	181'7"	58'7"	72'5"	100'4"	35'0"	26'10"	62'1"	2'10"	37'2"	14'4"	29'6"	125'4"
	267 620 KG	197 766 KG	50.39M	55.35M	17.86M	22.07M	30.58M	10.67M	8.18M	18.92M	0.86M	11.33M	4.37M	8.99M	38.20M

NOTE: TAKEOFF AND LANDING WEIGHTS:

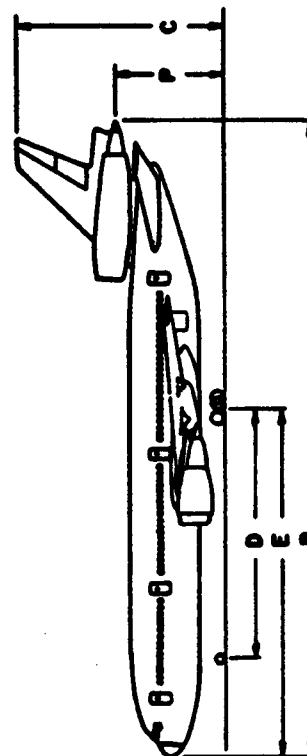
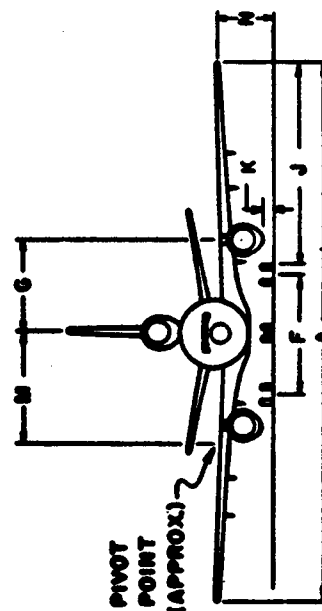
10CF 440,000 LB (199 581 KG) MAXIMUM TAKEOFF WEIGHT.
363,500 LB (164 881 KG) MAXIMUM LANDING WEIGHT.15 455,000 LB (206 384 KG) MAXIMUM TAKEOFF WEIGHT.
363,500 LB (164 881 KG) MAXIMUM LANDING WEIGHT.DC-10-10CF HAS SAME DIMENSIONS AS MODEL 10.
DC-10-15 HAS SAME DIMENSIONS AS MODEL 10.
DC-10-30CF HAS SAME DIMENSIONS AS MODEL 30.

Figure A12-75. McDonnell-Douglas DC-10

	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	M	P	TURN RADIUS
11	602,500 LB 273 289 KG	430,000 LB 195 045 KG	169'10" 51.77M	SEE NOTE	57'9" 17.60M	80'9" 24.61M	108'9" 33.15M	35'0" 10.67M	26'10" 8.18M	64'4" 19.61M	3'1" 0.94M	29'7" 9.02M	SEE NOTE	29'2" 8.89M	135'8" 41.35M
11	602,500 LB 273 289 KG	438,000 LB 207 745 KG	169'10" 51.77M	SEE NOTE	57'9" 17.60M	80'9" 24.61M	108'9" 33.15M	35'0" 10.67M	26'10" 8.18M	64'4" 19.61M	3'1" 0.94M	29'7" 9.02M	SEE NOTE	29'2" 8.89M	135'8" 41.35M
COMBI															
11F	602,500 LB 273 289 KG	471,500 LB 213 869 KG	169'10" 51.77M	SEE NOTE	57'9" 17.60M	80'9" 24.61M	108'9" 33.15M	35'0" 10.67M	26'10" 8.18M	64'4" 19.61M	3'1" 0.94M	29'7" 9.02M	SEE NOTE	29'2" 8.89M	135'8" 41.35M

NOTE: OPTIONAL MAXIMUM TAKEOFF WEIGHT: 605,500 LB (274 650 KG).

"B" 201' 4" (61.37M) WITH CF6-802CD1F ENGINES.

"B" 200' 11" (61.24M) WITH PW 4360 ENGINES.

"N" TOP OF WINGLET 23'5" (7.14M).

"M" BOTTOM OF WINGLET 13'9" (4.19M).

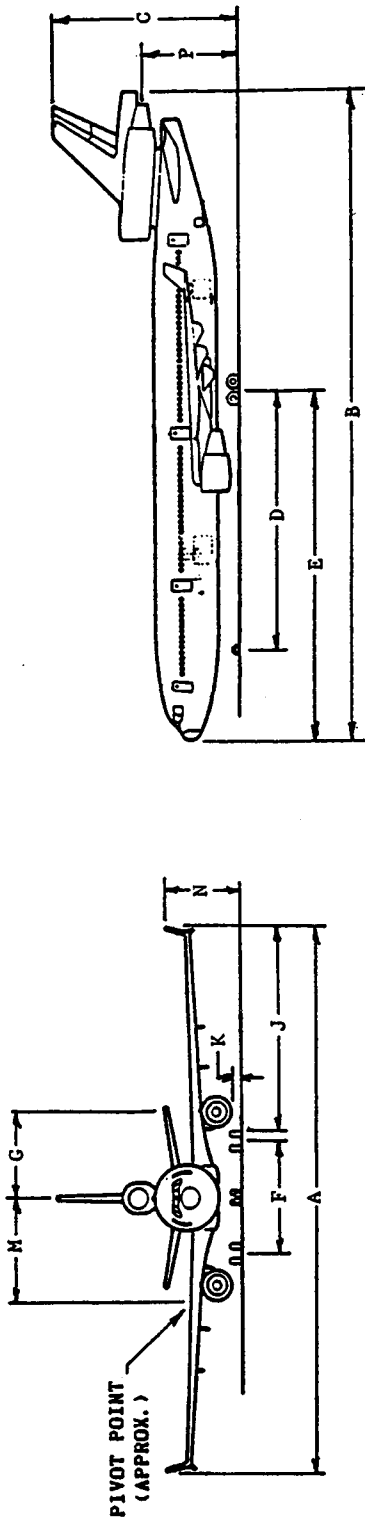


Figure A12-76. McDonnell-Douglas MD-11

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
MU-2N	11,575 LB	10,260 LB	39'2"	39'6"	13'8"	14'5"	7'11"	7	
MARQUISE	5 250 KG	4 654 KG	11.94M	12.04M	4.17M	4.39M	2.41M		
MU-2P	10,470 LB		39'2"	33'3"	12'11"			9	
SOLITAIRE	4 749 KG		11.94M	10.13M	3.94M				

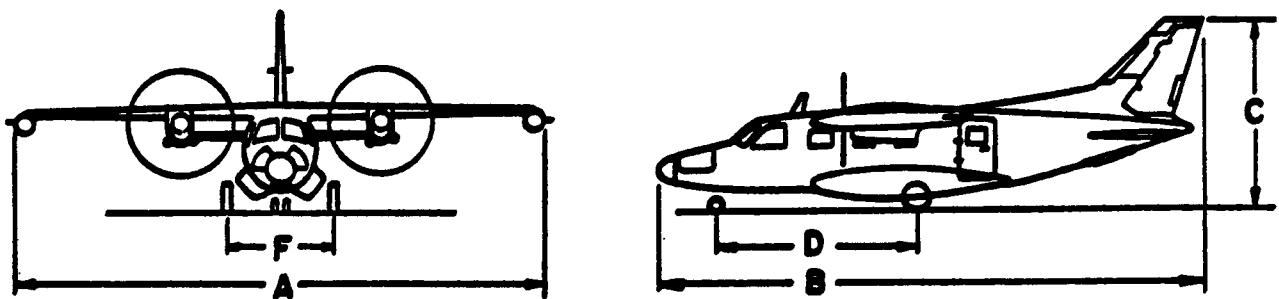


Figure A12-77. Mitsubishi MU-2

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	M	TURN RADIUS
YS-11A	54,010 LB 24 499KG	52,910 LB 24 000 KG	105'0" 32.00M	86'4" 26.31M	29'6" 8.99M	31'3" 9.53M		28'3" 8.61M		37'8" 11.38M			

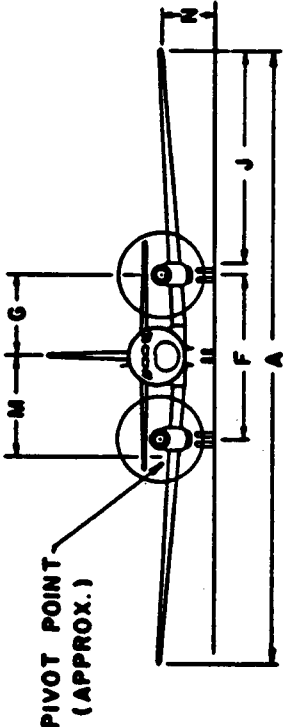
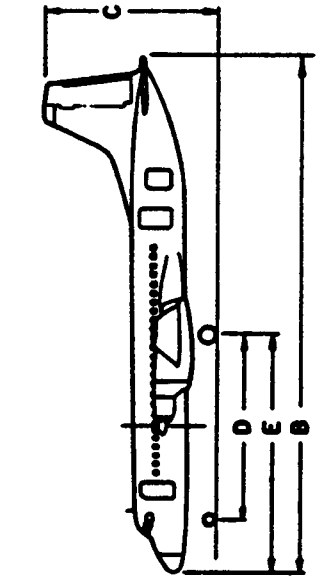


Figure A12-78. Nihon/N.A.M.C. YS-11A

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	N	TURN RADIUS
40	18,650 LB	17,500 LB	44'6"	43'9"	16'0"	14'6"	22'9"	7'3"	4'6"	18'4"	3'10"	17'8"	3'8"	43'6"
	8 459 KG	7 938 KG	13.56M	13.34M	4.88M	4.42M	6.93M	2.21M	1.37M	5.59M	1.16M	5.38M	1.12M	13.26M
60	20,000 LB	17,500 LB	44'6"	48'4"	16'0"	15'11"	24'1"	7'3"	4'6"	18'4"	3'10"		3'8"	
	9 072 KG	7 938 KG	13.56M	14.73M	4.88M	4.85M	7.34M	2.21M	1.37M	5.59M	1.16M		1.12M	
70, 75A	21,000 LB	18,500 LB	44'6"	47'2"	17'3"	15'10"		8'4"	4'6"		3'6"	3'7"	3'7"	
	9 525 KG	8 391 KG	13.56M	14.40M	5.24M	4.81M		2.54M	1.37M		1.05M	1.08M	1.08M	

NOTE: MODEL 75A HAS MAXIMUM (TAKEOFF) WEIGHT OF 23,300 LB (10 569 KG).
22,000 LB (9 979 KG).
(LANDING)

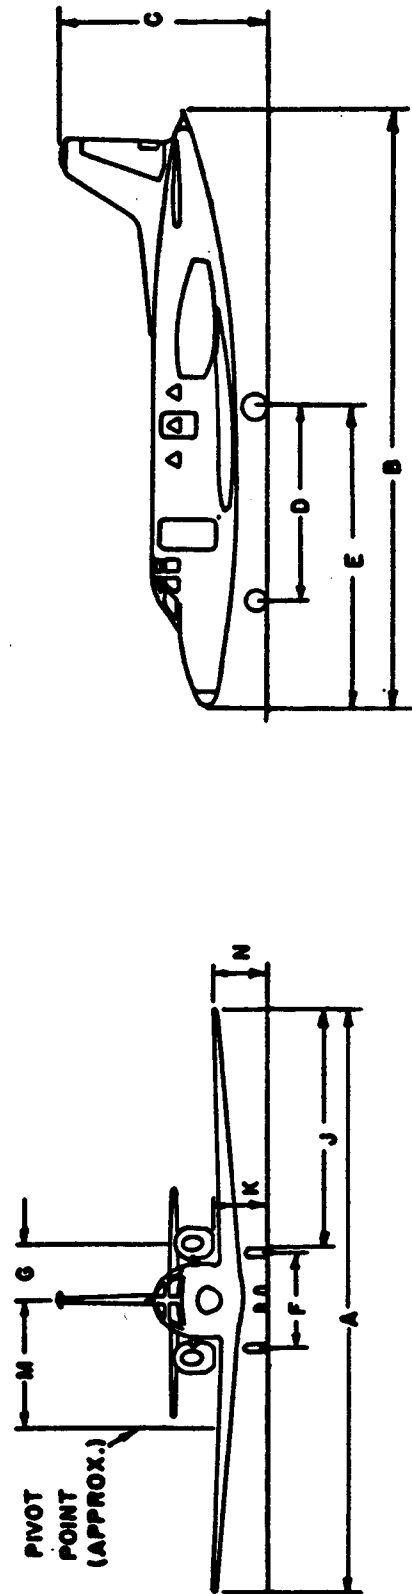


Figure A12-79. Rockwell International NA-265 Sabreliner

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	J	K	N	N	TURN RADIUS
SF 340	27,275 LB 12,372 KG	26,500 LB 12,020 KG	70'4" 21.44M	64'8" 19.71M	22'6" 6.86M	23'5" 7.14M	30'0" 9.14M	22'0" 6.71M	10'10" 3.30M	23'3" 7.09M	1'11" 0.58M	18'8" 5.69M	8'4" 2.54M	

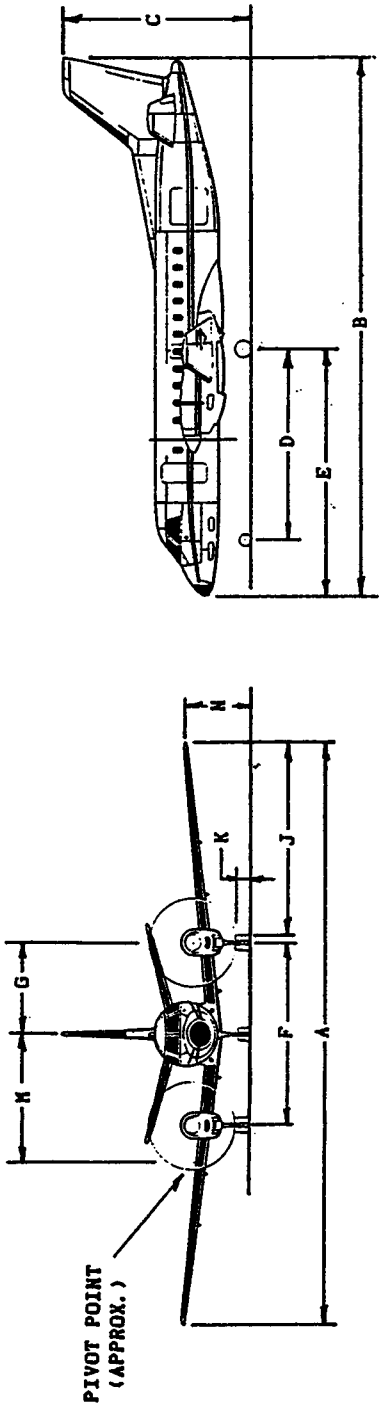


Figure A12-80. SAAB SF 340

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
SC.7	12,500 LB 5 688 KG	12,500 LB 5,688 KG	64'11" 19.79M	40'1" 12.22M	15'0" 4.57M	14'10" 4.52M	13'10" 4.22M	21	
SC.7 -3M	13,700 LB 6 214 KG	13,500 LB 6 123 KG	64'11" 19.79M	40'1" 12.22M	15'0" 4.57M	14'10" 4.52M	13'10" 4.22M	22	
SC.7 -3M	14,500 LB 6 577 KG	13,500 LB 6 123 KG	64'11" 19.79M	40'1" 12.22M	15'0" 4.57M	14'10" 4.52M	13'10" 4.22M	22	
330	22,600 LB 10 251 KG	22,300 LB 10 115 KG	74'8" 22.76M	58'0" 17.68M	16'3" 4.95M	20'2" 6.15M	13'11" 4.24M	30	53'10" 16.41M
330 -200	22,900 LB 10 387 KG	22,600 LB 10 251 KG	74'8" 22.76M	58'0" 17.68M	16'3" 4.95M	20'2" 6.15M	13'11" 4.24M	30	53'10" 16.41M
360	26,453 LB 11 999 KG	26,100 LB 11 839 KG	74'10" 22.81M	70'10" 21.59M	23'8" 7.21M	23'2" 7.06M	13'11" 4.24M	36	53'10" 16.41M

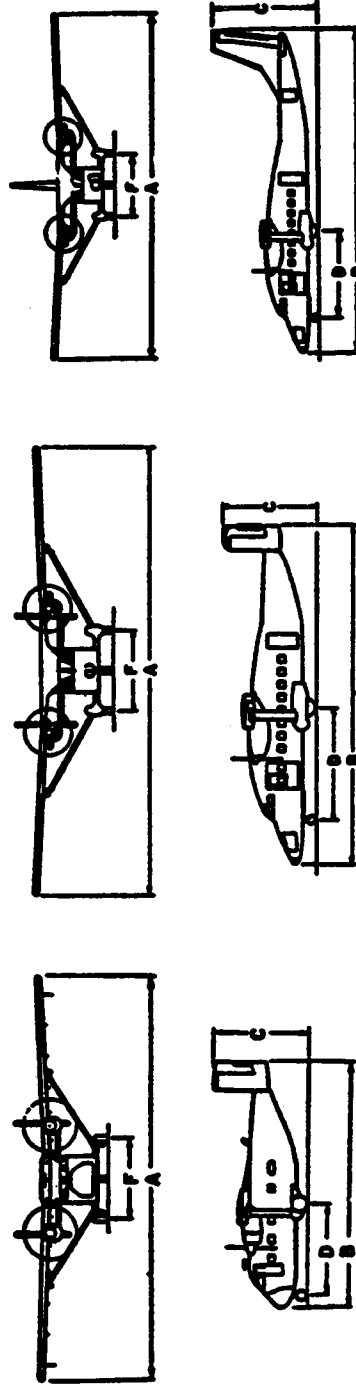


Figure A12-81. Short Brothers

SC.7-3M

330

360

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	E	F	G	H	J	K	L	M	N	TURN RADIUS
BELFAST	230,000 LB 104 326 KG	215,000 LB 97 522 KG	158'10" 48.41M	136'5" 41.58M	47'0" 14.33M	48'11" 14.66M		19'4" 5.89M								

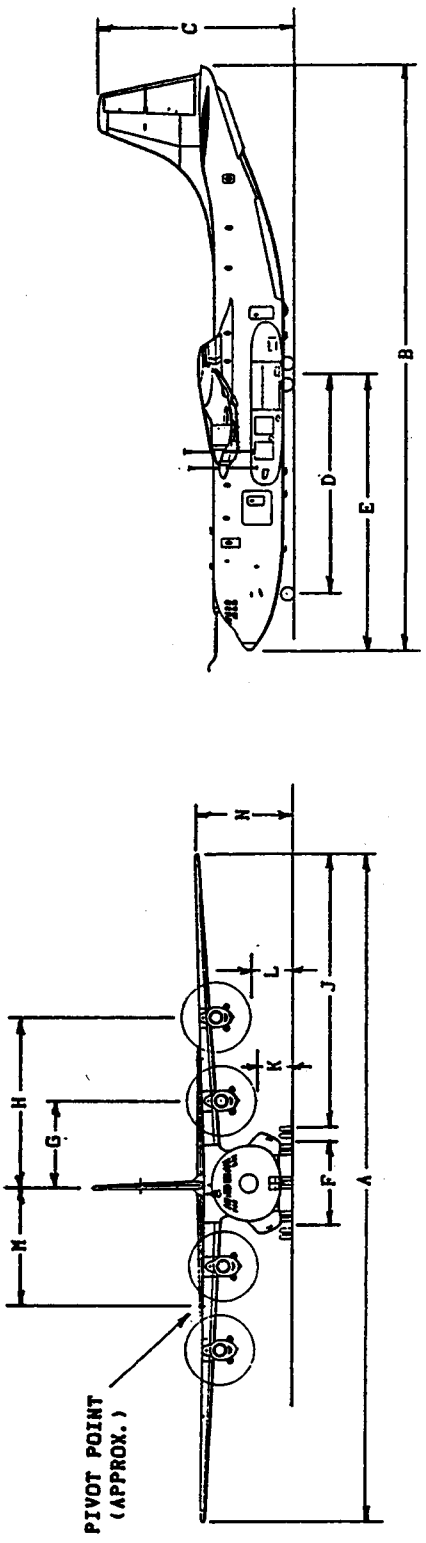


Figure A12-82. Shorts SC. 5/10 Belfast

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
IIB	10,000 LB 4 536 KG	9,300 LB 4 218 KG	45'11" 14.00M	40'1" 12.22M	14'4" 4.36M		15'0" 4.57M	8	
III	12,500 LB 5 670 KG	11,500 LB 5 216 KG	46'3" 14.10M	42'2" 12.85M	16'8" 5.08M		15'0" 4.57M	8	
IV	12,500 LB 5 670 KG	11,500 LB 5 216 KG	46'3" 14.10M	59'5" 18.11M	16'8" 5.08M	19'2" 5.84M	15'0" 4.57M	12	
IVC	14,500 LB 6 577 KG	14,000 LB 6 350 KG	57'0" 17.37M	59'5" 18.11M	16'8" 5.08M			12	

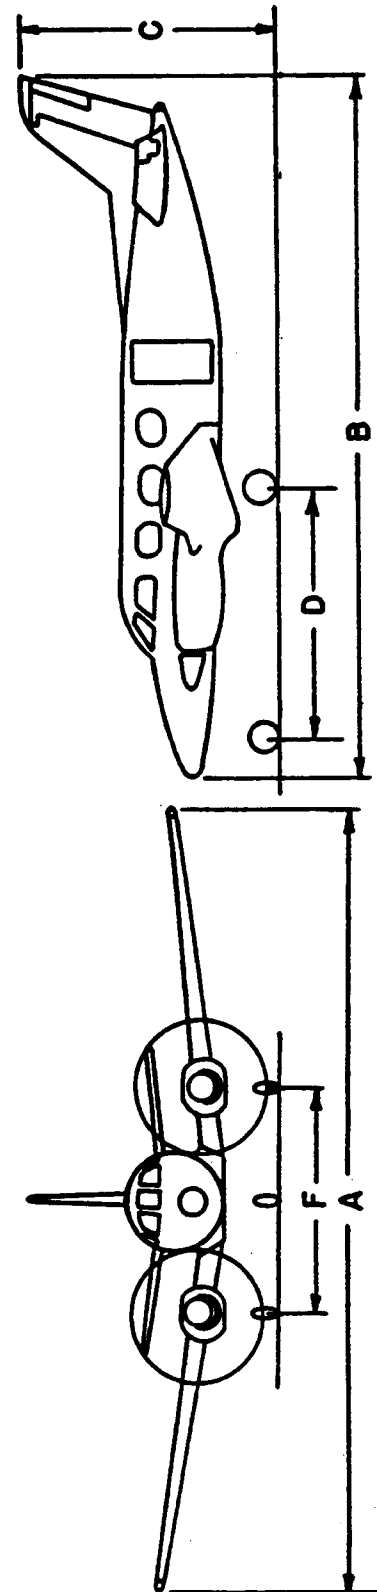


Figure A12-83. Swearingen Merlin

MODEL	MAXIMUM TAKEOFF WEIGHT	MAXIMUM LANDING WEIGHT	A	B	C	D	F	NUMBER SEATS	TURN RADIUS
II	12,500 LB 5 670 KG	12,500 LB 5 670 KG	46'3" 14.10M	59'5" 18.11M	16'8" 5.08M	19'2" 5.84M	15'0" 4.57M	22	
IIA	13,230 LB 6 001 KG	13,000 LB 5 897 KG	46'3" 14.10M	59'5" 18.11M	16'8" 5.08M				
III	14,500 LB 6 577 KG	14,000 LB 6 350 KG	57'0" 17.37M	59'5" 18.11M	16'8" 5.08M				
IIIH	16,000 LB 7 257 KG	15,500 LB 7 031 KG	57'0" 17.37M	59'5" 18.11M	16'8" 5.08M				
V	16,500 LB 7 484 KG	15,675 LB 7 110 KG							

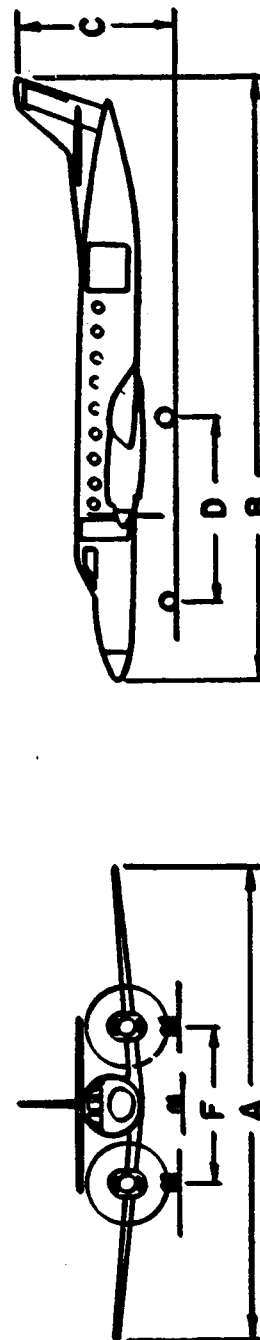


Figure A12-84. Swearingen Metro

Appendix 13. AIRPLANES ARRANGED BY AIRPLANE MANUFACTURER, AND AIRPORT REFERENCE CODE

Section 1. Alphabetical Listing (U.S. customary units)

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
Aeritalia G-222	B-III	109	93.8	74.4	32.0	61,700
Aerocom Skyliner	A-II	88	54.0	54.3	16.5	12,500
Aerospatiale C 160 Trans.	C-IV	124	131.3	106.3	38.7	108,596
Aerospatiale NORD-262	B-II	96	71.9	63.3	20.4	23,480
Aerospatiale SE 210 Carav.	C-III	127	112.5	105.0	28.6	114,640
Aerospatiale SN 601 Corv.	B-I	118	42.2	45.4	13.9	14,550
Ahrens AR 404	B-II	98	66.0	52.7	19.0	18,500
AIDC/CAF XC-2	A-III	86	81.7	65.9	25.3	27,500
Airbus A-300-600	C-IV	135	147.1	177.5	54.7	363,763
Airbus A-300-B4	C-IV	132	147.1	175.5	55.5	330,700
Airbus A-310-300	C-IV	125	144.1	153.2	52.3	330,693
Airbus A-320-100	C-III	138	111.3	123.3	39.1	145,505
Air-Metal AM-C 111	B-II	96	63.0	55.2	21.0	18,629
AJI Hustler 400	B-I	98	28.0	34.8	9.8	6,000
Antonov AN-10	C-IV	126	124.8	121.4	32.2	121,500
Antonov AN-12	C-IV	127	124.8	109.0	34.6	121,500
Antonov AN-124	C-VI	124	232.0	223.0	66.2	800,000
Antonov AN-14	A-II	52	72.1	37.2	15.2	7,607
Antonov AN-22	C-V	140	*	211.0	41.2	500,000
Antonov AN-24	B-III	119	95.8	77.2	27.3	46,305
Antonov AN-26	C-III	121	95.8	78.1	28.1	52,920
Antonov AN-28	A-II	88	72.1	42.6	16.1	12,350
Antonov AN-30	B-III	112	96.4	80.1	27.3	51,040
Antonov AN-72	A-III	89	*	84.7	27.0	66,000
AW.650 Argosy 220	C-III	123	115.0	86.8	27.0	93,000
AW.660 Argosy C.Mk.1	B-III	113	115.0	89.1	27.0	97,000
BAC 111-200	C-III	129	88.5	93.5	24.5	79,000
BAC 111-300	C-III	128	88.5	93.5	24.5	88,500
BAC 111-400	C-III	137	88.5	93.5	24.5	87,000
BAC 111-475	C-III	135	93.5	93.5	24.5	98,500
BAC 111-500	D-III	144	93.5	107.0	24.5	104,500
BAC/Aerospatiale Concord	D-III	162	83.8	205.4	37.4	408,000
BAe 146-100	B-III	113	86.4	85.8	28.3	74,600
BAe 146-200	B-III	117	86.4	93.7	28.3	88,250
BAe 146-300	C-III	121	86.4	104.2	28.1	104,000
BAe Jetstream 31	B-II	99	52.0	47.2	17.5	14,550
Beech Airliner 1900-C	B-II	120	*	54.5	14.9	16,600
Beech Airliner C99	B-I	107	45.9	44.6	14.4	11,300
Beech Baron 58	B-I	96	37.8	29.8	9.8	5,500
Beech Baron 58P	B-I	101	37.8	29.8	9.1	6,200
Beech Baron 58TC	B-I	101	37.8	29.8	9.1	6,200
Beech Baron B55	A-I	90	37.8	28.0	9.1	5,100
Beech Baron E55	A-I	88	37.8	29.0	9.1	5,300
Beech Bonanza A36	A-I	72	33.5	27.5	8.6	3,650

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
Beech Bonanza B36TC	A-I	75	37.8	27.5	8.6	3,850
Beech Bonanza F33A	A-I	70	33.5	26.7	8.2	3,400
Beech Bonanza V35B	A-I	70	33.5	26.4	6.6	3,400
Beech Duchess 76	A-I	76	38.0	29.0	9.5	3,900
Beech Duke B60	B-I	98	39.2	33.8	12.3	6,775
Beech E18S	A-II	87	49.7	35.2	9.5	9,300
Beech King Air B100	B-I	111	45.8	39.9	15.3	11,800
Beech King Air C90-1	B-II	100	50.2	35.5	14.2	9,650
Beech King Air F90	B-I	108	45.9	39.8	15.1	10,950
Beech Sierra 200-B24R	A-I	70	32.8	25.7	8.2	2,750
Beech Skipper 77	A-I	63	30.0	24.0	6.9	1,675
Beech Sundowner 180-C23	A-I	68	32.8	25.7	8.2	2,450
Beech Super King Air B200	B-II	103	54.5	43.8	15.0	12,500
BN-2A Mk.3 Trislander	A-II	65	53.0	45.7	14.2	10,000
Boeing 707-100	C-IV	139	130.8	145.1	41.7	257,340
Boeing 707-200	D-IV	145	130.8	145.1	41.7	257,340
Boeing 707-320	C-IV	139	142.4	152.9	42.2	312,000
Boeing 707-320B	C-IV	136	145.8	152.9	42.1	336,600
Boeing 707-420	C-IV	132	142.4	152.9	42.2	312,000
Boeing 720	C-IV	133	130.8	136.2	41.4	229,300
Boeing 720B	C-IV	137	130.8	136.8	41.2	234,300
Boeing 727-100	C-III	125	108.0	133.2	34.3	169,000
Boeing 727-200	C-III	138	108.0	153.2	34.9	209,500
Boeing 737-100	C-III	137	93.0	94.0	37.2	110,000
Boeing 737-200	C-III	137	93.0	100.2	37.3	115,500
Boeing 737-300	C-III	137	94.8	109.6	36.6	135,000
Boeing 737-400	C-III	139	94.8	119.6	36.6	150,000
Boeing 737-500	C-III	140	94.8	101.8	36.6	133,500
Boeing 747-100	D-V	152	195.7	231.8	64.3	600,000
Boeing 747-200	D-V	152	195.7	231.8	64.7	833,000
Boeing 747-300SR	D-V	141	195.7	231.8	64.3	600,000
Boeing 747-400	D-V	154	213.0	231.8	64.3	870,000
Boeing 747-SP	C-V	140	195.7	184.8	65.8	696,000
Boeing 757	C-IV	135	124.8	155.3	45.1	255,000
Boeing 767-200	C-IV	130	156.1	159.2	52.9	315,000
Boeing 767-300	C-IV	130	156.1	180.3	52.6	350,000
Boeing 777-200	D-V	145	199.9	209.1	61.5	632,500
Boeing 777-300	D-V	145	199.9	242.3	61.5	660,000
Boeing B-52	D-V	141	185.0	157.6	40.8	488,000
Boeing C97 Stratocruiser	B-IV	105	141.3	110.3	38.3	145,800
Boeing E-3	C-IV	137	145.9	153.0	42.0	325,000
Boeing E-4 (747-200)	D-V	152	195.7	231.8	64.7	833,000
Boeing YC-14	A-IV	89	129.0	131.7	48.3	216,000
Bristol Britannia 300/310	B-IV	117	142.3	124.2	37.5	185,000
Canadair CL-44	C-IV	123	142.3	136.8	38.4	210,000
Canadair CL-600	C-II	125	61.8	68.4	20.7	41,250
Casa C-207A Azor	B-III	102	91.2	68.4	25.4	36,400
Casa C-212-200 Aviocar	A-II	81	62.3	49.8	20.7	16,976
Cessna Citation I	B-I	108	47.1	43.5	14.3	11,850
Cessna Citation II	B-II	108	51.7	47.2	15.0	13,300
Cessna Citation III	B-II	114	53.5	55.5	16.8	22,000
Cessna-150	A-I	55	32.7	23.8	8.0	1,600

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
Cessna-177 Cardinal	A-I	64	35.5	27.2	8.5	2,500
Cessna-402 Businessliner	B-I	95	39.8	36.1	11.6	6,300
Cessna-404 Titan	B-I	92	46.3	39.5	13.2	8,400
Cessna-414 Chancellor	B-I	94	44.1	36.4	11.5	6,785
Cessna-421 Golden Eagle	B-I	96	41.7	36.1	11.6	7,450
Cessna-441 Conquest	B-II	100	49.3	39.0	13.1	9,925
Convair 240	B-III	107	91.8	74.7	26.9	41,790
Convair 340	B-III	104	105.3	81.5	28.2	49,100
Convair 440	B-III	106	105.3	81.5	28.2	49,100
Convair 580	B-III	107	105.3	81.5	29.2	54,600
Dassault 1150 Atlantic	C-IV	130 *	122.7	104.2	37.2	100,000
Dassault 941	A-II	59	76.7	77.9	30.7	58,400
Dassault FAL-10	B-I	104	42.9	45.5	15.1	18,740
Dassault FAL-20	B-II	107	53.5	56.3	17.4	28,660
Dassault FAL-200	B-II	114	53.5	56.3	17.4	30,650
Dassault FAL-50	B-II	113	61.9	60.8	22.9	37,480
Dassault FAL-900	B-II	100	63.4	66.3	24.8	45,500
Dassault Mercure	B-III	117	100.2	114.3	37.3	124,500
DHC-2 Beaver	A-I	50	48.0	30.3	9.0	5,100
DHC-4 Caribou	A-III	77	95.6	72.6	31.8	28,500
DHC-5D Buffalo	B-III	91	96.0	79.0	28.7	49,200
DHC-6-300 Twin Otter	A-II	75	65.0	51.7	19.5	12,500
DHC-7 Dash 7-100	A-III	83	93.0	80.7	26.2	43,000
DHC-8 Dash 8-300	A-III	90	90.0	84.3	24.6	41,100
DH.104 Dove 8	A-II	84	57.0	39.2	13.3	8,950
DH.106 Comet 4C	B-III	108	115.0	118.0	29.5	162,000
DH.114 Heron 2	A-II	85	71.5	48.5	15.6	13,500
Dornier DO 28D-2	A-II	74	51.0	37.4	12.8	8,855
Dornier LTA	A-II	74 *	58.4	54.4	18.2	15,100
Embraer-110 Bandeirante	B-II	92	50.3	49.5	16.5	13,007
Embraer-121 Xingu	B-I	92	47.4	40.2	15.9	12,500
Embraer-326 Xavante	B-I	102	35.6	34.9	12.2	11,500
Embraer-820 Navajo Chief	A-I	74	40.7	34.6	13.0	7,000
Fairchild C-119	C-III	122	109.3	86.5	27.5	77,000
Fairchild C-121	A-III	88	110.0	75.8	34.1	60,000
Fairchild FH-227 B,D	B-III	105	95.2	83.1	27.5	45,500
Fairchild F-27 A,J	B-III	109	95.2	77.2	27.5	42,000
FMA IA-50 Guarni II	B-II	101	64.1	48.8	19.1	15,700
Fokker F-27-500	B-III	102	95.2	82.3	29.3	45,000
Fokker F-28-1000	B-II	119	77.3	89.9	27.8	65,000
Fokker F-28-2000	B-II	119	77.3	97.2	27.8	65,000
Fokker F-28-3000	C-III	121	82.3	89.9	27.8	73,000
Fokker F-28-4000	C-III	121	82.3	97.2	27.8	73,000
Fokker F-28-6000	B-III	113	82.3	97.2	27.8	73,000
Foxjet ST-600-8	B-I	97	31.6	31.8	10.2	4,550
GAC-100	A-II	86	70.0	67.3	24.9	28,900
Gates Learjet 24	C-I	128	35.6	43.3	12.6	13,000
Gates Learjet 25	C-I	137	35.6	47.6	12.6	15,000
Gates Learjet 28/29	B-I	120	43.7	47.6	12.3	15,000
Gates Learjet 35A/36A	D-I	143	39.5	48.7	12.3	18,300
Gates Learjet 54-55-56	C-I	128	43.7	55.1	14.7	21,500

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
General Dynamics 880	D-IV	155	120.0	129.3	36.0	193,500
General Dynamics 990	D-IV	156	120.0	139.2	39.5	255,000
Grumman Gulfstream I	B-II	113	78.3	75.3	23.0	36,000
Grumman Gulfstream II	D-II	141	68.8	79.9	24.5	65,300
Grumman Gulfstream III	C-II	136	77.8	83.1	24.4	68,700
Grumman Gulfstream II-TT	D-II	142	71.7	79.9	24.5	65,300
Grumman Gulfstream IV	D-II	145	77.8	87.8	24.4	71,780
Hamilton Westwind II STD	B-I	96	46.0	45.0	9.2	12,495
HFB-320 Hansa	C-I	125	47.5	54.5	16.2	20,280
Hindustan HS.748-2	B-III	94	98.4	67.0	24.8	44,402
HP Herald	A-III	88	94.8	75.5	24.1	43,000
HS 125 Series 400A	C-I	124	47.0	47.4	16.5	23,300
HS 125 Series 600A	C-I	125	47.0	50.5	17.2	25,000
HS 125 Series 700A	C-I	125	47.0	50.7	17.6	24,200
HS.121 Trident 1E	C-III	137	95.0	114.8	27.0	135,500
HS.121 Trident 2E	C-III	138	98.0	114.8	27.0	144,000
HS.121 Trident 3B	D-III	143	98.0	131.2	28.3	150,000
HS.121 Trident Super 3B	D-III	146	98.0	131.2	28.3	158,000
HS.748 Series 2A	B-III	94	98.5	67.0	24.8	44,490
HS.780 Andover C.Mk.1	B-III	100	98.2	78.0	30.1	50,000
HS.801 Nimrod MR Mk.2	C-III	125 *	114.8	126.8	29.7	177,500
IAI 1121 Jet Comdr.	C-I	130	43.3	50.4	15.8	16,800
IAI Arava-201	A-II	81	68.6	42.7	17.1	15,000
IAI-1124 Westwind	C-I	129	44.8	52.3	15.8	23,500
Ilyushin Il-12	A-III	78	104.0	70.0	30.5	38,000
Ilyushin Il-18	B-IV	103	122.7	117.8	33.3	134,640
Ilyushin Il-62	D-IV	152	141.8	174.3	40.5	363,760
Ilyushin Il-76	B-IV	119	165.7	152.8	48.4	374,785
Ilyushin Il-86	D-IV	141	157.7	195.3	51.8	454,150
Kawasaki C-1	B-III	118 *	100.4	95.1	32.9	85,320
Lapan XT-400	A-I	75	47.9	33.5	14.1	5,555
Learfan 2100	A-I	86	39.3	40.6	12.2	7,400
LET L-410 UVP-E	A-II	81	65.5	47.5	19.1	14,109
Lockheed 100-20 Hercules	C-IV	137	132.6	106.1	39.3	155,000
Lockheed 100-30 Hercules	C-IV	129	132.6	112.7	39.2	155,000
Lockheed 1011-1	C-IV	138	155.3	177.7	55.8	430,000
Lockheed 1011-100	C-IV	140	155.3	177.7	55.8	466,000
Lockheed 1011-200	C-IV	140	155.3	177.7	55.8	466,000
Lockheed 1011-250	D-IV	144	155.3	177.7	55.8	496,000
Lockheed 1011-500	D-IV	144	155.3	164.2	55.8	496,000
Lockheed 1011-500 Ex. Wing	D-IV	148	164.3	164.2	55.8	496,000
Lockheed 1011-600	C-IV	140 *	142.8	141.0	53.0	264,000
Lockheed 1049 Constellat'n	B-IV	113	123.0	113.6	24.8	137,500
Lockheed 1329 JetStar	C-II	132	54.4	60.4	20.4	43,750
Lockheed 1649 Constellat'n	A-IV	89	150.0	116.2	23.4	160,000
Lockheed 188 Electra	C-III	123	99.0	104.6	33.7	116,000
Lockheed 400	C-IV	121 *	119.7	97.8	38.1	84,000
Lockheed 749 Constellat'n	B-IV	93	123.0	95.2	22.4	107,000
Lockheed C-141A Starlifter	C-IV	129	159.9	145.0	39.3	316,600
Lockheed C-141B Starlifter	C-IV	129	159.9	168.3	39.3	343,000
Lockheed C-5B Galaxy	C-VI	135	222.7	247.8	65.1	837,000

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
Lockheed P-3 Orion	C-III	134	99.7	116.8	33.8	135,000
Lockheed SR-71 Blackbird	E-II	180	55.6	107.4	18.5	170,000
MAI-QSTOL	A-III	85	100.3	98.4	32.8	85,300
Marshall (Shorts) Belfast	C-IV	126	158.8	136.4	47.0	230,000
Martin-404	B-III	98	93.3	74.6	28.7	44,900
MDC-C-133	C-V	128	179.7	157.5	48.2	300,000
MDC-DC-10-10	C-IV	136	155.3	182.3	58.4	443,000
MDC-DC-10-30	D-IV	151	165.3	181.6	58.6	590,000
MDC-DC-10-40	D-IV	145	165.4	182.3	58.6	555,000
MDC-DC-3	A-III	72	95.0	64.5	23.5	25,200
MDC-DC-4	B-III	95	117.5	93.9	27.9	73,000
MDC-DC-6A/B	B-III	108	117.5	105.6	29.3	104,000
MDC-DC-7	B-IV	110	127.5	112.3	31.7	143,000
MDC-DC-8-10	C-IV	131	142.4	150.8	43.3	276,000
MDC-DC-8-20/30/40	C-IV	133	142.4	150.8	43.3	315,000
MDC-DC-8-50	C-IV	137	142.4	150.8	43.3	325,000
MDC-DC-8-61	D-IV	142	142.4	187.4	43.0	325,000
MDC-DC-8-62	C-IV	124	148.4	157.5	43.4	350,000
MDC-DC-8-63	D-IV	147	148.4	187.4	43.0	355,000
MDC-DC-9-10/15	C-III	134	89.4	104.4	27.6	90,700
MDC-DC-9-20	C-III	124	93.3	104.4	27.4	98,000
MDC-DC-9-30	C-III	127	93.3	119.3	27.8	110,000
MDC-DC-9-40	C-III	129	93.3	125.6	28.4	114,000
MDC-DC-9-50	C-III	132	93.3	133.6	28.8	121,000
MDC-DC-9-80	C-III	132	107.8	147.8	30.3	140,000
MDC-DC-9-82	C-III	135	107.8	147.8	30.3	149,500
MDC-MD-11	D-IV	155	169.8	201.3	57.8	602,500
Mitsubishi Diamond MU-300	B-I	100	43.5	48.4	13.8	15,730
Mitsubishi Marquise MU-2N	A-I	88	39.2	39.5	13.7	11,575
Mitsubishi MU-2G	B-I	119	39.2	39.5	13.8	10,800
Mitsubishi Solitaire MU-2P	A-I	87	39.2	33.3	12.9	10,470
Nihon YS-11	B-III	98	105.0	86.3	29.5	54,010
Nomad N 22B	A-II	69	54.0	41.2	18.1	8,950
Nomad N 24A	A-II	73	54.2	47.1	18.2	9,400
Partenavia P.68B Victor	A-I	73	39.3	35.6	11.9	6,283
Piaggio PD-808	B-I	117	43.3	42.2	15.8	18,300
Piaggio P-166 Portofino	A-I	82	47.2	39.0	16.4	9,480
Pilatus PC-6 Porter	A-II	57	49.7	37.4	10.5	4,850
Piper 31-310 Navajo	B-I	100	40.7	32.7	13.0	6,200
Piper 400LS Cheyenne	B-I	110	47.7	43.4	17.0	12,050
Piper 60-602P Aerostar	B-I	94	36.7	34.8	12.1	6,000
PZL-AN-2	A-II	54	59.8	41.9	13.1	12,125
PZL-AN-28	A-II	85	72.4	42.9	16.1	14,330
PZL-M-15 Belphegor	A-II	62	73.6	41.9	17.6	12,465
Rockwell 690A Turbo Comdr.	B-I	97	46.5	44.3	14.9	10,300
Rockwell 840	B-II	98	52.1	42.9	14.9	10,325
Rockwell 980	C-II	121	52.1	42.9	14.9	10,325
Rockwell B-1	D-IV	165 *	137.0	147.0	34.0	477,000
Rockwell Sabre 40	B-I	120	44.5	43.8	16.0	18,650
Rockwell Sabre 60	B-I	120	44.5	48.3	16.0	20,000
Rockwell Sabre 65	B-II	105	50.5	46.1	16.0	24,000

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
Rockwell Sabre 75A	C-I	137	44.5	47.2	17.2	23,300
Rockwell Sabre 80	C-II	128	50.4	47.2	17.3	24,500
Shorts 330	B-II	96	74.7	58.0	16.2	22,900
Shorts 360	B-II	104	74.8	70.8	23.7	26,453
Swearingen Merlin 3B	B-I	105	46.2	42.2	16.7	12,500
Swearingen Metro	B-I	112	46.2	59.4	16.7	12,500
Tupolev TU-114	C-IV	132 *	167.6	177.5	50.0	361,620
Tupolev TU-124	C-III	132 *	83.8	100.3	50.0	80,482
Tupolev TU-134	D-III	144	95.2	121.5	30.0	103,600
Tupolev TU-144	E-III	178	94.8	212.6	42.2	396,000
Tupolev TU-154	D-IV	145	123.3	157.2	37.4	216,050
VFW-Fokker 614	B-II	111	70.5	67.5	25.6	44,000
Vickers Vanguard 950	B-IV	119	118.0	122.9	34.9	146,500
Vickers VC-10-1100	C-IV	128	146.2	158.7	39.5	312,000
Vickers VC-10-1150	C-IV	138	146.2	171.7	39.5	335,100
Vickers VC-2-810/840	C-III	122	94.0	85.7	26.8	72,500
Volpar Turbo 18	B-I	100	46.0	37.4	9.6	10,280
Yakovlev YAK-40	C-III	128 *	82.2	65.9	21.3	35,275
Yakovlev YAK-42	C-III	128 *	112.2	119.3	32.2	117,950
Yunshu-11	A-II	80 *	55.7	39.4	15.1	7,150

* Approach speeds estimated.

Section 2. Alphabetical Listing (SI Units)

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
Aeritalia G-222	B-III	109	28.6	22.7	9.8	27,987
Aerocom Skyliner	A-II	88	16.5	16.6	5.0	5,670
Aerospatiale C 160 Trans.	C-IV	124	40.0	32.4	11.8	49,258
Aerospatiale NORD-262	B-II	96	21.9	19.3	6.2	10,650
Aerospatiale SE 210 Carav.	C-III	127	34.3	32.0	8.7	52,000
Aerospatiale SN 601 Corv.	B-I	118	12.9	13.8	4.2	6,600
Ahrens AR 404	B-II	98	20.1	16.1	5.8	8,391
AIDC/CAF XC-2	A-III	86	24.9	20.1	7.7	12,474
Airbus A-300-600	C-IV	135	44.8	54.1	16.7	165,000
Airbus A-300-B4	C-IV	132	44.8	53.5	16.9	150,003
Airbus A-310-300	C-IV	125	43.9	46.7	15.9	150,000
Airbus A-320-100	C-III	138	33.9	37.6	11.9	66,000
Air-Metal AM-C 111	B-II	96	19.2	16.8	6.4	8,450
AJI Hustler 400	B-I	98	8.5	10.6	3.0	2,722
Antonov AN-10	C-IV	126	38.0	37.0	9.8	55,111
Antonov AN-12	C-IV	127	38.0	33.2	10.5	55,111
Antonov AN-124	C-VI	124	70.7	68.0	20.2	362,874
Antonov AN-14	A-II	52	22.0	11.3	4.6	3,450
Antonov AN-22	C-V	140	* 64.3	50.9	12.6	226,796
Antonov AN-24	B-III	119	29.2	23.5	8.3	21,004
Antonov AN-26	C-III	121	29.2	23.8	8.6	24,004
Antonov AN-28	A-II	88	22.0	13.0	4.9	5,602
Antonov AN-30	B-III	112	29.4	24.4	8.3	23,151
Antonov AN-72	A-III	89	* 25.8	25.8	8.2	29,937
AW.650 Argosy 220	C-III	123	35.1	26.5	8.2	42,184
AW.660 Argosy C.Mk.1	B-III	113	35.1	27.2	8.2	43,998
BAC 111-200	C-III	129	27.0	28.5	7.5	35,834
BAC 111-300	C-III	128	27.0	28.5	7.5	40,143
BAC 111-400	C-III	137	27.0	28.5	7.5	39,463
BAC 111-475	C-III	135	28.5	28.5	7.5	44,679
BAC 111-500	D-III	144	28.5	32.6	7.5	47,400
BAC/Aerospatiale Concorde	D-III	162	25.5	62.6	11.4	185,066
BAe 146-100	B-III	113	26.3	26.2	8.6	33,838
BAe 146-200	B-III	117	26.3	28.6	8.6	40,030
BAe 146-300	C-III	121	26.3	31.8	8.6	47,174
BAe Jetstream 31	B-II	99	15.8	14.4	5.3	6,600
Beech Airliner 1900-C	B-II	120	* 16.6	17.6	4.5	7,530
Beech Airliner C99	B-I	107	14.0	13.6	4.4	5,126
Beech Baron 58	B-I	96	11.5	9.1	3.0	2,495
Beech Baron 58P	B-I	101	11.5	9.1	2.8	2,812
Beech Baron 58TC	B-I	101	11.5	9.1	2.8	2,812
Beech Baron B55	A-I	90	11.5	8.5	2.8	2,313
Beech Baron E55	A-I	88	11.5	8.8	2.8	2,404
Beech Bonanza A36	A-I	72	10.2	8.4	2.6	1,656
Beech Bonanza B36TC	A-I	75	11.5	8.4	2.6	1,746
Beech Bonanza F33A	A-I	70	10.2	8.1	2.5	1,542
Beech Bonanza V35B	A-I	70	10.2	8.0	2.0	1,542
Beech Duchess 76	A-I	76	11.6	8.8	2.9	1,769
Beech Duke B60	B-I	98	11.9	10.3	3.7	3,073

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
Beech E18S	A-II	87	15.1	10.7	2.9	4,218
Beech King Air B100	B-I	111	14.0	12.2	4.7	5,352
Beech King Air C90-1	B-II	100	15.3	10.8	4.3	4,377
Beech King Air F90	B-I	108	14.0	12.1	4.6	4,967
Beech Sierra 200-B24R	A-I	70	10.0	7.8	2.5	1,247
Beech Skipper 77	A-I	63	9.1	7.3	2.1	760
Beech Sundowner 180-C23	A-I	68	10.0	7.8	2.5	1,111
Beech Super King Air B200	B-II	103	16.6	13.4	4.6	5,670
BN-2A Mk.3 Trislander	A-II	65	16.2	13.9	4.3	4,536
Boeing 707-100	C-IV	139	39.9	44.2	12.7	116,727
Boeing 707-200	D-IV	145	39.9	44.2	12.7	116,727
Boeing 707-320	C-IV	139	43.4	46.6	12.9	141,521
Boeing 707-320B	C-IV	136	44.4	46.6	12.8	152,679
Boeing 707-420	C-IV	132	43.4	46.6	12.9	141,521
Boeing 720	C-IV	133	39.9	41.5	12.6	104,009
Boeing 720B	C-IV	137	39.9	41.7	12.6	106,277
Boeing 727-100	C-III	125	32.9	40.6	10.5	76,657
Boeing 727-200	C-III	138	32.9	46.7	10.6	95,028
Boeing 737-100	C-III	137	28.3	28.7	11.3	49,895
Boeing 737-200	C-III	137	28.3	30.5	11.4	52,390
Boeing 737-300	C-III	137	28.9	33.4	11.2	61,235
Boeing 737-400	C-III	139	28.9	36.5	11.2	68,039
Boeing 737-500	C-III	140	28.9	31.0	11.2	60,555
Boeing 747-100	D-V	152	59.6	70.7	19.6	272,155
Boeing 747-200	D-V	152	59.6	70.7	19.7	377,842
Boeing 747-300SR	D-V	141	59.6	70.7	19.6	272,155
Boeing 747-400	D-V	154	64.9	70.7	19.6	394,625
Boeing 747-SP	C-V	140	59.6	56.3	20.1	315,700
Boeing 757	C-IV	135	38.0	47.3	13.7	115,666
Boeing 767-200	C-IV	130	47.6	48.5	16.1	142,882
Boeing 767-300	C-IV	130	47.6	55.0	16.0	158,757
Boeing 777-200	D-V	145	60.9	63.7	18.8	286,900
Boeing 777-300	D-V	145	60.9	73.9	18.8	299,370
Boeing B-52	D-V	141	56.4	48.0	12.4	221,353
Boeing C97 Stratocruiser	B-IV	105	43.1	33.6	11.7	66,134
Boeing E-3	C-IV	137	44.5	46.6	12.8	147,418
Boeing E-4 (747-200)	D-V	152	59.6	70.7	19.7	377,842
Boeing YC-14	A-IV	89	39.3	40.1	14.7	97,976
Bristol Britannia 300/310	B-IV	117	43.4	37.9	11.4	83,915
Canadair CL-44	C-IV	123	43.4	41.7	11.7	95,254
Canadair CL-600	C-II	125	18.8	20.8	6.3	18,711
Casa C-207A Azor	B-III	102	27.8	20.8	7.7	16,511
Casa C-212-200 Aviocar	A-II	81	19.0	15.2	6.3	7,700
Cessna Citation I	B-I	108	14.4	13.3	4.4	5,375
Cessna Citation II	B-II	108	15.8	14.4	4.6	6,033
Cessna Citation III	B-II	114	16.3	16.9	5.1	9,979
Cessna-150	A-I	55	10.0	7.3	2.4	726
Cessna-177 Cardinal	A-I	64	10.8	8.3	2.6	1,134
Cessna-402 Businessliner	B-I	95	12.1	11.0	3.5	2,858
Cessna-404 Titan	B-I	92	14.1	12.0	4.0	3,810
Cessna-414 Chancellor	B-I	94	13.4	11.1	3.5	3,078
Cessna-421 Golden Eagle	B-I	96	12.7	11.0	3.5	3,379

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
Cessna-441 Conquest	B-II	100	15.0	11.9	4.0	4,502
Convair 240	B-III	107	28.0	22.8	8.2	18,956
Convair 340	B-III	104	32.1	24.8	8.6	22,271
Convair 440	B-III	106	32.1	24.8	8.6	22,271
Convair 580	B-III	107	32.1	24.8	8.9	24,766
Dassault 1150 Atlantic	C-IV	130 *	37.4	31.8	11.3	45,359
Dassault 941	A-II	59	23.4	23.7	9.4	26,490
Dassault FAL-10	B-I	104	13.1	13.9	4.6	8,500
Dassault FAL-20	B-II	107	16.3	17.2	5.3	13,000
Dassault FAL-200	B-II	114	16.3	17.2	5.3	13,903
Dassault FAL-50	B-II	113	18.9	18.5	7.0	17,001
Dassault FAL-900	B-II	100	19.3	20.2	7.6	20,638
Dassault Mercure	B-III	117	30.5	34.8	11.4	56,472
DHC-2 Beaver	A-I	50	14.6	9.2	2.7	2,313
DHC-4 Caribou	A-III	77	29.1	22.1	9.7	12,927
DHC-5D Buffalo	B-III	91	29.3	24.1	8.7	22,317
DHC-6-300 Twin Otter	A-II	75	19.8	15.8	5.9	5,670
DHC-7 Dash 7-100	A-III	83	28.3	24.6	8.0	19,504
DHC-8 Dash 8-300	A-III	90	27.4	25.7	7.5	18,643
DH.104 Dove 8	A-II	84	17.4	11.9	4.1	4,060
DH.106 Comet 4C	B-III	108	35.1	36.0	9.0	73,482
DH.114 Heron 2	A-II	85	21.8	14.8	4.8	6,123
Dornier DO 28D-2	A-II	74	15.5	11.4	3.9	4,017
Dornier LTA	A-II	74 *	17.8	16.6	5.5	6,849
Embraer-110 Bandeirante	B-II	92	15.3	15.1	5.0	5,900
Embraer-121 Xingu	B-I	92	14.4	12.3	4.8	5,670
Embraer-326 Xavante	B-I	102	10.9	10.6	3.7	5,216
Embraer-820 Navajo Chief	A-I	74	12.4	10.5	4.0	3,175
Fairchild C-119	C-III	122	33.3	26.4	8.4	34,927
Fairchild C-121	A-III	88	33.5	23.1	10.4	27,216
Fairchild FH-227 B,D	B-III	105	29.0	25.3	8.4	20,638
Fairchild F-27 A,J	B-III	109	29.0	23.5	8.4	19,051
FMA IA-50 Guarni II	B-II	101	19.5	14.9	5.8	7,121
Fokker F-27-500	B-III	102	29.0	25.1	8.9	20,412
Fokker F-28-1000	B-II	119	23.6	27.4	8.5	29,484
Fokker F-28-2000	B-II	119	23.6	29.6	8.5	29,484
Fokker F-28-3000	C-III	121	25.1	27.4	8.5	33,112
Fokker F-28-4000	C-III	121	25.1	29.6	8.5	33,112
Fokker F-28-6000	B-III	113	25.1	29.6	8.5	33,112
Foxjet ST-600-8	B-I	97	9.6	9.7	3.1	2,064
GAC-100	A-II	86	21.3	20.5	7.6	13,109
Gates Learjet 24	C-I	128	10.9	13.2	3.8	5,897
Gates Learjet 25	C-I	137	10.9	14.5	3.8	6,804
Gates Learjet 28/29	B-I	120	13.3	14.5	3.7	6,804
Gates Learjet 35A/36A	D-I	143	12.0	14.8	3.7	8,301
Gates Learjet 54-55-56	C-I	128	13.3	16.8	4.5	9,752
General Dynamics 880	D-IV	155	36.6	39.4	11.0	87,770
General Dynamics 990	D-IV	156	36.6	42.4	12.0	115,666
Grumman Gulfstream I	B-II	113	23.9	23.0	7.0	16,329
Grumman Gulfstream II	D-II	141	21.0	24.4	7.5	29,620
Grumman Gulfstream III	C-II	136	23.7	25.3	7.4	31,162

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
Grumman Gulfstream II-TT	D-II	142	21.9	24.4	7.5	29,620
Grumman Gulfstream IV	D-II	145	23.7	26.8	7.4	32,559
Hamilton Westwind II STD	B-I	96	14.0	13.7	2.8	5,668
HFB-320 Hansa	C-I	125	14.5	16.6	4.9	9,199
Hindustan HS.748-2	B-III	94	30.0	20.4	7.6	20,140
HP Herald	A-III	88	28.9	23.0	7.3	19,504
HS 125 Series 400A	C-I	124	14.3	14.4	5.0	10,569
HS 125 Series 600A	C-I	125	14.3	15.4	5.2	11,340
HS 125 Series 700A	C-I	125	14.3	15.5	5.4	10,977
HS.121 Trident 1E	C-III	137	29.0	35.0	8.2	61,462
HS.121 Trident 2E	C-III	138	29.9	35.0	8.2	65,317
HS.121 Trident 3B	D-III	143	29.9	40.0	8.6	68,039
HS.121 Trident Super 3B	D-III	146	29.9	40.0	8.6	71,668
HS.748 Series 2A	B-III	94	30.0	20.4	7.6	20,180
HS.780 Andover C.Mk.1	B-III	100	29.9	23.8	9.2	22,680
HS.801 Nimrod MR Mk.2	C-III	125 *	35.0	38.6	9.1	80,513
IAI 1121 Jet Comdr.	C-I	130	13.2	15.4	4.8	7,620
IAI Arava-201	A-II	81	20.9	13.0	5.2	6,804
IAI-1124 Westwind	C-I	129	13.7	15.9	4.8	10,659
Ilyushin Il-12	A-III	78	31.7	21.3	9.3	17,237
Ilyushin Il-18	B-IV	103	37.4	35.9	10.1	61,072
Ilyushin Il-62	D-IV	152	43.2	53.1	12.3	164,999
Ilyushin Il-76	B-IV	119	50.5	46.6	14.8	170,000
Ilyushin Il-86	D-IV	141	48.1	59.5	15.8	205,999
Kawasaki C-1	B-III	118 *	30.6	29.0	10.0	38,701
Lapan XT-400	A-I	75	14.6	10.2	4.3	2,520
Learfan 2100	A-I	86	12.0	12.4	3.7	3,357
LET L-410 UVP-E	A-II	81	20.0	14.5	5.8	6,400
Lockheed 100-20 Hercules	C-IV	137	40.4	32.3	12.0	70,307
Lockheed 100-30 Hercules	C-IV	129	40.4	34.4	11.9	70,307
Lockheed 1011-1	C-IV	138	47.3	54.2	17.0	195,045
Lockheed 1011-100	C-IV	140	47.3	54.2	17.0	211,374
Lockheed 1011-200	C-IV	140	47.3	54.2	17.0	211,374
Lockheed 1011-250	D-IV	144	47.3	54.2	17.0	224,982
Lockheed 1011-500	D-IV	144	47.3	50.0	17.0	224,982
Lockheed 1011-500 Ex. Wing	D-IV	148	50.1	50.0	17.0	224,982
Lockheed 1011-600	C-IV	140 *	43.5	43.0	16.2	119,748
Lockheed 1049 Constellat'n	B-IV	113	37.5	34.6	7.6	62,369
Lockheed 1329 JetStar	C-II	132	16.6	18.4	6.2	19,845
Lockheed 1649 Constellat'n	A-IV	89	45.7	35.4	7.1	72,575
Lockheed 188 Electra	C-III	123	30.2	31.9	10.3	52,617
Lockheed 400	C-IV	121 *	36.5	29.8	11.6	38,102
Lockheed 749 Constellat'n	B-IV	93	37.5	29.0	6.8	48,534
Lockheed C-141A Starlifter	C-IV	129	48.7	44.2	12.0	143,607
Lockheed C-141B Starlifter	C-IV	129	48.7	51.3	12.0	155,582
Lockheed C-5B Galaxy	C-VI	135	67.9	75.5	19.8	379,657
Lockheed P-3 Orion	C-III	134	30.4	35.6	10.3	61,235
Lockheed SR-71 Blackbird	E-II	180	16.9	32.7	5.6	77,111
MAI-QSTOL	A-III	85	30.6	30.0	10.0	38,691
Marshall (Shorts) Belfast	C-IV	126	48.4	41.6	14.3	104,326
Martin-404	B-III	98	28.4	22.7	8.7	20,366

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
MDC-C-133	C-V	128	54.8	48.0	14.7	136,078
MDC-DC-10-10	C-IV	136	47.3	55.6	17.8	200,941
MDC-DC-10-30	D-IV	151	50.4	55.4	17.9	267,619
MDC-DC-10-40	D-IV	145	50.4	55.6	17.9	251,744
MDC-DC-3	A-III	72	29.0	19.7	7.2	11,431
MDC-DC-4	B-III	95	35.8	28.6	8.5	33,112
MDC-DC-6A/B	B-III	108	35.8	32.2	8.9	47,174
MDC-DC-7	B-IV	110	38.9	34.2	9.7	64,864
MDC-DC-8-10	C-IV	131	43.4	46.0	13.2	125,191
MDC-DC-8-20/30/40	C-IV	133	43.4	46.0	13.2	142,882
MDC-DC-8-50	C-IV	137	43.4	46.0	13.2	147,418
MDC-DC-8-61	D-IV	142	43.4	57.1	13.1	147,418
MDC-DC-8-62	C-IV	124	45.2	48.0	13.2	158,757
MDC-DC-8-63	D-IV	147	45.2	57.1	13.1	161,025
MDC-DC-9-10/15	C-III	134	27.2	31.8	8.4	41,141
MDC-DC-9-20	C-III	124	28.4	31.8	8.4	44,452
MDC-DC-9-30	C-III	127	28.4	36.4	8.5	49,895
MDC-DC-9-40	C-III	129	28.4	38.3	8.7	51,710
MDC-DC-9-50	C-III	132	28.4	40.7	8.8	54,885
MDC-DC-9-80	C-III	132	32.9	45.0	9.2	63,503
MDC-DC-9-82	C-III	135	32.9	45.0	9.2	67,812
MDC-MD-11	D-IV	155	51.8	61.4	17.6	273,289
Mitsubishi Diamond MU-300	B-I	100	13.3	14.8	4.2	7,135
Mitsubishi Marquise MU-2N	A-I	88	11.9	12.0	4.2	5,250
Mitsubishi MU-2G	B-I	119	11.9	12.0	4.2	4,899
Mitsubishi Solitaire MU-2P	A-I	87	11.9	10.1	3.9	4,749
Nihon YS-11	B-III	98	32.0	26.3	9.0	24,499
Nomad N 22B	A-II	69	16.5	12.6	5.5	4,060
Nomad N 24A	A-II	73	16.5	14.4	5.5	4,264
Partenavia P.68B Victor	A-I	73	12.0	10.9	3.6	2,850
Piaggio PD-808	B-I	117	13.2	12.9	4.8	8,301
Piaggio P-166 Portofino	A-I	82	14.4	11.9	5.0	4,300
Pilatus PC-6 Porter	A-II	57	15.1	11.4	3.2	2,200
Piper 31-310 Navajo	B-I	100	12.4	10.0	4.0	2,812
Piper 400LS Cheyenne	B-I	110	14.5	13.2	5.2	5,466
Piper 60-602P Aerostar	B-I	94	11.2	10.6	3.7	2,722
PZL-AN-2	A-II	54	18.2	12.8	4.0	5,500
PZL-AN-28	A-II	85	22.1	13.1	4.9	6,500
PZL-M-15 Belphegor	A-II	62	22.4	12.8	5.4	5,654
Rockwell 690A Turbo Comdr.	B-I	97	14.2	13.5	4.5	4,672
Rockwell 840	B-II	98	15.9	13.1	4.5	4,683
Rockwell 980	C-II	121	15.9	13.1	4.5	4,683
Rockwell B-1	D-IV	165 *	41.8	44.8	10.4	216,364
Rockwell Sabre 40	B-I	120	13.6	13.4	4.9	8,459
Rockwell Sabre 60	B-I	120	13.6	14.7	4.9	9,072
Rockwell Sabre 65	B-II	105	15.4	14.1	4.9	10,886
Rockwell Sabre 75A	C-I	137	13.6	14.4	5.2	10,569
Rockwell Sabre 80	C-II	128	15.4	14.4	5.3	11,113
Shorts 330	B-II	96	22.8	17.7	4.9	10,387
Shorts 360	B-II	104	22.8	21.6	7.2	11,999
Swearingen Merlin 3B	B-I	105	14.1	12.9	5.1	5,670

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
Swearingen Metro	B-I	112	14.1	18.1	5.1	5,670
Tupolev TU-114	C-IV	132 *	51.1	54.1	15.2	164,028
Tupolev TU-124	C-III	132 *	25.5	30.6	15.2	36,506
Tupolev TU-134	D-III	144	29.0	37.0	9.1	46,992
Tupolev TU-144	E-III	178	28.9	64.8	12.9	179,623
Tupolev TU-154	D-IV	145	37.6	47.9	11.4	97,999
VFW-Fokker 614	B-II	111	21.5	20.6	7.8	19,958
Vickers Vanguard 950	B-IV	119	36.0	37.5	10.6	66,451
Vickers VC-10-1100	C-IV	128	44.6	48.4	12.0	141,521
Vickers VC-10-1150	C-IV	138	44.6	52.3	12.0	151,999
Vickers VC-2-810/840	C-III	122	28.7	26.1	8.2	32,885
Volpar Turbo 18	B-I	100	14.0	11.4	2.9	4,663
Yakovlev YAK-40	C-III	128 *	25.1	20.1	6.5	16,000
Yakovlev YAK-42	C-III	128 *	34.2	36.4	9.8	53,501
Yunshu-11	A-II	80 *	17.0	12.0	4.6	3,243

* Approach speeds estimated.

Section 3. Listing Small Airplanes by Airport Reference Code (U.S. customary units)

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
Beech Baron B55	A-I	90	37.8	28.0	9.1	5,100
Beech Baron E55	A-I	88	37.8	29.0	9.1	5,300
Beech Bonanza A36	A-I	72	33.5	27.5	8.6	3,650
Beech Bonanza B36TC	A-I	75	37.8	27.5	8.6	3,850
Beech Bonanza F33A	A-I	70	33.5	26.7	8.2	3,400
Beech Bonanza V35B	A-I	70	33.5	26.4	6.6	3,400
Beech Duchess 76	A-I	76	38.0	29.0	9.5	3,900
Beech Sierra 200-B24R	A-I	70	32.8	25.7	8.2	2,750
Beech Skipper 77	A-I	63	30.0	24.0	6.9	1,675
Beech Sundowner 180-G23	A-I	68	32.8	25.7	8.2	2,450
Cessna-150	A-I	55	32.7	23.8	8.0	1,600
Cessna-177 Cardinal	A-I	64	35.5	27.2	8.5	2,500
DHC-2 Beaver	A-I	50	48.0	30.3	9.0	5,100
Embraer-820 Navajo Chief	A-I	74	40.7	34.6	13.0	7,000
Lapan XT-400	A-I	75	47.9	33.5	14.1	5,555
Learfan 2100	A-I	86	39.3	40.6	12.2	7,400
Mitsubishi Marquise MU-2N	A-I	88	39.2	39.5	13.7	11,575
Mitsubishi Solitaire MU-2P	A-I	87	39.2	33.3	12.9	10,470
Partenavia P.68B Victor	A-I	73	39.3	35.6	11.9	6,283
Piaggio P-166 Portofino	A-I	82	47.2	39.0	16.4	9,480
AJI Hustler 400	B-I	98	28.0	34.8	9.8	6,000
Beech Airliner C99	B-I	107	45.9	44.6	14.4	11,300
Beech Baron 58	B-I	96	37.8	29.8	9.8	5,500
Beech Baron 58P	B-I	101	37.8	29.8	9.1	6,200
Beech Baron 58TC	B-I	101	37.8	29.8	9.1	6,200
Beech Duke B60	B-I	98	39.2	33.8	12.3	6,775
Beech King Air B100	B-I	111	45.8	39.9	15.3	11,800
Beech King Air F90	B-I	108	45.9	39.8	15.1	10,950
Cessna Citation I	B-I	108	47.1	43.5	14.3	11,850
Cessna-402 Businessliner	B-I	95	39.8	36.1	11.6	6,300
Cessna-404 Titan	B-I	92	46.3	39.5	13.2	8,400
Cessna-414 Chancellor	B-I	94	44.1	36.4	11.5	6,785
Cessna-421 Golden Eagle	B-I	96	41.7	36.1	11.6	7,450
Embraer-121 Xingu	B-I	92	47.4	40.2	15.9	12,500
Embraer-326 Xavante	B-I	102	35.6	34.9	12.2	11,500
Foxjet ST-600-8	B-I	97	31.6	31.8	10.2	4,550
Hamilton Westwind II STD	B-I	96	46.0	45.0	9.2	12,495
Mitsubishi MU-2G	B-I	119	39.2	39.5	13.8	10,800
Piper 31-310 Navajo	B-I	100	40.7	32.7	13.0	6,200
Piper 400LS Cheyenne	B-I	110	47.7	43.4	17.0	12,050
Piper 60-602P Aerostar	B-I	94	36.7	34.8	12.1	6,000
Rockwell 690A Turbo Comdr.	B-I	97	46.5	44.3	14.9	10,300
Swearingen Merlin 3B	B-I	105	46.2	42.2	16.7	12,500
Swearingen Metro	B-I	112	46.2	59.4	16.7	12,500
Volpar Turbo 18	B-I	100	46.0	37.4	9.6	10,280
Aerocom Skyliner	A-II	88	54.0	54.3	16.5	12,500
Antonov AN-14	A-II	52	72.1	37.2	15.2	7,607
Antonov AN-28	A-II	88	72.1	42.6	16.1	12,350
Beech E18S	A-II	87	49.7	35.2	9.5	9,300

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
BN-2A Mk.3 Trislander	A-II	65	53.0	45.7	14.2	10,000
DHC-6-300 Twin Otter	A-II	75	65.0	51.7	19.5	12,500
DH.104 Dove 8	A-II	84	57.0	39.2	13.3	8,950
Dornier DO 28D-2	A-II	74	51.0	37.4	12.8	8,855
Nomad N 22B	A-II	69	54.0	41.2	18.1	8,950
Nomad N 24A	A-II	73	54.2	47.1	18.2	9,400
Pilatus PC-6 Porter	A-II	57	49.7	37.4	10.5	4,850
PZL-AN-2	A-II	54	59.8	41.9	13.1	12,125
PZL-M-15 Belphegor	A-II	62	73.6	41.9	17.6	12,465
Yunshu-11	A-II	80 *	55.7	39.4	15.1	7,150
Beech King Air C90-1	B-II	100	50.2	35.5	14.2	9,650
Beech Super King Air B200	B-II	103	54.5	43.8	15.0	12,500
Cessna-441 Conquest	B-II	100	49.3	39.0	13.1	9,925
Rockwell 840	B-II	98	52.1	42.9	14.9	10,325
Rockwell 980	C-II	121	52.1	42.9	14.9	10,325

* Approach speeds estimated.

Section 4. Listing Large Airplanes by Airport Reference Code (U.S. customary units)

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
Aerospatiale SN 601 Corv.	B-I	118	42.2	45.4	13.9	14,550
Dassault FAL-10	B-I	104	42.9	45.5	15.1	18,740
Gates Learjet 28/29	B-I	120	43.7	47.6	12.3	15,000
Mitsubishi Diamond MU-300	B-I	100	43.5	48.4	13.8	15,730
Piaggio PD-808	B-I	117	43.3	42.2	15.8	18,300
Rockwell Sabre 40	B-I	120	44.5	43.8	16.0	18,650
Rockwell Sabre 60	B-I	120	44.5	48.3	16.0	20,000
Gates Learjet 24	C-I	128	35.6	43.3	12.6	13,000
Gates Learjet 25	C-I	137	35.6	47.6	12.6	15,000
Gates Learjet 54-55-56	C-I	128	43.7	55.1	14.7	21,500
HFB-320 Hansa	C-I	125	47.5	54.5	16.2	20,280
HS 125 Series 400A	C-I	124	47.0	47.4	16.5	23,300
HS 125 Series 600A	C-I	125	47.0	50.5	17.2	25,000
HS 125 Series 700A	C-I	125	47.0	50.7	17.6	24,200
IAI 1121 Jet Comdr.	C-I	130	43.3	50.4	15.8	16,800
IAI-1124 Westwind	C-I	129	44.8	52.3	15.8	23,500
Rockwell Sabre 75A	C-I	137	44.5	47.2	17.2	23,300
Gates Learjet 35A/36A	D-I	143	39.5	48.7	12.3	18,300
Casa C-212-200 Aviocar	A-II	81	62.3	49.8	20.7	16,976
Dassault 941	A-II	59	76.7	77.9	30.7	58,400
DH.114 Heron 2	A-II	85	71.5	48.5	15.6	13,500
Dornier LTA	A-II	74 *	58.4	54.4	18.2	15,100
GAC-100	A-II	86	70.0	67.3	24.9	28,900
IAI Arava-201	A-II	81	68.6	42.7	17.1	15,000
LET L-410 UVP-E	A-II	81	65.5	47.5	19.1	14,109
PZL-AN-28	A-II	85	72.4	42.9	16.1	14,330

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
Aerospatiale NORD-262	B-II	96	71.9	63.3	20.4	23,480
Ahrens AR 404	B-II	98	66.0	52.7	19.0	18,500
Air-Metal AM-C 111	B-II	96	63.0	55.2	21.0	18,629
BAe Jetstream 31	B-II	99	52.0	47.2	17.5	14,550
Beech Airliner 1900-C	B-II	120 *	54.5	57.8	14.9	16,600
Cessna Citation II	B-II	108	51.7	47.2	15.0	13,300
Cessna Citation III	B-II	114	53.5	55.5	16.8	22,000
Dassault FAL-20	B-II	107	53.5	56.3	17.4	28,660
Dassault FAL-200	B-II	114	53.5	56.3	17.4	30,650
Dassault FAL-50	B-II	113	61.9	60.8	22.9	37,480
Dassault FAL-900	B-II	100	63.4	66.3	24.8	45,500
Embraer-110 Bandeirante	B-II	92	50.3	49.5	16.5	13,007
FMA IA-50 Guarni II	B-II	101	64.1	48.8	19.1	15,700
Fokker F-28-1000	B-II	119	77.3	89.9	27.8	65,000
Fokker F-28-2000	B-II	119	77.3	97.2	27.8	65,000
Grumman Gulfstream I	B-II	113	78.3	75.3	23.0	36,000
Rockwell Sabre 65	B-II	105	50.5	46.1	16.0	24,000
Shorts 330	B-II	96	74.7	58.0	16.2	22,900
Shorts 360	B-II	104	74.8	70.8	23.7	26,453
VFW-Fokker 614	B-II	111	70.5	67.5	25.6	44,000
Canadair CL-600	C-II	125	61.8	68.4	20.7	41,250
Grumman Gulfstream III	C-II	136	77.8	83.1	24.4	68,700
Lockheed 1329 JetStar	C-II	132	54.4	60.4	20.4	43,750
Rockwell Sabre 80	C-II	128	50.4	47.2	17.3	24,500
Grumman Gulfstream II	D-II	141	68.8	79.9	24.5	65,300
Grumman Gulfstream II-TT	D-II	142	71.7	79.9	24.5	65,300
Grumman Gulfstream IV	D-II	145	77.8	87.8	24.4	71,780
Lockheed SR-71 Blackbird	E-II	180	55.6	107.4	18.5	170,000
AIDC/CAF XC-2	A-III	86	81.7	65.9	25.3	27,500
Antonov AN-72	A-III	89 *	84.7	84.7	27.0	66,000
DHC-4 Caribou	A-III	77	95.6	72.6	31.8	28,500
DHC-7 Dash 7-100	A-III	83	93.0	80.7	26.2	43,000
DHC-8 Dash 8-300	A-III	90	90.0	84.3	24.6	41,100
Fairchild C-121	A-III	88	110.0	75.8	34.1	60,000
HP Herald	A-III	88	94.8	75.5	24.1	43,000
Ilyushin Il-12	A-III	78	104.0	70.0	30.5	38,000
MAI-QSTOL	A-III	85	100.3	98.4	32.8	85,300
MDC-DC-3	A-III	72	95.0	64.5	23.5	25,200
Aeritalia G-222	B-III	109	93.8	74.4	32.0	61,700
Antonov AN-24	B-III	119	95.8	77.2	27.3	46,305
Antonov AN-30	B-III	112	96.4	80.1	27.3	51,040
AW.660 Argosy C.Mk.1	B-III	113	115.0	89.1	27.0	97,000
BAe 146-100	B-III	113	86.4	85.8	28.3	74,600
BAe 146-200	B-III	117	86.4	93.7	28.3	88,250
Casa C-207A Azor	B-III	102	91.2	68.4	25.4	36,400
Convair 240	B-III	107	91.8	74.7	26.9	41,790
Convair 340	B-III	104	105.3	81.5	28.2	49,100
Convair 440	B-III	106	105.3	81.5	28.2	49,100
Convair 580	B-III	107	105.3	81.5	29.2	54,600
Dassault Mercure	B-III	117	100.2	114.3	37.3	124,500
DHC-5D Buffalo	B-III	91	96.0	79.0	28.7	49,200

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
DH.106 Comet 4C	B-III	108	115.0	118.0	29.5	162,000
Fairchild FH-227 B,D	B-III	105	95.2	83.1	27.5	45,500
Fairchild F-27 A,J	B-III	109	95.2	77.2	27.5	42,000
Fokker F-27-500	B-III	102	95.2	82.3	29.3	45,000
Fokker F-28-6000	B-III	113	82.3	97.2	27.8	73,000
Hindustan HS.748-2	B-III	94	98.4	67.0	24.8	44,402
HS.748 Series 2A	B-III	94	98.5	67.0	24.8	44,490
HS.780 Andover C.Mk.1	B-III	100	98.2	78.0	30.1	50,000
Kawasaki C-1	B-III	118 *	100.4	95.1	32.9	85,320
Martin-404	B-III	98	93.3	74.6	28.7	44,900
MDC-DC-4	B-III	95	117.5	93.9	27.9	73,000
MDC-DC-6A/B	B-III	108	117.5	105.6	29.3	104,000
Nihon YS-11	B-III	98	105.0	86.3	29.5	54,010
Aerospatiale SE 210 Carav.	C-III	127	112.5	105.0	28.6	114,640
Airbus A-320-100	C-III	138	111.3	123.3	39.1	145,505
Antonov AN-26	C-III	121	95.8	78.1	28.1	52,920
AW.650 Argosy 220	C-III	123	115.0	86.8	27.0	93,000
BAC 111-200	C-III	129	88.5	93.5	24.5	79,000
BAC 111-300	C-III	128	88.5	93.5	24.5	88,500
BAC 111-400	C-III	137	88.5	93.5	24.5	87,000
BAC 111-475	C-III	135	93.5	93.5	24.5	98,500
BAe 146-300	C-III	121	86.4	104.2	28.1	104,000
Boeing 727-100	C-III	125	108.0	133.2	34.3	169,000
Boeing 727-200	C-III	138	108.0	153.2	34.9	209,500
Boeing 737-100	C-III	137	93.0	94.0	37.2	110,000
Boeing 737-200	C-III	137	93.0	100.2	37.3	115,500
Boeing 737-300	C-III	137	94.8	109.6	36.6	135,000
Boeing 737-400	C-III	139	94.8	119.6	36.6	150,000
Boeing 737-500	C-III	140 *	94.8	101.8	36.6	133,500
Fairchild C-119	C-III	122	109.3	86.5	27.5	77,000
Fokker F-28-3000	C-III	121	82.3	89.9	27.8	73,000
Fokker F-28-4000	C-III	121	82.3	97.2	27.8	73,000
HS.121 Trident 1E	C-III	137	95.0	114.8	27.0	135,500
HS.121 Trident 2E	C-III	138	98.0	114.8	27.0	144,000
HS.801 Nimrod MR Mk.2	C-III	125 *	114.8	126.8	29.7	177,500
Lockheed 188 Electra	C-III	123	99.0	104.6	33.7	116,000
Lockheed P-3 Orion	C-III	134	99.7	116.8	33.8	135,000
MDC-DC-9-10/15	C-III	134	89.4	104.4	27.6	90,700
MDC-DC-9-20	C-III	124	93.3	104.4	27.4	98,000
MDC-DC-9-30	C-III	127	93.3	119.3	27.8	110,000
MDC-DC-9-40	C-III	129	93.3	125.6	28.4	114,000
MDC-DC-9-50	C-III	132	93.3	133.6	28.8	121,000
MDC-DC-9-80	C-III	132	107.8	147.8	30.3	140,000
MDC-DC-9-82	C-III	135	107.8	147.8	30.3	149,500
Tupolev TU-124	C-III	132 *	83.8	100.3	50.0	80,482
Vickers VC-2-810/840	C-III	122	94.0	85.7	26.8	72,500
Yakovlev YAK-40	C-III	128 *	82.2	65.9	21.3	35,275
Yakovlev YAK-42	C-III	128 *	112.2	119.3	32.2	117,950
BAC 111-500	D-III	144	93.5	107.0	24.5	104,500
BAC/Aerospatiale Concord	D-III	162	83.8	205.4	37.4	408,000
HS.121 Trident 3B	D-III	143	98.0	131.2	28.3	150,000

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
HS.121 Trident Super 3B	D-III	146	98.0	131.2	28.3	158,000
Tupolev TU-134	D-III	144	95.2	121.5	30.0	103,600
Tupolev TU-144	E-III	178	94.8	212.6	42.2	396,000
Boeing YC-14	A-IV	89	129.0	131.7	48.3	216,000
Lockheed 1649 Constellat'n	A-IV	89	150.0	116.2	23.4	160,000
Boeing C97 Stratocruiser	B-IV	105	141.3	110.3	38.3	145,800
Bristol Brittanica 300/310	B-IV	117	142.3	124.2	37.5	185,000
Ilyushin Il-18	B-IV	103	122.7	117.8	33.3	134,640
Ilyushin Il-76	B-IV	119	165.7	152.8	48.4	374,785
Lockheed 1049 Constellat'n	B-IV	113	123.0	113.6	24.8	137,500
Lockheed 749 Constellat'n	B-IV	93	123.0	95.2	22.4	107,000
MDC-DC-7	B-IV	110	127.5	112.3	31.7	143,000
Vickers Vanguard 950	B-IV	119	118.0	122.9	34.9	146,500
Aerospatiale C 160 Trans.	C-IV	124	131.3	106.3	38.7	108,596
Airbus A-300-600	C-IV	135	147.1	177.5	54.7	363,763
Airbus A-300-B4	C-IV	132	147.1	175.5	55.5	330,700
Airbus A-310-300	C-IV	125	144.1	153.2	52.3	330,693
Antonov AN-10	C-IV	126	124.8	121.4	32.2	121,500
Antonov AN-12	C-IV	127	124.8	109.0	34.6	121,500
Boeing 707-100	C-IV	139	130.8	145.1	41.7	257,340
Boeing 707-320	C-IV	139	142.4	152.9	42.2	312,000
Boeing 707-320B	C-IV	136	145.8	152.9	42.1	336,600
Boeing 707-420	C-IV	132	142.4	152.9	42.2	312,000
Boeing 720	C-IV	133	130.8	136.2	41.4	229,300
Boeing 720B	C-IV	137	130.8	136.8	41.2	234,300
Boeing 757	C-IV	135	124.8	155.3	45.1	255,000
Boeing 767-200	C-IV	130	156.1	159.2	52.9	315,000
Boeing 767-300	C-IV	130	156.1	180.3	52.6	350,000
Boeing E-3	C-IV	137	145.9	153.0	42.0	325,000
Canadair CL-44	C-IV	123	142.3	136.8	38.4	210,000
Dassault 1150 Atlantic	C-IV	130	*	122.7	104.2	37.2
Lockheed 100-20 Hercules	C-IV	137	132.6	106.1	39.3	155,000
Lockheed 100-30 Hercules	C-IV	129	132.6	112.7	39.2	155,000
Lockheed 1011-1	C-IV	138	155.3	177.7	55.8	430,000
Lockheed 1011-100	C-IV	140	155.3	177.7	55.8	466,000
Lockheed 1011-200	C-IV	140	155.3	177.7	55.8	466,000
Lockheed 1011-600	C-IV	140	*	142.8	141.0	53.0
Lockheed 400	C-IV	121	*	119.7	97.8	38.1
Lockheed C-141A Starlifter	C-IV	129	159.9	145.0	39.3	316,600
Lockheed C-141B Starlifter	C-IV	129	159.9	168.3	39.3	343,000
Marshall (Shorts) Belfast	C-IV	126	158.8	136.4	47.0	230,000
MDC-DC-10-10	C-IV	136	155.3	182.3	58.4	443,000
MDC-DC-8-10	C-IV	131	142.4	150.8	43.3	276,000
MDC-DC-8-20/30/40	C-IV	133	142.4	150.8	43.3	315,000
MDC-DC-8-50	C-IV	137	142.4	150.8	43.3	325,000
MDC-DC-8-62	C-IV	124	148.4	157.5	43.4	350,000
Tupolev TU-114	C-IV	132	*	167.6	177.5	50.0
Vickers VC-10-1100	C-IV	128	146.2	158.7	39.5	312,000
Vickers VC-10-1150	C-IV	138	146.2	171.7	39.5	335,100
Boeing 707-200	D-IV	145	130.8	145.1	41.7	257,340

Aircraft	Airport Reference Code	Appch Speed Knots		Wingspan Feet	Length Feet	Tail Height Feet	Maximum Takeoff Lbs
General Dynamics 880	D-IV	155		120.0	129.3	36.0	193,500
General Dynamics 990	D-IV	156		120.0	139.2	39.5	255,000
Ilyushin Il-62	D-IV	152		141.8	174.3	40.5	363,760
Ilyushin Il-86	D-IV	141		157.7	195.3	51.8	454,150
Lockheed 1011-250	D-IV	144		155.3	177.7	55.8	496,000
Lockheed 1011-500	D-IV	144		155.3	164.2	55.8	496,000
Lockheed 1011-500 Ex. Wing	D-IV	148		164.3	164.2	55.8	496,000
MDC-DC-10-30	D-IV	151		165.3	181.6	58.6	590,000
MDC-DC-10-40	D-IV	145		165.4	182.3	58.6	555,000
MDC-DC-8-61	D-IV	142		142.4	187.4	43.0	325,000
MDC-DC-8-63	D-IV	147		148.4	187.4	43.0	355,000
MDC-MD-11	D-IV	155		169.8	201.3	57.8	602,500
Rockwell B-1	D-IV	165	*	137.0	147.0	34.0	477,000
Tupolev TU-154	D-IV	145		123.3	157.2	37.4	216,050
Antonov AN-22	C-V	140	*	211.0	167.0	41.2	500,000
Boeing 747-SP	C-V	140		195.7	184.8	65.8	696,000
MDC-C-133	C-V	128		179.7	157.5	48.2	300,000
Boeing 747-100	D-V	152		195.7	231.8	64.3	600,000
Boeing 747-200	D-V	152		195.7	231.8	64.7	833,000
Boeing 747-300SR	D-V	141		195.7	231.8	64.3	600,000
Boeing 747-400	D-V	154		213.0	231.8	64.3	870,000
Boeing 777-200	D-V	145		199.9	209.1	18.8	286,900
Boeing 777-300	D-V	145		199.9	242.3	18.8	299,370
Boeing B-52	D-V	141	*	185.0	157.6	40.8	488,000
Boeing E-4 (747-200)	D-V	152		195.7	231.8	64.7	833,000
Antonov AN-124	C-VI	124		232.0	223.0	66.2	800,000
Lockheed C-5B Galaxy	C-VI	135		222.7	247.8	65.1	837,000

* Approach speeds estimated.

Section 5. Listing Small Airplanes by Airport Reference Code (SI units)

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
Beech Baron B55	A-I	90	11.5	8.5	2.8	2,313
Beech Baron E55	A-I	88	11.5	8.8	2.8	2,404
Beech Bonanza A36	A-I	72	10.2	8.4	2.6	1,656
Beech Bonanza B36TC	A-I	75	11.5	8.4	2.6	1,746
Beech Bonanza F33A	A-I	70	10.2	8.1	2.5	1,542
Beech Bonanza V35B	A-I	70	10.2	8.0	2.0	1,542
Beech Duchess 76	A-I	76	11.6	8.8	2.9	1,769
Beech Sierra 200-B24R	A-I	70	10.0	7.8	2.5	1,247
Beech Skipper 77	A-I	63	9.1	7.3	2.1	760
Beech Sundowner 180-C23	A-I	68	10.0	7.8	2.5	1,111
Cessna-150	A-I	55	10.0	7.3	2.4	726
Cessna-177 Cardinal	A-I	64	10.8	8.3	2.6	1,134
DHC-2 Beaver	A-I	50	14.6	9.2	2.7	2,313
Embraer-820 Navajo Chief	A-I	74	12.4	10.5	4.0	3,175
Lapan XT-400	A-I	75	14.6	10.2	4.3	2,520
Learfan 2100	A-I	86	12.0	12.4	3.7	3,357
Mitsubishi Marquise MU-2N	A-I	88	11.9	12.0	4.2	5,250
Mitsubishi Solitaire MU-2P	A-I	87	11.9	10.1	3.9	4,749
Partenavia P.68B Victor	A-I	73	12.0	10.9	3.6	2,850
Piaggio P-166 Portofino	A-I	82	14.4	11.9	5.0	4,300
AJI Hustler 400	B-I	98	8.5	10.6	3.0	2,722
Beech Airliner C99	B-I	107	14.0	13.6	4.4	5,126
Beech Baron 58	B-I	96	11.5	9.1	3.0	2,495
Beech Baron 58P	B-I	101	11.5	9.1	2.8	2,812
Beech Baron 58TC	B-I	101	11.5	9.1	2.8	2,812
Beech Duke B60	B-I	98	11.9	10.3	3.7	3,073
Beech King Air B100	B-I	111	14.0	12.2	4.7	5,352
Beech King Air F90	B-I	108	14.0	12.1	4.6	4,967
Cessna Citation I	B-I	108	14.4	13.3	4.4	5,375
Cessna-402 Businessliner	B-I	95	12.1	11.0	3.5	2,858
Cessna-404 Titan	B-I	92	14.1	12.0	4.0	3,810
Cessna-414 Chancellor	B-I	94	13.4	11.1	3.5	3,078
Cessna-421 Golden Eagle	B-I	96	12.7	11.0	3.5	3,379
Embraer-121 Xingu	B-I	92	14.4	12.3	4.8	5,670
Embraer-326 Xavante	B-I	102	10.9	10.6	3.7	5,216
Foxjet ST-600-8	B-I	97	9.6	9.7	3.1	2,064
Hamilton Westwind II STD	B-I	96	14.0	13.7	2.8	5,668
Mitsubishi MU-2G	B-I	119	11.9	12.0	4.2	4,899
Piper 31-310 Navajo	B-I	100	12.4	10.0	4.0	2,812
Piper 400LS Cheyenne	B-I	110	14.5	13.2	5.2	5,466
Piper 60-602P Aerostar	B-I	94	11.2	10.6	3.7	2,722
Rockwell 690A Turbo Comdr.	B-I	97	14.2	13.5	4.5	4,672
Swearingen Merlin 3B	B-I	105	14.1	12.9	5.1	5,670
Swearingen Metro	B-I	112	14.1	18.1	5.1	5,670
Volpar Turbo 18	B-I	100	14.0	11.4	2.9	4,663
Aerocom Skyliner	A-II	88	16.5	16.6	5.0	5,670
Antonov AN-14	A-II	52	22.0	11.3	4.6	3,450
Antonov AN-28	A-II	88	22.0	13.0	4.9	5,602
Beech E18S	A-II	87	15.1	10.7	2.9	4,218

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
BN-2A Mk.3 Trislander	A-II	65	16.2	13.9	4.3	4,536
DHC-6-300 Twin Otter	A-II	75	19.8	15.8	5.9	5,670
DH.104 Dove 8	A-II	84	17.4	11.9	4.1	4,060
Dornier DO 28D-2	A-II	74	15.5	11.4	3.9	4,017
Nomad N 22B	A-II	69	16.5	12.6	5.5	4,060
Nomad N 24A	A-II	73	16.5	14.4	5.5	4,264
Pilatus PC-6 Porter	A-II	57	15.1	11.4	3.2	2,200
PZL-AN-2	A-II	54	18.2	12.8	4.0	5,500
PZL-M-15 Belphegor	A-II	62	22.4	12.8	5.4	5,654
<u>Yunshu-11</u>	A-II	80 *	17.0	12.0	4.6	3,243
Beech King Air C90-1	B-II	100	15.3	10.8	4.3	4,377
Beech Super King Air B200	B-II	103	16.6	13.4	4.6	5,670
Cessna-441 Conquest	B-II	100	15.0	11.9	4.0	4,502
<u>Rockwell 840</u>	B-II	98	15.9	13.1	4.5	4,683
Rockwell 980	C-II	121	15.9	13.1	4.5	4,683

* Approach speeds estimated.

Section 6. Listing Large Airplanes by Airport Reference Code (SI units)

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
Aerospatiale SN 601 Corv.	B-I	118	12.9	13.8	4.2	6,600
Dassault FAL-10	B-I	104	13.1	13.9	4.6	8,500
Gates Learjet 28/29	B-I	120	13.3	14.5	3.7	6,804
Mitsubishi Diamond MU-300	B-I	100	13.3	14.8	4.2	7,135
Piaggio PD-808	B-I	117	13.2	12.9	4.8	8,301
Rockwell Sabre 40	B-I	120	13.6	13.4	4.9	8,459
<u>Rockwell Sabre 60</u>	B-I	120	13.6	14.7	4.9	9,072
Gates Learjet 24	C-I	128	10.9	13.2	3.8	5,897
Gates Learjet 25	C-I	137	10.9	14.5	3.8	6,804
Gates Learjet 54-55-56	C-I	128	13.3	16.8	4.5	9,752
HFB-320 Hansa	C-I	125	14.5	16.6	4.9	9,199
HS 125 Series 400A	C-I	124	14.3	14.4	5.0	10,569
HS 125 Series 600A	C-I	125	14.3	15.4	5.2	11,340
HS 125 Series 700A	C-I	125	14.3	15.5	5.4	10,977
IAI 1121 Jet Comdr.	C-I	130	13.2	15.4	4.8	7,620
IAI-1124 Westwind	C-I	129	13.7	15.9	4.8	10,659
<u>Rockwell Sabre 75A</u>	C-I	137	13.6	14.4	5.2	10,569
<u>Gates Learjet 35A/36A</u>	D-I	143	12.0	14.8	3.7	8,301
Casa C-212-200 Aviocar	A-II	81	19.0	15.2	6.3	7,700
Dassault 941	A-II	59	23.4	23.7	9.4	26,490
DH.114 Heron 2	A-II	85	21.8	14.8	4.8	6,123
Dornier LTA	A-II	74 *	17.8	16.6	5.5	6,849
GAC-100	A-II	86	21.3	20.5	7.6	13,109
IAI Arava-201	A-II	81	20.9	13.0	5.2	6,804
LET L-410 UVP-E	A-II	81	20.0	14.5	5.8	6,400
<u>PZL-AN-28</u>	A-II	85	22.1	13.1	4.9	6,500

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
Aerospatiale NORD-262	B-II	96	21.9	19.3	6.2	10,650
Ahrens AR 404	B-II	98	20.1	16.1	5.8	8,391
Air-Metal AM-C 111	B-II	96	19.2	16.8	6.4	8,450
BAe Jetstream 31	B-II	99	15.8	14.4	5.3	6,600
Beech Airliner 1900-C	B-II	120 *	16.6	17.6	4.5	7,530
Cessna Citation II	B-II	108	15.8	14.4	4.6	6,033
Cessna Citation III	B-II	114	16.3	16.9	5.1	9,979
Dassault FAL-20	B-II	107	16.3	17.2	5.3	13,000
Dassault FAL-200	B-II	114	16.3	17.2	5.3	13,903
Dassault FAL-50	B-II	113	18.9	18.5	7.0	17,001
Dassault FAL-900	B-II	100	19.3	20.2	7.6	20,638
Embraer-110 Bandeirante	B-II	92	15.3	15.1	5.0	5,900
FMA IA-50 Guarni II	B-II	101	19.5	14.9	5.8	7,121
Fokker F-28-1000	B-II	119	23.6	27.4	8.5	29,484
Fokker F-28-2000	B-II	119	23.6	29.6	8.5	29,484
Grumman Gulfstream I	B-II	113	23.9	23.0	7.0	16,329
Rockwell Sabre 65	B-II	105	15.4	14.1	4.9	10,886
Shorts 330	B-II	96	22.8	17.7	4.9	10,387
Shorts 360	B-II	104	22.8	21.6	7.2	11,999
VFW-Fokker 614	B-II	111	21.5	20.6	7.8	19,958
Canadair CL-600	C-II	125	18.8	20.8	6.3	18,711
Grumman Gulfstream III	C-II	136	23.7	25.3	7.4	31,162
Lockheed 1329 JetStar	C-II	132	16.6	18.4	6.2	19,845
Rockwell Sabre 80	C-II	128	15.4	14.4	5.3	11,113
Grumman Gulfstream II	D-II	141	21.0	24.4	7.5	29,620
Grumman Gulfstream II-TT	D-II	142	21.9	24.4	7.5	29,620
Grumman Gulfstream IV	D-II	145	23.7	26.8	7.4	32,559
Lockheed SR-71 Blackbird	E-II	180	16.9	32.7	5.6	77,111
AIDC/CAF XC-2	A-III	86	24.9	20.1	7.7	12,474
Antonov AN-72	A-III	89 *	25.8	25.8	8.2	29,937
DHC-4 Caribou	A-III	77	29.1	22.1	9.7	12,927
DHC-7 Dash 7-100	A-III	83	28.3	24.6	8.0	19,504
DHC-8 Dash 8-300	A-III	90	27.4	25.7	7.5	18,643
Fairchild C-121	A-III	88	33.5	23.1	10.4	27,216
HP Herald	A-III	88	28.9	23.0	7.3	19,504
Ilyushin Il-12	A-III	78	31.7	21.3	9.3	17,237
MAI-QSTOL	A-III	85	30.6	30.0	10.0	38,691
MDC-DC-3	A-III	72	29.0	19.7	7.2	11,431
Aeritalia G-222	B-III	109	28.6	22.7	9.8	27,987
Antonov AN-24	B-III	119	29.2	23.5	8.3	21,004
Antonov AN-30	B-III	112	29.4	24.4	8.3	23,151
AW.660 Argosy C.Mk.1	B-III	113	35.1	27.2	8.2	43,998
BAe 146-100	B-III	113	26.3	26.2	8.6	33,838
BAe 146-200	B-III	117	26.3	28.6	8.6	40,030
Casa C-207A Azor	B-III	102	27.8	20.8	7.7	16,511
Convair 240	B-III	107	28.0	22.8	8.2	18,956
Convair 340	B-III	104	32.1	24.8	8.6	22,271
Convair 440	B-III	106	32.1	24.8	8.6	22,271
Convair 580	B-III	107	32.1	24.8	8.9	24,766
Dassault Mercure	B-III	117	30.5	34.8	11.4	56,472
DHC-5D Buffalo	B-III	91	29.3	24.1	8.7	22,317

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
DH.106 Comet 4C	B-III	108	35.1	36.0	9.0	73,482
Fairchild FH-227 B,D	B-III	105	29.0	25.3	8.4	20,638
Fairchild F-27 A,J	B-III	109	29.0	23.5	8.4	19,051
Fokker F-27-500	B-III	102	29.0	25.1	8.9	20,412
Fokker F-28-6000	B-III	113	25.1	29.6	8.5	33,112
Hindustan HS.748-2	B-III	94	30.0	20.4	7.6	20,140
HS.748 Series 2A	B-III	94	30.0	20.4	7.6	20,180
HS.780 Andover C.Mk.1	B-III	100	29.9	23.8	9.2	22,680
Kawasaki C-1	B-III	118 *	30.6	29.0	10.0	38,701
Martin-404	B-III	98	28.4	22.7	8.7	20,366
MDC-DC-4	B-III	95	35.8	28.6	8.5	33,112
MDC-DC-6A/B	B-III	108	35.8	32.2	8.9	47,174
Nihon YS-11	B-III	98	32.0	26.3	9.0	24,499
Aerospatiale SE 210 Carav.	C-III	127	34.3	32.0	8.7	52,000
Airbus A-320-100	C-III	138	33.9	37.6	11.9	66,000
Antonov AN-26	C-III	121	29.2	23.8	8.6	24,004
AW.650 Argosy 220	C-III	123	35.1	26.5	8.2	42,184
BAC 111-200	C-III	129	27.0	28.5	7.5	35,834
BAC 111-300	C-III	128	27.0	28.5	7.5	40,143
BAC 111-400	C-III	137	27.0	28.5	7.5	39,463
BAC 111-475	C-III	135	28.5	28.5	7.5	44,679
BAe 146-300	C-III	121	26.3	31.8	8.6	47,174
Boeing 727-100	C-III	125	32.9	40.6	10.5	76,657
Boeing 727-200	C-III	138	32.9	46.7	10.6	95,028
Boeing 737-100	C-III	137	28.3	28.7	11.3	49,895
Boeing 737-200	C-III	137	28.3	30.5	11.4	52,390
Boeing 737-300	C-III	137	28.9	33.4	11.2	61,235
Boeing 737-400	C-III	139	28.9	36.5	11.2	68,039
Boeing 737-500	C-III	140 *	28.9	31.0	11.2	60,555
Fairchild C-119	C-III	122	33.3	26.4	8.4	34,927
Fokker F-28-3000	C-III	121	25.1	27.4	8.5	33,112
Fokker F-28-4000	C-III	121	25.1	29.6	8.5	33,112
HS.121 Trident 1E	C-III	137	29.0	35.0	8.2	61,462
HS.121 Trident 2E	C-III	138	29.9	35.0	8.2	65,317
HS.801 Nimrod MR Mk.2	C-III	125 *	35.0	38.6	9.1	80,513
Lockheed 188 Electra	C-III	123	30.2	31.9	10.3	52,617
Lockheed P-3 Orion	C-III	134	30.4	35.6	10.3	61,235
MDC-DC-9-10/15	C-III	134	27.2	31.8	8.4	41,141
MDC-DC-9-20	C-III	124	28.4	31.8	8.4	44,452
MDC-DC-9-30	C-III	127	28.4	36.4	8.5	49,895
MDC-DC-9-40	C-III	129	28.4	38.3	8.7	51,710
MDC-DC-9-50	C-III	132	28.4	40.7	8.8	54,885
MDC-DC-9-80	C-III	132	32.9	45.0	9.2	63,503
MDC-DC-9-82	C-III	135	32.9	45.0	9.2	67,812
Tupolev TU-124	C-III	132 *	25.5	30.6	15.2	36,506
Vickers VC-2-810/840	C-III	122	28.7	26.1	8.2	32,885
Yakovlev YAK-40	C-III	128 *	25.1	20.1	6.5	16,000
Yakovlev YAK-42	C-III	128 *	34.2	36.4	9.8	53,501
BAC 111-500	D-III	144	28.5	32.6	7.5	47,400
BAC/Aerospatiale Concord	D-III	162	25.5	62.6	11.4	185,066
HS.121 Trident 3B	D-III	143	29.9	40.0	8.6	68,039

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg
HS.121 Trident Super 3B	D-III	146	29.9	40.0	8.6	71,668
Tupolev TU-134	D-III	144	29.0	37.0	9.1	46,992
Tupolev TU-144	E-III	178	28.9	64.8	12.9	179,623
Boeing YC-14	A-IV	89	39.3	40.1	14.7	97,976
Lockheed 1649 Constellat'n	A-IV	89	45.7	35.4	7.1	72,575
Boeing C97 Stratocruiser	B-IV	105	43.1	33.6	11.7	66,134
Bristol Britannia 300/310	B-IV	117	43.4	37.9	11.4	83,915
Ilyushin Il-18	B-IV	103	37.4	35.9	10.1	61,072
Ilyushin Il-76	B-IV	119	50.5	46.6	14.8	170,000
Lockheed 1049 Constellat'n	B-IV	113	37.5	34.6	7.6	62,369
Lockheed 749 Constellat'n	B-IV	93	37.5	29.0	6.8	48,534
MDC-DC-7	B-IV	110	38.9	34.2	9.7	64,864
Vickers Vanguard 950	B-IV	119	36.0	37.5	10.6	66,451
Aerospatiale C 160 Trans.	C-IV	124	40.0	32.4	11.8	49,258
Airbus A-300-600	C-IV	135	44.8	54.1	16.7	165,000
Airbus A-300-B4	C-IV	132	44.8	53.5	16.9	150,003
Airbus A-310-300	C-IV	125	43.9	46.7	15.9	150,000
Antonov AN-10	C-IV	126	38.0	37.0	9.8	55,111
Antonov AN-12	C-IV	127	38.0	33.2	10.5	55,111
Boeing 707-100	C-IV	139	39.9	44.2	12.7	116,727
Boeing 707-320	C-IV	139	43.4	46.6	12.9	141,521
Boeing 707-320B	C-IV	136	44.4	46.6	12.8	152,679
Boeing 707-420	C-IV	132	43.4	46.6	12.9	141,521
Boeing 720	C-IV	133	39.9	41.5	12.6	104,009
Boeing 720B	C-IV	137	39.9	41.7	12.6	106,277
Boeing 757	C-IV	135	38.0	47.3	13.7	115,666
Boeing 767-200	C-IV	130	47.6	48.5	16.1	142,882
Boeing 767-300	C-IV	130	47.6	55.0	16.0	158,757
Boeing E-3	C-IV	137	44.5	46.6	12.8	147,418
Canadair CL-44	C-IV	123	43.4	41.7	11.7	95,254
Dassault 1150 Atlantic	C-IV	130	*	37.4	11.3	45,359
Lockheed 100-20 Hercules	C-IV	137	40.4	32.3	12.0	70,307
Lockheed 100-30 Hercules	C-IV	129	40.4	34.4	11.9	70,307
Lockheed 1011-1	C-IV	138	47.3	54.2	17.0	195,045
Lockheed 1011-100	C-IV	140	47.3	54.2	17.0	211,374
Lockheed 1011-200	C-IV	140	47.3	54.2	17.0	211,374
Lockheed 1011-600	C-IV	140	*	43.5	16.2	119,748
Lockheed 400	C-IV	121	*	36.5	11.6	38,102
Lockheed C-141A Starlifter	C-IV	129	48.7	44.2	12.0	143,607
Lockheed C-141B Starlifter	C-IV	129	48.7	51.3	12.0	155,582
Marshall (Shorts) Belfast	C-IV	126	48.4	41.6	14.3	104,326
MDC-DC-10-10	C-IV	136	47.3	55.6	17.8	200,941
MDC-DC-8-10	C-IV	131	43.4	46.0	13.2	125,191
MDC-DC-8-20/30/40	C-IV	133	43.4	46.0	13.2	142,882
MDC-DC-8-50	C-IV	137	43.4	46.0	13.2	147,418
MDC-DC-8-62	C-IV	124	45.2	48.0	13.2	158,757
Tupolev TU-114	C-IV	132	*	51.1	15.2	164,028
Vickers VC-10-1100	C-IV	128	44.6	48.4	12.0	141,521
Vickers VC-10-1150	C-IV	138	44.6	52.3	12.0	151,999
Boeing 707-200	D-IV	145	39.9	44.2	12.7	116,727
General Dynamics 880	D-IV	155	36.6	39.4	11.0	87,770
General Dynamics 990	D-IV	156	36.6	42.4	12.0	115,666

Aircraft	Airport Reference Code	Appch Speed Knots	Wingspan Meters	Length Meters	Tail Height Meters	Maximum Takeoff Kg	
Ilyushin Il-62	D-IV	152	43.2	53.1	12.3	164,999	
Ilyushin Il-86	D-IV	141	48.1	59.5	15.8	205,999	
Lockheed 1011-250	D-IV	144	47.3	54.2	17.0	224,982	
Lockheed 1011-500	D-IV	144	47.3	50.0	17.0	224,982	
Lockheed 1011-500 Ex. Wing	D-IV	148	50.1	50.0	17.0	224,982	
MDC-DC-10-30	D-IV	151	50.4	55.4	17.9	267,619	
MDC-DC-10-40	D-IV	145	50.4	55.6	17.9	251,744	
MDC-DC-8-61	D-IV	142	43.4	57.1	13.1	147,418	
MDC-DC-8-63	D-IV	147	45.2	57.1	13.1	161,025	
MDC-MD-11	D-IV	155	51.8	61.4	17.6	273,289	
Rockwell B-1	D-IV	165	*	41.8	44.8	10.4	216,364
Tupolev TU-154	D-IV	145		37.6	47.9	11.4	97,999
Antonov AN-22	C-V	140	*	64.3	50.9	12.6	226,796
Boeing 747-SP	C-V	140		59.6	56.3	20.1	315,700
MDC-C-133	C-V	128		54.8	48.0	14.7	136,078
Boeing 747-100	D-V	152		59.6	70.7	19.6	272,155
Boeing 747-200	D-V	152		59.6	70.7	19.7	377,842
Boeing 747-300SR	D-V	141		59.6	70.7	19.6	272,155
Boeing 747-400	D-V	154		64.9	70.7	19.6	394,625
Boeing 777-200	D-V	145		60.9	63.7	18.8	286,900
Boeing 777-300	D-V	145		60.9	73.9	18.8	299,370
Boeing B-52	D-V	141	*	56.4	48.0	12.4	221,353
Boeing E-4 (747-200)	D-V	152		59.6	70.7	19.7	377,842
Antonov AN-124	C-VI	124		70.7	68.0	20.2	362,874
Lockheed C-5B Galaxy	C-VI	135		67.9	75.5	19.8	379,657

* Approach speeds estimated.

Appendix 14. Declared Distances

1. APPLICATION. The purpose of declared distances in airport design is to provide an equivalent runway safety area (RSA), runway object free area (ROFA), or runway protection zone (RPZ) in accordance with the design standards in Chapters 2 and 3 at existing constrained airports where it is otherwise impracticable to meet standards by other means. Declared distances are also employed when there are obstructions in the runway approaches and/or departure surface that are beyond the ability of the airport owner to remove and result in a displaced runway threshold or change in the departure end of the runway (DER).

a. This appendix, by treating the airplane's runway performance distances independently, provides an alternative airport design methodology by declaring distances to satisfy the airplane's takeoff run, takeoff distance, accelerate-stop distance, and landing distance requirements. The declared distances are takeoff run available (TORA), takeoff distance available (TODA), accelerate-stop distance available (ASDA), and landing distance available (LDA), which when treated independently may include clearway and stopway and may limit runway use. This alternative design methodology may affect the beginning and ending of the RSA, ROFA, RPZ, and primary surface.

b. Where declared distances differ, the primary surface extends 200 feet (60 m) beyond each end of the runway or the far end of each TODA, whichever is further, to protect departures to the extent of the 14 CFR Part 77 approach surface for that runway end, i.e. 20:1, 34:1, and 50:1 originating at or beyond the end of TODA.

2. BACKGROUND. In applying declared distances in airport design, it is helpful to understand the relationship between airplane certification, aircraft operating rules, airport data, and airport design.

a. **Airplane certification** provides the airplane's performance distances. The performance speeds, e.g., V_1 , takeoff decision speed, V_{LOF} , lift-off speed, V_2 , takeoff safety speed, V_{SO} , stalling speed or the minimum steady flight speed in the landing configuration, and the following distances to achieve or decelerate from these speeds are established by the manufacturer and confirmed during certification testing for varying climatological conditions, operating weights, etc.

(1) **Takeoff run** - the distance to accelerate from brake release to lift-off, plus safety factors.

(2) **Takeoff distance** - the distance to accelerate from brake release past lift-off to start of takeoff climb, plus safety factors.

(3) **Accelerate-stop distance** - the distance to accelerate from brake release to V_1 and then decelerate to a stop, plus safety factors.

(4) **Landing distance** - the distance from the threshold to complete the approach, touchdown, and decelerate to a stop, plus safety factors.

b. **Aircraft operating rules** provide a minimum acceptable level of safety by controlling the airplane maximum operating weights by limiting the airplane's performance distances as follows:

(1) **Takeoff run** shall not exceed the length of runway.

(2) **Takeoff distance** shall not exceed the length of runway plus clearway.

(3) **Accelerate-stop distance** shall not exceed the length of runway plus stopway.

(4) **Landing distance** shall not exceed the length of runway.

c. **Airport data** provides the runway length and/or the following declared distance information for calculating maximum operating weights and/or operating capability.

(1) **Takeoff run available (TORA)** - the length of runway declared available and suitable for satisfying takeoff run requirements.

(2) **Takeoff distance available (TODA)** - the TORA plus the length of any remaining runway or clearway beyond the far end of the TORA available for satisfying takeoff distance requirements. The usable TODA length is controlled by obstacles present in the departure area vis-a-vis aircraft performance. As such, the usable TODA length is determined by the aircraft operator before each takeoff and requires knowledge of the location of each controlling obstacle in the departure area. Extending the usable TODA lengths requires the removal of existing objects limiting the usable TODA lengths.

(3) **Accelerate-stop distance available (ASDA)** - the length of runway plus stopway declared available and suitable for satisfying accelerate-stop distance requirements.

(4) **Landing distance available (LDA)** - the length of runway declared available and suitable for satisfying landing distance requirements.

3. FAA APPROVAL FOR APPLYING DECLARED DISTANCES IN AIRPORT DESIGN. The application of declared distances at a specific location requires prior FAA approval on a case-by-case basis. Approval is reflected on the FAA-approved Airport Layout Plan.

4. RUNWAY SAFETY AREA (RSA) AND RUNWAY OBJECT FREE AREA (ROFA) LENGTHS. The standard RSA length P in the following paragraphs is the length specified in tables 3-1, 3-2, and 3-3 for the RSA length beyond the runway ends. The standard ROFA length R in the following paragraphs is the length specified in tables 3-1, 3-2, and 3-3 for the ROFA length beyond the runway ends. The RSA and the ROFA shall extend for the full length of the runway plus the greater of the following lengths beyond the runway ends for takeoff and landing in both directions.

a. For takeoff.

(1) **At the start of takeoff end of runway.** The RSA and the ROFA need to extend behind the start of takeoff to continue the entrance taxiway safety area and taxiway object free area and/or provide an area for jet blast protection. The portion of runway behind the start of takeoff is unavailable and/or unsuitable for takeoff run, takeoff distance, and accelerate-stop distance computations.

(2) **At the far end of runway with stopway.** The RSA shall extend P and the ROFA shall extend R beyond the far end of stopway.

(3) **At the far end of runway without stopway.** The RSA shall extend P and the ROFA shall extend R beyond the far end of ASDA. The portion of runway beyond the ASDA is unavailable and/or unsuitable for accelerate-stop distance computations.

b. For landing.

(1) **At the approach end of runway.** The RSA shall extend P and the ROFA shall extend R before the threshold. The portion of runway behind the threshold is unavailable and/or unsuitable for landing distance computations.

(2) **At the rollout end of runway.** The RSA shall extend P and the ROFA shall extend R beyond the rollout end of LDA. The portion of runway beyond the LOA is unavailable and/or unsuitable for landing distance computations.

5. RUNWAY PROTECTION ZONE (RPZ) LOCATION AND SIZE. The RPZ function may be fulfilled by the RPZ beginning at a location other than 200 feet (60 m) beyond the end of the runway. When an RPZ begins at a location other than 200 feet (60 m) beyond the end of runway, two RPZs are required, i.e., a departure RPZ and an approach RPZ. The two RPZs normally overlap.

a. **Approach RPZ.** The approach RPZ shall begin 200 feet (60 m) before the threshold. Table 2-4 contains standard dimensions for approach RPZs. The portion of runway behind the threshold is unavailable and/or unsuitable for landing distance computations.

b. **Departure RPZ.** The departure RPZ shall begin 200 feet (60 m) beyond the far end of TORA. The portion of runway beyond the TORA is unavailable and/or unsuitable for takeoff run computations. The standard dimensions for departure RPZs are:

(1) Starting 200 feet (60 m) beyond the far end of TORA, 1,000 feet (300 m) long, 250 feet (75 m) wide, and at the far end of RPZ 450 feet (135 m) wide—for runways serving only small airplanes in Aircraft Approach Categories A and B.

(2) Starting 200 feet (60 m) beyond the far end of TORA, 1,000 feet (300 m) long, 500 feet (150 m) wide, and at the far end of RPZ 700 feet (210 m) wide—for runways serving large airplanes in Aircraft Approach Categories A and B.

(3) Starting 200 feet (60 m) beyond the far end of TORA, 1,700 feet (510 m) long, 500 feet (150 m) wide, and at the far end of RPZ 1,010 feet (303 m) wide—for runways serving Aircraft Approach Categories C and D.

6. CLEARWAY LOCATION. The clearway is located at the far end of TORA. The portion of runway extending into the clearway is unavailable and/or unsuitable for takeoff run and takeoff distance computations.

7. NOTIFICATION. The clearway and stopway lengths, if provided, and declared distances (TORA, TODA, ASDA, and LDA) will be provided by the airport owner for inclusion in the Airport/Facility Directory (and in the Aeronautical Information Publication (AIP), for international airports) for each operational runway direction:

a. **The TORA** - the length of the runway less any length of runway unavailable and/or unsuitable for takeoff run computations. See figure A14-1.

b. **The TODA** - the TORA plus the length of any remaining runway and/or clearway beyond the far end of the TORA. See figure A14-2.

c. **The ASDA** - the length of the runway plus the length of any stopway beyond the far end of the runway less any length of runway and/or stopway unavailable and/or unsuitable for accelerate-stop distance computations. See figure A14-3.

d. **The LDA** - the length of the runway less any length of runway unavailable and/or unsuitable for landing distance computations. See figure A14-4. Note: When the threshold is sited for small airplanes (see appendix 2, paragraphs 5a and 5b), report LDA as "LDA for airplanes of 12,500 pounds (5 700 kg) or less maximum certificated takeoff weight."

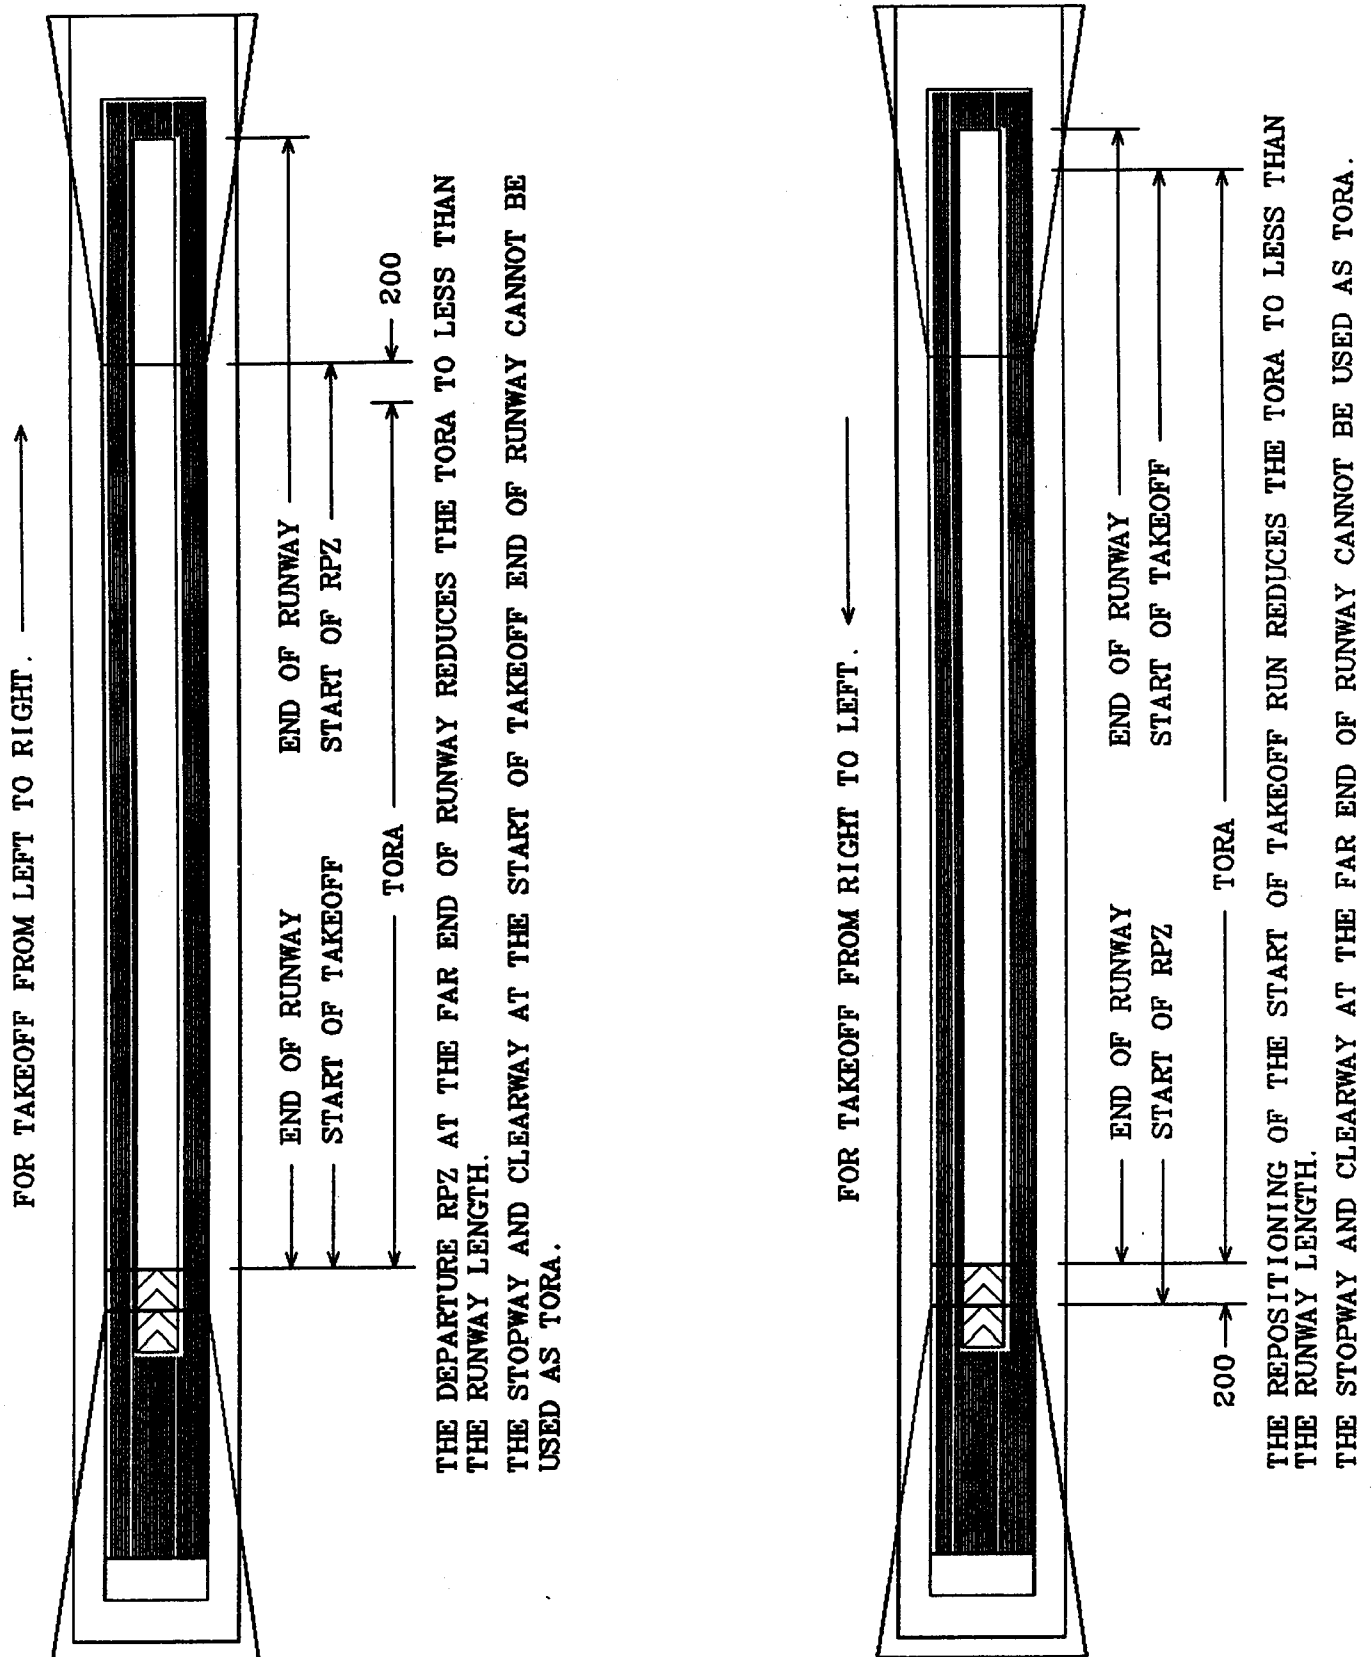


Figure A14-1. Takeoff run available (TORA)

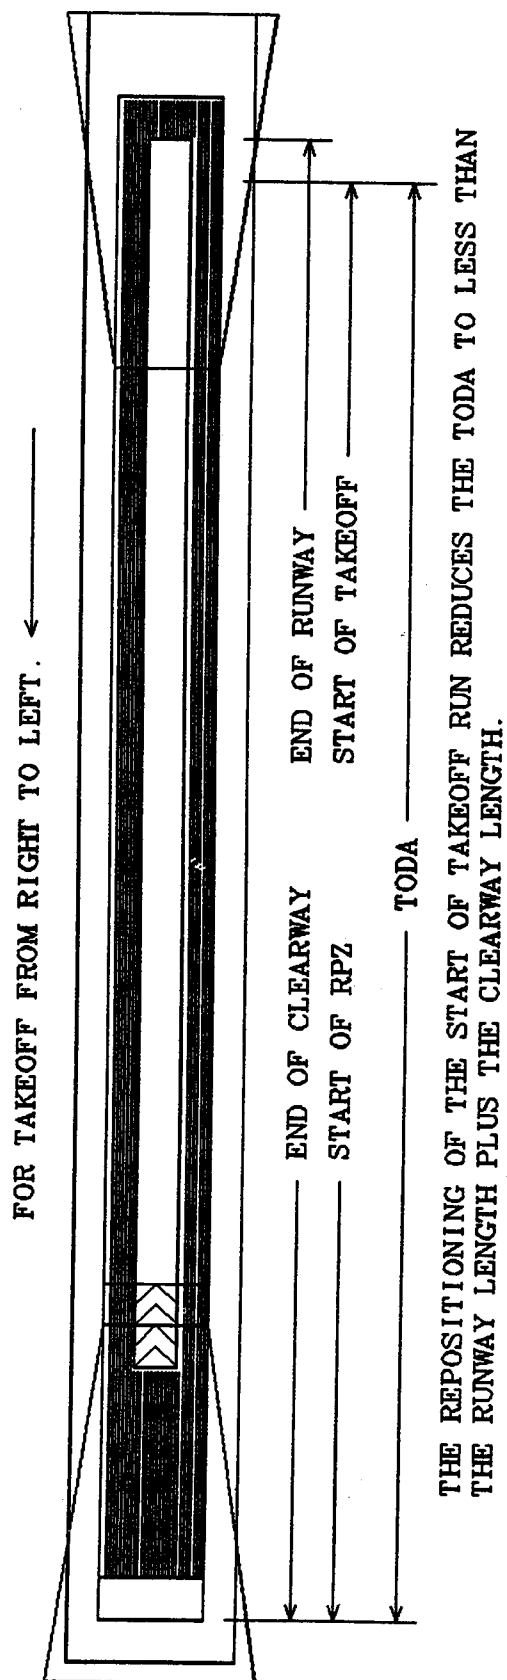
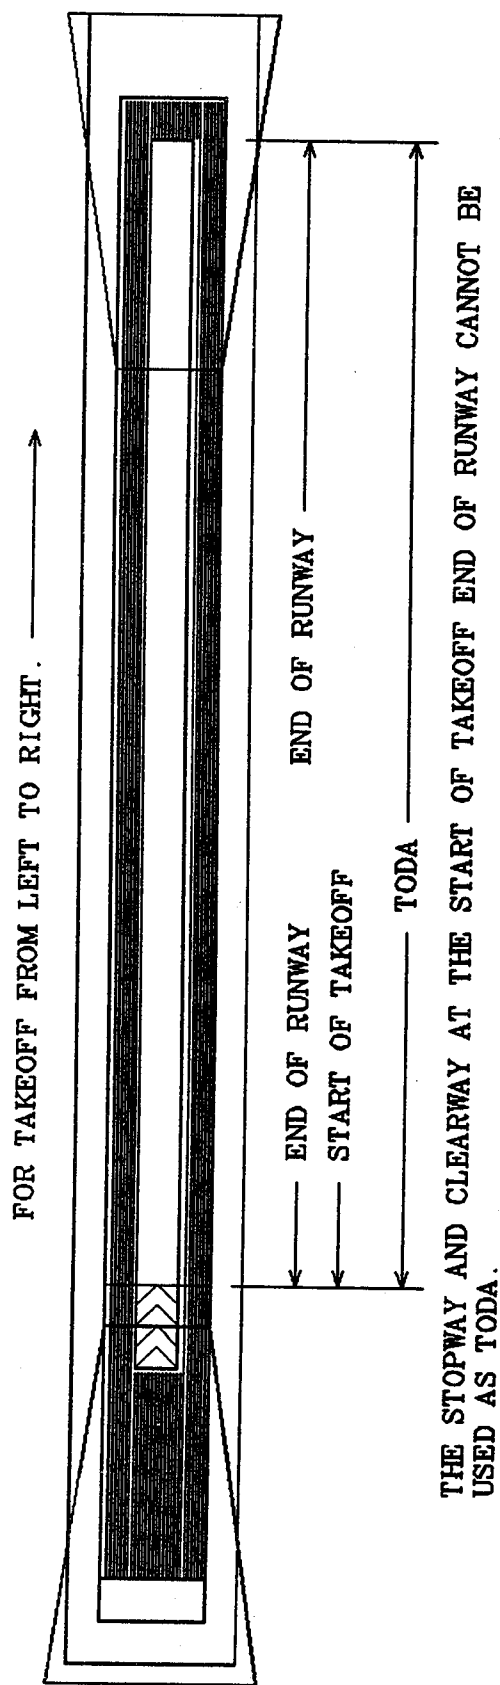


Figure A14-2. Takeoff distance available (TODA)

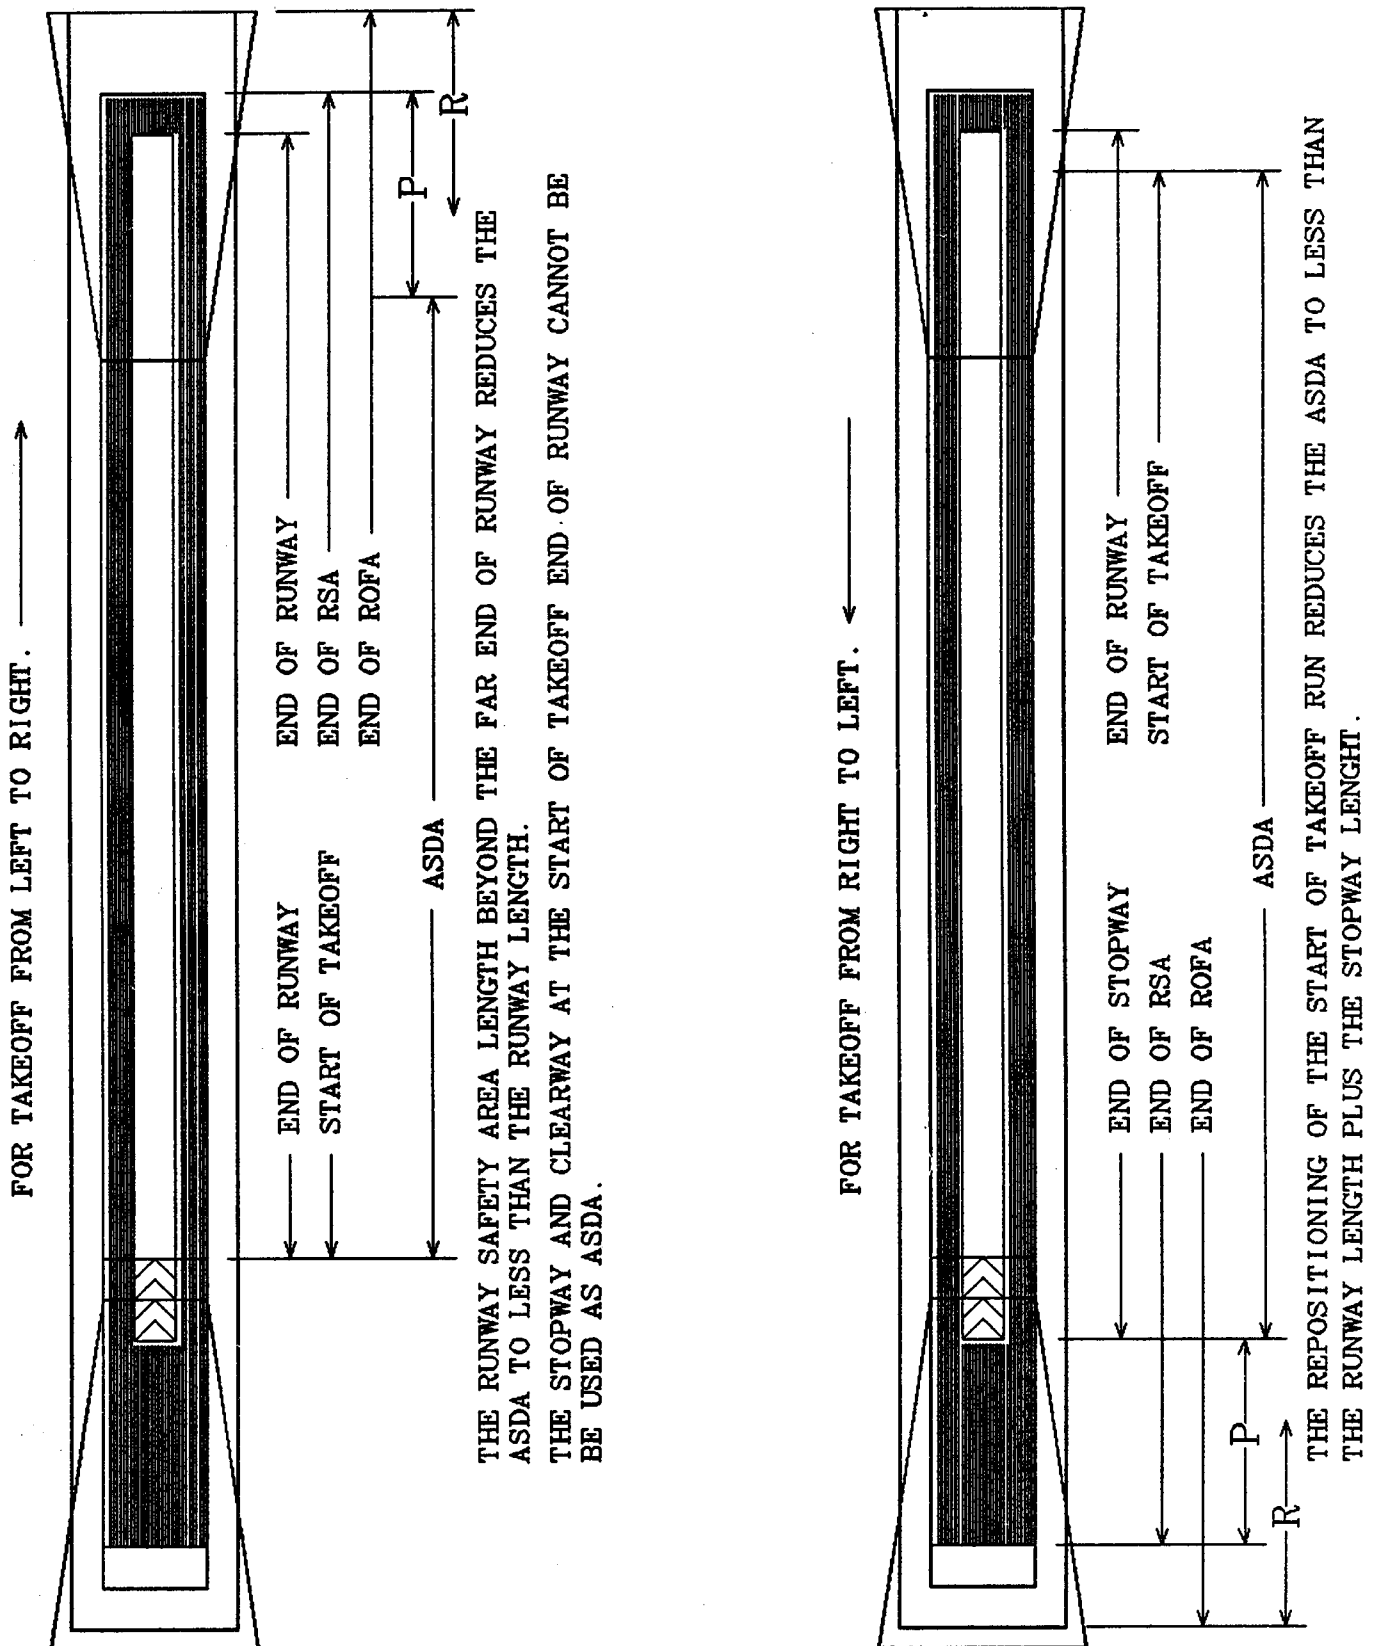


Figure A14-3. Accelerate-stop distance available (ASDA)

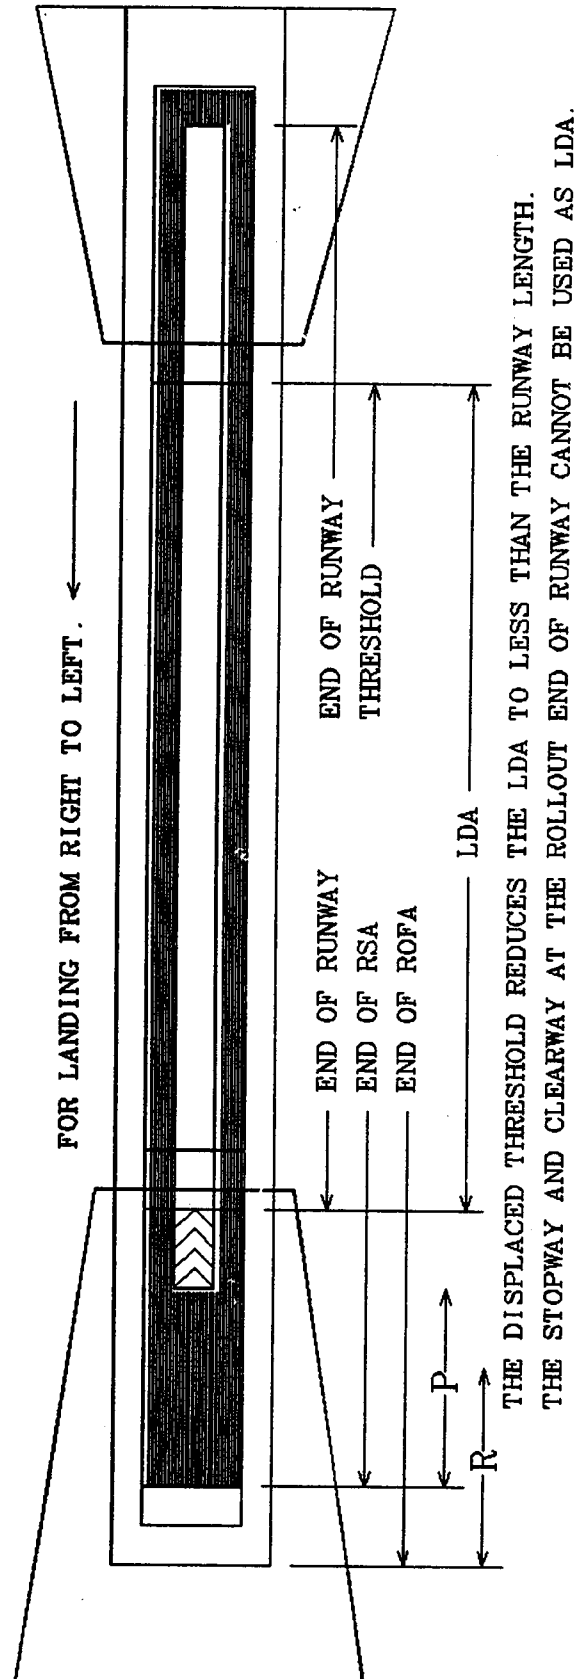
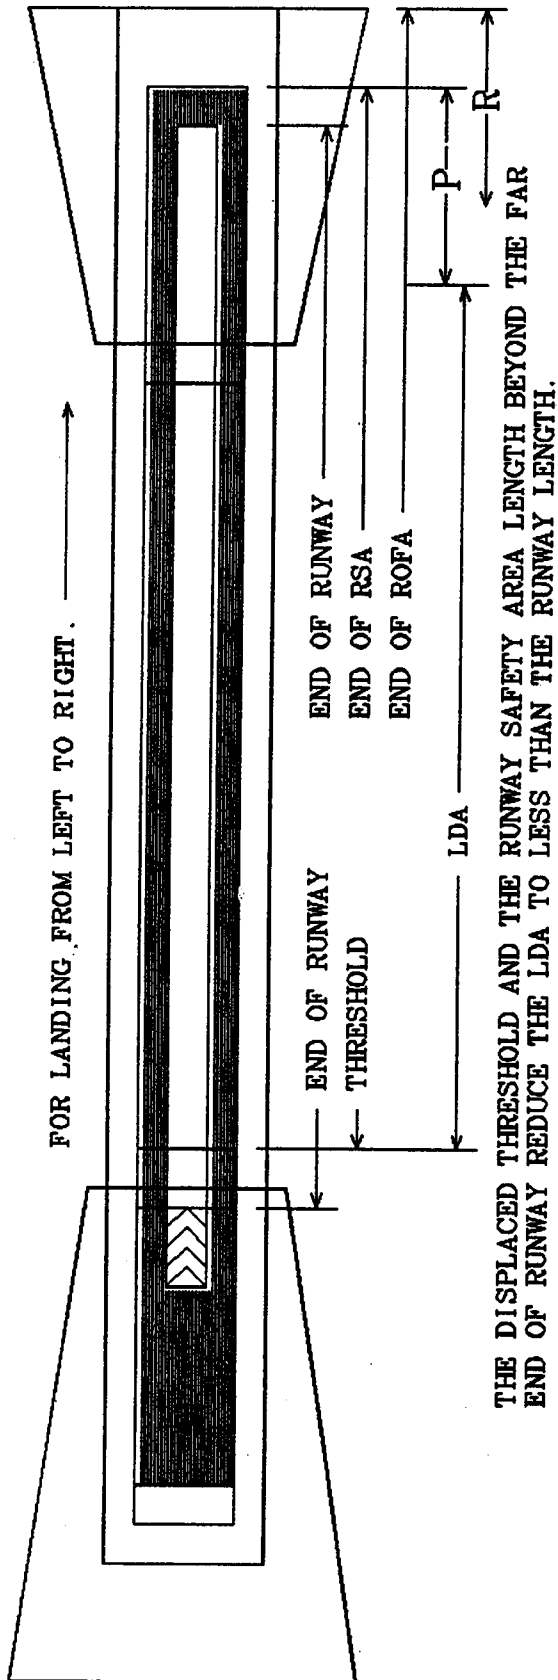


Figure A14-4. Landing distance available (LDA)

This page intentionally left blank.

This page intentionally left blank.

Appendix 15. TRANSFER OF ELECTRONIC DATA

This appendix was cancelled.

This page intentionally left blank.

Appendix 16. NEW INSTRUMENT APPROACH PROCEDURES

1. **BACKGROUND.** This appendix applies to the establishment of new or existing (under revision) instrument approach procedures (IAP).

a. This appendix identifies airport landing surface requirements to assist airport sponsors in their evaluation and preparation of the airport landing surface to support new instrument approach procedures. It also lists the airport data provided by the procedure sponsor that the FAA needs to conduct the airport airspace analysis specified in FAA Order 7400.2, *Procedures for Handling Airspace Matters*. The airport must be acceptable for IFR operations based on an Airport Airspace Analysis (AAA), under FAA Order 7400.2.

b. FAA Order 8260, *TERPS*, reflects the contents of this appendix as the minimum airport landing surface requirements that must be met prior to the establishment of instrument approach procedures at a public use airport. This order also references other FAA requirements, such as a safety analysis to determine the need for approach lighting and other visual enhancements to mitigate the effects of a difficult approach environment. This is a consideration regardless of whether or not a reduction in approach minimums is desired. Airport sponsors are always encouraged to consider an approach lighting system to enhance the safety of an instrument procedure. In the absence of any identified benefits or safety enhancement from an approach light system, sponsors should at least consider installing lower cost visual guidance aids such as REIL or PAPI.

c. The tables provided in this appendix are for planning purposes only and should be used in conjunction with the rest of the document. All pertinent requirements within this AC and other FAA documents, as well as local siting conditions, ultimately will determine the lowest minimums obtainable.

2. **INTRODUCTION.** To be authorized a new instrument approach procedure, the runway must have an instrument runway designation. Instrument runways are runway end specific. The runway end designation is based on the findings of an AAA study (Refer to Order 7400.2). In addition, the instrument runway designation for the desired minimums must be depicted on the FAA-approved ALP. If not depicted, a change to the ALP is required. As part of the ALP approval process, the FAA will conduct an AAA study to determine the runway's acceptability for the desired minimums.

3. **ACTION.** The airport landing surface must meet the standards specified in tables A16-1 A through C for each specified runway direction and have adequate airspace to support the instrument approach procedure. When requesting an instrument procedure, the sponsor must specify the runway direction, the desired approach minimums, whether circling approach procedures are desired, and the survey needed to support the procedure. For all obligated National Plan of Integrated Airport Systems (NPIAS) airports, the sponsor must also provide a copy of the FAA-approved ALP showing the instrument procedure(s) requested. An ALP is also recommended for all other airports.

4. DEFINITIONS.

a. **Precision Approach.** An instrument approach procedure providing course and vertical path guidance conforming to ILS, or MLS, precision system performance standards contained in ICAO annex 10. Table A16-1A defines the requirements for ILS, LAAS, WAAS, MLS, and other precision systems.

b. **Approach Procedure with Vertical Guidance (APV).** An instrument approach procedure providing course and vertical path guidance that does not conform to ILS or MLS system performance standards contained in ICAO annex 10, or a precision approach system that does not meet TERPS alignment criteria. Table A16-1B defines the requirements for WAAS and authorized barometric VNAV.

c. **Nonprecision Approach.** An instrument approach procedure providing course guidance without vertical path guidance. Table A16-1C defines the requirements for VOR, NDB, LDA, GPS (TS0-129) or other authorized RNAV system.

5. AIRPORT AIRSPACE ANALYSIS SURVEYS.

a. Use the standards identified in ACs 150/5300-16, 150/5300-17, and 150/5300-18 to survey and compile the appropriate data to support the development of instrument procedures.

b. When the runway has or is planned to have an approach that has vertical guidance (ILS, MLS or PAR, APV, LPV, RNP, TLS, LNAV/VNAV, etc.), use the Vertically Guided Airport Airspace Analysis Survey criteria in AC 150/5300-18.

c. When the runway has or is planned to have an approach without vertical guidance (VOR, VOR/DME, TACAN, NDB, LNAV, LP, etc.), use the Non-Vertically Guided Airport Airspace Analysis Survey criteria in AC 150/5300-18.

Table A16-1A. ILS and LPV Approach Requirements.

Visibility Minimums ¹	< 3/4 statute mile	< 1-statute mile
Height Above Threshold (HATh) ²	200	
TERPS Glidepath Qualification Surface (GQS) ³	Appendix 2, Table A2-1, Row 9 Clear	
TERPS precision "W" surfaces ⁴	Clear	See Note 5
TERPS Chapter 3, Section 3	34:1 Clear	20:1 Clear
Precision Obstacle Free Zone (POFZ) 200 x 800	Required	Not Required
Airport Layout Plan ⁷	Required	
Minimum Runway Length	4,200 ft (1,280 m) (Paved)	
Runway Markings (See AC 150/5340-1)	Precision	Nonprecision
Holding Position Signs & Markings (See AC 150/5340-1 and AC 150/5340-18)	Precision	Nonprecision
Runway Edge Lights ⁸	HIRL / MIRL	
Parallel Taxiway ⁹	Required	
Approach Lights ¹⁰	MALSR, SSALR, or ALSF	Recommended
Runway Design Standards; e.g., Obstacle Free Zone (OFZ) ¹¹	< 3/4-statute mile approach visibility minimums	≥ 3/4-statute mile approach visibility minimums
Threshold Siting Criteria To Be Met ¹²	Table A2-1, Row 7 & 9	Table A2-1, Row 6 & 9
Survey Required for Lowest Minima	Vertically Guided Airport Airspace Analysis Survey criteria in AC 150/5300-18	

1. Visibility minimums are subject to application of FAA Order 8260.3 (TERPS) and associated orders or this table, whichever are higher.
2. The HATh indicated is for planning purposes only. Actual obtainable HATh is determined by TERPS.
3. The GQS is applicable to approach procedures providing vertical path guidance. It limits the magnitude of penetration of the obstruction clearance surfaces overlying the final approach course. The intent is to provide a descent path from DA to landing free of obstructions that could destabilize the established glidepath angle. The GQS is centered on a course from the DA point to the runway threshold. Its width is equal to the precision "W" surface at DA, and tapers uniformly to a width 100 feet from the runway edges. If the GQS is penetrated, vertical guidance instrument approach procedures (ILS/MLS/WAAS/LAAS/Baro-VNAV) are not authorized
4. The "W" surface is applicable to precision approach procedures. It is a sloping obstruction clearance surface (OCS) overlying the final approach course centerline. The surface slope varies with glidepath angle. The "W" surface must be clear to achieve lowest precision minimums. Surface slope varies with glide path angle, 102/angle; e.g., for optimum 3 glide path 34:1 surface must be clear.
5. If the W surface is penetrated, HAT and visibility will be increased as required by TERPS.
7. An ALP is only required for airports in the NPIAS; it is recommended for all others.
8. Runway edge lighting is required for night minimums. High intensity lights are required for RVR-based minimums.
9. A full-length parallel taxiway meeting separation requirements - Tables 2-1 and 2-2.
10. To achieve lower visibility minimums based on credit for lighting, an approach light system is required.
11. Indicates which table in Chapter 3 should be followed in the related chapters of this document.
12. Circling procedures to a secondary runway from the primary approach will not be authorized when the secondary runway does not meet threshold siting (reference Appendix 2) OFZ (reference paragraph 306) criteria, and TERPS Chapter 3, Section 3.

Table A16-1B. Approach Procedure With Vertical Guidance

Visibility Minimums ¹	< 3/4-statute mile	< 1-statute mile	1-statute mile	>1-statute mile ¹⁴
Height Above Threshold (HATh) ²	250	300	350	400
TERPS Glidepath Qualification Surface (GQS)	Table A2-1, Row 9, Criteria, and Appendix 2, par. 5a Clear			
TERPS Chapter 3, Section 3	34:1 clear	20:1 clear	20:1 clear, or penetrations lighted for night minimums (See AC 70/7460-1)	
Precision Obstacle Free Zone (POFZ) 200 x 800	Required	Required		
Airport Layout Plan ⁵	Required			
Minimum Runway Length	4,200 ft (1,280 m) (Paved)	3,200 ft (975 m) ⁶ (Paved)	3,200 ft (975 m) ^{6,7}	
Runway Markings (See AC150/5340-1)	Precision	Nonprecision (precision recommended)	Nonprecision ⁷	
Holding Position Signs & Markings (See AC 150/5340-1 and AC 150/5340-18)	Precision	Nonprecision (precision recommended)	Nonprecision ⁷	
Runway Edge Lights ⁸	HIRL/MIRL		MIRL/LIRL	
Parallel Taxiway ⁹	Required		Recommended	
Approach Lights ¹⁰	MALSR, SSALR, ALSF	Recommended	Recommended	
Runway Design Standards; e.g., Obstacle Free Zone (OFZ) ¹²	<3/4-statute mile approach visibility minimums	≥ 3/4-statute mile approach visibility minimums		
Threshold Siting Criteria To Be Met ¹³	Table A2-1, Row 7 and 9	Table A2-1 Row 6 and 9	Appendix 2, Table A2-1, Row 5 and 9	
Survey Required for Lowest Minima	Vertically Guided Airport Airspace Analysis Survey criteria in AC 150/5300-18		Non-Vertically Guided Airport Airspace Analysis Survey AC 150/5300-18	

1. Visibility minimums are subject to the application of FAA Order 8260.3 (TERPS) and associated orders or this table, whichever is higher.
2. The HATH indicated is for planning purposes only. Actual obtainable HATH is determined by TERPS.
3. The GQS is applicable to approach procedures providing vertical path guidance. It limits the magnitude of penetration of the obstruction clearance surfaces overlying the final approach course. The intent is to provide a descent path from DA to landing free of obstructions that could destabilize the established glidepath angle. The GQS is centered on a course from the DA point to the runway threshold. Its width is equal to the precision "W" surface at DA, and tapers uniformly to a width 100 feet from the runway edges. If the GQS is penetrated, vertical guidance instrument approach procedures (ILS/MLS/WAAS/LAAS/Baro-VNAV) are not authorized.
5. An ALP is only required for obligated airports in the NPIAS; it is recommended for all others.
6. Runways less than 3,200 feet are protected by 14 CFR Part 77 to a lesser extent. However, runways as short as 2400 feet could support an instrument approach provided the lowest HAT is based on clearing any 200-foot obstacle within the final approach segment.
7. Unpaved runways require case-by-case evaluation by the RAPT.
8. Runway edge lighting is required for night minimums. High intensity lights are required for RVR-based minimums.
9. A full -length parallel taxiway must lead to the threshold and meet standards in Tables 2-1 and 2-2.
10. To achieve lower visibility minimums based on credit for lighting, a TERPS specified approach light system is required.
12. Indicates what table should be followed in the related chapters in this document.
13. Circling procedures to a secondary runway from the primary approach will not be authorized when the secondary runway does not meet threshold siting (reference Appendix 2), OFZ (reference paragraph 306) and TERPS Chapter 3, Section 3.
14. For circling requirements, see Table A16-1C.

Table A16-1C. Nonprecision Approach Requirements
Approach Procedures without Vertical Guidance

Visibility Minimums ¹	< 3/4-statute mile	< 1-statute mile	1-statute mile	>1-statute mile	Circling
Height Above Threshold (HATh) ²	300	340	400	450	Varies
TERPS Chapter 3, Section 3	34:1 clear	20:1 clear	20:1 clear or penetrations lighted for night minimums (See AC 70/7460-1)		
Airport Layout Plan ³	Required				Recommended
Minimum Runway Length	4,200 ft (1,280 m) (Paved)	3,200 ft (975 m) ⁴ (Paved)	3,200 ft (975 m) ^{4,5}		
Runway Markings (See AC 150/5340-1)	Precision	Nonprecision ⁵			Visual (Basic) ⁵
Holding Position Signs & Markings (See AC 150/5340-1 and AC 150/5340-18)	Precision	Nonprecision			Visual (Basic) ⁵
Runway Edge Lights ⁶	HIRL / MIRL		MIRL / LIRL		MIRL / LIRL (Required only for night minima)
Parallel Taxiway ⁷	Required		Recommended		
Approach Lights ⁸	MALSR, SSALR, or ALSF Required	Required ⁹	Recommended ⁹		Not Required
Runway Design Standards, e.g. Obstacle Free Zone (OFZ) ¹⁰	<3/4-statute mile approach visibility minimums	≥ 3/4-statute mile approach visibility minimums			Not Required
Threshold Siting Criteria To Be Met ¹¹	Table A2-1, Row 7	Table A2-1, Row 6	Table A2-1, Row 1-5		Table A2-1, Row 1-4
Survey Required for Lowest Minima	Vertically Guided Airport Airspace Analysis Survey AC 150/5300-18	Non-Vertically Guided Airport Airspace Analysis Survey AC 150/5300-18			

1. Visibility minimums are subject to the application of FAA Order 8260.3 (TERPS) and associated orders or this table, whichever is higher.
2. The Height Above Threshold (HATh) indicated is for planning purposes only. Actual obtainable HATh is determined by TERPS.
3. An ALP is only required for obligated airports in the NPIAS; it is recommended for all others.
4. Runways less than 3,200 feet are protected by 14 CFR Part 77 to a lesser extent, however runways as short as 2400 feet could support an instrument approach provided the lowest HAT is based on clearing any 200-foot obstacle within the final approach segment.
5. Unpaved runways require case-by-case evaluation by the RAPT.
6. Runway edge lighting is required for night minimums. High intensity lights are required for RVR-based minimums.
7. A full-length parallel taxiway must lead to the threshold.
8. To achieve lower visibility minimums based on credit for lighting, an approach lighting system is required.
9. ODALS, MALS, SSALS, SALS are acceptable.
10. Indicates what table should be followed in the related chapters in this document.
11. Circling procedures to a secondary runway from the primary approach will not be authorized when the secondary runway does not meet threshold siting (reference Appendix 2), OFZ (reference paragraph 306), and TERPS Chapter 3, Section 3.

Appendix 17. MINIMUM DISTANCES BETWEEN CERTAIN AIRPORT FEATURES AND ANY ON-AIRPORT AGRICULTURE CROPS

Table A17-1. Minimum Distances Between Certain Airport Features and Any On-Airport Agriculture Crops

Aircraft Approach Category and Design Group ¹	Distance in Feet From Runway Centerline to Crop		Distance in Feet From Runway End to Crop		Distance in Feet from Centerline of Taxiway to Crop	Distance in Feet from Edge of Apron to Crop
	Visual & ≥ ¾ mile	< ¾ mile	Visual & ≥ ¾ mile	< ¾ mile		
Category A & B Aircraft						
Group I	200 ²	400	300 ³	600	45	40
Group II	250	400	400 ³	600	66	58
Group III	400	400	600	800	93	81
Group IV	400	400	1,000	1,000	130	113
Category C, D, & E Aircraft						
Group I	530 ³	575 ³	1,000	1,000	45	40
Group II	530 ³	575 ³	1,000	1,000	66	58
Group III	530 ³	575 ³	1,000	1,000	93	81
Group IV	530 ³	575 ³	1,000	1,000	130	113
Group V	530 ³	575 ³	1,000	1,000	160	138
Group VI	530 ³	575 ³	1,000	1,000	193	167

1. Design Groups are based on wing span or tail height, and Category depends on approach speed of the aircraft as shown below:

Design Group	Category
Group I: Wing span up to 49 ft.	Category A: Speed less than 91 knots
Group II: Wing span 49 ft. up to 73 ft.	Category B: Speed 91 knots up to 120 knots
Group III: Wing span 79 ft. up to 117 ft.	Category C: Speed 121 knots up to 140 knots
Group IV: Wing span 113 ft. up to 170 ft.	Category D: Speed 141 knots up to 165 knots
Group V: Wing span 171 ft. up to 213 ft.	Category E: Speed 166 knots or more
Group VI: Wing span 214 ft. up to 261 ft.	

2. If the runway will only serve small airplanes (12,500 lb. and under) in Design Group I, this dimension may be reduced to 125 feet; however, this dimension should be increased where necessary to accommodate visual navigational aids that may be installed. For example, farming operations should not be allowed within 25 feet of a Precision Approach Path Indicator (PAPI) light box.
3. These dimensions reflect the Threshold Siting Surface (TSS) as defined in AC 150/5300-13, Appendix 2. The TSS cannot be penetrated by any object. Under these conditions, the TSS is more restrictive than the OFA, and the dimensions shown here are to prevent penetration of the TSS by crops and farm machinery.

This page intentionally left blank.

Appendix 18. ACRONYMS

The acronyms presented herein are intended for use with this publication only.

AAA	Airport Airspace Analysis	LPV	Localizer Performance with Vertical Guidance
AC	Advisory Circular	MALS	Medium Intensity Approach Lighting System
AD	Airport Design	MALSF	Medium Intensity Approach Lighting System with Sequenced Flashers
AFD	Airport Facility Directory	MALSR	Medium Intensity Approach Lighting System with Runway Alignment Indicator Lights
ADG	Airplane Design Group	MIRL	Medium Intensity Runway Lights
AIP	Airport Improvement Program or Aeronautical Information Publication	MLS	Microwave Landing System
ALP	Airport Layout Plan	MM	Middle Marker
ALS	Approach Lighting System	MSL	Mean Sea Level
ALSF(-1, -2)	Approach Lighting System with Sequenced Flashers	NAVAID	Navigational Aid
APV	Approach Procedure with Vertical Guidance	NCDC	National Climatic Data Center
ARC	Airport Reference Code	NDB	Nondirectional Beacon
ARP	Airport Reference Point	NP	Non-Precision (Markings)
ASDA	Accelerate-Stop Distance Available	NPIAS	National Plan of Integrated Airport Systems
ASDE	Airport Surface Detection Equipment	NTIS	National Technical Information Service
ASR	Airport Surveillance Radar	OCS	Obstacle Clearance Surface
ATC	Air Traffic Control	ODALS	Omnidirectional Approach Lighting System
ATCT	Airport Traffic Control Tower	OEI	One Engine Inoperative
AWOS	Automated Weather Observing System	OFA	Object Free Area
AZ	Azimuth	OFZ	Obstacle Free Zone
BRL	Building Restriction Line	OIS	Obstacle Identification Surface
CAT	Category	OM	Outer Marker
CFR	Code of Federal Regulation	NPA	Non-Precision Approach
CFW	Center Field Wind	P	Precision (Markings)
CWY	Clearway	PA	Precision Approach
DA	Decision Altitude	PAPI	Precision Approach Path Indicator
DER	Departure End of Runway	POFA	Precision Object Free Area
DME	Distance Measuring Equipment	RAIL	Runway Alignment Indicator Lights
DXF	AutoCAD Drawing Interchange file format	REIL	Runway End Identifier Lights
EDS	Environmental Data Service	RNAV	Area Navigation
EL	Elevation	ROFA	Runway Object Free Area
FBO	Fixed Base Operator	RPZ	Runway Protection Zone
GPA	Glidepath Angle	RSA	Runway Safety Area
GPS	Global Positioning System	RVR	Runway Visual Range
QGS	Glidepath Qualification Surface	RW	Runway
GS	Glide Slope	SALS	Short Approach Lighting System
GVGI	Generic Visual Slope Indicator	SSALR	Short Simplified Approach Lighting System with Runway Alignment Indicator Lights
HAT	Height Above Touchdown	SSALS	Simplified Short Approach Lighting System
HIRL	High Intensity Runway Lights	SWY	Stopway
IFR	Instrument Flight Rules	TCH	Threshold Crossing Height
IGES	Initial Graphics Exchange Specification file format	TERPS	FAA Order 8260.3, <i>United States Standard for Terminal Instrument Procedures</i>
ILS	Instrument Landing System	TH	Threshold
IM	Inner Marker	TL	Taxilane
IMC	Instrument Meteorological Conditions	TODA	Takeoff Distance Available
LAAS	Local Area Augmentation System	TORA	Takeoff Run Available
LDA	Landing Distance Available or Localizer Type Directional Aid	TSA	Taxiway Safety Area
LDIN	Lead-In Lights	TVOR	Terminal Very High Frequency Omnidirectional Range
LIRS	Low Impact Resistant Supports	TW	Taxiway
LNAV	Lateral Navigation		
LOC	Localizer		

USGS	United States Geological Service	V _{LOF}	Lift-off speed
V	Visual (Markings)	V _{SO}	Stalling speed or the minimum steady flight speed in the landing configuration
V ₁	Takeoff decision speed	VNAV	Vertical Navigation
V ₂	Takeoff safety speed	VOR	Very High Frequency Omnidirectional Range
VFR	Visual Flight Rules	WAAS	Wide Area Augmentation System

Appendix 19. INDEX

Accelerate-Stop Distance Available (ASDA)	
definition	2
length	276
Acronyms	297
Administration Building	118
Aeronautical Studies	6, 13
Aircraft Approach Category	
airplane listing	251
definition	1
selection	5
Aircraft Parking Area	10, 14, 15, 117, 139
Airplane Data	156, 165, 251
Airplane Design Group (ADG)	
airplane listing	251
definition	1
selection	5
Airport Buildings	117
Airport Design Standards Modification	5
Airport Elevation	
definition	1
Airport Layout Plan (ALP)	
application	9
definition	1
requirements	5
Airport property requirements	9
Airport Reference Code (ARC)	
definition	4
standards	5
Airport Reference Point (ARP)	
definition	1
standards	109
Airport Rotating Beacon	65
Airport Surface Detection Equipment (ASDE)	66
Airport Surveillance Radar (ASR)	66
Airport survey	122
Airport Traffic Control Tower (ATCT)	65
Airport Traffic Control Tower Visibility	10, 36
Airspace Availability	9
Approach Lighting System (ALS)	
ALSF-2	64
MAL S	64
MAL S F	64
MALSR	64
Apron for Based Airplanes	117
Aprons	
criteria	10
gradient	54
Auto Parking	13, 123
Aviation easements	9
Bird Hazards	10, 13
Blast Fence	
criteria	77
definition	1
Bridges	
approach aprons	70
blast protection	70
curbs	70
height	69
length	69
load considerations	69
longitudinal grades	69
marking and lighting	69
pavement heating	70
security fences	7
service roads	70
siting precepts	69
width	69
Building Plan	122
Building Restriction Lie (BRL)	
criteria	12
definition	1
Bypass Taxiway	35
Category (CAT I) Runway	2
Category (CAT II) Runway	2
Category III (CAT III) Runway	2
Center Field Wind (CFW) Installations	66
Clear Zone	1
Clear Zone (See Runway Protection Zone)	2, 13, 276
Clearway (CWY)	
definition	1
standards	22, 139, 276
Compass Calibration Pad	
criteria	111
definition	1
Crosswind Runway	10, 87
Crosswinds	
definition	87
Declared Distances	
criteria	275, 276
definition	2
Displaced Threshold	
definition	3
siting requirements	101
Dual Parallel Taxiway	35
Eating Facilities	123
Electronic Deliverables	283
Entrance Taxiway	34
Environmental Assessments	6, 9
Exit Taxiway	36, 142
FAA Studies of Objects	6, 13
Federal Assistance	6

Frangible NAVAID	
definition	2
Hangars	118
Hazard to Air Navigation	
definition	2
determination	6
presumption	2
Holding Bay	34
Holdline	
to runway	10, 14, 15, 139
Inner-approach OFZ	
definition	2
standards	22
Inner-transitional OFZ	
definition	2
standards	22
Instrument Approach Procedures	291
Instrument Landing System (ILS)	
glide slope	61, 62
localizer	61, 62
marker beacons	61, 63
Jet Blast	
heat effects	77
pressures	77
velocity distances	77
Landing Distance Available (LDA)	
definition	2
length	276
Large Airplane	
definition	2
Lead-In Lighting System (LDIN)	65
Local Role	6
Low Impact Resistant Supports (LIRS)	
definition	2
Manager's Office	123
Microwave Landing System (MLS)	59
Modification of Airport Design Standards	5
Navigational Aids (NAVAIDs)	
clearing requirements	59
non-Federal	59
protection	59, 67
siting	59
Nondirectional Beacon (NDB)	63
Notice to the FAA	
airport development	5
proposed construction	6
Object	
definition	2
Object Clearing Criteria	
recommendations	13
standards	12
Object Free Area (OFA)	
definition	2
standards	22, 33, 276

Obstacle Free Zone (OFZ)	
definition	2
standards	21, 139
Obstruction to Air Navigation	
definition	2
presumption	2
survey requirement	9
Omnidirectional Approach Lighting System (ODALS)	65
Parallel Taxiway	33
Precision Object Free Area	22
Property requirements	9
Public Restrooms	123
Recommendations	
requirement	1
Related Reading Material	3
Rescue and Firefighting Access Roads	23
Roads	123
Runway (RW)	
definition	3
gradient	49
length	21
line of sight	56
location	9
orientation	9, 87
requirements for additional runways	10, 87
to aircraft parking area	10, 14, 15, 139
to helicopter touchdown pad	10, 14, 15
to holdline	10, 14, 15, 139
to parallel runway	11
to parallel taxiway	10, 12, 14, 15, 139
to parallel taxiway	10, 12, 14, 15, 139
width	21
Runway Blast Pad	
definition	3
drainage	78
gradient	54
length	21, 78
marking sod lighting	78
surface characteristics	21
surface strength	78
width	21, 78
Runway Object Free Area	
background	139
definition	2
standards	22, 276
Runway Obstacle Free Zone (OFZ)	
definition	2
standards	21
Runway Protection Zone (RPZ)	
criteria	13, 140, 276
definition	3
Runway Safety Area (RSA)	
background	139
definition	3
gradient	54
length	21, 276
surface characteristics	21
width	21

Runway Shoulder		edge safety margin	34, 39
definition (See Shoulder)	3	gradient	54
drainage	78	intersections	34
gradient	54	layout	10
marking and lighting	78	line of sight	56
strength	78	on apron edge	36
surface characteristics	21	pavement file	34, 40, 41, 149
width	21, 78	taxiway between parallel runways	36
Runway visibility zone	56	to object	10, 16, 141
Runway Visual Range Facilities	66	to parallel runway	10, 12, 14, 15, 139
Separation Standards	10, 14-16	to parallel taxilane	10, 16, 141
Shoulder		to parallel taxiway	10, 16, 141
definition	3	to parked aircraft	10, 16, 141
Small Airplane		to service and maintenance roads	10, 16, 141
definition	3	width	33, 39, 141
Standards		Taxiway Object Free Area	
applicability	5	definition	2
modification	5	standards	33, 39
requirements	1	width	33, 39, 141
State Role	6	wingtip clearance	33, 41
Stopway (SWY)		Taxiway Safety Area (TSA)	
definition	3	definition	3
gradient	49	gradient	54
location	23	surface characteristics	33
standards	139	width	33, 39, 142
surface characteristics	23	Taxiway Shoulder	
width	23	definition (See Shoulder)	3
Takeoff Distance Available (TODA)		drainage	78
definition	1	gradient	54
length	276	marking and lighting	78
Takeoff Run Available (TORA)		strength	78
definition	1	surface characteristics	33
length	276	width	33, 39, 78
Taxilane (TL)		Terminal Very High Frequency Omnidirectional Range (TVOR)	64
airport traffic control tower visibility	36	Threshold (TH)	
definition	3	definition	3
dimensional standards	33, 39	siting requirements	101
on apron edge	36	Tiedowns	117, 118
to object	10, 16, 141	Transient Apron	117
to parallel runway	10, 12, 14, 15, 139	Tunnels	
to parallel taxilane	10, 16, 141	drainage	70
to parallel taxiway	10, 16, 141	lighting	70
to parked aircraft	10, 16, 141	passenger and baggage	70
to service and maintenance roads	10, 16, 141	ventilation	70
Taxilane Object Free Area		Turnaround	35
definition	2	Vehicle Parking	13, 123
standards	33, 39	Visual Runway	
width	33, 141	definition	3
wingtip clearance	33	Waiting Room	122
Taxiway (TW)		Wildlife Hazards	10, 13
airport traffic control tower visibility	36	Wind Analysis	9, 87
definition	3	Wind Coverage	87
dimensional standards	33, 39	Wingtip Clearance	33, 41, 146

